



**1998-1999
ELECTRICAL WIRING
MANUAL**

MVP-ER

1998-1999 MVP-ER ELECTRICAL WIRING MANUAL

This manual should be kept in a convenient place for ready reference.

All information, illustrations, and specifications contained in this manual are based on the latest product information available at the time of publication approval. The right is reserved to make changes at any time without notice.

No part of this publication may be reproduced, stored in any retrieval system, or transmitted in any form or by any means, including but not limited to electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Thomas Built Buses Incorporated.

1998-1999 MVP-ER
BODY
TABLE of CONTENTS

BODY SCHEMATICS	Page #
General Recommendations - Maintenance and Repair	1
System Protection from Short Circuits	1
Testing for Voltage Drop	2
Testing for Short to Ground	2
Checking Current Draw	2
Troubleshooting Tools	2
Troubleshooting Tests	2
PANELS	3
Elect. Components Side Panel (Body)	4
Elect. Components Mounting, Side Panel LWP Models, CAT 3126 Engine (Chassis)	5
Elect. Diagram Component Mounting, Side Panel, 98 Cat 3126 Engine (Chassis) (1 of 2)	6
Elect. Diagram Component Mounting, Side Panel, 98 Cat 3126 Engine (Chassis) (2 of 2)	7
Elect. Diagram Component Mounting, Side Panel, 98 Cummins ISB/ISC (Chassis) (1 of 2)	8
Elect. Diagram Component Mounting, Side Panel, 98 Cummins ISB/ISC (Chassis) (2 of 2)	9
Elect. Diagram Modular Box Compartment Mounting, CAT 3126 Engine (Chassis)	10
Elect. Diagram Mod. Box Comp. Mtg. 98 Cat 3126 (Chassis) (1 of 3)	11
Elect. Diagram Mod. Box Comp. Mtg. 98 Cat 3126 (Chassis) (2 of 3)	12
Elect. Diagram Mod. Box Comp. Mtg. 98 Cat 3126 (Chassis) (3 of 3)	13
Elect. Diagram Mod. Box Comp. Mtg. 98 Cat 3126 (Chassis) (1 of 3)	14
Elect. Diagram Mod. Box Comp. Mtg. 98 Cat 3126 (Chassis) (2 of 3)	15
Elect. Diagram Mod. Box Comp. Mtg. 98 Cat 3126 (Chassis) (3 of 3)	16
Elect. Diagram Mod. Box Compon. Mtg. Cummins 6B (Chassis)	17
Elect. Diagram Mod. Box Compon. Mtg. 98 Cummins 6B (Chassis) (1 of 2)	18
Elect. Diagram Mod. Box Compon. Mtg. 98 Cummins 6B (Chassis) (2 of 2)	19
Elect. Diagram Mod. Box Compon. Mtg. 98 Cummins 6B (Chassis) (1 of 2)	20
Elect. Diagram Mod. Box Compon. Mtg. 98 Cummins 6B (Chassis) (2 of 2)	21
Elect. Diagram Mod. Box Compon. Mtg. 98 Cummins 6B (Chassis) (1 of 2)	22
Elect. Diagram Mod. Box Compon. Mtg. 98 Cummins 6B (Chassis) (2 of 2)	23
Elect. Diagram Mod. Box Compon. Mtg. 98 Cummins 6B (Chassis) (1 of 3)	24
Elect. Diagram Mod. Box Compon. Mtg. 98 Cummins 6B (Chassis) (2 of 3)	25
Elect. Diagram Mod. Box Compon. Mtg. 98 Cummins 6B (Chassis) (3 of 3)	26
Elect. Diagram Mod. Box Compon. Mtg. 98 Cummins 6B (Chassis) (1 of 3)	27
Elect. Diagram Mod. Box Compon. Mtg. 98 Cummins 6B (Chassis) (2 of 3)	28
Elect. Diagram Mod. Box Compon. Mtg. 98 Cummins 6B (Chassis) (3 of 3)	29
Elect. Diagram Mod. Box Compon. Mtg. Cummins 6C (Chassis)	30
Elect. Diagram Mod. Box Compon. 6C (Chassis)	31

BODY SCHEMATICS	Page #
PANELS (<i>Continued</i>)	
Elect. Diagram Mod. Box Compon. Mtg. 98 Cummins ISC (Chassis) (1 of 3)	32
Elect. Diagram Mod. Box Compon. Mtg. 98 Cummins ISC (Chassis) (2 of 3)	33
Elect. Diagram Mod. Box Compon. Mtg. 98 Cummins ISC (Chassis) (3 of 3)	34
Chart - Circuits, Electrical (Body) (1 of 5)	35
Chart - Circuits, Electrical (Body) (2 of 5)	36
Chart - Circuits, Electrical (Body) (3 of 5)	37
Chart - Circuits, Electrical (Body) (4 of 5)	38
Chart - Circuits, Electrical (Body) (5 of 5)	39
Chart - Electrical Circuits w/Color Codes, 1990 (Chassis) (1 of 3)	40
Chart - Electrical Circuits w/Color Codes, 1990 (Chassis) (2 of 3)	41
Chart - Electrical Circuits w/Color Codes, 1990 (Chassis) (3 of 3)	42
MAIN BODY	43
Main Body - Wiring	44
LIGHTS	45
Separate Switch for Marker Lights (Option: B3670-01-000)	46
Emergency Door Activated Dome Lights, with and without Vandalock	47
Opening Activated Dome Lights w/Vandalock	48
Fog Light (Option: B3680-04-000)	49
Strobe Light	50
Strobe Light, Roof Mounted, Specialty Model #205-202	51
Strobe Light Roof Mounted, Headlight Switch Wired Specialty Model #205-202	52
Strobe Light, Roof Mounted, Specialty Model #205-212	53
Strobe Light Model #515-410	54
Strobe Warning System, Whelen School	55
Strobe Light (South Carolina)	56
Strobe Light Operation w/Door Switch	56
Red Warning Light Override Switch	57
Pilot Light, Green, "Reverse Gear"	58
EIGHT LIGHT WARNING SYSTEM	59
Four Light Warning System (Wisconsin)	60
Four Light Warning System (Wisconsin)	61
Eight Light Warning System	62
Eight Light Warning System	63
Eight Light Warning System	64
Eight Light Warning System	65
Eight Light Warning System	66

1998-1999 MVP-ER
BODY
TABLE of CONTENTS

BODY SCHEMATICS	Page #
EIGHT LIGHT WARNING SYSTEM (Continued)	
Eight Light Warning System	67
Eight Light Warning System (South Carolina)	72
Eight Light Warning System (Virginia)	73
Eight Light Warning System (Florida)	74
Eight Light Warning System (California)	75
Strobe Eight Light Warning System	76
Eight Light Warning System (Kentucky)	77
STOP SIGNS & CROSSING GATES	79
Electric Stop Sign, Specialty 5000 Series	80
Stop Arm Strobe Light, Single and H/L Operation, Electric, Air & Vacuum	81
Electrical Stop Arm Transpec w/LED's, 3 Wire Harness	82
Electrical Stop Arm Transpec w/LED's, 4 Wire Harness	83
Electric Stop Sign, BMR 6000 Series	84
Stop and Crossing Arm	85
Electric Crossing Arm 5000 Series	86
Air Stop Sign & Air Crossing Control Arm	87
Crossing Arm Deactivating Switch	88
HEATERS	89
Front Heater	90
Stepwell Heater	91
Underseat Heaters	92
AIR CONDITIONING	93
Air Conditioning DC-1052, 1053	94
Air Conditioning DC-1052, 1053	95
DOORS	97
Lift Door	98
Lift Door with Brake Interlock	99
Loading Door Buzzer Shut Off Switch (Option B3110-01-000)	100
Transmission in Neutral Interlock, Add Wire & Terminals	101
Door Control, 2 Position, No Interlock (Option B5016-22-000)	102
Door Control, 2 Position, with Interlock (Option B5016-21-000)	103
Door Control, 5 Position, with Interlock (Option B5016-16-000)	104
Eight Light Warning System w/Red Override Switch	68
Eight Light Warning System	69
Eight Light Warning System	70

BODY SCHEMATICS	Page #
DOORS (Continued)	
Eight Light Warning System (Maryland)	71
Rear Exit, 2 Position Door Control, w/Brake Interlock (Bode)	105
Wheelchair Driver Controlled Exit Door, Brake Interlock (Bode)	106
Rear Door w/Front Door, 5 Position Door Control, w/Brake Interlock (Bode)	107
Wheelchair Driver Controlled Exit Door, Front Door, Brake Interlock (Bode)	108
Rear Exit, 2 Position Door Control, w/Brake Interlock (Bode)	109
Wheelchair, Rear Exit, 2 Position Door Control, w/Brake Interlock (Bode)	110
Rear Door w/Front Door, 5 Position Door Control, w/Brake Interlock (Bode)	111
Wheelchair Exit w/Touch Bar and Time Delay, and Brake Interlock (Bode)	112
Rear Exit, 2 Position Door Control, w/Brake Interlock (Bode)	113
Wheelchair Rear Exit, 2 Position Door Control, w/Brake Interlock (Bode)	114
Rear Door w/Front Door, 5 Position Door Control, w/Brake Interlock (Bode)	115
Wheelchair Exit w/Touch Bar, Driver Close, w/Brake Interlock (Bode)	116
Speedswitch	117
VANDALOCK	119
Wiring Schematic (Vandalock)	120
RADIO & SPEAKERS	121
PA Radio, Mito SP Series	122
Radio Speakers	123
Six Radio Speakers	124
Rheostat Controlled Driver's Speaker	125
Rheostat - 10 Watt Single Line Audio	125
MISCELLANEOUS	127
Doran Monitor All Models	128
Fan Overhead Fan on Chick Bus	129
Single Defroster Switch (Option: B3826-00-000)	130
Heated Mirrors	131
Intermittent Windshield Wiper, Dual w/Module	132
Module, Intermittent Relay, for Single Wiper Motor	133
Video Camera Supply and Ground Circuit (South Carolina)	133
Backing Alarm	134
Roll Back Alarm	134
Roof Escape Hatch w/Power Vent (Transpec, Model 1600)	135
Touch Tape Chime System, for ADA Stop Request	136
Tachograph (Argo 1318-02)	137

1998-1999 MVP-ER

CHASSIS

TABLE of CONTENTS

CHASSIS SCHEMATICS	Page #
MAIN CHASSIS	139
Pusher w/Douglas Column	140
Elect. - LWP Douglas Column/Fox Turn Signal Switch	141
Elect. - LWP Douglas Column/Fox Turn Signal, Cat 3126 Engine	142
Elect. - LWP Douglas Column/Fox Turn Signal, Cat 3126 Engine (Kentucky)	143
Elect. - LWP Douglas Column/Fox Turn Signal, Cat 3126 Engine (Kentucky)	144
Elect. - LWP Douglas Column/Fox Turn Signal, 98 Cat 3126 Engine	145
Elect. - LWP Douglas Column/Fox Turn Signal, 98 Cat 3126 Engine	146
Elect. - LWP Douglas Column/Fox Turn Signal, 98 Cat 3126 Engine	147
Elect. - LWP Douglas Column/Fox Turn Signal, 98 Cat 3126 Engine	148
Elect. - LWP Douglas Column/Fox Turn Signal, 98 Cummins ISB Engine	149
Elect. - LWP Douglas Column/Fox Turn Signal, 98 Cummins ISB Engine	150
Elect. - LWP Douglas Column/Fox Turn Signal, 98 Cummins ISB Engine	151
Elect. - LWP Douglas Column/Fox Turn Signal, 98 Cummins ISB Engine	152
ENGINE	153
Elect. Cat 3126 (1 of 2)	154
Elect. Cat 3126 (2 of 2)	155
Elect. Cat 3126 (98 Model) (1 of 3)	156
Elect. Cat 3126 (98 Model) (2 of 3)	157
Elect. Cat 3126 (98 Model) (3 of 3)	158
Elect. Cat 3126 (98 Model) (1 of 3)	159
Elect. Cat 3126 (98 Model) (2 of 3)	160
Elect. Cat 3126 (98 Model) (3 of 3)	161
Elect. Cat 3126 (98 Model) (1 of 3)	162
Elect. Cat 3126 (98 Model) (2 of 3)	163
Elect. Cat 3126 (98 Model) (3 of 3)	164
Electrical Cummins 6B Eng. OEM Interface Conn. A (98 Model)	165
Electrical Cummins ISB Eng., OEM Interface Conn. A (98 Model)	166
Electrical Cummins ISB Eng. OEM Interface Conn. B (98 Model)	167
Electrical Cummins ISB/ISC Eng., OEM Interface Conn. B (98 Model)	168
Electrical Cummins ISC Eng., OEM Interface Conn. A (98 Model)	169

CHASSIS SCHEMATICS	Page #
TRANSMISSION	171
Mores Electronic Maxxe Transmission Shifter (L.A. Unified)	172
Elect. Sturdy Governor, CAT 3116	173
Elect. Allison MD Elect. Transmission	174
Elect. Allison WTEC III Transmission Non Retarder	175
WTEC III Non Retarder, Bussman VIM	176
Electrical Allison WTEC III Transmission Retarder Version	177
WTEC III Retarder Version, Bussman VIM	178
Retarder Hand Control Installation, WTEC III	179
BRAKES	181
Elect. Antilock Brake System (98 Model) (Kentucky)	182
Antilock Brake System w/Traction	183
Elect. Exhaust Brake	184
Exhaust Brake w/WTEC III Transmission	185
Exhaust Brake w/Bussman Rev. WTEC III	186
SPEEDOMETER	187
Speedo at Trans., Pulse Distrib. Mod. 98 Cummins ISB	188
LIGHTS	189
Headlights Daytime Running Lights, Std. Switch High Wattage Headlights (LWP)	190
Daytime Running Lights, w/Opt. C3675 Master Control Switch	191
Daytime Running Lights w/Std. Headlight Switch & Starter Interrupt (1 of 2)	192
Daytime Running Lights w/Std. Headlight Switch & Starter Interrupt (2 of 2)	193
Master Control Switch	194
Hazard Lamps Solid State Flasher	195
ALTERNATOR	197
Power Cable Term. Points, Mod. Rear Box	198
Alternator Low Output Charge Indicator Relay/Light (Delco)	199
Alternator Diode Assembly	200
MISCELLANEOUS	201
Elect. Onspot Chains	202
Roll-Back Alarm	203
Power & Ground Cables, 98 Cummins ISB	204
Electrical Component Mtg./Wiring Grid Htrs., 98 Cummins ISB	205

General Recommendations - Maintenance and Repair

The following comments may be helpful in avoiding some of the most common problems experienced over the life of the bus.

1. Shorts in Cables and Harnesses:

Cables that chafe or dangle will eventually wear through the insulation and result in a short. This can also cause terminals to loosen at their terminal point. Many times a mounting clip is removed to permit access to another component or to service that particular harness/cable. ALWAYS reinstall the mounting clips to their original position.

2. Corrosion in Sockets and Terminals:

This can be a serious problem on units operating on streets and highways using salt and sodium chloride products.

The use of an anti-corrosive sealant, such as Graffo 116 to coat exposed connectors, switches, and ground terminals, is very helpful in deterring corrosion in such areas.

The use of a dielectric grease to coat the base and sockets of bulbs will deter the formation of corrosion in lamps exposed to road contaminants. It, also, reduces road shock in the bulb filaments.

3. Circuit Resistance:

Circuit resistance is usually caused by loose terminals at the point of termination, improper crimping of replacement terminals onto the wire, and unprofessional splicing of two wires together.

Practically all replacement terminals require a special tool to insure a complete, secure bond of the terminal and the wire. If the proper crimping tool is not available, the terminal should be soldered to the wire, using a rosin flux solder. Always cover the end of the terminal with a one inch piece of heat shrink tubing to prevent the entrance of water, salt, etc.

Twisting the wires together is acceptable only if the union is then soldered with rosin flux solder, and covered with a heat shrink tubing extending one inch on each side of the union. Butt splices are also common in such a repair. Again, cover the splice with heat shrink tubing.

Wiring left improperly sealed will corrode, and the corrosion can wick up the entire length of the wire. **Figure 1** is an example of the proper way to splice two wires together.

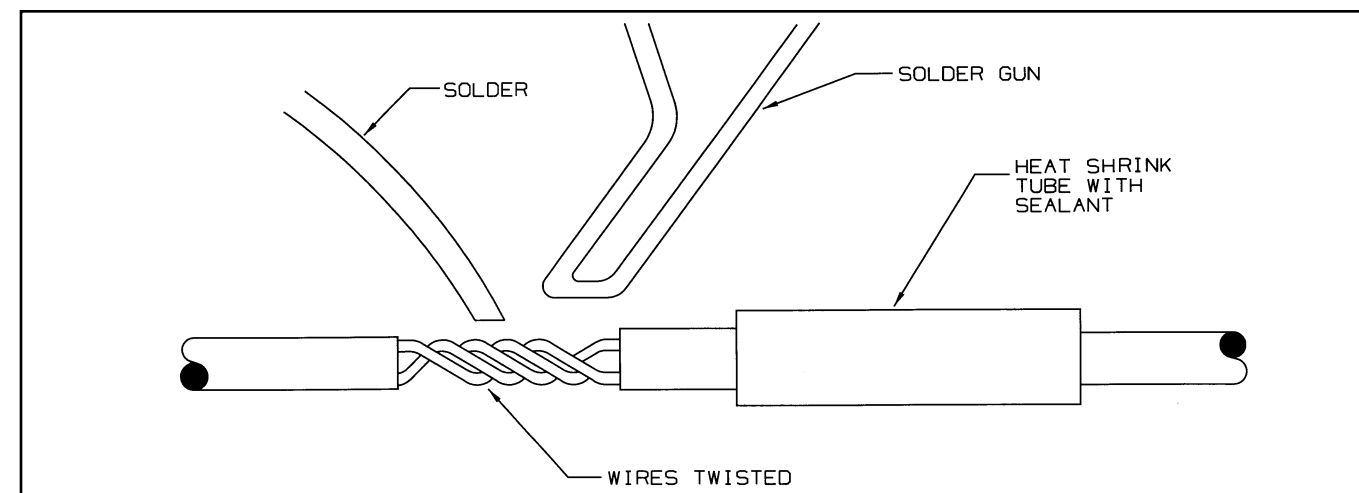


Figure 1

4. Overloaded Circuits:

Additional electrical components should not be added to existing circuits. There is room for additional circuit breakers on the side electrical panel, if additional options are added in the field.

5. Proper Diagnosis:

Thorough diagnosis is a must to eliminate repeat failures in the electrical system. Determining the cause of a particular failure not only solves the problem on the unit involved, but it may be helpful in preventing failures on other similar units in the fleet.

In the event a particular circuit breaker continues to trip, even though no short is found, it would be wise to check the circuit flow on that circuit and compare it to the rating of the circuit breaker. The circuit breaker. The circuit breaker may be tripping below its rating, or the current draw may be in excess of the breaking rating.

To check current draw on any given circuit, connect an ammeter in series between the circuit and a battery terminal. Energize the circuit and read the amps registered on the ammeter.

System Protection from Short Circuits

The electrical system has three means of protection from damage due to a short circuit in the total system:

1. Each circuit is protected by an automatic resetting circuit breaker. In some instances a circuit breaker may accommodate more than one circuit; however, in no case would the combined load be in excess of the rating of the circuit breaker if all the circuits were energized at the same time. In the event such a circuit breaker is tripping all the time it will be necessary to check out each circuit using that circuit breaker.
2. A 150 amp manual-reset Master circuit breaker is located on the front electrical panel of the MVP-EF, and on the rear electrical panel of the MVP-ER, ER-Transit, CL960 and TL960. This will protect the electrical system from damage that may occur from a major short in any area not protected by a fuse or automatic circuit breaker. This circuit breaker must be manually reset in the event it trips. When the breaker trips, the small RED button will depress. To reset it, move the small black lever located on the left side of the breaker back against the body of the breaker. When the electrical system has to be taken out of service to make other repairs, the master breaker can be tripped by depressing the small RED button in the center of the breaker.

In the event the Master breaker should trip more than once, the cause **MUST** be determined before placing the bus back in service.

3. In the unlikely event a battery cable should short out against a chassis component, the 2 AWG engine-to-chassis ground cable will fail. This cable is attached to the engine block on the right side and is connected to the right frame rail.

In addition to the above precautions to minimize damage from an electrical fire, the insulation on all wiring is of a crosslink polyethylene composition which will not maintain combustion once the copper core of the wire cools. The same applies to convoluted tubing used to protect harnesses and tubing from chafing and the elements.

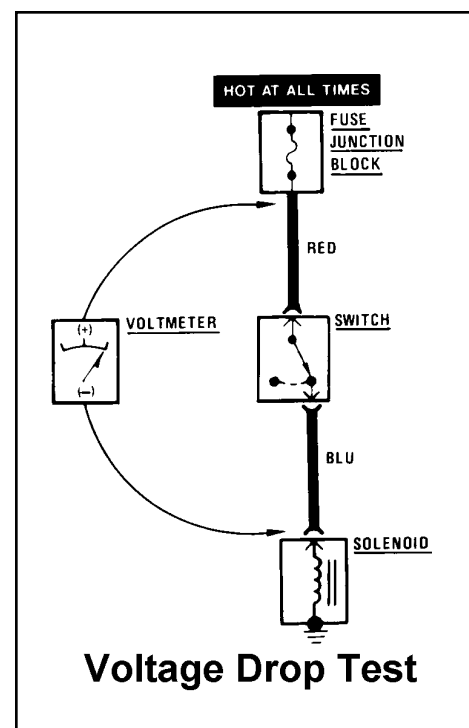


Figure 2

Testing for Voltage Drop

This test checks for voltage being lost along a wire, or through a connection or switch. See **Figure 2**.

1. Connect the positive lead of a voltmeter to the end of the wire (or to the side of the connection or switch) which is closest to the battery.
2. Connect the negative lead to the other end of the wire (or the other side of the connection or switch).
3. Operate the circuit.
4. The voltmeter will show the difference in voltage between the two points. A difference (or drop) of more than one volt indicates a problem.

Testing for Short to Ground

1. Remove the blown fuse, leaving the battery connected.
2. Connect the short finder across the fuse terminals.
3. Close all switches in series with the circuit you are troubleshooting.

4. Operate the short finder. The short finder will pulse current to the short. This creates a pulsing magnetic field surrounding the circuit wiring between the fuse junction block and the short.
5. Beginning at the fuse junction block, slowly move the short finder meter along the circuit wiring. The meter will show current pulses through sheet metal and body trim.

As long as the meter is between the fuse junction block and the short, the needle will move with each current pulse. When you have moved the meter past the point of the short, the needle will stop moving. Examine the wiring in that area for the short to ground. See **Figure 3**.

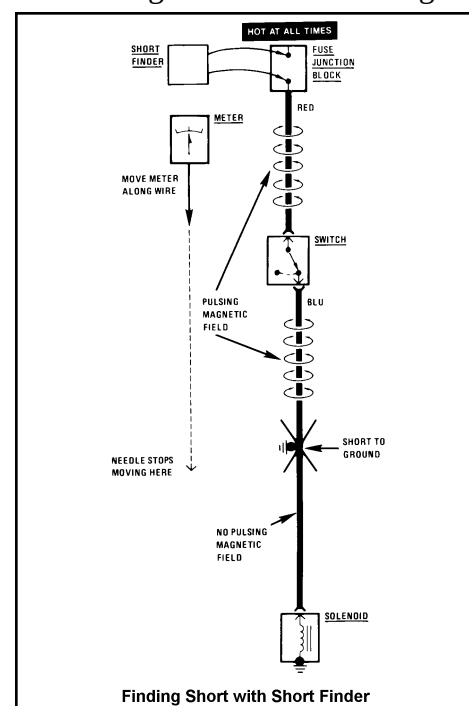


Figure 3

Checking Current Draw

1. Connected in series IN a circuit according to polarity.
2. Measures current flow.
3. Used in a closed circuit. See **Figure 4**.

Troubleshooting Tools

Electrical troubleshooting requires the use of common electrical test equipment.

Test Light/Voltmeter:

Use a test light to check for voltage. A Test Light is made up of a 12-volt light bulb with a repair of leads attached. After grounding one lead, touch the other lead to various points along the circuit where voltage should be present. When the bulb goes on, there is voltage at the point being tested.

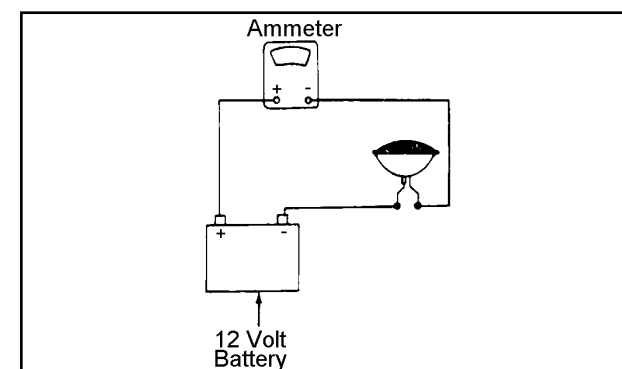


Figure 4

A voltmeter can be used instead of a test light. While a test light shows whether or not voltage is present, a voltmeter indicates how much voltage is present.

Never use a test light on circuits that contain solid state components, since damage to these components may result.

Jumper Wire:

A jumper wire is made up of an in-line fuse holder connected to a set of test leads. It should have a five ampere fuse. Use it for bypassing open circuits. Never use a jumper wire across any load (motors, etc.). This direct battery short will blow the fuse. See **Figure 5**.

Short Finder:

Short Finders are available to locate hidden shorts to ground. The short finder creates a pulsing magnetic field in the shorted circuit and shows you the location of the short through body trim or sheet metal.

Troubleshooting Tests

Test for Voltage:

1. Connect one lead of a test light to a known good ground. If you are using a voltmeter, be sure it is the voltmeter's negative lead that you have connected to ground.
2. Connect the other lead of the test light or voltmeter to a selected test point (connector or terminal).
3. If the test light glows, there is voltage present. If you are using a voltmeter, note the voltage reading. It should be within one of measured battery voltage. A loss of more than one volt indicates a problem. See **Figure 6**.


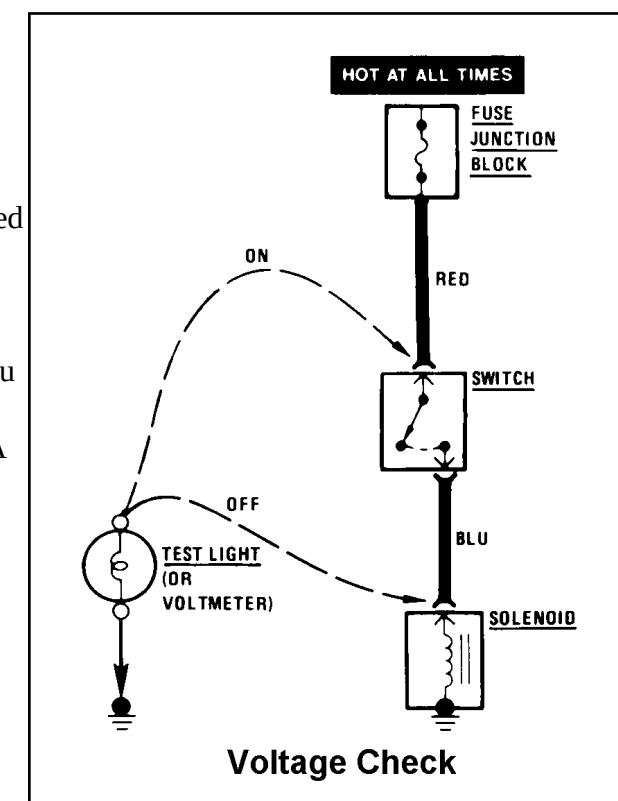


Figure 6

**MVP-ER
PANEL
SCHEMATICS**

BILL OF MATERIALS			
ITEM	PART NO.	DESCRIPTION	QTY.
1	52002183	FUSE/CB BLOCK, 10 CIRCUITS	1
2	52002242	FUSE/CB BLOCK, 20 CIRCUITS	1
3	22016365	BUZZER, 12 VOLT, METAL	1
4	52002256	JUMPER, COPPER BAR, SOLENOID TO CB BLOCK	1
5	52000103	SOLENOID, 100-AMP, CONTINUOUS DUTY	1
6	52002191	JUMPER-SIDE ELECTRICAL PANEL, 8 GA.	1
7	22012365	BUZZER, 12 VOLT, METAL	OPT.
8	52000060	RELAY, 12 VOLT, CONTINUOUS DUTY, 50/20 AMP	OPT.
9	52001046	FLASHER, 8-LIGHT, WELDON 7000	OPT.
10	52002410	DECAL, CB BLOCK, 10 CIRCUIT	1
11	52002409	DECAL, CB BLOCK, 20 CIRCUIT	1
12	60002101	PANEL, ELECTRICAL, PUSHER AND F.C.	1
13	52002192	JUMPER, CHASSIS SOLENOID TO BODY SOLENOID	1
14	22039375	FLASHER, 8-LIGHT, BAADER BROWN	OPT.
15	22023369	FLASHER, 4-LIGHT, BAADER BROWN	OPT.
16	29414374	SCREW, PHILLIPS TRUSS HEAD NO. 10-32 X 1 1/4	1
17	29940027	LOCKNUT, 10-32	2
18	52002775	JUMPER, GROUND FC+PUSHER ELECT. PANEL	1
19	52000060	RELAY, 12 VOLT, CONTINUOUS DUTY, 50/20 AMP	OPT.,* B3701-04-000
20	52002061	JUMPER-WIRE, 12 AWG, 8", WHITE	OPT.,* B3701-04-000
21	52000260	JUMPER-WIRE, 16 AWG, 9", BLUE	OPT.,* B3701-04-000


ITEM NUMBERS 1,2,10 AND 11 ARE PART OF POWER HARNESS ASSEMBLY 52002521.

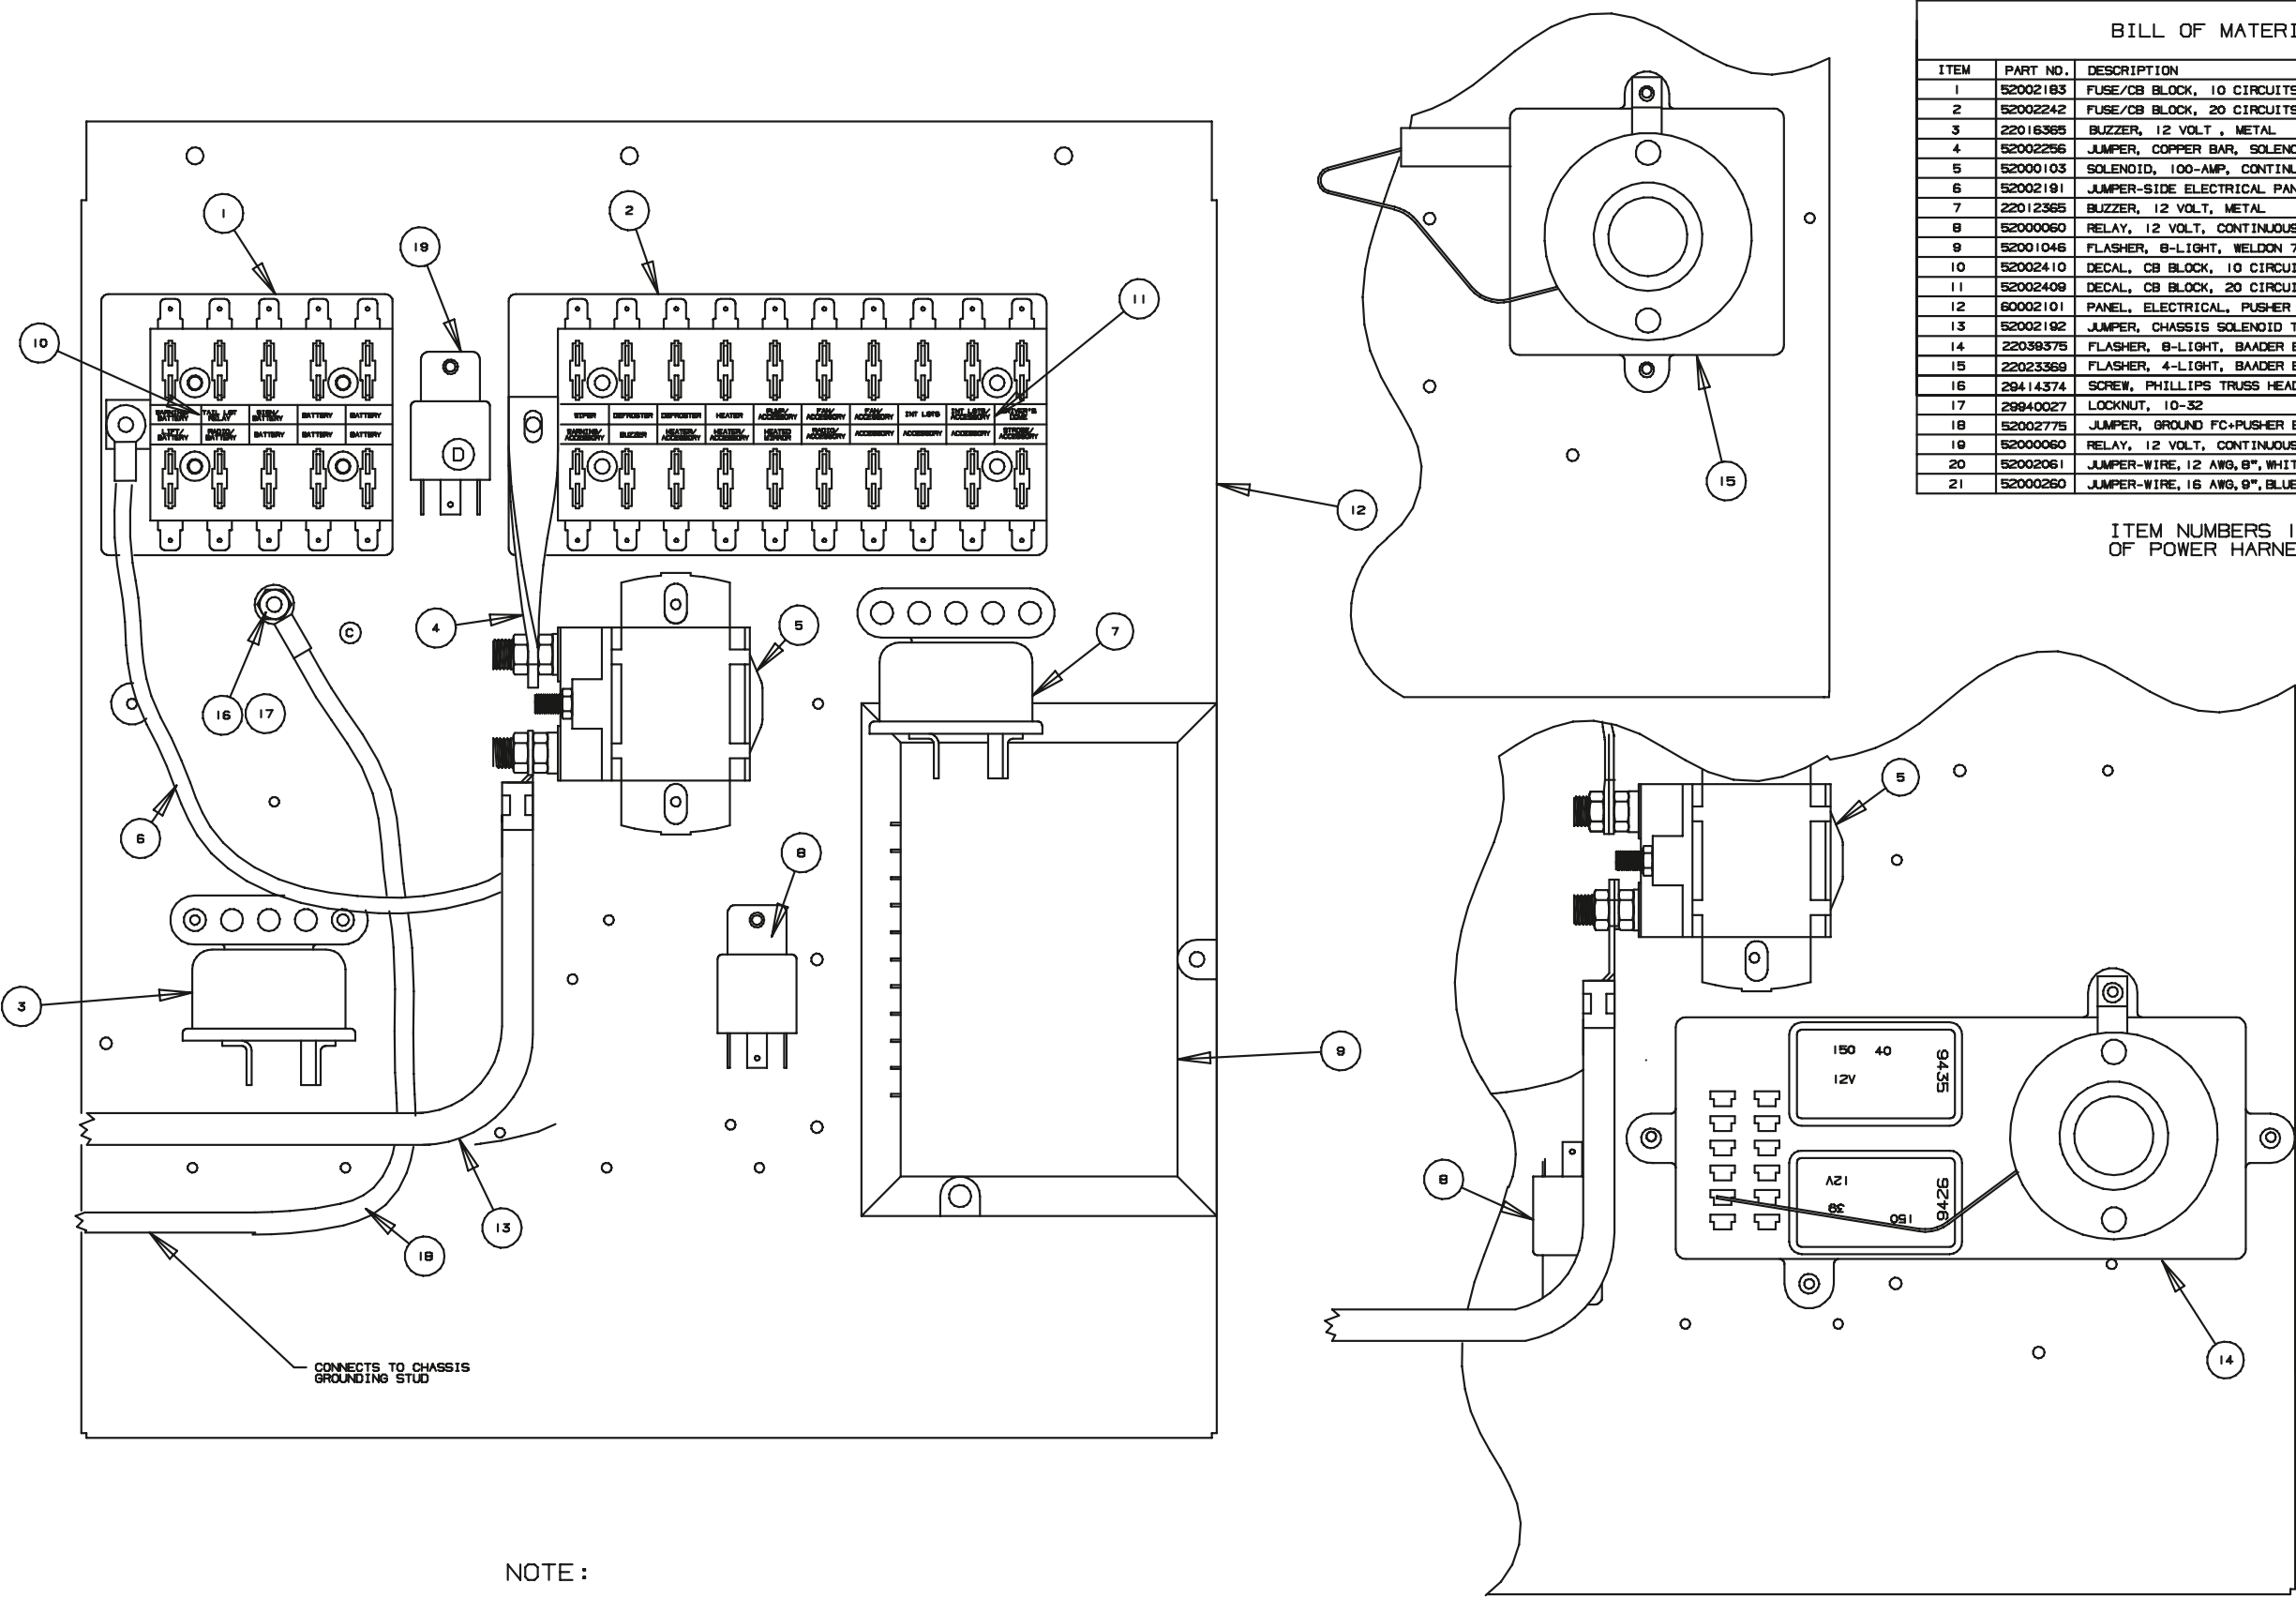

NOTE :
ELECTRICAL COMPONENTS USED MAY VARY DEPENDING ON SPECIFICATIONS AND
OPTIONS-THIS DRAWING SHOULD ONLY BE USED AS A REFERENCE.

52002423 D

ELECT. COMPONENTS
SIDE PANEL (BODY)

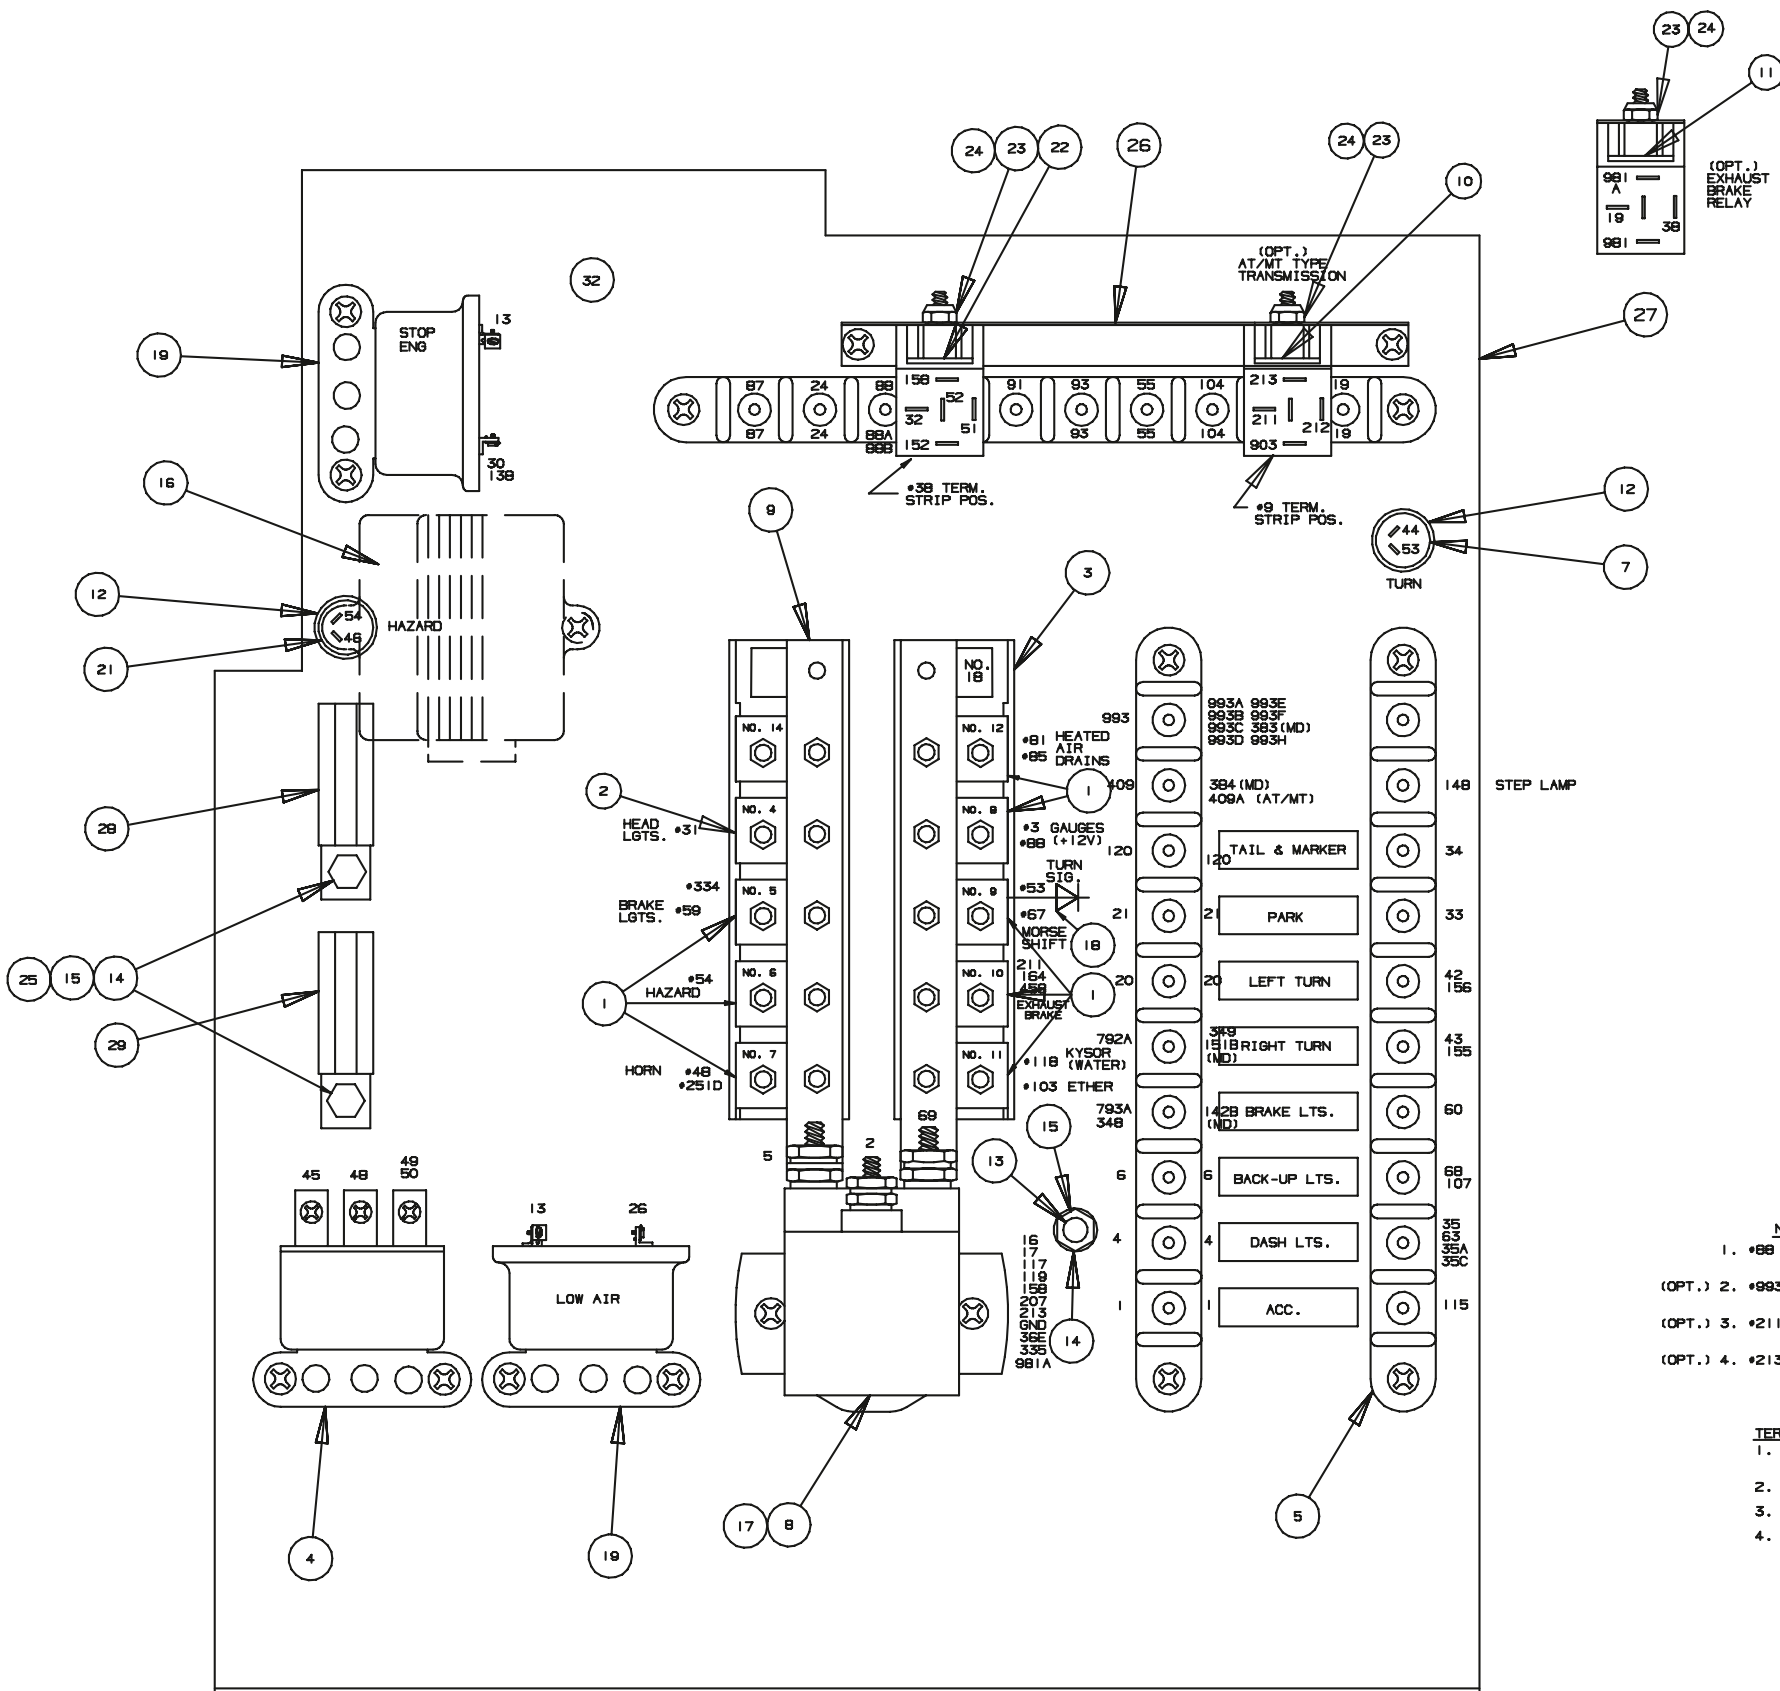

ITEM #	PART NUMBER	DESCRIPTION	STD / OPT	QTY
1	61200104	CIRCUIT BREAKER-20 AMP		8
2	61200105	CIRCUIT BREAKER-35 AMP		1
3	61200845	CIRCUIT BREAKER BRACKET		2
4	61200109	HORN RELAY		1
5	61200129	JUNCTION BLOCK		3
6	61200393	KYSOR COOLANT LEVEL ALARM MODULE (NOT SHOWN) C2607	OPT	1
7	61200413	FLASHER-12 VOLT *552 (TURN SIGNAL)		1
8	61200411	ESSEX POWER CONTACTOR		1
9	62200727	BUSS BAR		2
10	61201114	RELAY-CONTROL, SUPPRESSED	C6002 OPT	1
11	61201114	RELAY-CONTROL, SUPPRESSED	EXHAUST OPT	1
12	61200414	MOUNTING CLIP-FLASHER		2
13	61370803	GND STUD 1/4-20 x 1		1
14	61370260	LOCK WASHER 1/4		4
15	61370050	NUT 1/4-20		4
16	61201159	SOLID STATE ELECTRONIC FLASHER	B3725 OPT	1
17	62200728	SPACER-CONTACTOR MT8		2
18	62200633	DIODE ASSEMBLY - ANTI FEEDBACK (TURN SIG.)		1
19	61200165	WARNING BUZZER LOW AIR, LO OIL/HI TEMP		2
20	62230884	BRACKET, MT8.-DATA LINK PLUG		
21	61200435	FLASHER-12 VOLT *1052 (HAZARD)		1
22	61200709	RELAY - CONTROL		1
23	61370036	SCREW-MACHINE, TRUSS HEAD, PHILLIPS 8-32-x 5/8		1
24	61370038	NUT-LOCK W/ELASTIC 8-32		1
25	61370802	BOLT-HEX HEAD 1/4 x 20 x 3/4		2
26	62201134	BRACKET-RELAY MOUNTING		1
27	62201122	PANEL-CHASSIS ELECTRICAL SIDE		1
28	61480488	CLAMP-LOOM CUSHIONED 1.5 I.D.		1
29	61480489	CLAMP-LOOM CUSHIONED 1.25 I.D.		1
30	61370026	SCREW, MACHINE - #4-40 x 3/8	(DATA LINK)	
31	61370027	LOCKNUT - #4-40	(DATA LINK)	
32	62201855	HARNESS, DATA LINK		1

NEW SP JUMPERS REQ'D (CAT 3126)

1. *88 SIDE PANEL C.B. NO.8 (W/*3) TO SIDE PANEL TERMINAL BD. (POS. *98) W/*88A & *88B

(OPT.) 2. *893H SIDE PANEL TERMINAL BD. (W/*993) TO BODY DOOR RELAY (87) ADA LIFT

(OPT.) 3. *211 SIDE PANEL C.B. NO.10 TO ALLISON AT/MT TRANS. SHIFT MODULATOR RELAY (30)

(OPT.) 4. *213 ALLISON AT/MT TRANS. SHIFT MODULATOR RELAY (86) TO SIDE PANEL GND STUD.

TERMINAL BD POSITIONS REQ'D (CAT 3126)

1. *993, 993A, 993B, 993C, 993D, 993E
993F, 993 (MD TRANS.)


2. *409, 384 (MD TRANS.)

3. *729A, 349, 151B - ATA-
993 TRANS. DATA LINK


4. *793A, 348, 142B - ATA-

62201801 A

ELECT. COMPONENT MOUNTING, SIDE PANEL LWP MODELS, CAT 3126 ENGINE (CHASSIS)

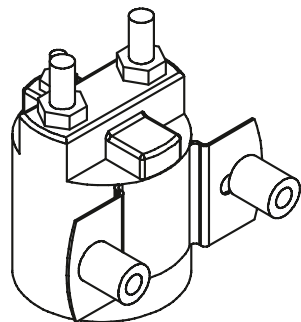

DETAIL A

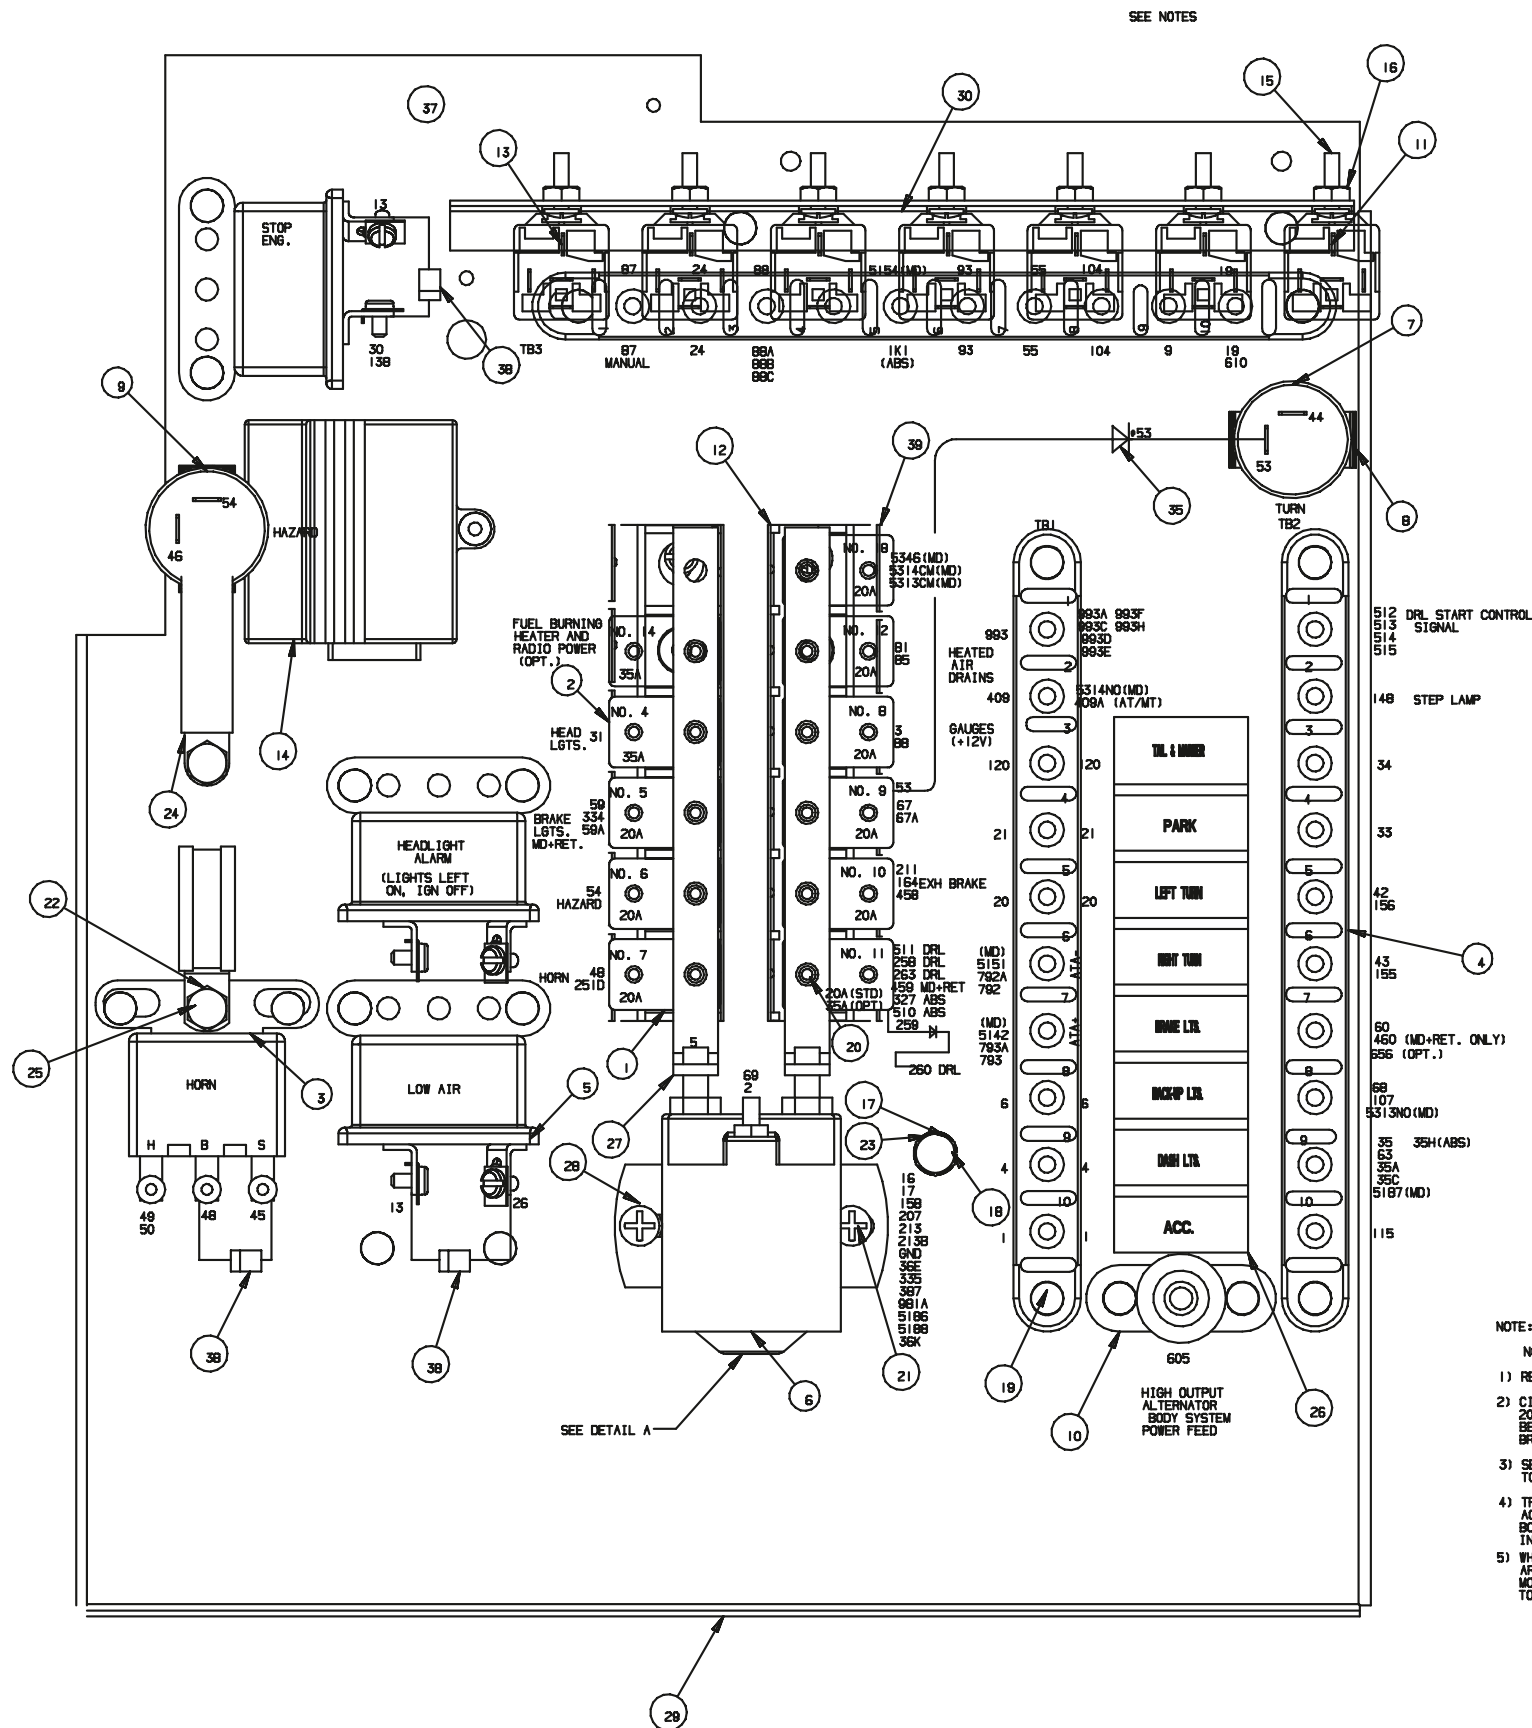

SEE NOTES

SEE DETAIL A

- JUMPERS REQ'D (CAT 3126) SEE TBB ECM HARNESS
- 1) #88 SIDE PANEL C.B. NO. 8 (W/3) TO SIDE PANEL TERMINAL BD. (POS. #88) W/88A & #88B, #88C (OPT.)
 - 2) #88H SIDE PANEL TERMINAL BD. (W/883) TO BODY DOOR RELAY (87) ADA LIFT
 - 3) #211 SIDE PANEL C.B. NO. 10 TO ALLISON AT/MT TRANS. SHIFT MODULATOR RELAY (30)
 - 4) #213 ALLISON AT/MT TRANS. SHIFT MODULATOR RELAY (86) TO SIDE PANEL GND STUD.
 - 5) #213B CHASSIS ACCELERATOR INTERLOCK RELAY (POS.86) TO SIDE PANEL GND STUD.
 - 6) #881A EXHAUST BRAKE RELAY (POS.86) TO SIDE PANEL GND STUD.
 - 7) #326 ABS RELAY (87A) TO ANTI-LOCK BRAKE HARNESS #327 ABS HARNESS JUMPER FROM CB 11 TO ABS RELAY (30, 85) #1E3 FROM ABS HARNESS TO SIDE PANEL ABS RELAY (86)

- NOTE: RELAY WIRING DETAIL SHOWN ON SHEET 2
- NOTES:
- 1) RELAYS SHOWN SEPARATELY FOR CLARITY.
 - 2) CIRCUIT BREAKER NO. 11 IS A (61200104) 20 AMP CIRCUIT BREAKER STANDARD, BUT BECOMES A (61200105) 35 AMP CIRCUIT BREAKER FOR OPTION C3676-06-000.
 - 3) SEE DWG. 62202743 FOR SIDE PANEL TO TOEBOARD INSTALLATION.
 - 4) TRANSMISSION NEUTRAL (+12VDC) SIGNAL IS ACQUIRED AT TBI-2 TERMINAL BOARD POSITION. BODY WIRES TO THIS POSITION FOR BRAKE INTERLOCK OPTION.
 - 5) WHEN STANDARD MOUNTING POSITIONS ARE FILLED WITH RELAYS, MOUNT THE NEXT RELAY(S) ON TOP OF THE MOUNTING PLATE UPSIDE DOWN.

- NOTES:
- 1) MATERIAL: N/A
 - 2) BLANK SIZE: N/A
 - 3) CALCULATED WEIGHT: N/A
 - 4) BURR REQUIREMENT: N/A
 - 5) FINISH: N/A
 - 6) COLOR: N/A
 - 7) TENSILE AND/OR IMPACT STRENGTH: N/A
 - 8) HIGH/LOW TEMPERATURE PERFORMANCE: N/A
 - 9) SURFACE GRAIN TEXTURE: N/A


ITEM	QUANTITY	PART NUMBER	DESCRIPTION
1	9	61200104	CIRCUIT BREAKER - 20 AMPS SINGLE POLE, THERMAL TYPE, 12VDC, METAL COVER
2	2	61200105	CIRCUIT BREAKER - 35 AMPS SINGLE POLE, THERMAL TYPE, 12VDC, METAL COVER
3	1	61200108	HORN RELAY 12 VOLTS
4	3	61200129	BLOCK, JUNCTION - 10 POST FRONT ELECTRICAL CHASSIS
5	3	61200165	BUZZER, WARNING 12 VOLT D.C.
6	1	61200411	CONTACTOR, POWER, 12 VDC
7	1	61200413	FLASHER - 12V
8	2	61200414	CLIP - MOUNTING, FLASHER
9	1	61200435	FLASHER - 12 VOLT, TF1052-002 HAZARD WARNING (M-BODY TRANSIT)
10	1	61200463	STUD, ELECT. - MOUNTING TERMINAL BD., 3/8-16
11	6	61200708	RELAY - CONTROL WITH MTG. BRACKET, 40/20 AMP SPDT.
12	2	61200845	BRACKET, CIRCUIT BREAKER 6 POSITION
13	1	61201114	RELAY - CONTROL W/ MTG. BRACKET, COIL SUPPRESS 40 AMP, SPDT.
14	1	61201159	SOLID STATE FLASHER
15	7	61370036	SCREW - MACHINE, TRUSS HEAD, PHILLIPS (BLACK OXIDE) 18-32 X 5/8"
16	7	61370038	LOCK NUT - NYLON INSERT #4-40, ZINC
17	3	61370050	NUT, HEX HEAD, GRADE 8
18	3	61370260	LOCKWASHER, 1/4 HELICAL SPRING REGULAR
19	22	61370334	SCREW-10 X 5/8
20	4	61370336	SCREW, TAP - 10 X 1/2 PHILLIPS, PAN HEAD, TYPE A
21	2	61370337	SCREW - SELF TAPPING, #10 X 1-1/4 PHILLIPS TRUSS HEAD, CAD/ZINC PLATE
22	2	61370802	BOLT, HEX HEAD, 1/4-20 X 3/4 COARSE THREAD
23	1	61370803	BOLT, HEX HEAD, 1/4-20 X 1 COARSE THREAD
24	1	61480488	CLAMP-LOOP, CUSHIONED,
25	1	61480489	CLAMP-LOOP-CUSHIONED .265 MOUNTING X .437 I.D.
26	1	62200640	DECAL - IDENTIFICATION, CIRCUIT PANEL, FRONT
27	2	62200727	BUSS BAR, 6 CIRCUIT
28	2	62200728	SPACER - RELAY
29	1	62201122	CHASSIS ELECTRICAL PANEL, LOW WINDSHIELD PUSHER
30	1	62201506	ANGLE, RELAY MOUNTING

ITEMS NOT SHOWN			
ITEM	QUANTITY	PART NUMBER	DESCRIPTION
32	1	61200393	KYSOR COOLANT LEVEL ALARM MODULE C2607 (OPT)
33	3	61201114	RELAY-CONTROL, SUPPRESSED MD+RET. C6002 (OPT)
34	1	61201114	RELAY-CONTROL, SUPPRESSED EXH. BRAKE (OPT)
35	1	62200633	DIODE ASSEMBLY - ANTI-FEEDBACK (TURN SIG.)
36	1	61200708	RELAY-CONTROL, C2070 (OPT)
37	1	62202287	HARNESS, DATA LINK J1587/J1939
38	3	62201842	DIODE ASM. - HORN SUPPRESSOR
39	1	61200104	CIRCUIT BREAKER - 20 AMP MD (OPT)
40	4	61200708	RELAY CONTROL C3676 (OPT)
41	1	62202535	DIODE ASM., - ANTI-FEEDBACK, 6 AMP C3676 (OPT)
42	3	62200633	DIODE ASM., - ANTI-FEEDBACK, 6 AMP C3676 (OPT)
43	1	62200780	DIODE ASM., - ANTI-FEEDBACK, 35 AMP C3676 (OPT)


Sheet 1 of 2

**62202210 M**

**ELECT. DIAGRAM COM-
PONENT MOUNTING,
SIDE PANEL, 98 CAT 3126
ENGINE (CHASSIS)**

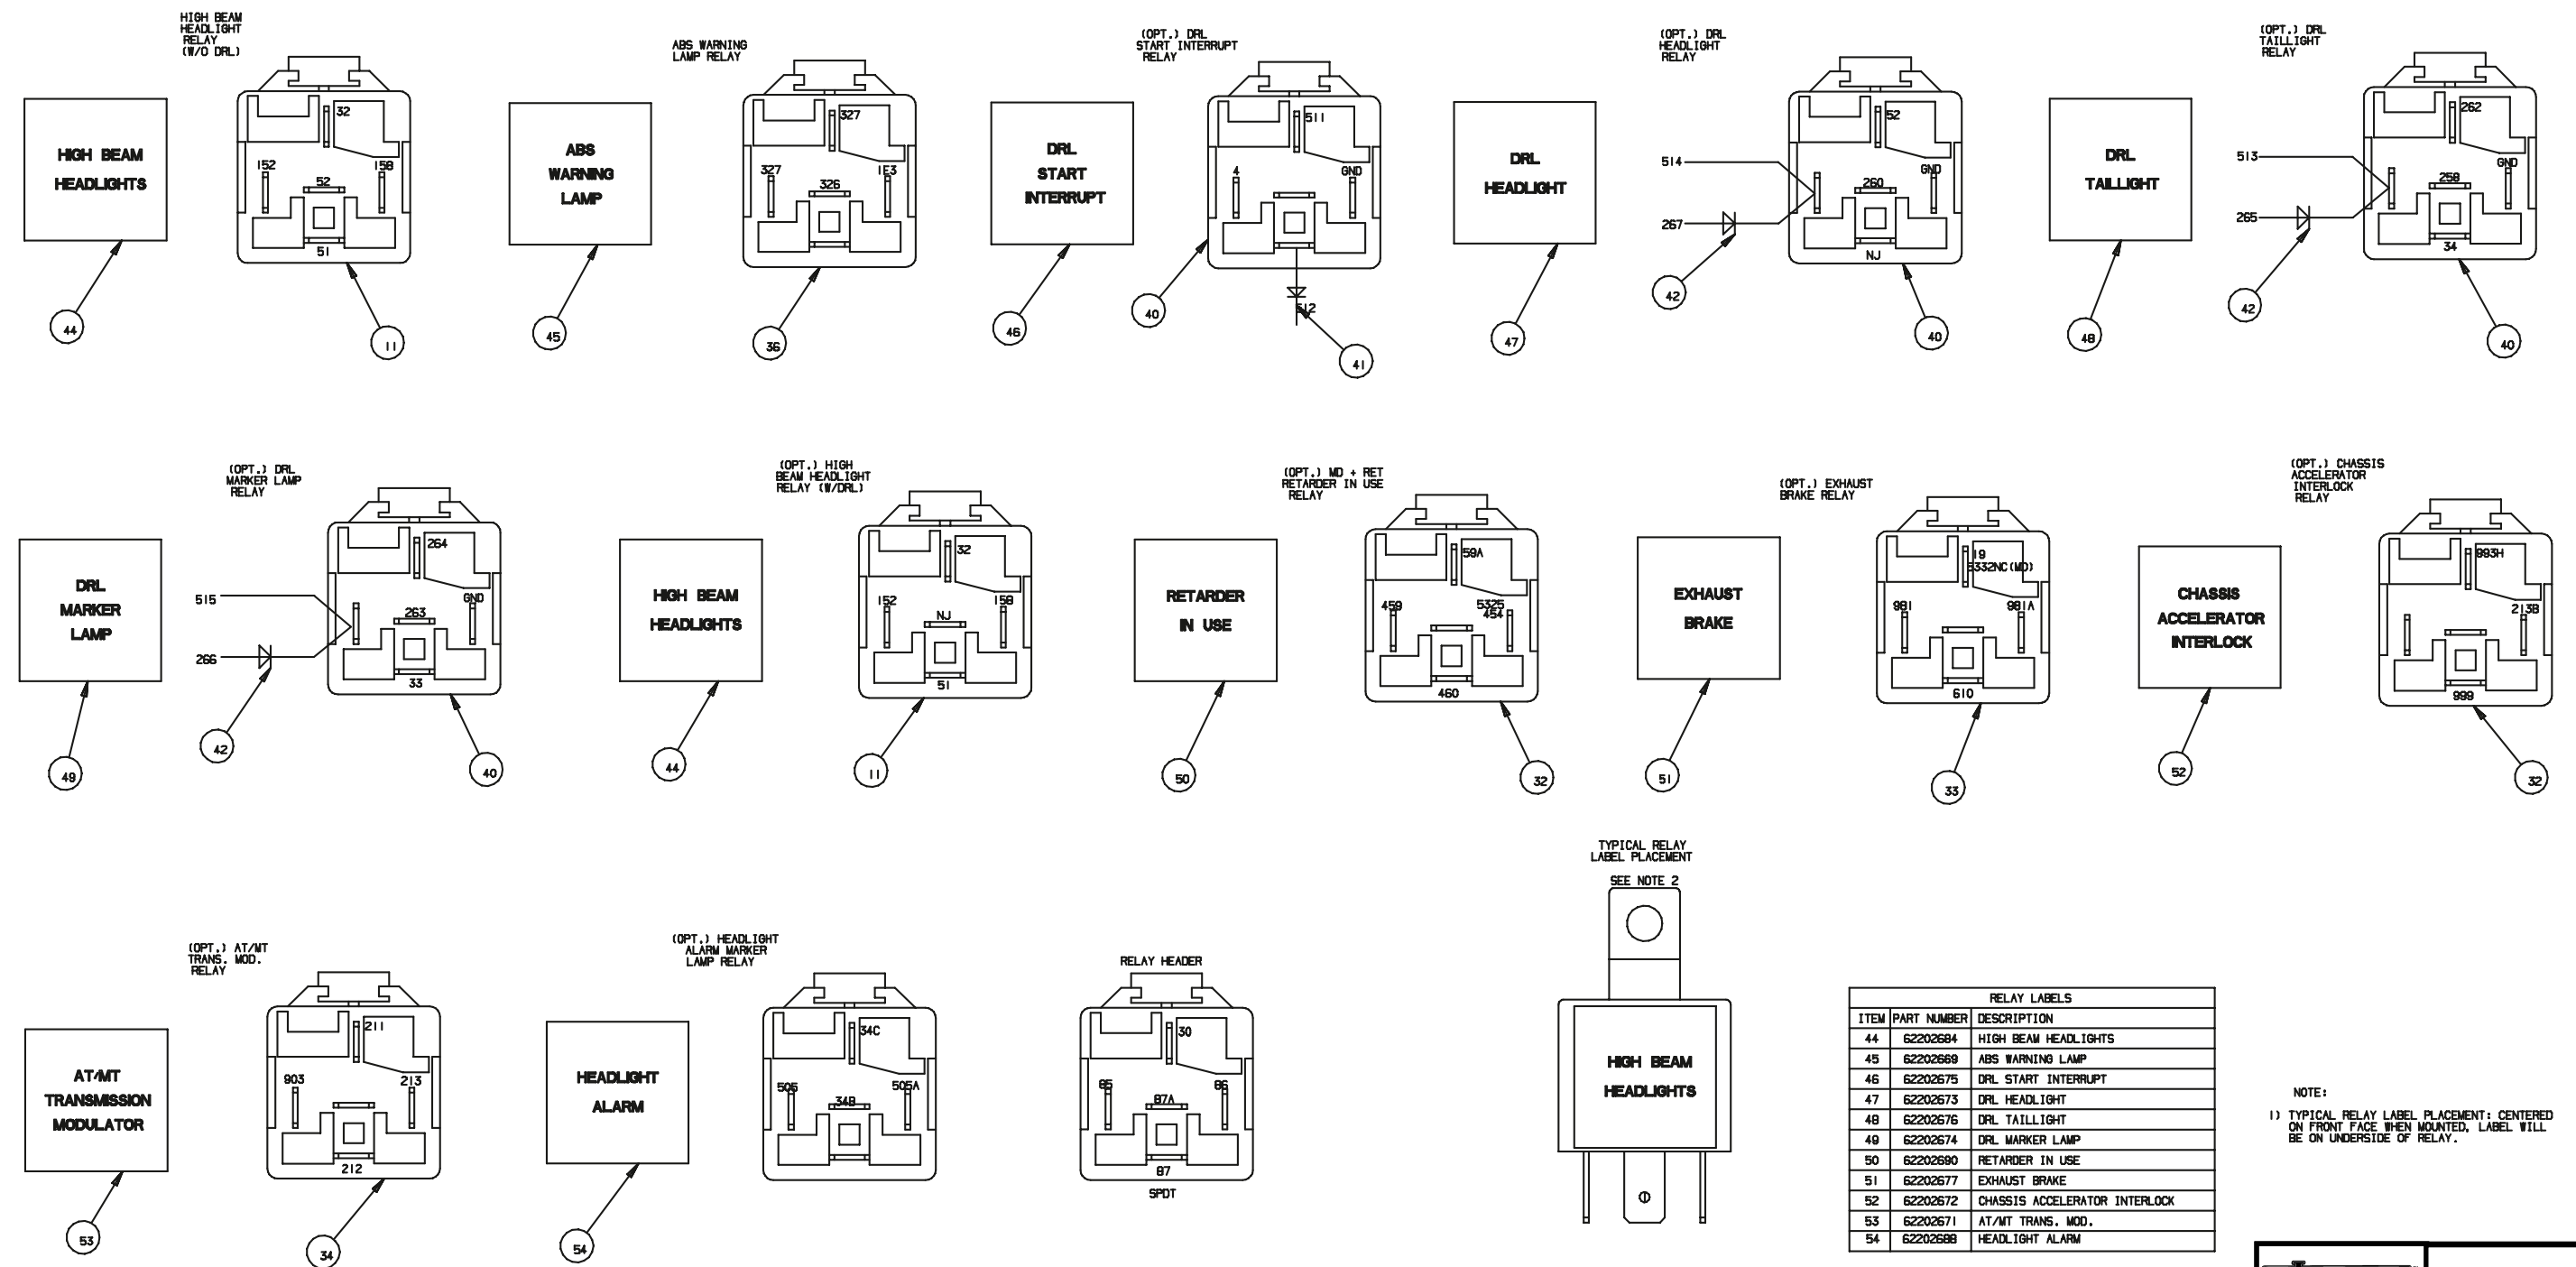

Sheet 2 of 2

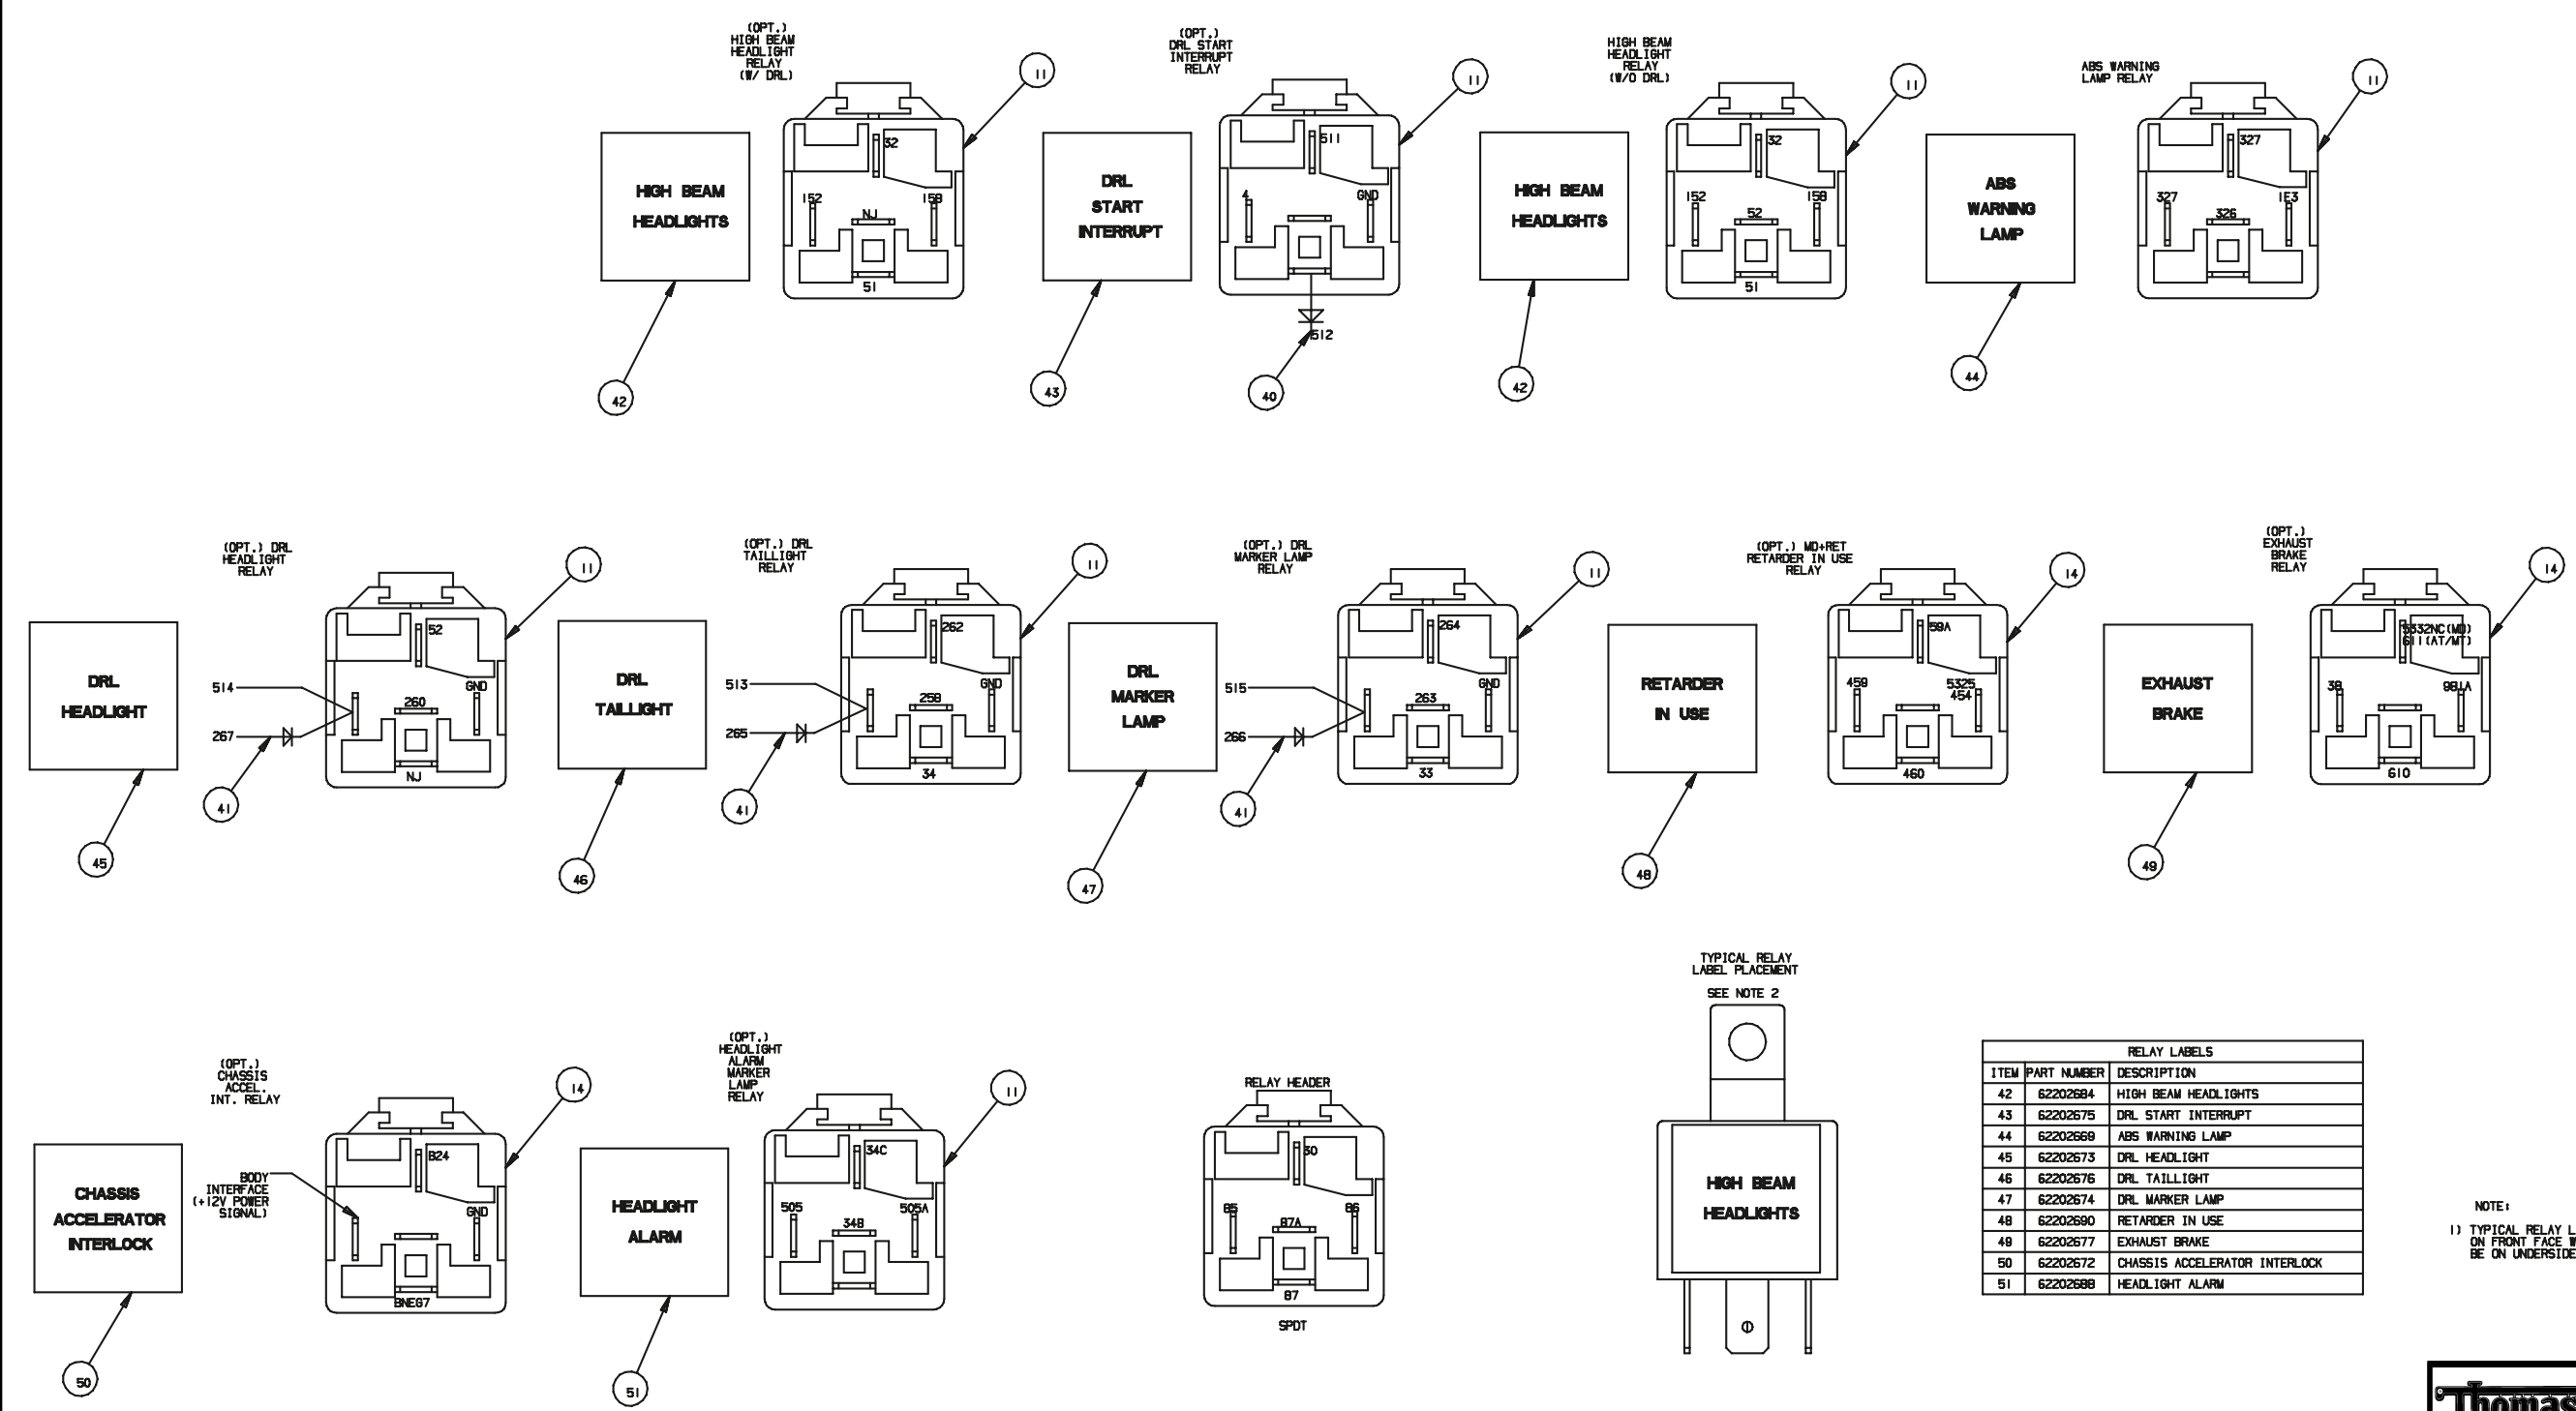

RELAY LABELS		
ITEM	PART NUMBER	DESCRIPTION
42	62202684	HIGH BEAM HEADLIGHTS
43	62202675	DRL START INTERRUPT
44	62202669	ABS WARNING LAMP
45	62202673	DRL HEADLIGHT
46	62202676	DRL TAILLIGHT
47	62202674	DRL MARKER LAMP
48	62202690	RETARDER IN USE
49	62202677	EXHAUST BRAKE
50	62202672	CHASSIS ACCELERATOR INTERLOCK
51	62202698	HEADLIGHT ALARM

NOTE:
1) TYPICAL RELAY LABEL PLACEMENT: CENTERED ON FRONT FACE WHEN MOUNTED, LABEL WILL BE ON UNDERSIDE OF RELAY.

62202311 M

**ELECT. DIAGRAM COM-
PARTMENT MOUNTING,
SIDE PANEL, 98 CUMMINS
ISB/ISC (CHASSIS)**

CIRCUITS NOT USED (ENG. HARNESS)

72	245	256
88	247	250A
89	252	302
91	253	250
93	255	251



CIRCUITS NOT USED (BOX JUMPERS)

72	241
89	242
161	240
238	
160	

HARNESS NOT USED

62201452 - CAT 3116 ENG.
MAN HTR PILOT
LAMP
*250D, *251D

FASTENER REQMTS (STANDARD)		QTY.	PART NO.	DESCRIPTION	ITEM
QTY PER ITEM	FASTENER PART NO.				
-	-	1	62201573	PANEL, INNER ELECTRICAL, MOD. REAR BOX, MVP-ER	1
1	61370334	3	61200709	RELAY - CONTROL, SPDT	2
2	61370334	3	61201491	BLOCK, JUNCTION - 8 POST FRONT ELECTRICAL CHASSIS	3
4	61370385	1	61201062	FUSE PANEL 6/8 POSITION	4
2	61370334	3	61200463	STUD, ELECTRICAL MTG.	5
2	61370337	1	61200728	SHUNT, 150 AMP. - 50 MILLIVOLT	6
-	-	2	61200343	FUSE - 5 AMP.	7
-	-	1	61200953	CIRCUIT BREAKER - 8 AMP.	8
-	-	4	61200936	CIRCUIT BREAKER - 10 AMP.	9
-	-	1	61200871	CIRCUIT BREAKER - 20 AMP.	10
-	-	1	61200872	CIRCUIT BREAKER - 30 AMP.	11
-	-	1	61200163	CABLE ENTRY SEAL, 1.5" I.D. (NOT SHOWN)	12
-	-	1	62210087	DIODE/WIRE ASM., ALTERNATOR (DELCO)	13
-	-	1	62201309	CABLE, AMMETER SHUNT (OPT.)	14
-	-	1	61200772	FUSE, 2 AMP (NOT SHOWN) *310	15
-	-	1	61200159	FUSEHOLDER (NOT SHOWN) *310	16
-	-	1	61200938	TERMINAL BD. - 4 POS. (BAT PWR)	17
-	-	1	62201732	HARNESS, DATA LINK	18
-	-	1	62202329	BRACKET, MTG - DATA LINK PLUG (NOT SHOWN)	19
-	-	4	61370026	SCREW, MACHINE - #4 - 40 x 3/8 (NOT SHOWN)	20
-	-	4	61370027	LOCKNUT - #4 - 40 (NOT SHOWN)	21

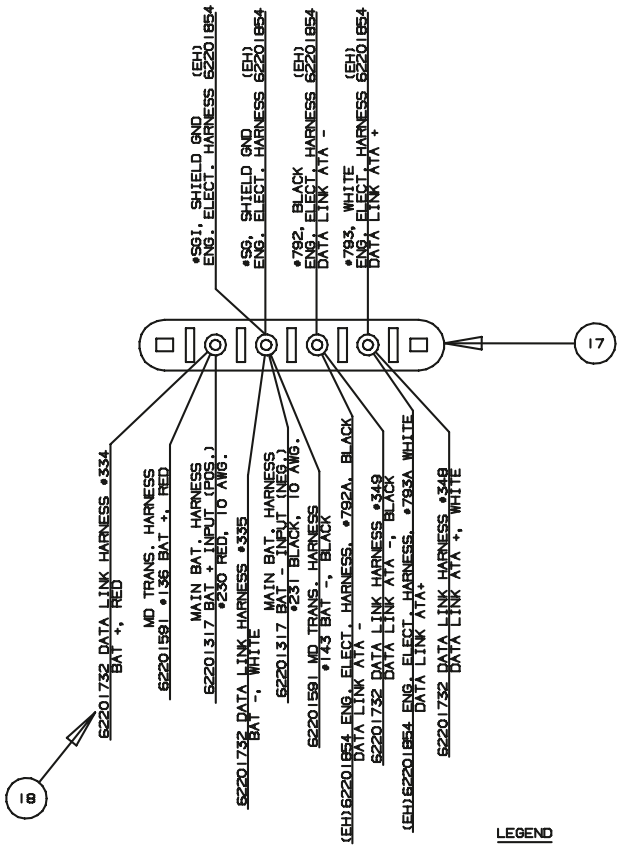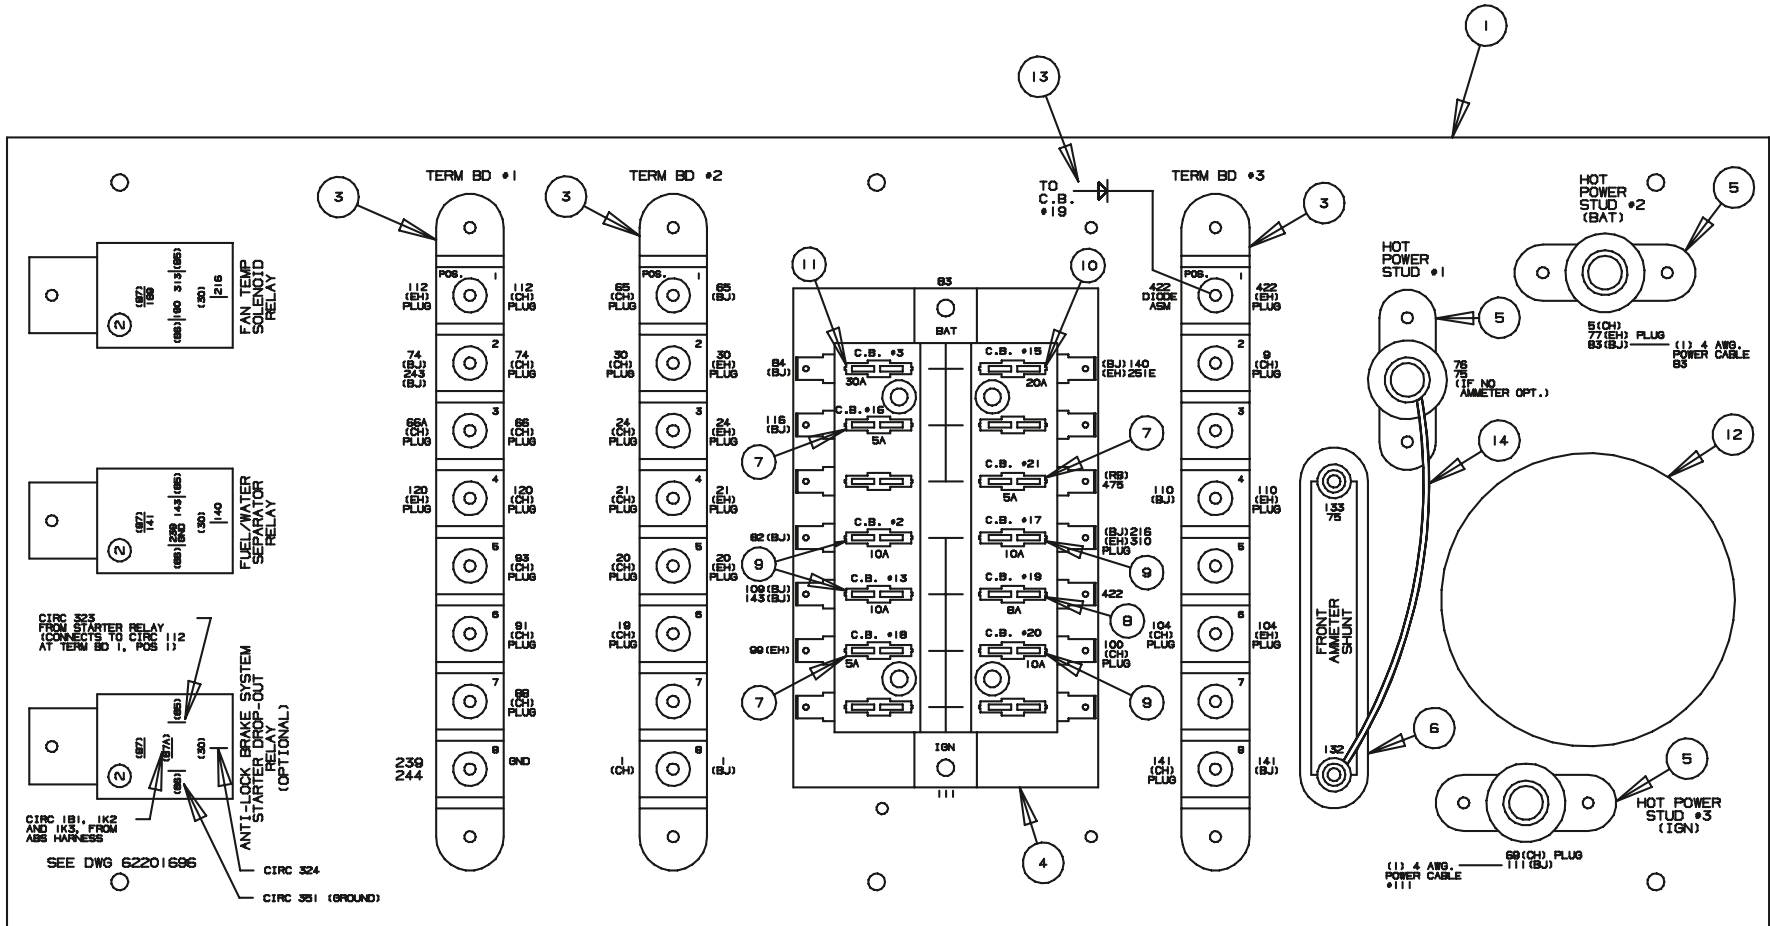

- LEGEND
- (CH) - CENTER HARNESS
 - (EH) - ENGINE HARNESS
 - (BJ) - MOD. BOX JUMPER
 - (BD) - BODY DROP-OUT OF REAR BOX
 - (RB) - ROLL-BACK HARNESS (OPT)


**62201802 G**

ELECT. DIAGRAM MODU-
LAR BOX COMPARTMENT
MOUNTING, CAT 3126
ENGINE (CHASSIS)


GND STUD IN MOD. REAR BOX

- *106 (EH)
- *236 (BJ)
- *244 (BJ)
- *213A (EH)
- *313 (BJ)
- *462A (EH)
- *477 (RB) (OPT)


DETAIL A
FAN TEMP
SOLENOID
RELAY

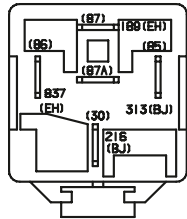



DETAIL B
FUEL/WATER
SEPARATOR
RELAY
(OPT.)

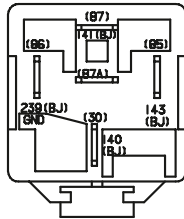

DETAIL C
ABS START
INTERLOCK
RELAY

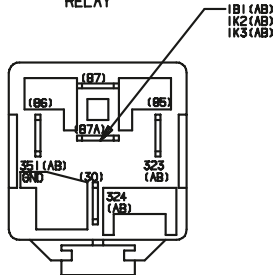

ITEMS NOT SHOWN			
ITEM	QUANTITY	PART NUMBER	DESCRIPTION
28	1	62202615	DIODE WIRE ASM. MOD. BOX

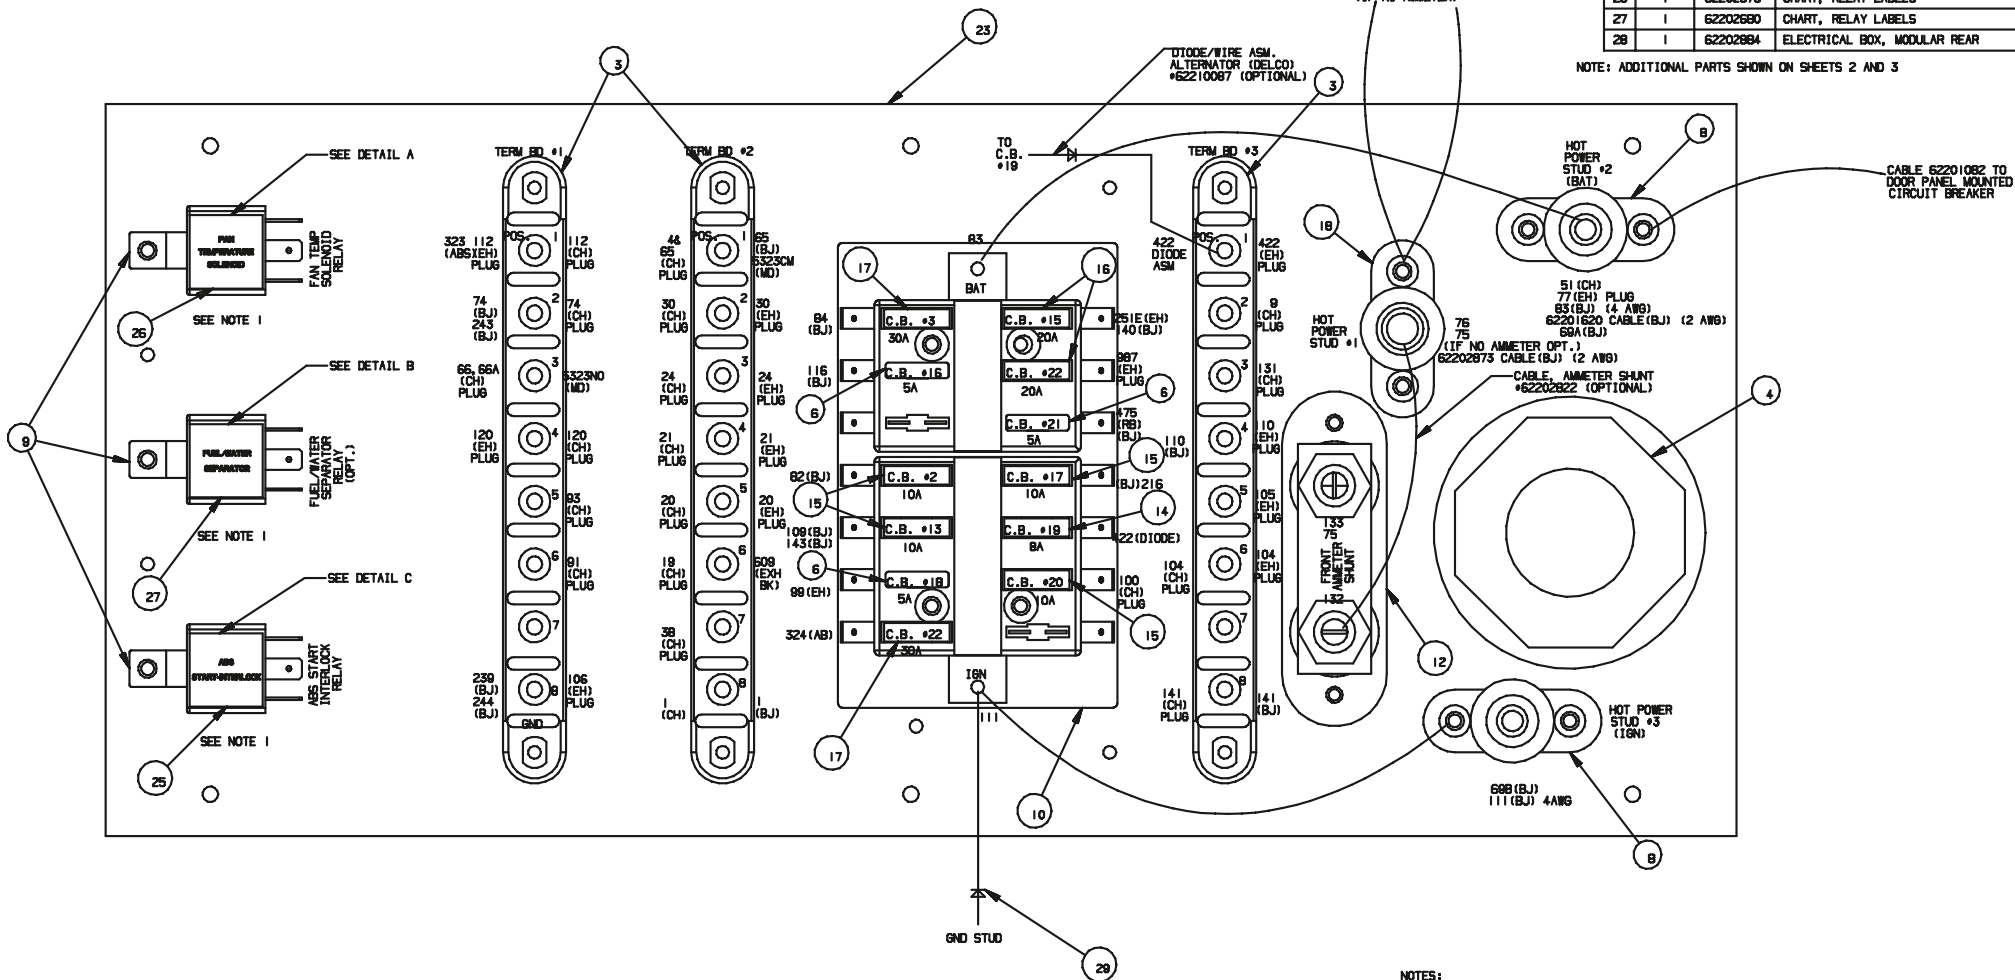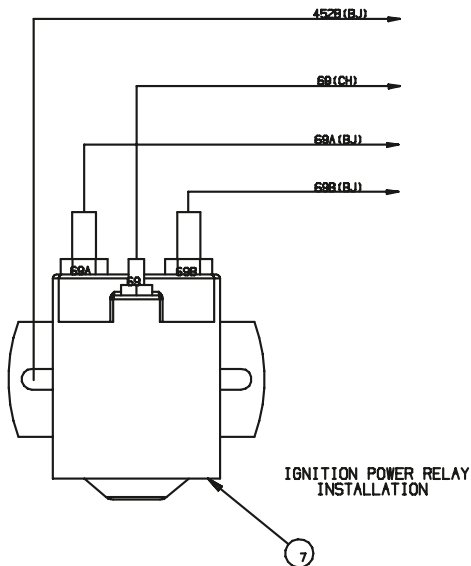

NOTES:
1) TYPICAL RELAY LABEL PLACEMENT:
CENTERED ON FRONT FACE OF RELAY,
TO READ PARALLEL TO GROUND WHEN
MOUNTED.

LEGEND
(CH) - CENTER HARNESS
(EH) - ENGINE HARNESS
(BJ) - MOD. BOX JUMPER
(BD) - BODY DROP-OUT OF REAR BOX
(RB) - ROLL-BACK HARNESS (OPT)
(AB) - ABS
(MD) - WTEC 111


ITEM	QUANTITY	PART NUMBER	DESCRIPTION
1	1	61200100	START SWITCH
2	2	61200116	SWITCH, TOGGLE, SPST
3	3	61200130	BLOCK, JUNCTION - 8 POST
4	1	61200163	SEAL, CABLE ENTRY, 1 1/2 IN.
5	1	61200218	GAUGE - 2 INCH
6	3	61200343	FUSE - 5 AMP
7	1	61200411	CONTACTOR, POWER, 12 VDC
8	2	61200463	STUD, ELECT. - MOUNTING
9	3	61200709	RELAY - CONTROL
10	1	61201062	FUSE PANEL - 14 POSITION
11	1	61201065	CIRCUIT BREAKER - 150 AMP
12	1	61201433	SHUNT, AMMETER, 300 AMP
13	1	61201434	JUNCTION BLOCK, 5 POST.
14	1	61201442	CIRCUIT BREAKER, 8 AMP
15	4	61201443	CIRCUIT BREAKER, 10 AMP
16	2	61201448	CIRCUIT BREAKER, 20 AMP
17	2	61201447	CIRCUIT BREAKER, 30 AMP
18	1	61201449	STUD, ELECT. - MOUNTING
19	4	61370026	SCREW - MACHINE, #4-40 X 3/8
20	4	61370027	LOCK NUT - NYLON INSERT
21	2	61370036	SCREW-MACHINE, TRUSS HEAD,
22	2	61370038	NUT-LOCK W/ ELASTIC
23	1	62201573	PANEL, INNER ELECTRICAL
24	1	62202087	BRACKET-MTG., OFF BOARD
25	1	62202668	CHART, RELAY LABELS
26	1	62202678	CHART, RELAY LABELS
27	1	62202680	CHART, RELAY LABELS
28	1	62202884	ELECTRICAL BOX, MODULAR REAR

NOTE: ADDITIONAL PARTS SHOWN ON SHEETS 2 AND 3

Thomas
BUSHY BUSSES

62202914 B

ELECT. DIAGRAM MOD.
BOX COMP. MTG. 98 CAT
3126 ENGINE (CHASSIS)
Effective Date: 04/27/99
End Date: 06/02/99

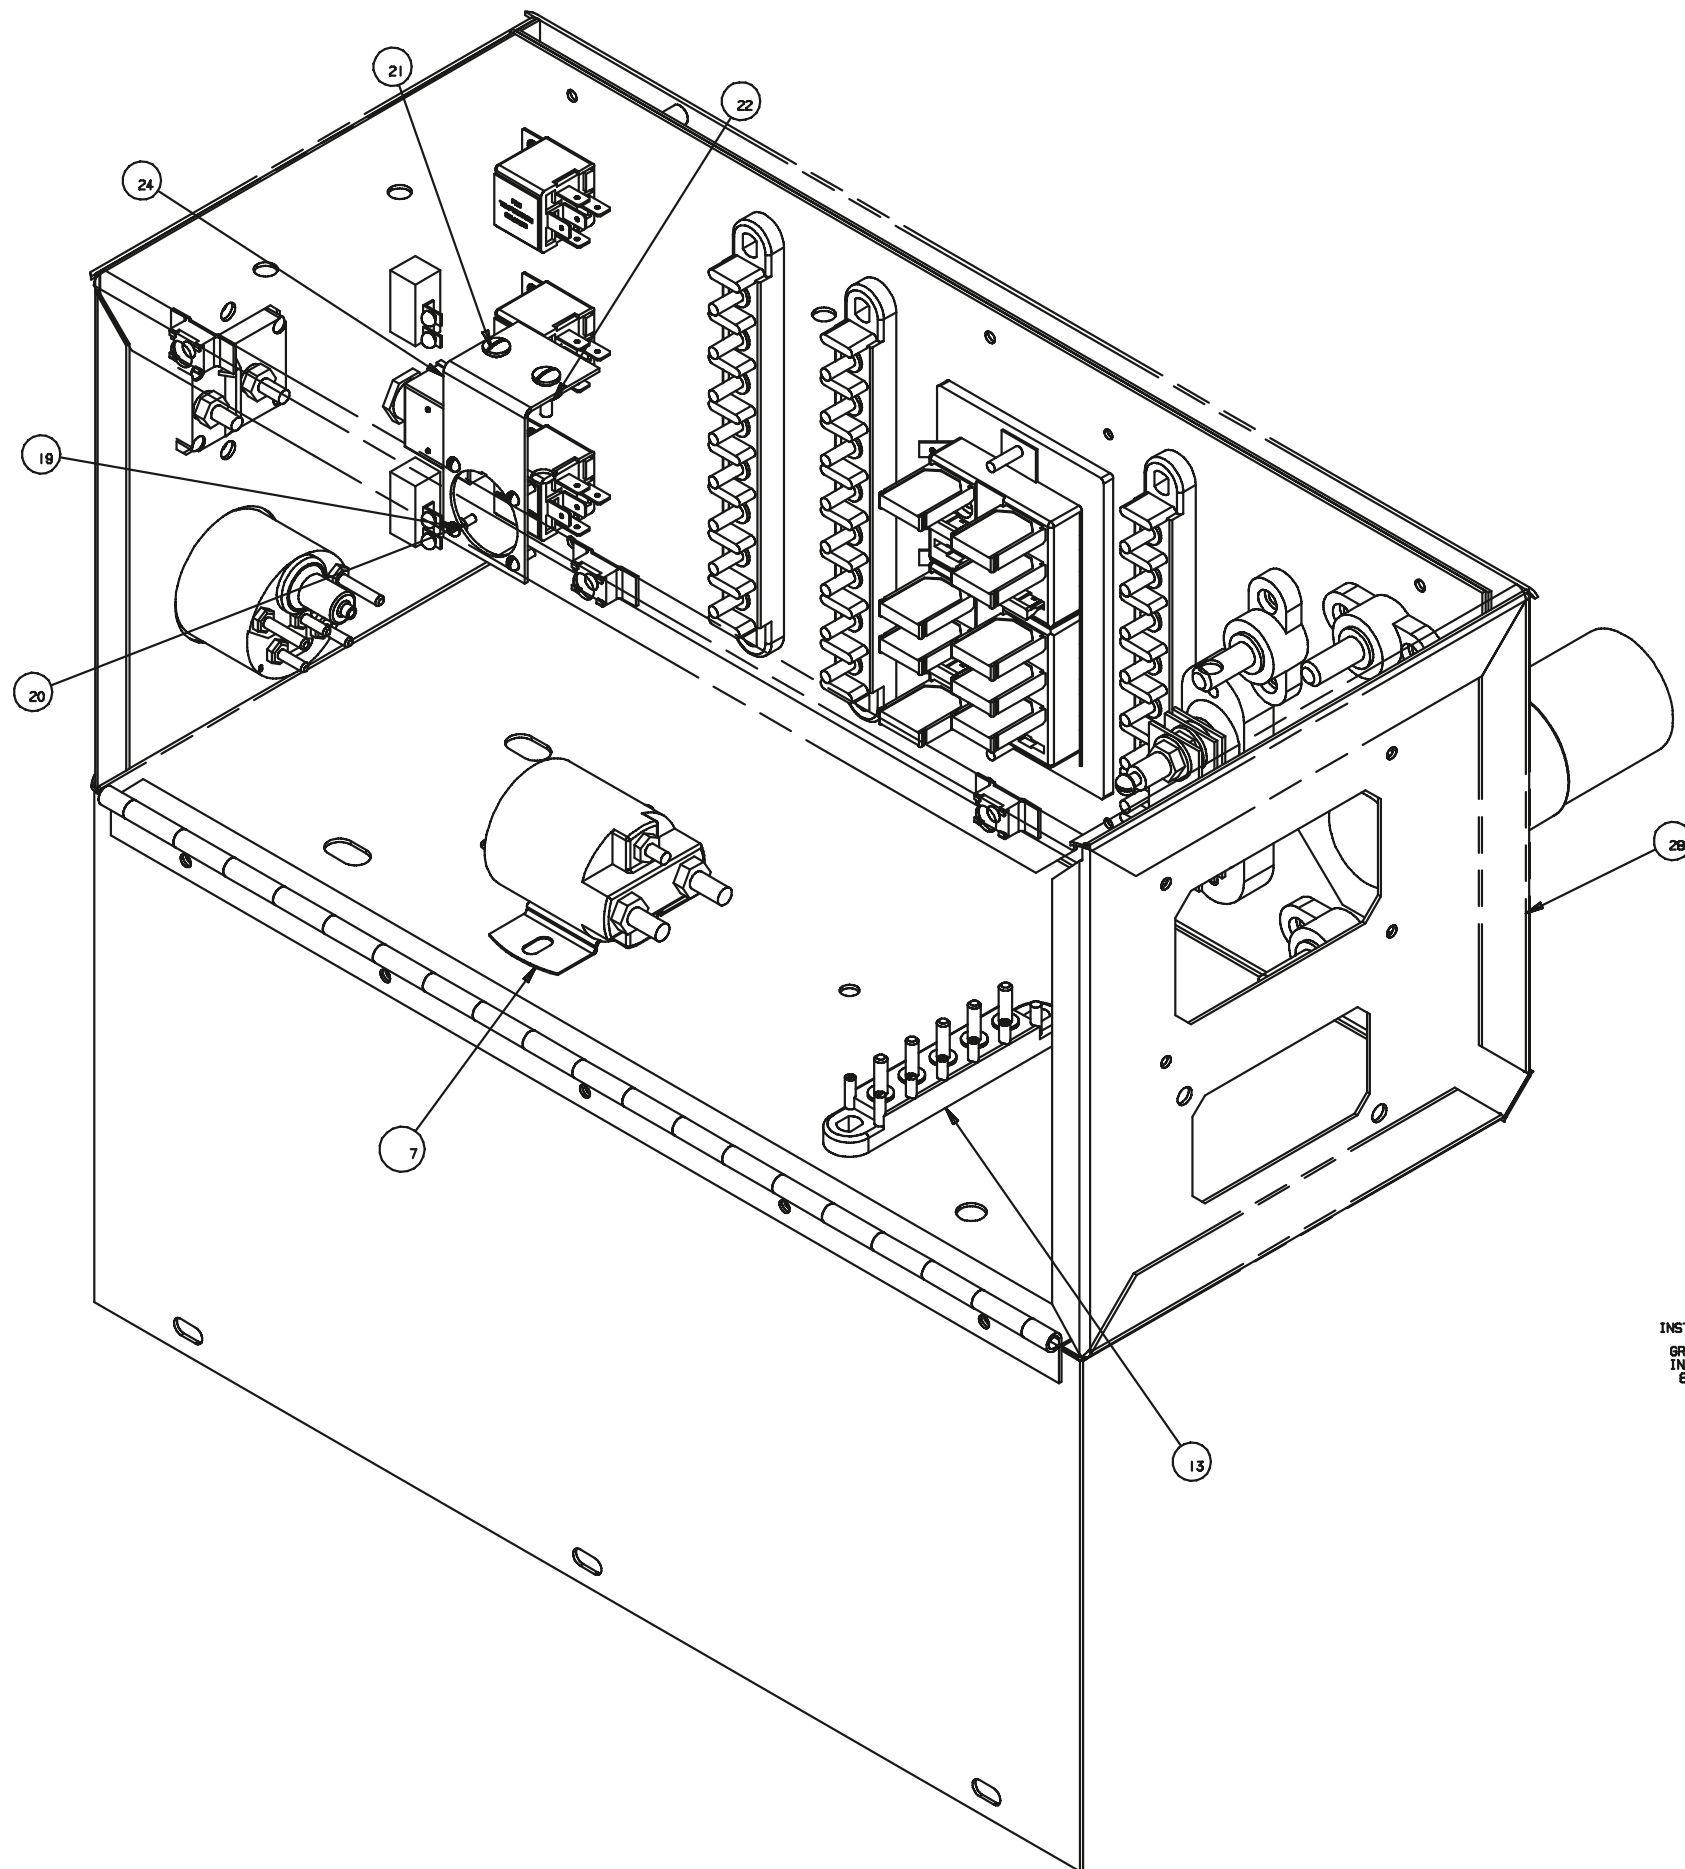


INSTALLATION OF DATA-LINK BRACKET
GRID HTR MTG. BRACKET
INSTALLATION, SEE DWG.
62202301.



62202914 B


ELECT. DIAGRAM MOD.
BOX COMP. MTG. 98 CAT
3126 ENGINE (CHASSIS)
Effective Date: 04/27/99
End Date: 06/02/99

 Sheet 2 of 3




ELECT. DIAGRAM MOD.
BOX COMP. MTG. 98 CAT
3126 ENGINE (CHASSIS)
 Effective Date: 04/27/99
 End Date: 06/02/99


DETAIL A
FAN TEMP
SOLENOID
RELAY


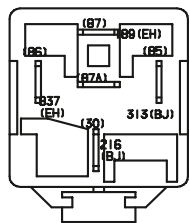


DETAIL B
FUEL/WATER
SEPARATOR
RELAY
(OPT.)

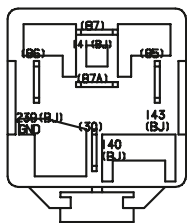

DETAIL C
ABS START
INTERLOCK
RELAY

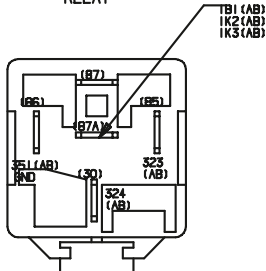

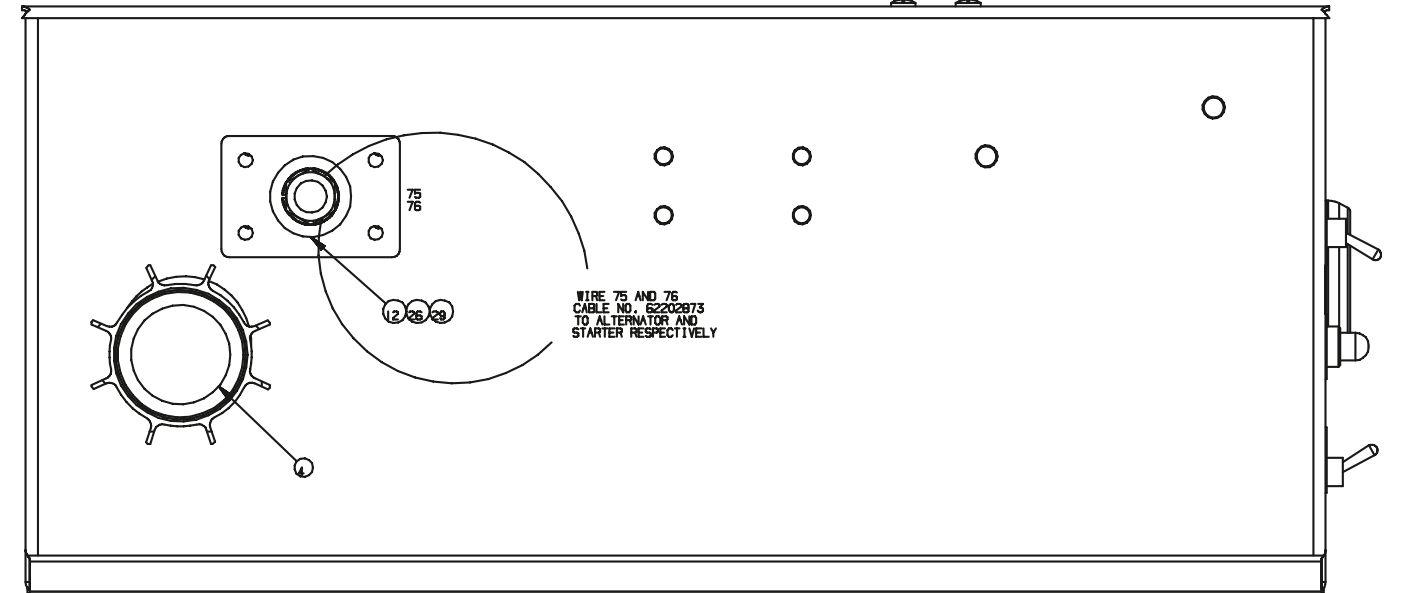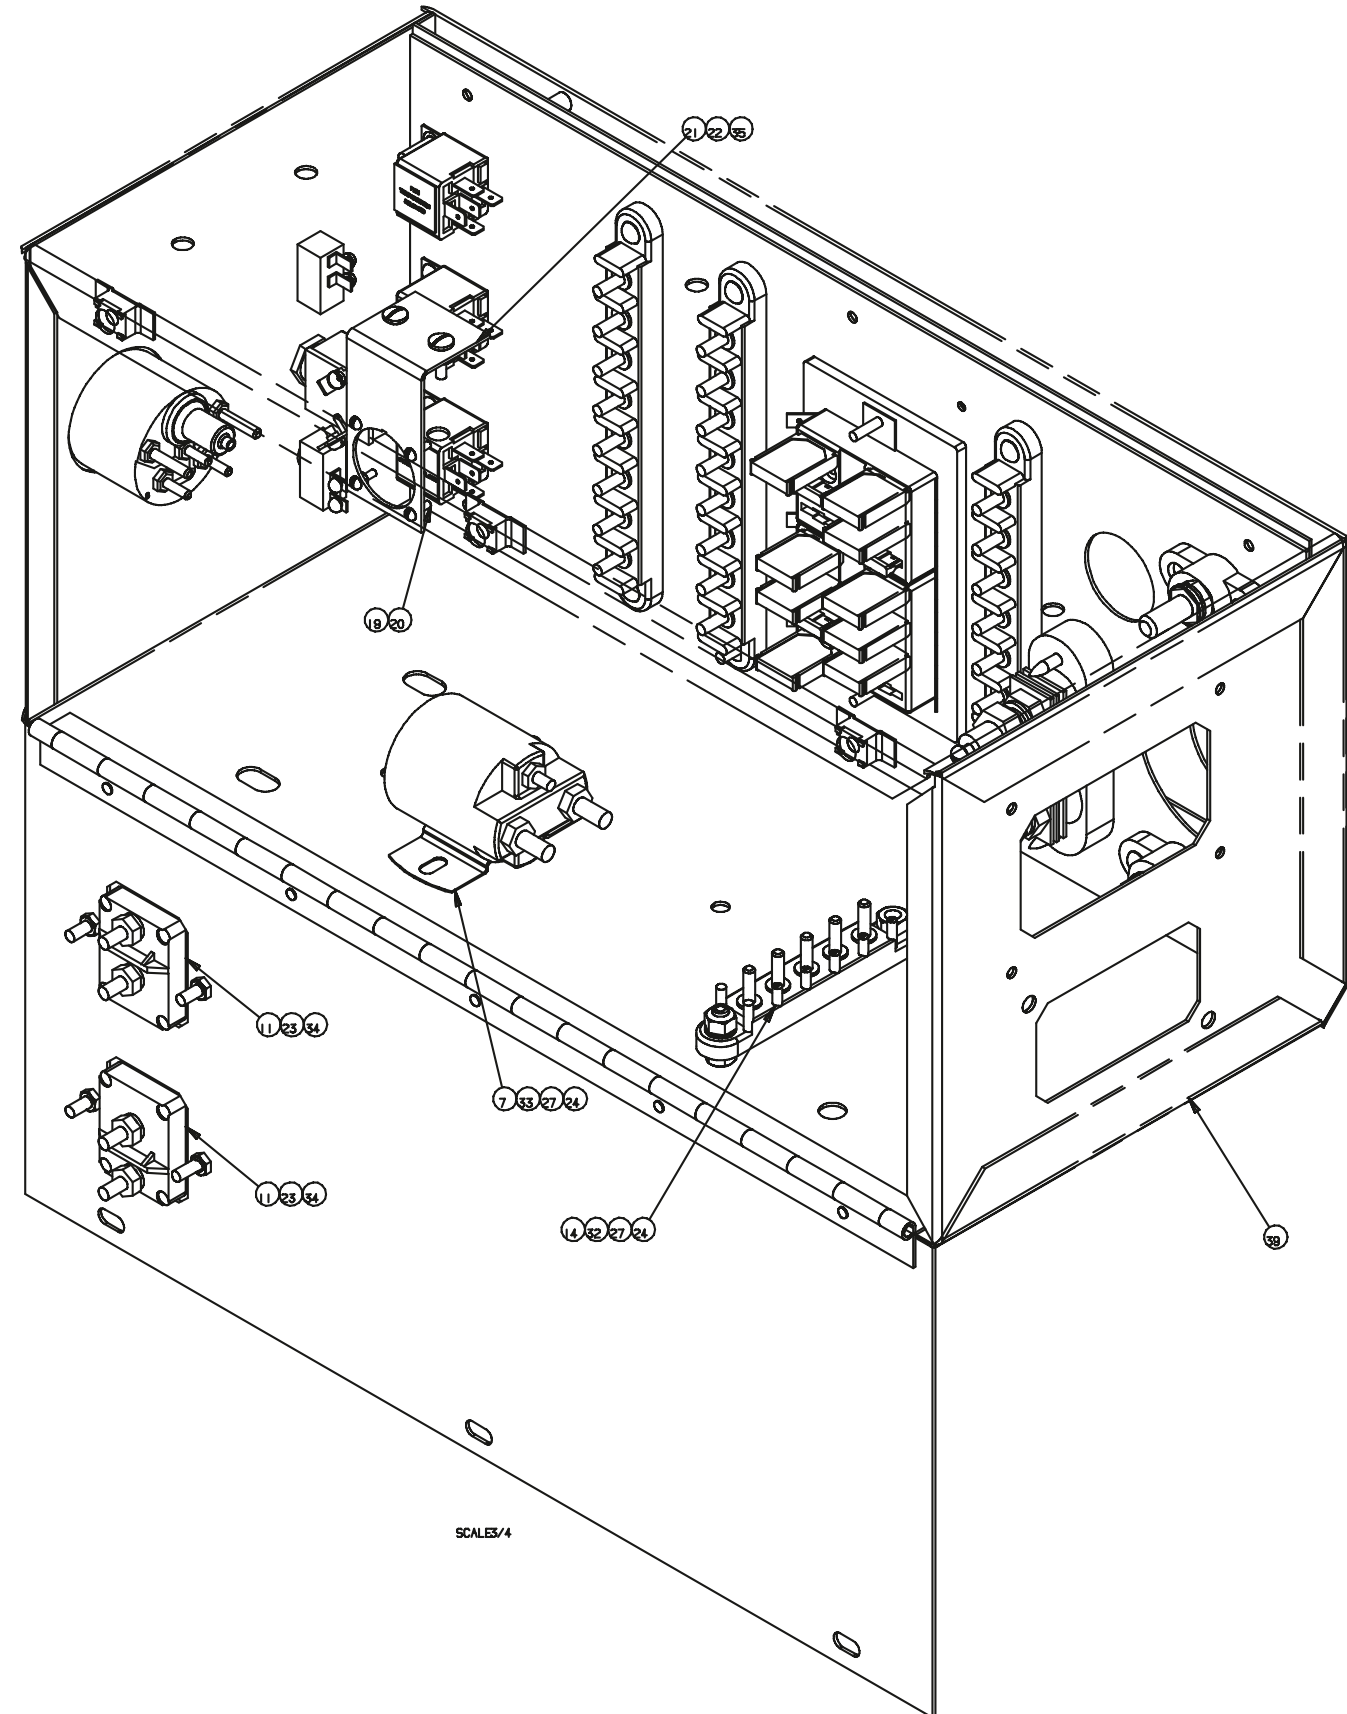


VIEW FROM BACK
SCALE 3/4


INSTALLATION OF DATA-LINK BRACKET

GRID HTR MTG. BRACKET
INSTALLATION, SEE DRG.
62202301.

	62202957 A
ELECT. DIAGRAM MOD. BOX COMPON. MTG. 98 CAT 3126 (CHASSIS) Effective Date: 06/03/98	

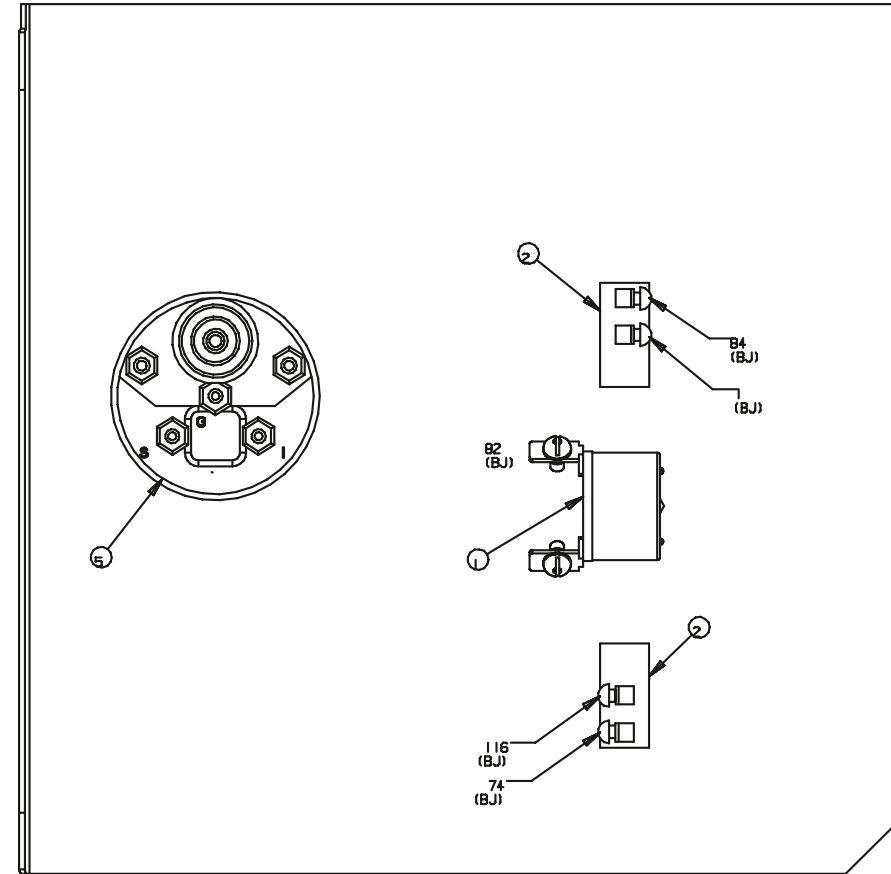

REAR BOX: BACK PANEL
VIEWED FROM INSIDE BOX

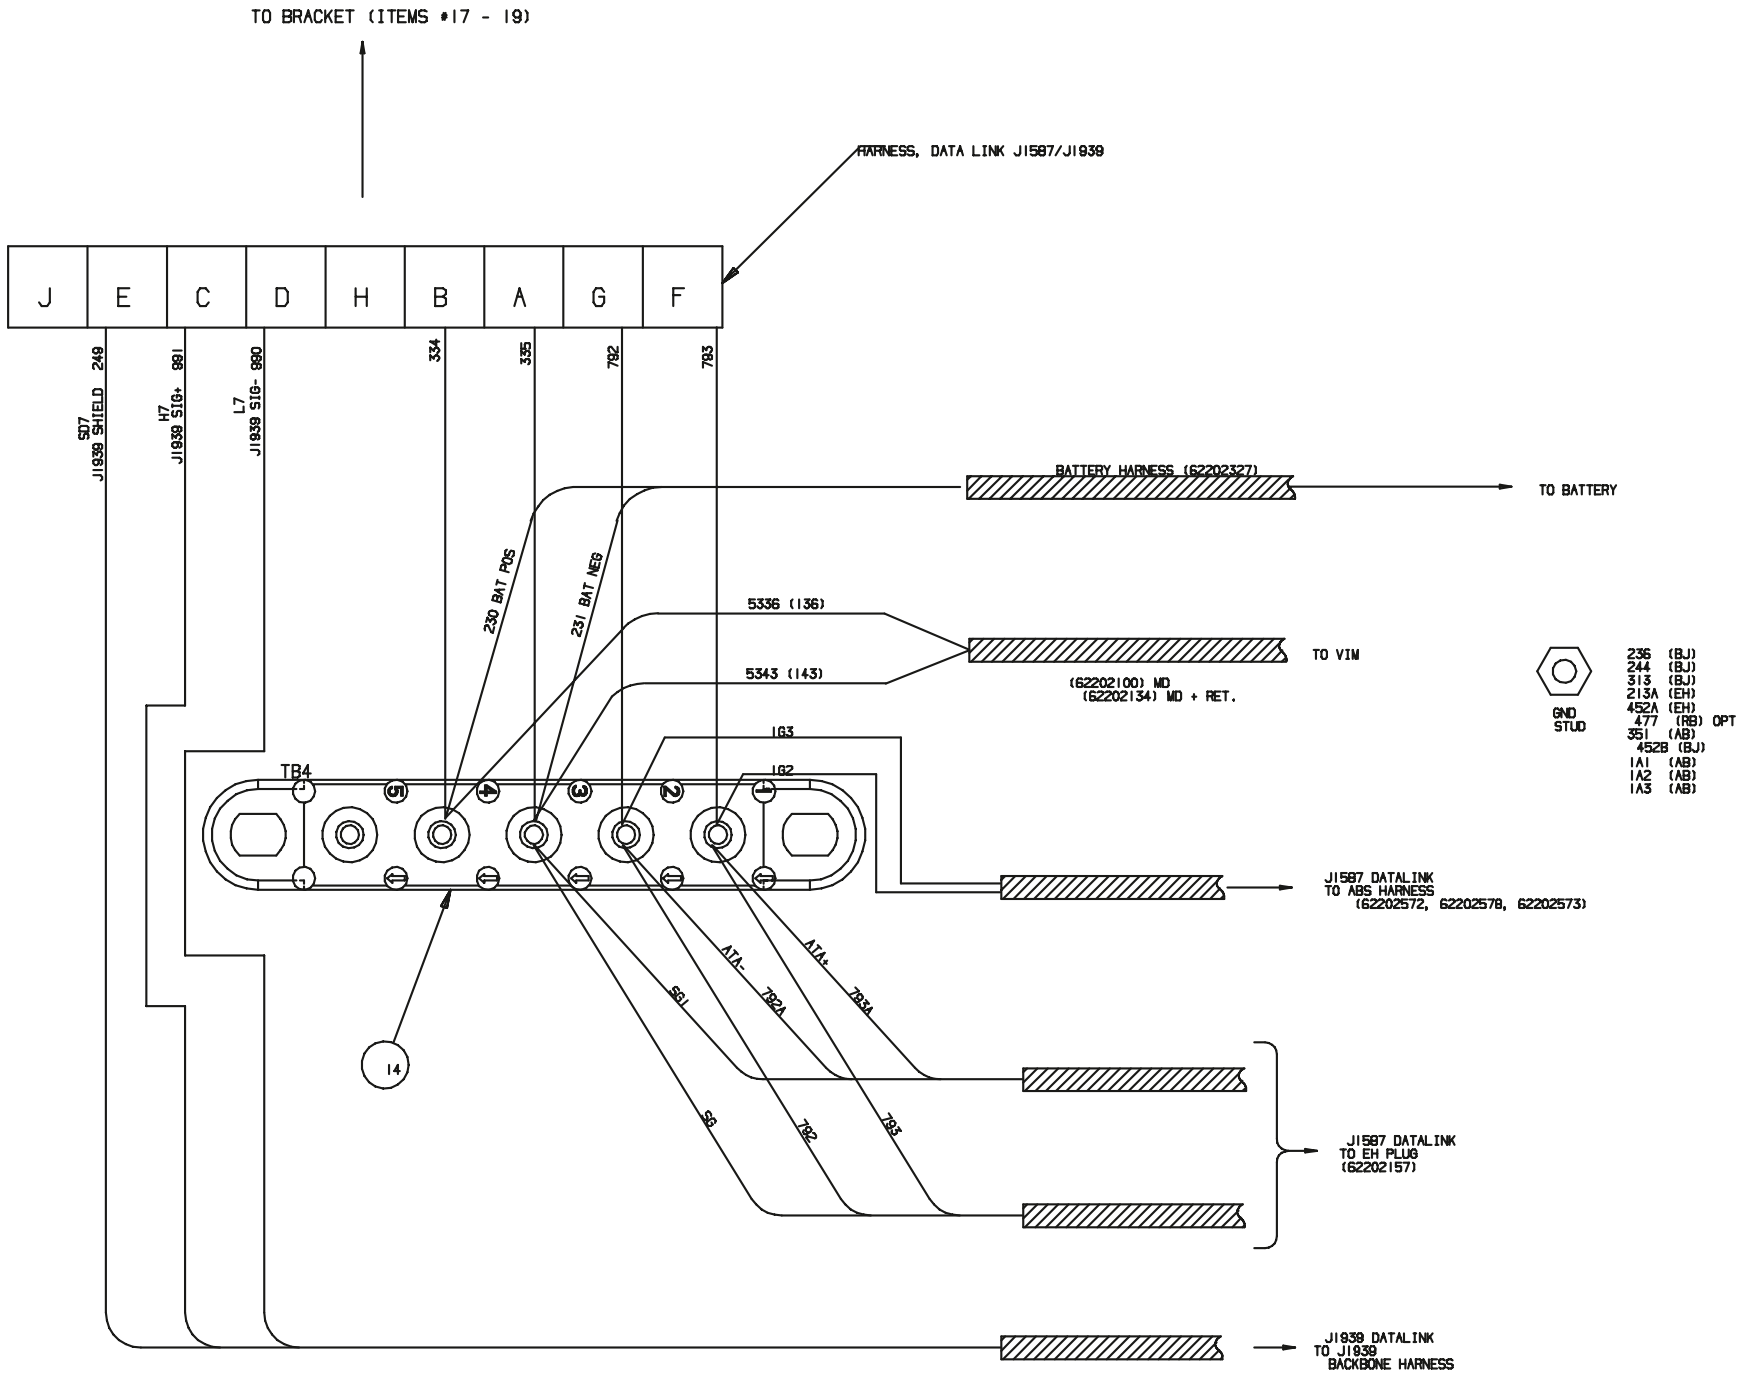


ON BOTTOM OF BOX


62202957 A

ELECT. DIAGRAM MOD.
BOX COMPON. MTG. 98
CAT 3126 (CHASSIS)

Effective Date: 06/03/98

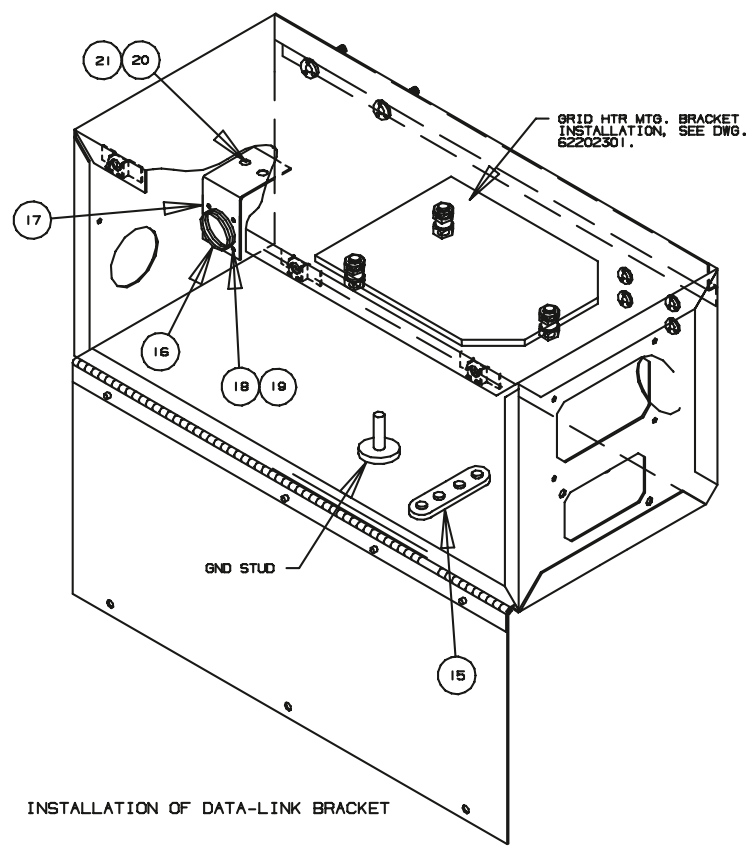

ITEM	PART NO.	DESCRIPTION	QTY.
1	62201573	PANEL, INNER ELECTRICAL, MOD. REAR BOX, MVP-ER	1
2	61200709	RELAY - CONTROL, SPDT	2
3	61200130	BLOCK - JUNCTION U.S.D. #C4559-B	3
4	61201062	FUSE PANEL 6/8 POSITION	1
5	61200463	STUD, ELECTRICAL MTG.	3
6	61200728	SHUNT, 150 AMP. - 50 MILLIVOLT	1
7	61200343	FUSE - 5 AMP	3
8	61200853	CIRCUIT BREAKER - 8 AMP.	1
9	61200836	CIRCUIT BREAKER - 10 AMP.	4
10	61200871	CIRCUIT BREAKER - 20 AMP.	1
11	61200872	CIRCUIT BREAKER - 30 AMP.	1
12	61200163	CABLE ENTRY SEAL, 1.5" I.D. (NOT SHOWN)	1
13	62210087	DIODE/WIRE ASM., ALTERNATOR (DELCO) (OPT.)	1
14	62201309	CABLE, AMMETER SHUNT (OPT.)	1
15	61200938	TERMINAL BD. - 4 POS. (BAT PWR)	1
16	62202207	HARNESS, DATA LINK J1587/J1939	1
17	62202087	BRACKET, MTG - DATA LINK PLUG	1
18	61370026	SCREW, MACHINE - #4 - 40 x 3/8	4
19	61370027	LOCKNUT - #4 - 40	4
20	61370036	SCREW - MACHINE, 8-32 x 5/8	2
21	61370038	NUT - LOCK, 8-32	2
22	61200116	SWITCH - TOGGLE, SPDT	2
23	61200100	SWITCH - PUSH BUTTON	1
24	61200218	GAUGE, OIL PRESSURE (OPT.)	1
25	61201095	CIRCUIT BREAKER, 150 AMP	1

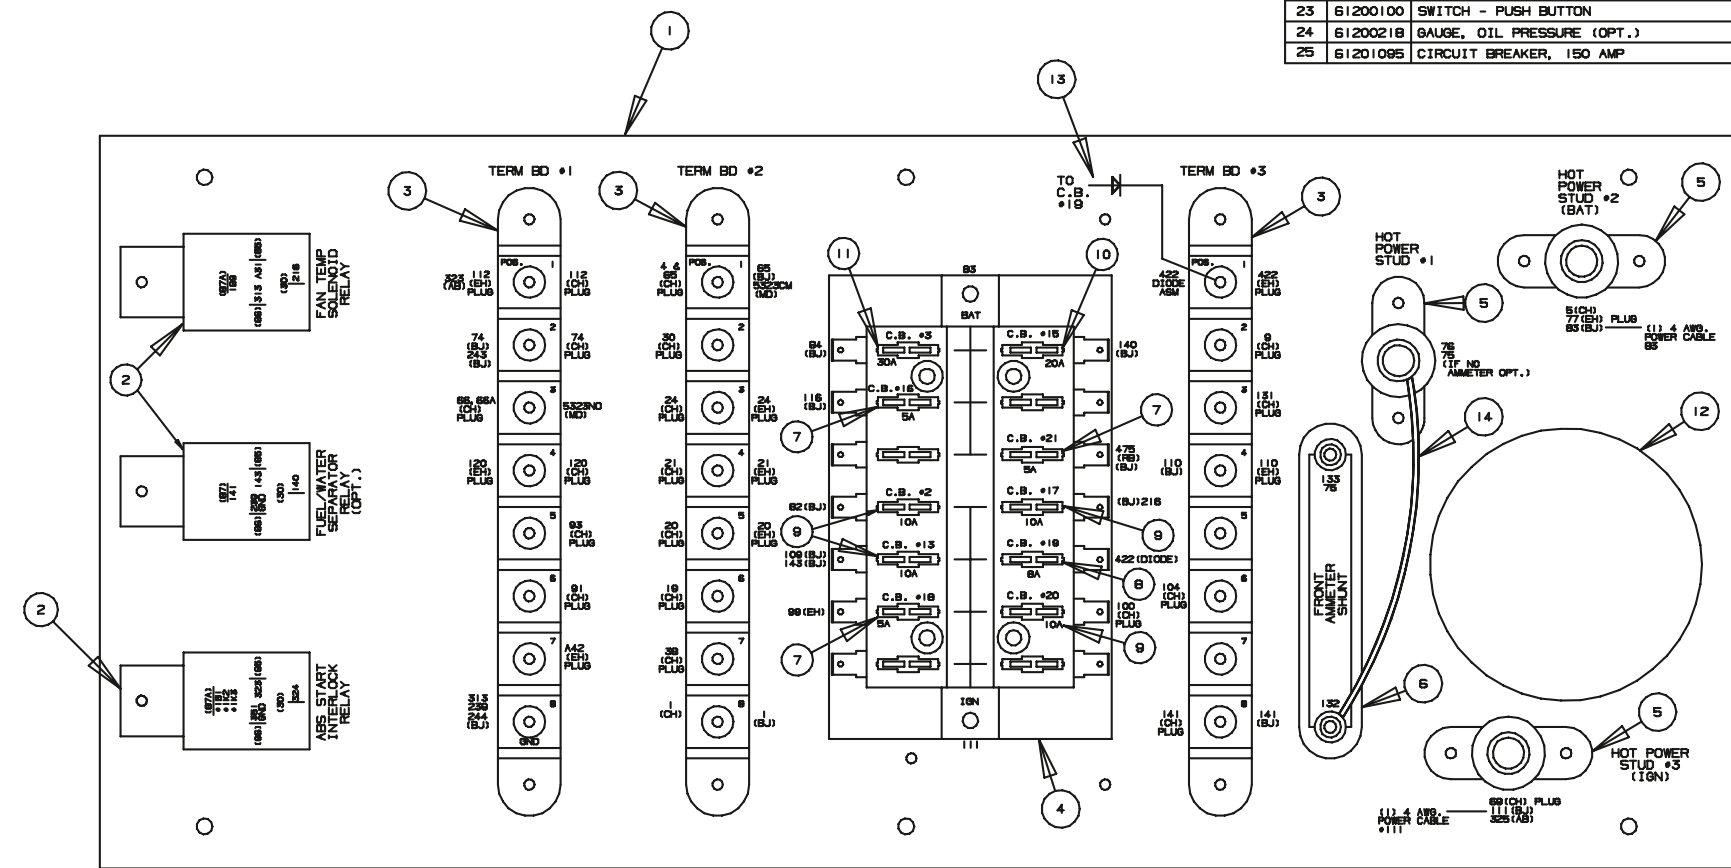

SHEET 1 OF 2

LEGEND

(CH) - CENTER HARNESS

(EH) - ENGINE HARNESS

(S) - MOD. BOX JUMPER

(B) - BODY DROP-OUT OF REAR BOX

(RB) - ROLL-BACK HARNESS (OPT)

(AB) - ABS

 
(MD) - WTEC III

Sheet 1 of 2



62202304 D

ELECT. DIAGRAM MOD.
BOX COMPON. MTG. 98
CUMMINS 6B (CHASSIS)


End Date: 02/23/98



	62202304 D
ELECT. DIAGRAM MOD. BOX COMPON. MTG. 98 CUMMINS 6B (CHASSIS)	
End Date: 02/23/98	

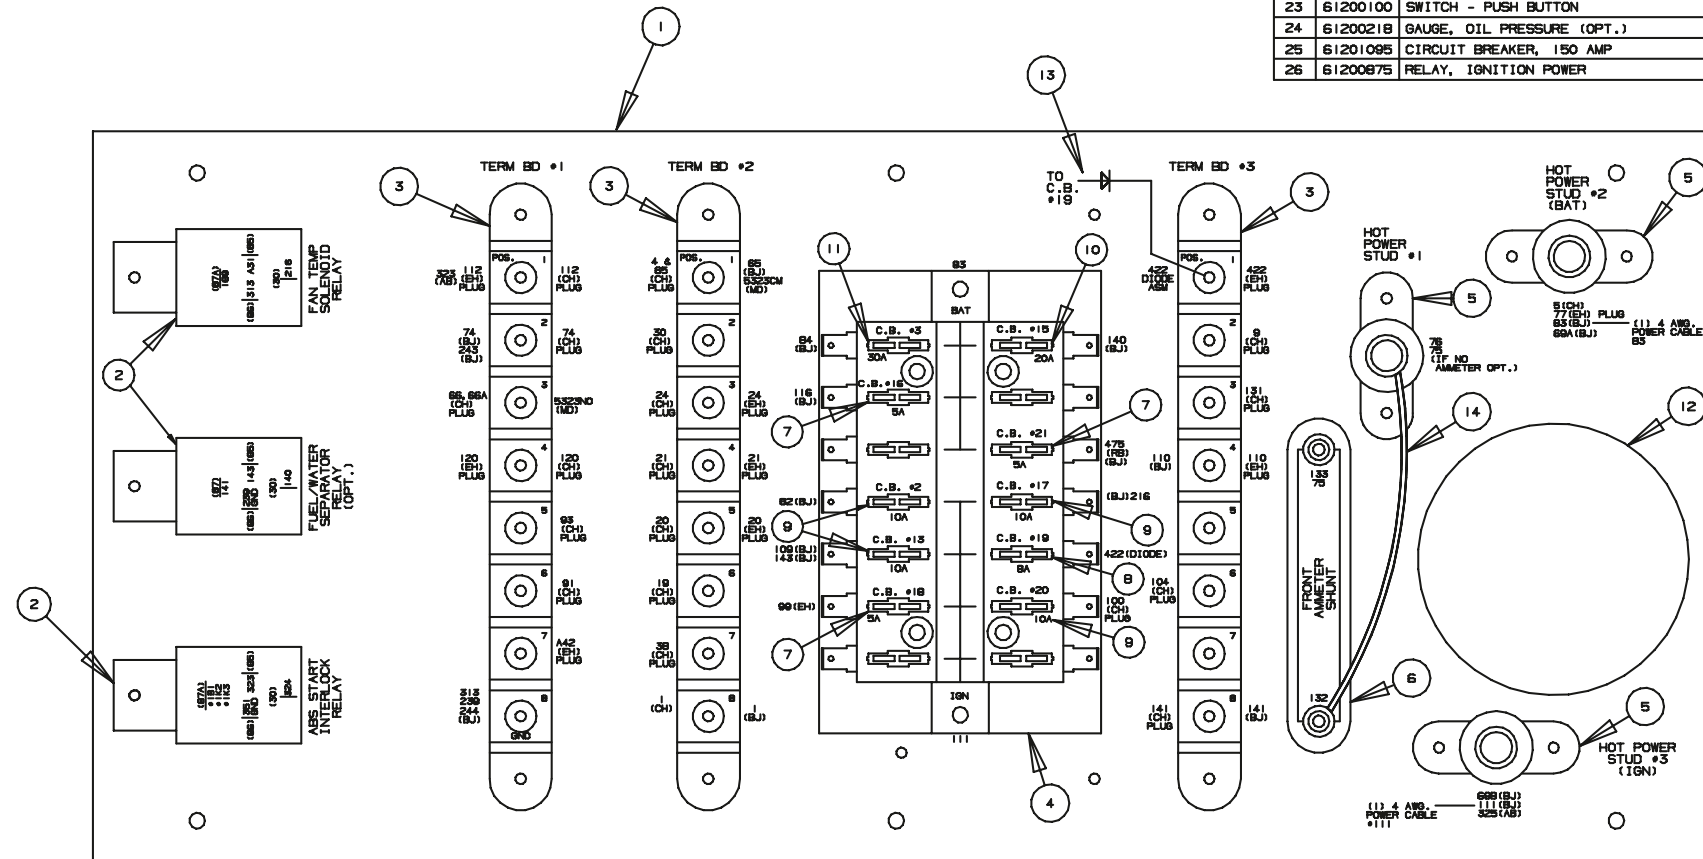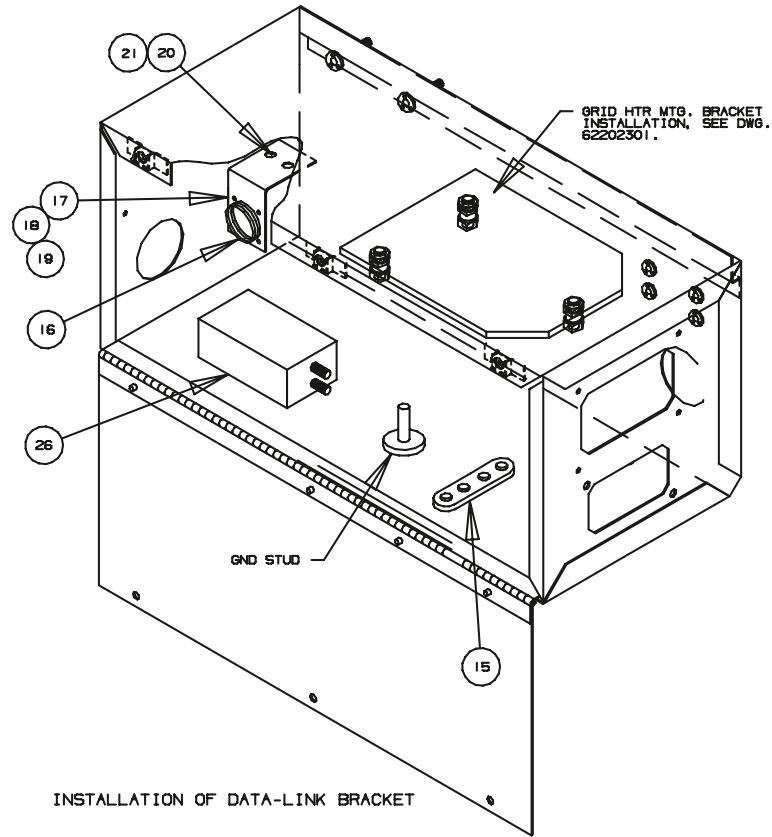

ITEM	PART NO.	DESCRIPTION	QTY.
1	62201573	PANEL, INNER ELECTRICAL, MOD. REAR BOX, MVP-ER	1
2	61200709	RELAY - CONTROL, SPDT	2
3	61200130	BLOCK - JUNCTION U.S.D. *C4559-B	3
4	61201062	FUSE PANEL 6/8 POSITION	1
5	61200463	STUD, ELECTRICAL MTG.	3
6	61200728	SHUNT, 150 AMP. - 50 MILLIVOLT	1
7	61200343	FUSE - 5 AMP	3
8	61200953	CIRCUIT BREAKER - 8 AMP.	1
9	61200936	CIRCUIT BREAKER - 10 AMP.	4
10	61200871	CIRCUIT BREAKER - 20 AMP.	1
11	61200872	CIRCUIT BREAKER - 30 AMP.	1
12	61200163	CABLE ENTRY SEAL, 1.5" I.D. (NOT SHOWN)	1
13	62210087	DIODE/WIRE ASM., ALTERNATOR (DELCO) (OPT.)	1
14	62201309	CABLE, AMMETER SHUNT (OPT.)	1
15	61200839	TERMINAL BD. - 4 POS. (BAT PWR)	1
16	62202207	HARNESS, DATA LINK J1597/J1939	1
17	62202087	BRACKET, MTG - DATA LINK PLUG	1
18	61370026	SCREW, MACHINE - #4 - 40 x 3/8	4
19	61370027	LOCKNUT - #4 - 40	4
20	61370036	SCREW - MACHINE, 8-32 x 5/8	2
21	61370038	NUT - LOCK, 8-32	2
22	61200116	SWITCH - TOGGLE, SPDT	2
23	61200100	SWITCH - PUSH BUTTON	1
24	61200218	GAUGE, OIL PRESSURE (OPT.)	1
25	61201095	CIRCUIT BREAKER, 150 AMP	1
26	61200875	RELAY, IGNITION POWER	1

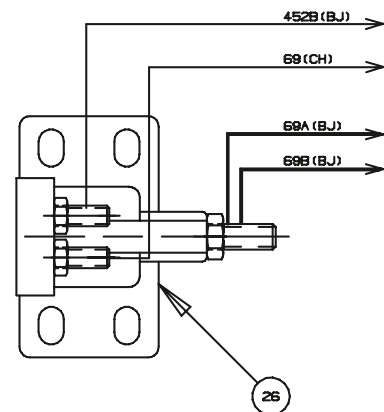


SHEET 1 OF 2

LEGEND
 (CH) - CENTER HARNESS
 (EH) - ENGINE HARNESS
 (BJ) - MOD. BOX JUMPER
 (BD) - BODY DROP-OUT OF REAR BOX
 (RB) - ROLL-BACK HARNESS (OPT.)
 (AB) - ABS
 (MD) - WTEC 111


Sheet 1 of 2

62202523 B

ELECT. DIAGRAM MOD.
BOX COMPON. MTG. 98
CUMMINS ISB (CHASSIS)
 Effective Date: 02/24/98
 End Date: 08/02/98

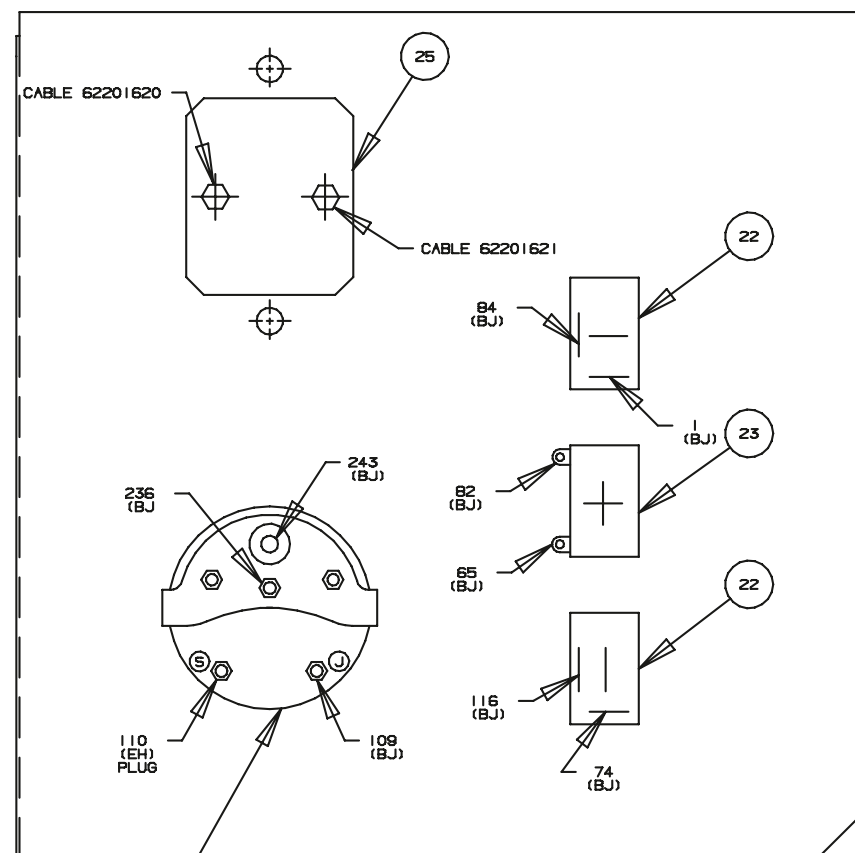

REAR BOX: BACK PANEL
VIEWED FROM INSIDE BOX



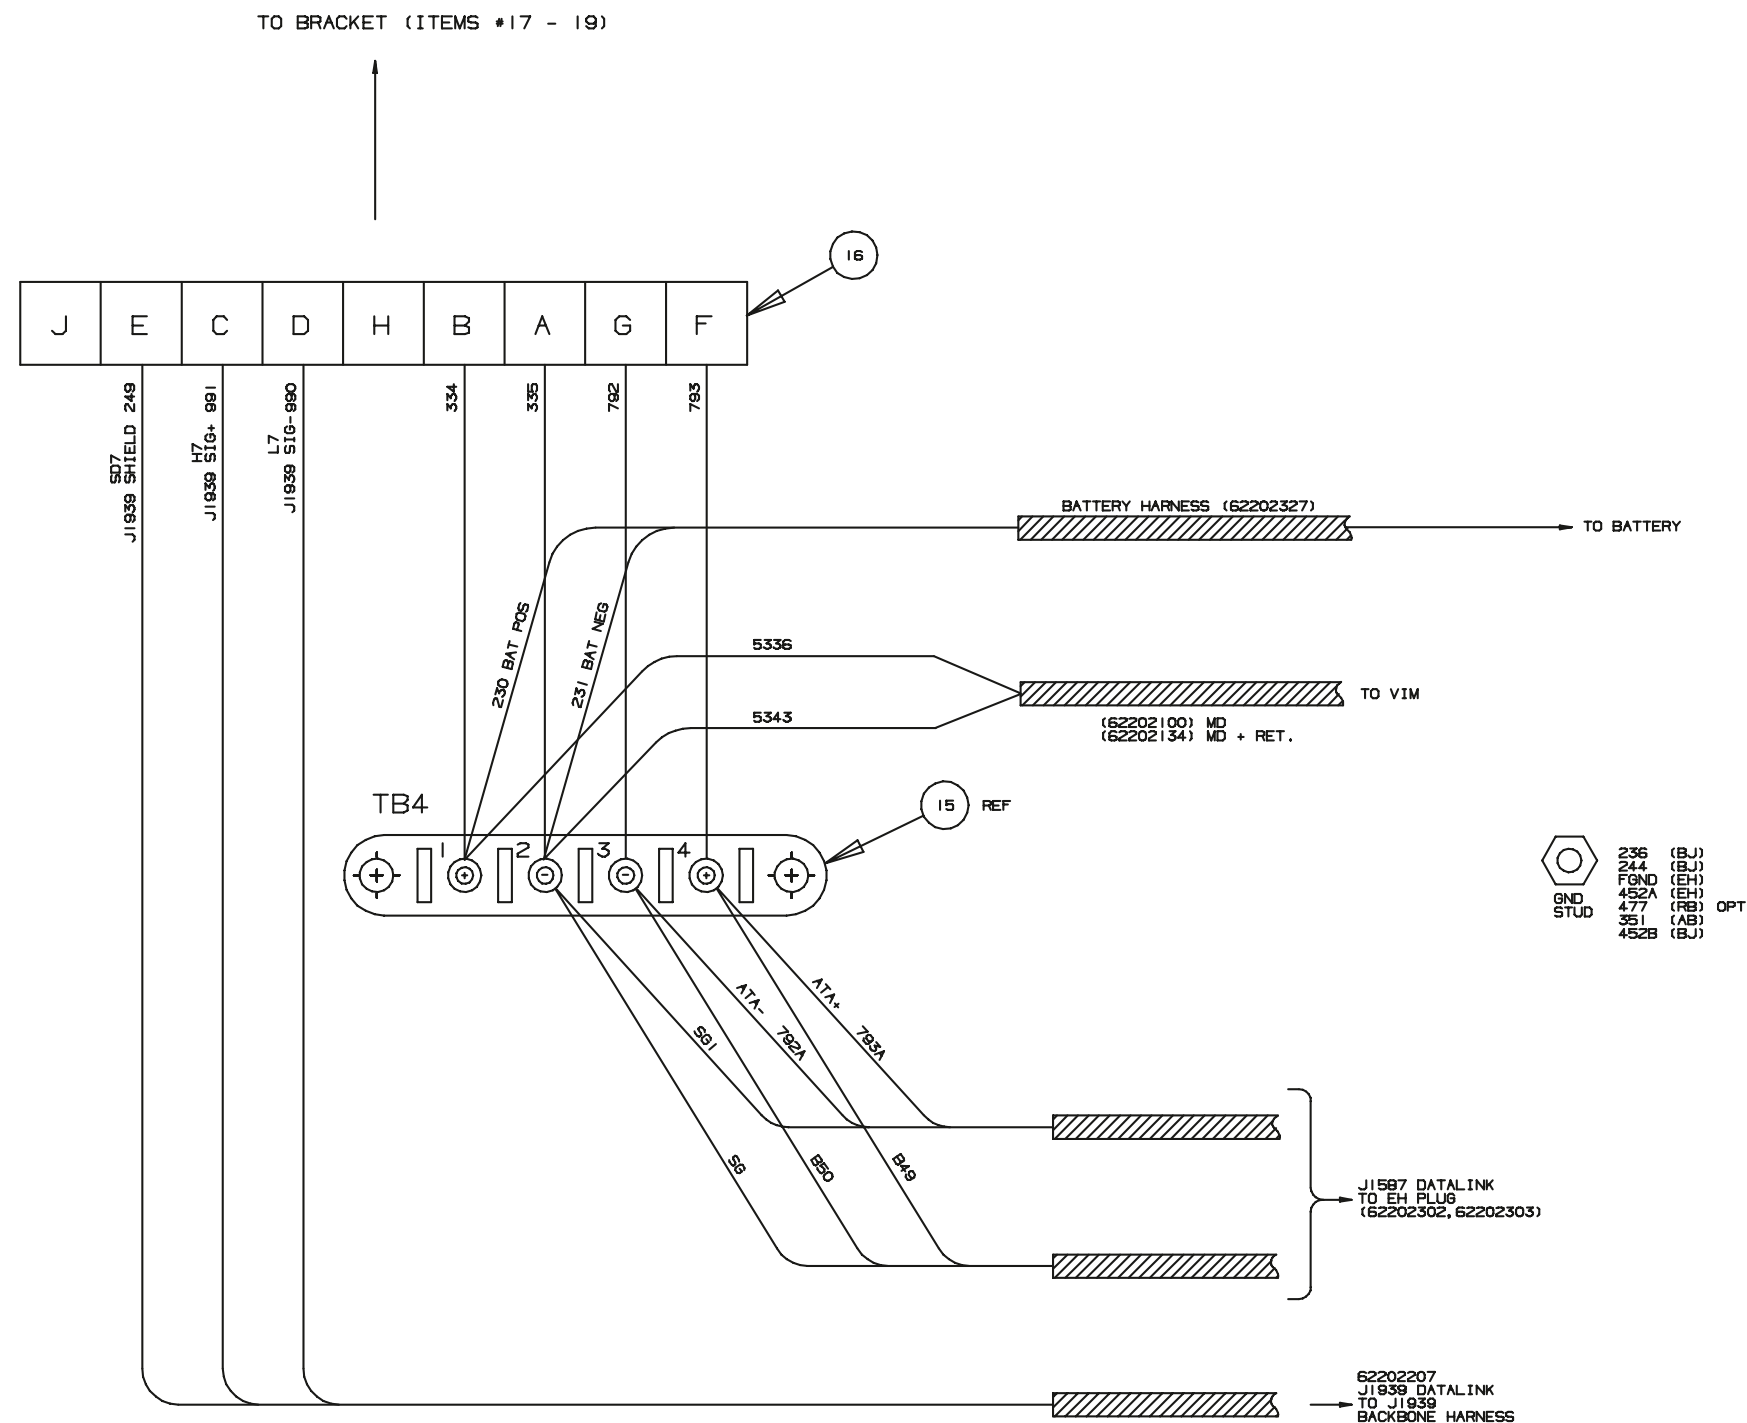


ON BOTTOM OF BOX

SHEET 2 OF 2

Sheet 2 of 2

Thomas BUILT-BUSSES	62202778 C
ELECT. DIAGRAM MOD. BOX COMPON. MTG. 98 CUMMINS ISB (CHASSIS) Effective Date: 02/24/98 End Date: 08/02/98	

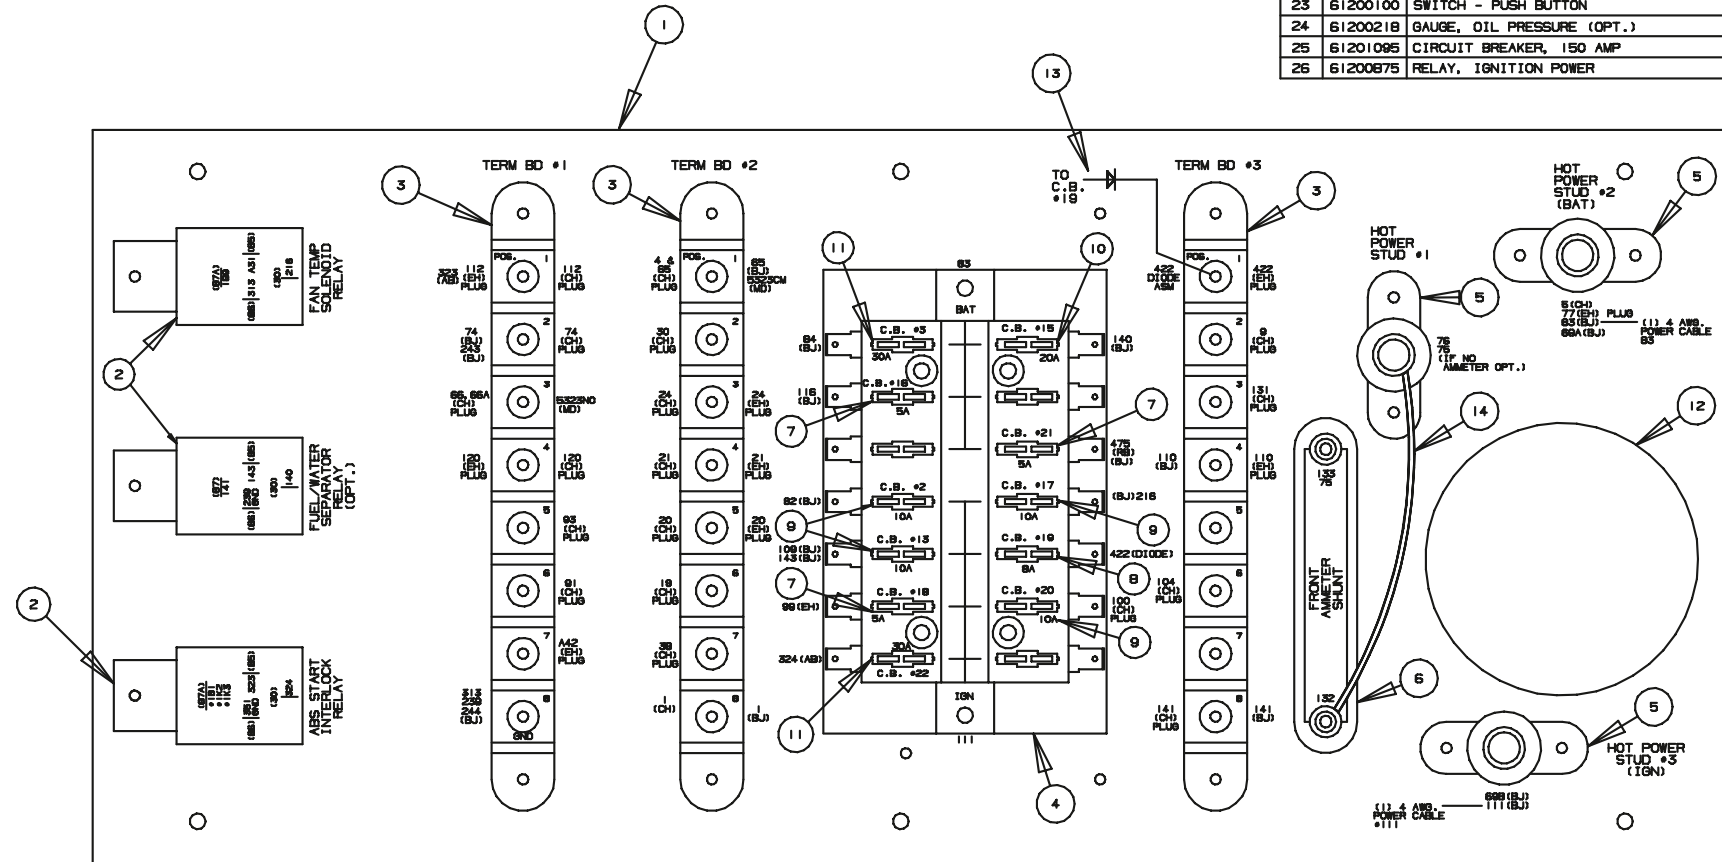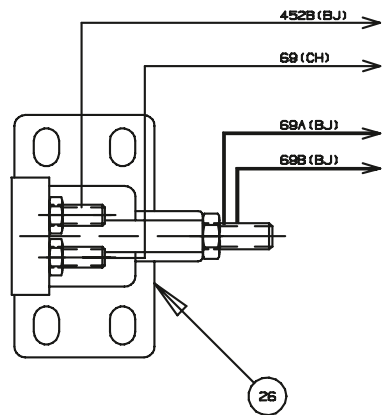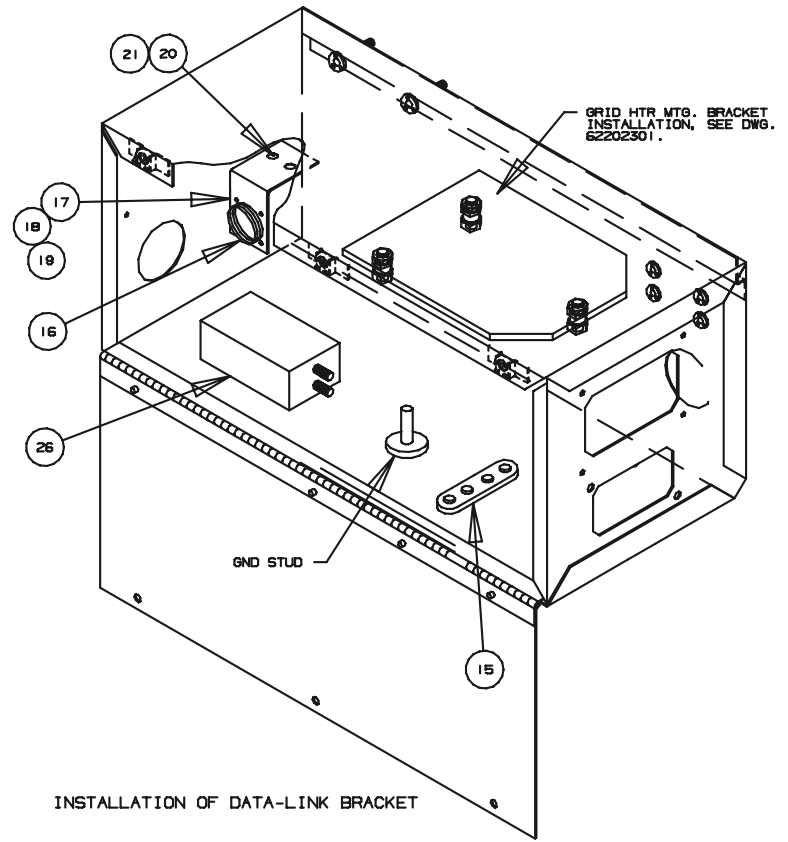

ITEM	PART NO.	DESCRIPTION	QTY.
1	62201573	PANEL, INNER ELECTRICAL, MOD. REAR BOX, MVP-ER	1
2	61200709	RELAY - CONTROL, SPDT	2
3	61200130	BLOCK - JUNCTION U.S.D. #C4559-8	3
4	61201062	FUSE PANEL 6/8 POSITION	1
5	61200463	STUD, ELECTRICAL MTG.	3
6	61200728	SHUNT, 150 AMP. - 50 MILLIVOLT	1
7	61200343	FUSE - 5 AMP	3
8	61200953	CIRCUIT BREAKER - 8 AMP.	1
9	61200936	CIRCUIT BREAKER - 10 AMP.	4
10	61200871	CIRCUIT BREAKER - 20 AMP.	1
11	61200872	CIRCUIT BREAKER - 30 AMP.	2
12	61200163	CABLE ENTRY SEAL, 1.5" I.D. (NOT SHOWN)	1
13	62210087	DIODE/WIRE ASM., ALTERNATOR (DELCO) (OPT.)	1
14	62201309	CABLE, AMMETER SHUNT (OPT.)	1
15	61200938	TERMINAL BD. - 4 POS. (BAT PWR)	1
16	62202207	HARNESS, DATA LINK J1587/J1939	1
17	62202087	BRACKET, MTG - DATA LINK PLUG	1
18	61370026	SCREW, MACHINE - #4 - 40 x 3/8	4
19	61370027	LOCKNUT - #4 - 40	4
20	61370036	SCREW - MACHINE, 8-32 x 5/8	2
21	61370038	NUT - LOCK, 8-32	2
22	61200116	SWITCH - TOGGLE, SPDT	2
23	61200100	SWITCH - PUSH BUTTON	1
24	61200218	GAUGE, OIL PRESSURE (OPT.)	1
25	61201095	CIRCUIT BREAKER, 150 AMP	1
26	61200875	RELAY, IGNITION POWER	1



SHEET 1 OF 2

LEGEND
 (CH) - CENTER HARNESS
 (EH) - ENGINE HARNESS
 (BJ) - MOD. BOX JUMPER
 (BD) - BODY DROP-OUT OF REAR BOX
 (RB) - ROLL-BACK HARNESS (OPT)
 (AB) - ABS
 (MD) - WTEC III

Sheet 1 of 2





62202585 B

ELECT. DIAGRAM MOD.
BOX COMPON. MTG. 98
CUMMINS ISB (CHASSIS)
 Effective Date: 08/03/98
 End Date: 08/11/98

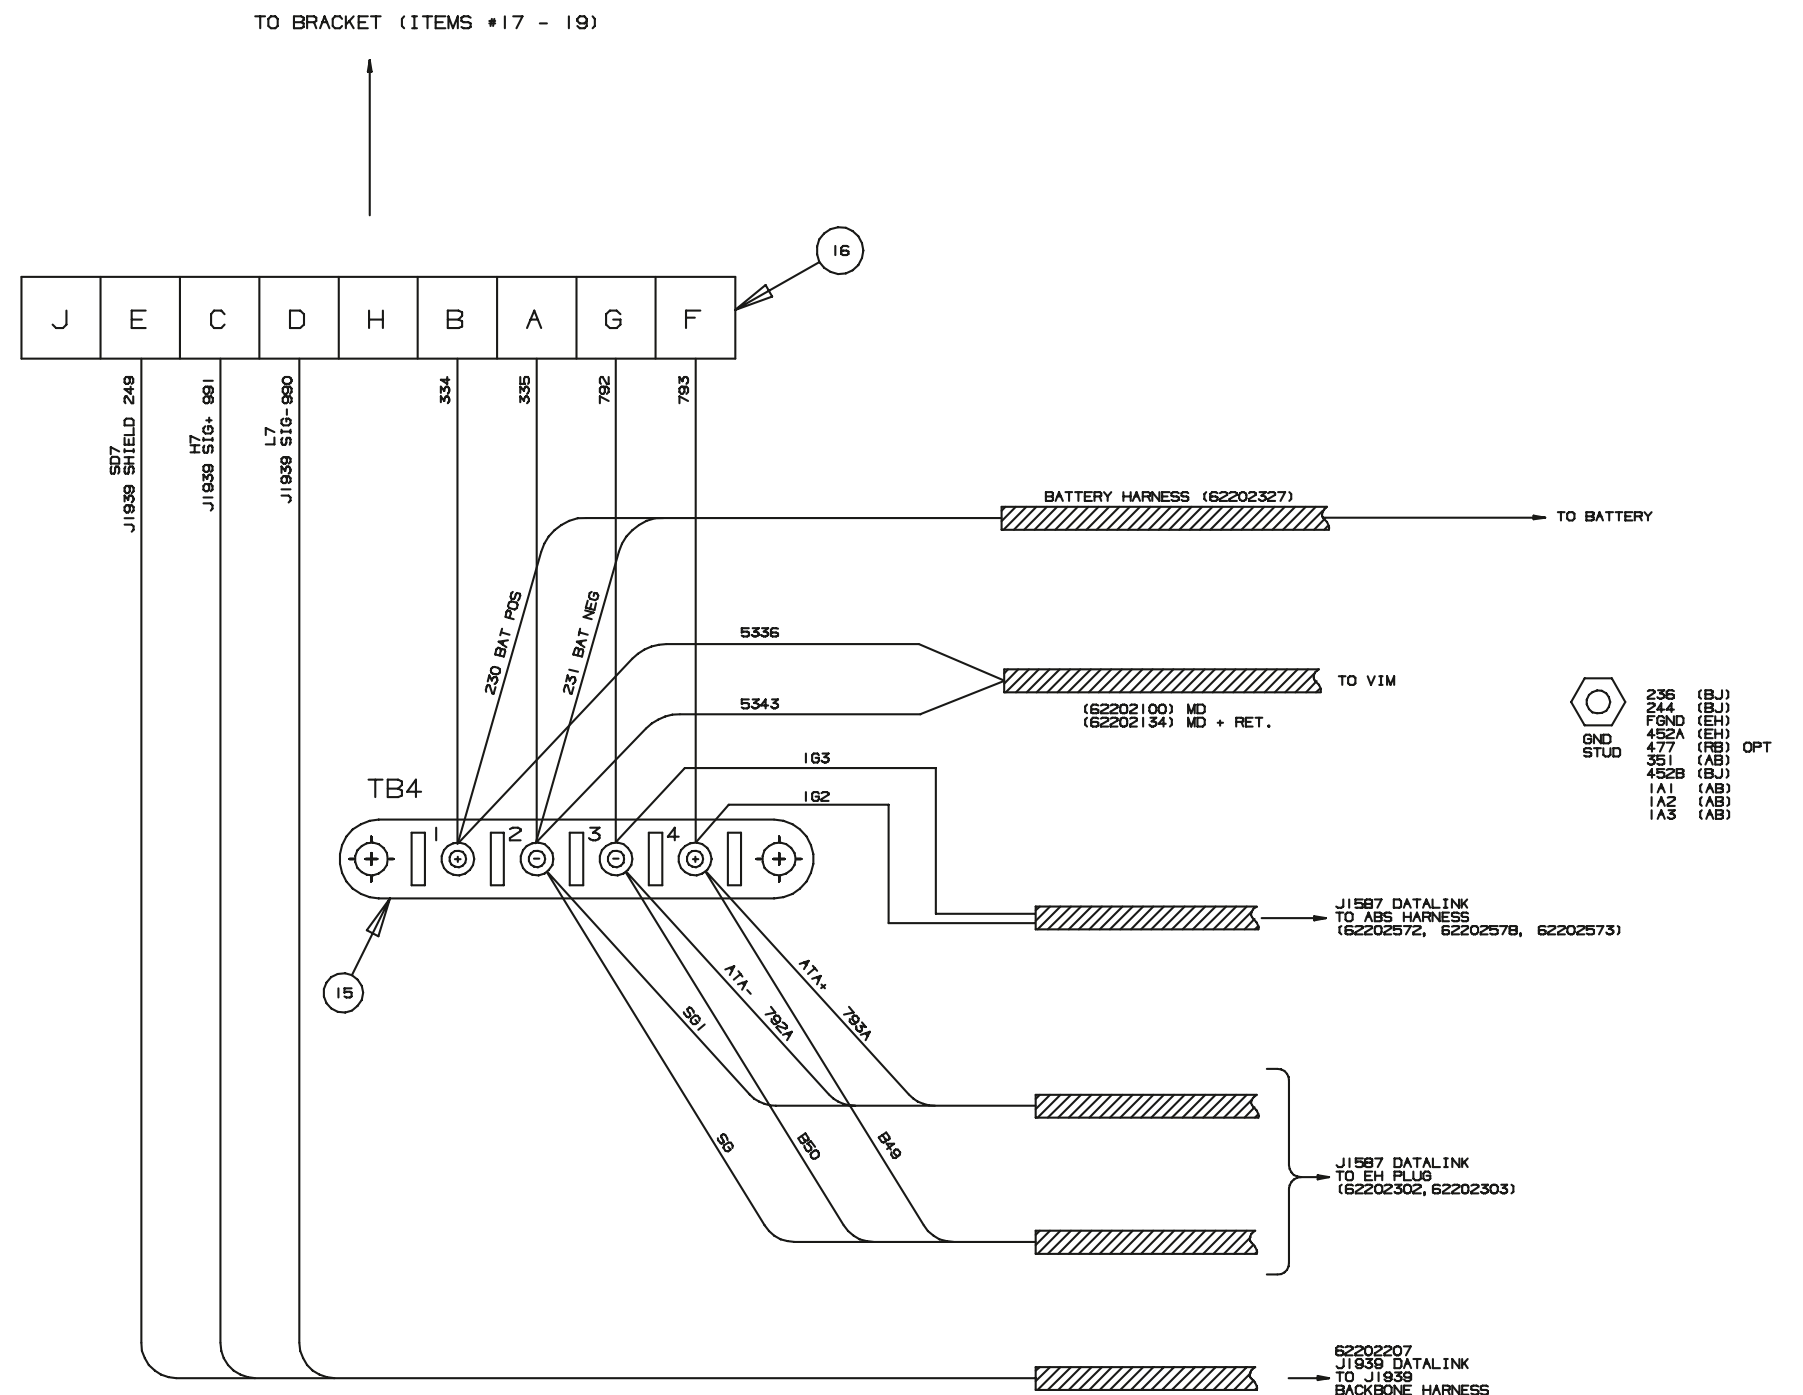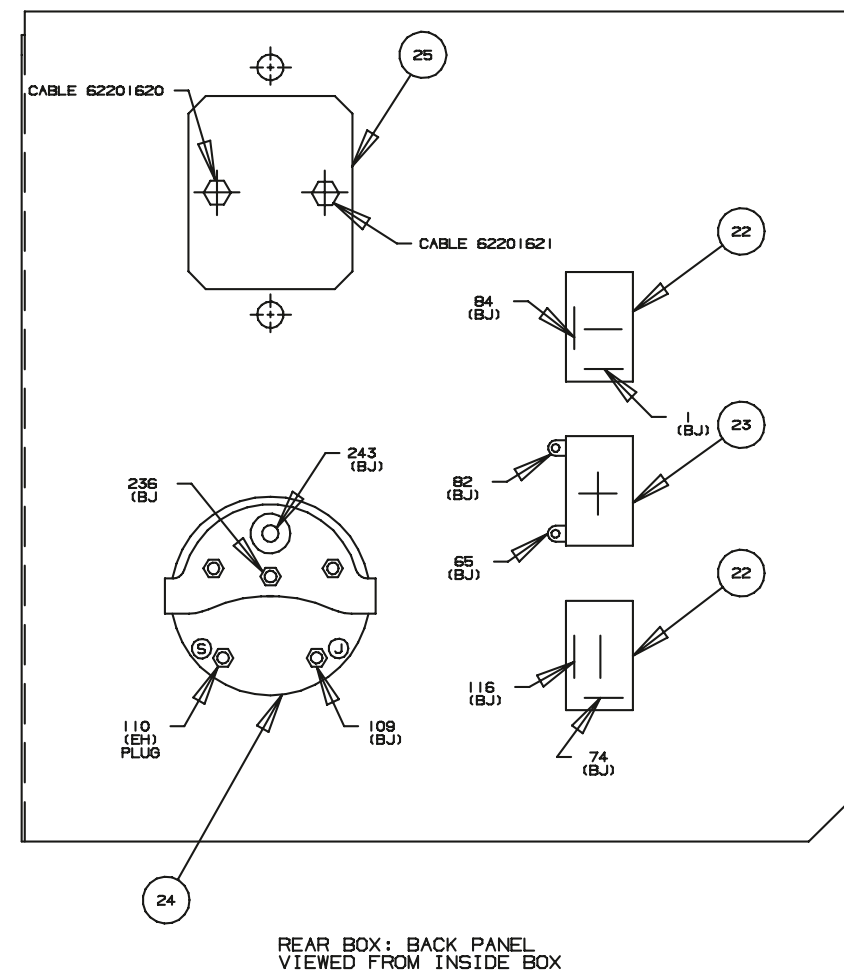



Sheet 2 of 2

	62202585 B
	ELECT. DIAGRAM MOD. BOX COMPON. MTG. 98 CUMMINS ISB (CHASSIS) Effective Date: 08/03/98 End Date: 08/11/98

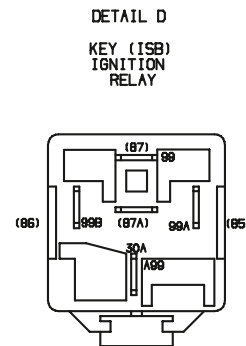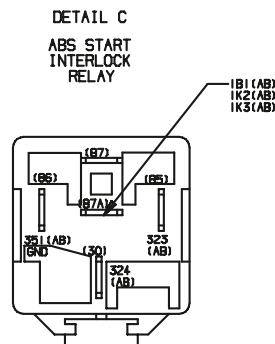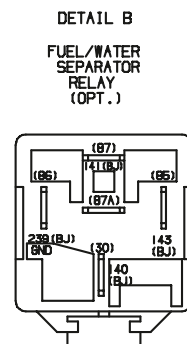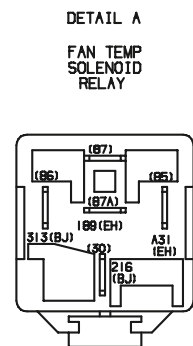

ITEM	QUANTITY	PART NUMBER	DESCRIPTION
1	1	61200100	START SWITCH
2	2	61200116	SWITCH, TOGGLE, SPST
3	3	61200130	BLOCK, JUNCTION - 8 POST FRONT ELECTRICAL CHASSIS
4	1	61200163	SEAL, CABLE ENTRY, 1/2 IN.
5	1	61200218	GAUGE - 2 INCH OIL PRESSURE
6	3	61200343	FUSE - 5 AMP AUTOFUSE TYPE,
7	1	61200411	CONTACTOR, POWER, 12 VDC
8	3	61200463	STUD, ELECT. - MOUNTING TERMINAL BD., 3/8-16
9	3	61200709	RELAY - CONTROL WITH MTS. BRACKET,
10	1	61200728	SHUNT, AMMETER
11	1	61201062	FUSE PANEL - 14 POSITION ATC FUSING, DOUBLE BUSS INPUT
12	1	61201085	CIRCUIT BREAKER - 150 AMP 30V DC, MANUAL RESET W/SW.
13	1	61201114	RELAY - CONTROL W/ MTS. BRACKET, COIL SUPPRESS
14	1	61201434	JUNCTION BLOCK, 5 POST, 10-32 STUD TYPE,
15	1	61201442	CIRCUIT BREAKER, 8 AMP 14 VDC, AUTO RESET
16	4	61201443	CIRCUIT BREAKER, 10 AMP 14 VDC, AUTO RESET
17	1	61201445	CIRCUIT BREAKER, 20 AMP 14 VDC, AUTO RESET
18	2	61201447	CIRCUIT BREAKER, 30 AMP 14 VDC, AUTO RESET
19	4	61370026	SCREW - MACHINE, #4-40 X 3/8 ROUND HEAD, ZINC
20	4	61370027	LOCK NUT - NYLON INSERT #4-40, ZINC
21	2	61370036	SCREW-MACHINE, TRUSS HEAD, PHILLIPS (BLACK OXIDE)
22	2	61370038	NUT-LOCK W/ ELASTIC 8-32
23	1	62201573	PANEL, INNER ELECTRICAL MODULAR REAR ELEC. BOX
24	1	62202087	BRACKET-MTS., OFF BOARD DIAGNOSTIC CONNECTOR PLUG
25	1	62202232	ELECTRICAL BOX, MODULAR REAR WELDED ASSEMBLY, MWP-ER
26	1	62202568	CHART, RELAY LABELS ABS START-INTERLOCK
27	1	62202678	CHART, RELAY LABELS FAN TEMPERATURE SOLENOID
28	1	62202680	CHART, RELAY LABELS FUEL/WATER SEPARATOR
29	1	62202687	CHART, RELAY LABELS KEY IGNITION

NOTE: ADDITIONAL PARTS SHOWN ON SHEETS 2 AND 3

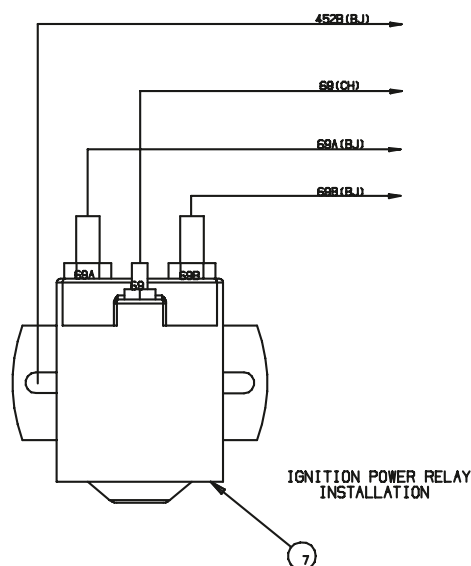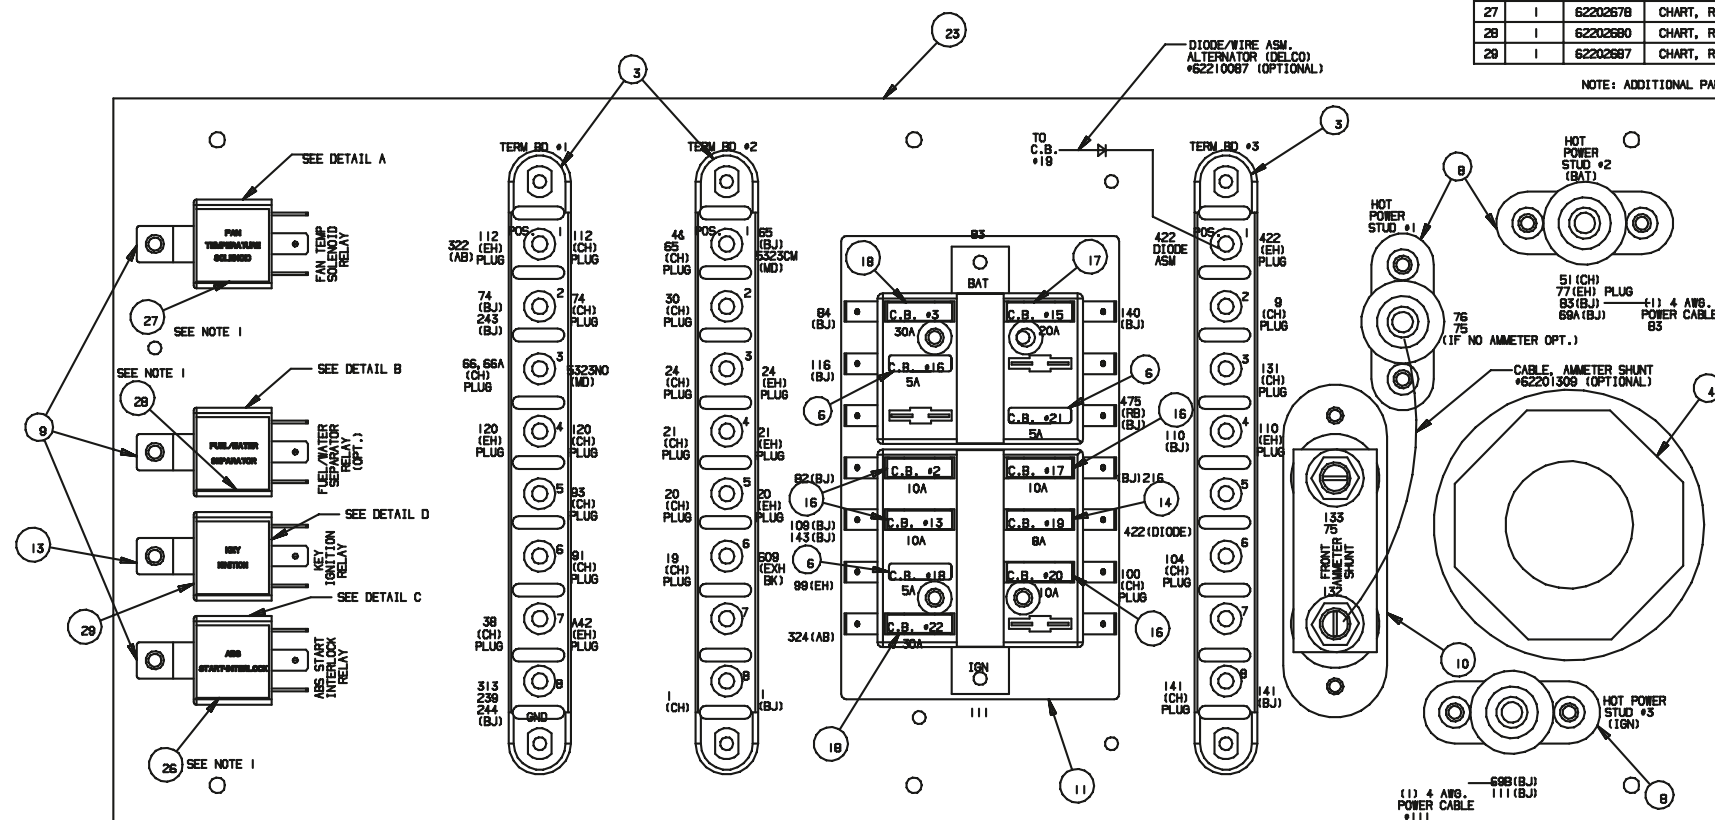

NOTES:
1) TYPICAL RELAY LABEL PLACEMENT:
CENTERED ON FRONT FACE OF RELAY,
TO READ PARALLEL TO GROUND WHEN
MOUNTED.

LEGEND


(CH) - CENTER HARNESS
(EH) - ENGINE HARNESS
(BJ) - BODY BOX JUMPER
(BD) - MODY DROP-OUT OF REAR BOX
(RB) - ROLL-BACK HARNESS (OPT)
(AB) - ABS
(MD) - WTEC III



Thomas
BUILT BUSES

62202620 F


ELECT. DIAGRAM MOD.
BOX COMPON. MTG. 98
CUMMINS ISB (CHASSIS)
Effective Date: 08/12/98
End Date: 06/14/99

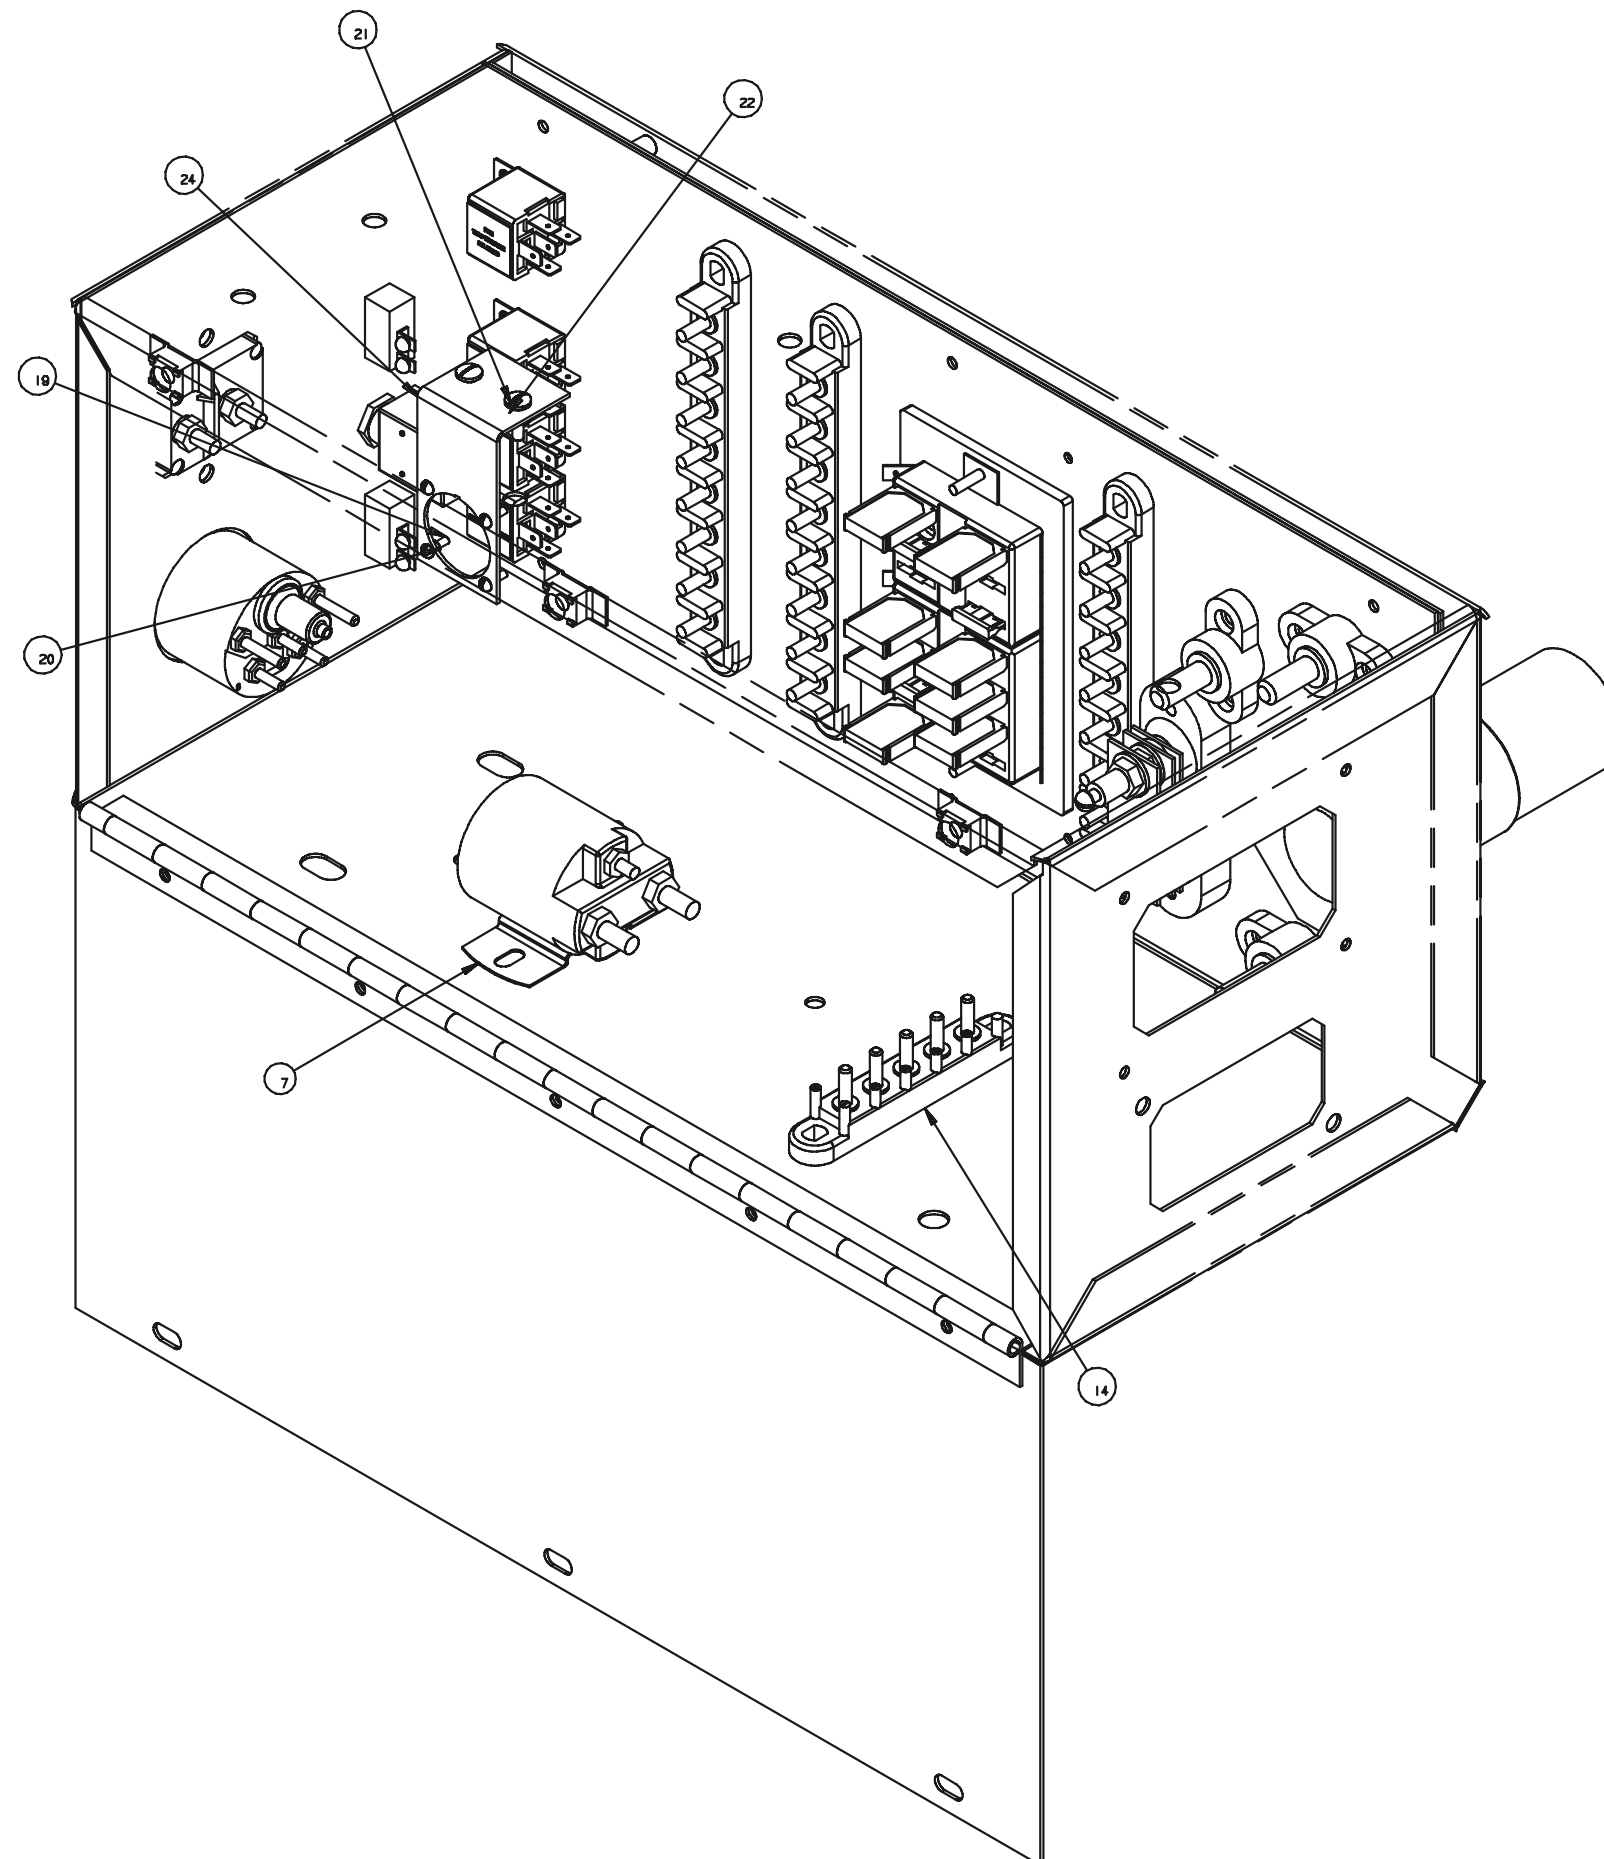


INSTALLATION OF DATA-LINK BRACKET
 GRID HTR MTO. BRACKET
 INSTALLATION, SEE DWG.
 62202301.

Sheet 2 of 3

	62202620 F
ELECT. DIAGRAM MOD. BOX COMPON. MTG. 98 CUMMINS ISB (CHASSIS) Effective Date: 08/12/98 End Date: 06/14/99	

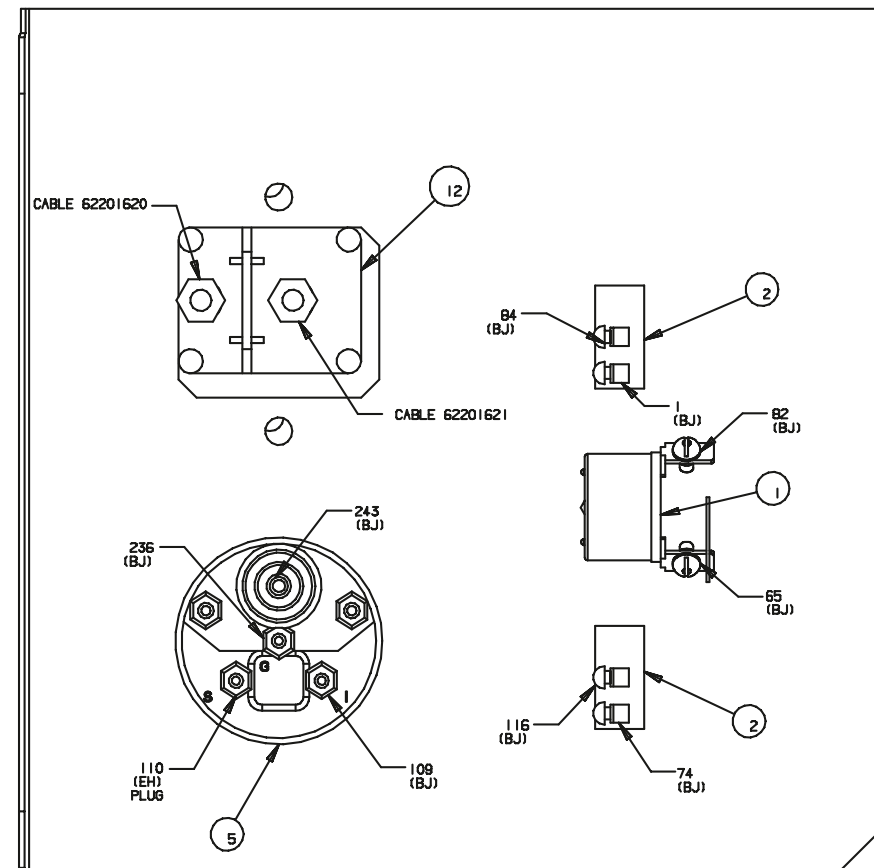


REAR BOX: BACK PANEL
VIEWED FROM INSIDE BOX

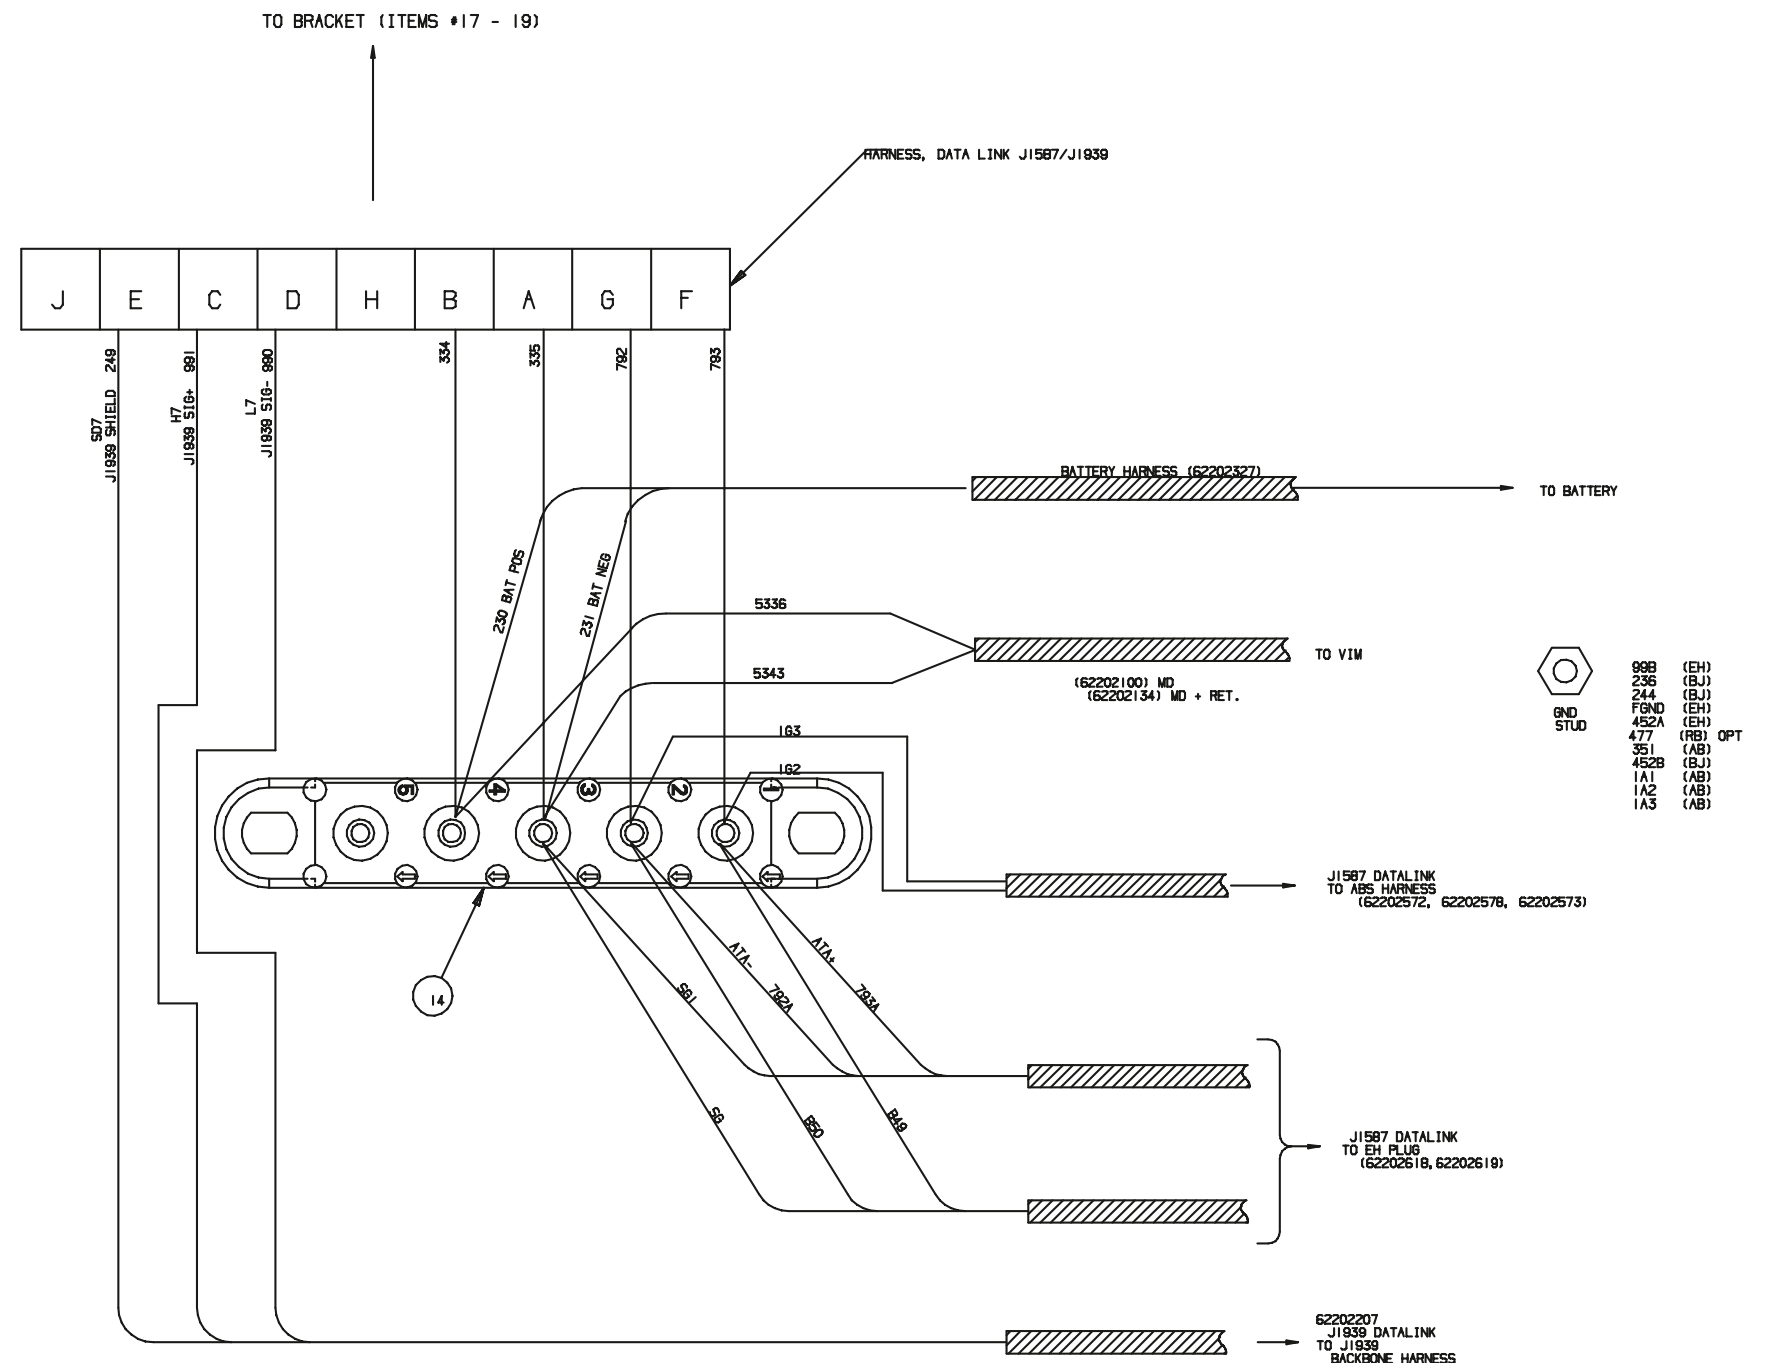


ON BOTTOM OF BOX

	62202620 F
ELECT. DIAGRAM MOD. BOX COMPON. MTG. 98 CUMMINS ISB (CHASSIS) Effective Date: 08/12/98 End Date: 06/14/99	


DETAIL A
FAN TEMP
SOLENOID
RELAY

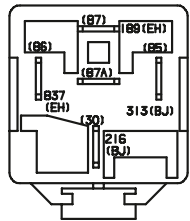


DETAIL B
FUEL/WATER
SEPARATOR
RELAY
(OPT.)

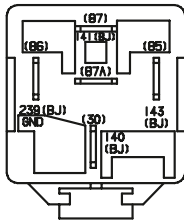


DETAIL C
ABS START
INTERLOCK
RELAY

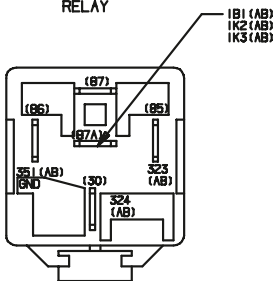

DETAIL D
KEY
IGNITION
RELAY

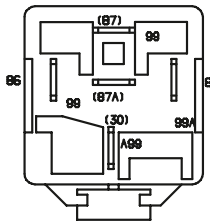


ITEMS NOT SHOWN			
ITEM	QUANTITY	PART NUMBER	DESCRIPTION
41	1	62202615	DIODE WIRE ASM. MOD BOX

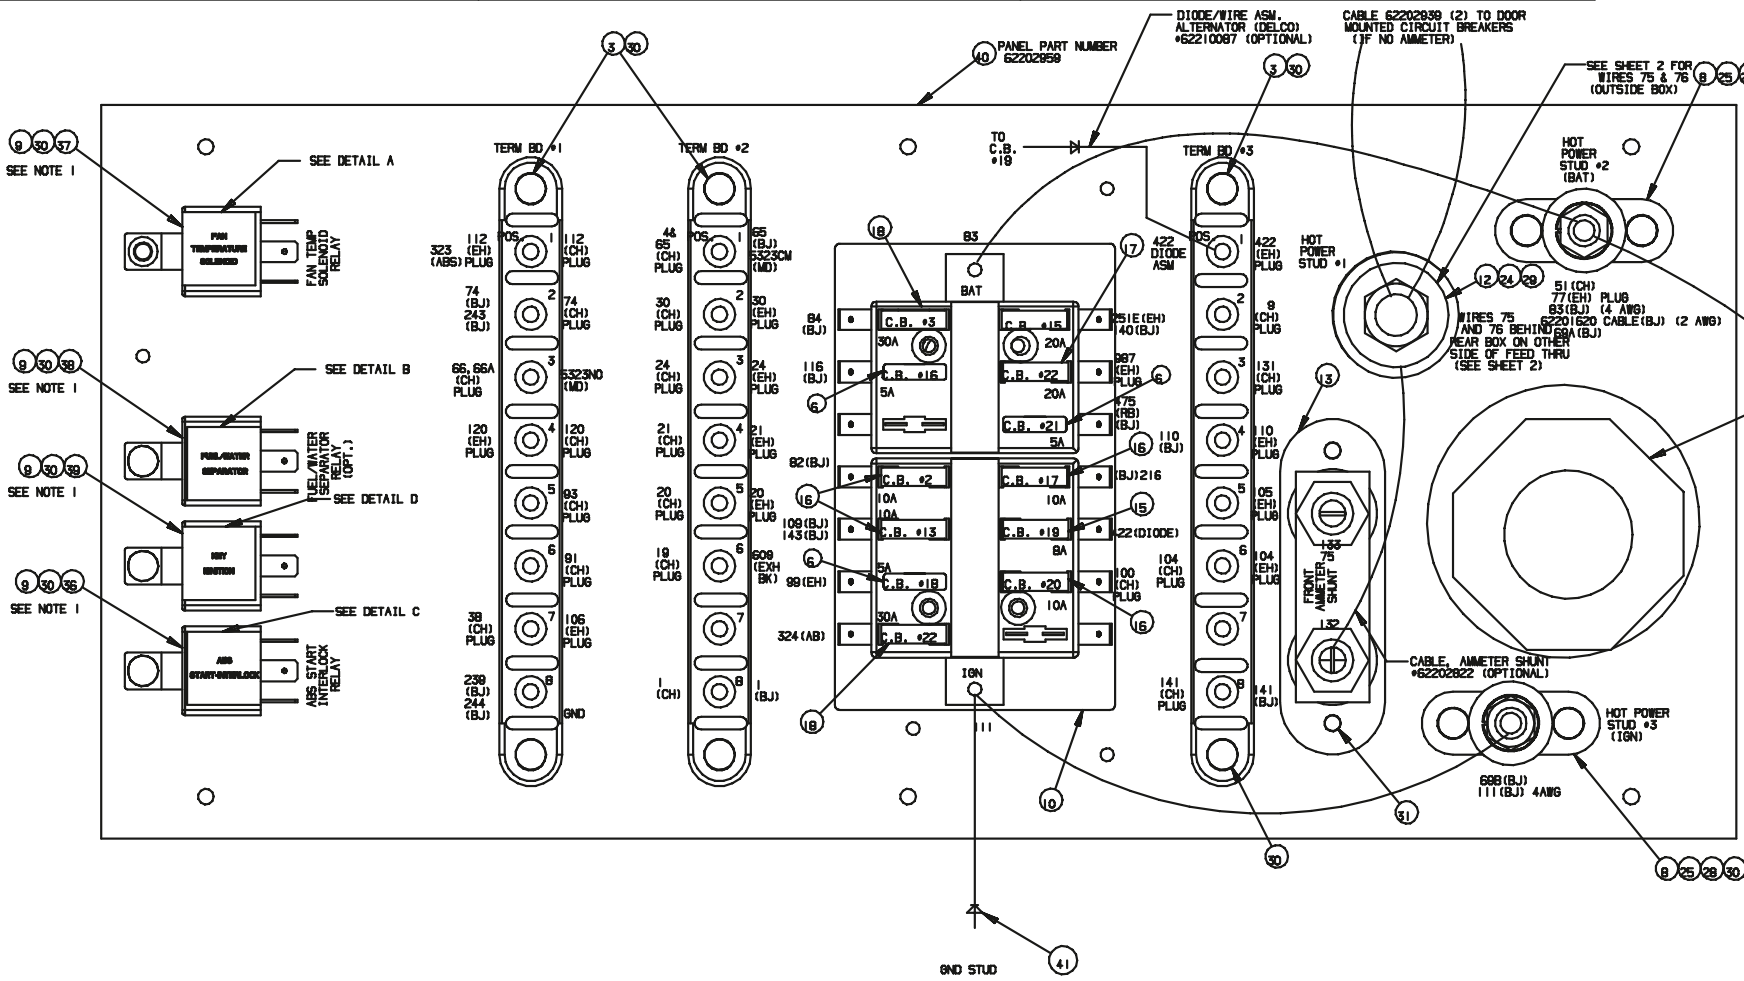

ITEM	QUANTITY	PART NUMBER	DESCRIPTION
1	1	61200100	START SWITCH
2	2	61200116	SWITCH, TOGGLE, SPST
3	3	61200130	BLOCK, JUNCTION - 8 POST
4	1	61200163	SEAL, CABLE ENTRY, 1 1/2 IN.
5	1	61200218	GAUGE - 2 INCH
6	3	61200343	FUSE - 5 AMP
7	1	61200411	CONTACTOR, POWER, 12 VDC
8	2	61200463	STUD, ELECT. - MOUNTING
9	5	61200709	RELAY - CONTROL
10	1	61201062	FUSE PANEL - 14 POSITION
11	2	61201095	CIRCUIT BREAKER - 150 AMP
12	1	61201284	TERMINAL BOARD, FEED-
13	1	61201433	SHUNT, AMMETER, 300 AMP
14	1	61201434	JUNCTION BLOCK, 5 POST,
15	1	61201442	CIRCUIT BREAKER, 8 AMP
16	5	61201443	CIRCUIT BREAKER, 10 AMP
17	2	61201445	CIRCUIT BREAKER, 20 AMP
18	2	61201447	CIRCUIT BREAKER, 30 AMP
19	4	61370026	SCREW - MACHINE, #4-40 X 3/8
20	4	61370027	LOCK NUT - NYLON INSERT
21	2	61370036	SCREW-MACHINE, TRUSS HEAD,
22	2	61370038	NUT-LOCK W/ ELASTIC
23	4	61370040	NUT, HEX HEAD, GRADE 8
24	1	61370042	NUT, LOCKING, HEX HEAD
25	1	61370043	NUT, LOCKING, HEX HEAD
26	3	61370050	NUT, HEX HEAD, GRADE 8
27	2	61370063	NUT, HEX HEAD, GRADE 8
28	3	61370260	LOCKWASHER, 1/4
29	2	61370266	LOCKWASHER, 3/8
30	15	61370334	SCREW-10 X 5/8
31	2	61370337	SCREW - SELF TAPPING, #10 X 1-1/4
32	2	61370802	BOLT, HEX HEAD, 1/4-20 X 3/4
33	1	61370803	BOLT, HEX HEAD, 1/4-20 X 1
34	4	61370850	3/16 - 1 IN. PHILLIPS ROUND HEAD
35	1	62202087	BRACKET-MTG., OFF BOARD
36	1	62202668	CHART, RELAY LABELS
37	1	62202678	CHART, RELAY LABELS
38	1	62202680	CHART, RELAY LABELS
39	1	62202687	CHART, RELAY LABELS
40	1	62202862	ELECTRICAL BOX, MODULAR REAR

NOTE: ADDITIONAL PARTS SHOWN ON SHEETS 2 AND 3

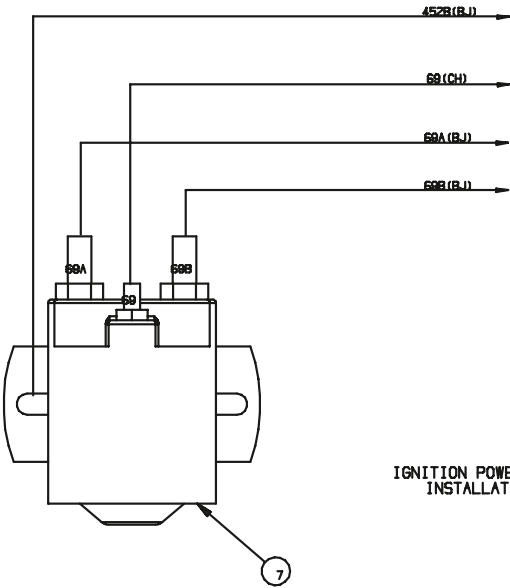

IGNITION POWER RELAY
INSTALLATION


NOTES:
1) TYPICAL RELAY LABEL PLACEMENT:
CENTERED ON FRONT FACE OF RELAY,
TO READ PARALLEL TO GROUND WHEN
MOUNTED.


LEGEND
(CH) - CENTER HARNESS
(EH) - ENGINE HARNESS
(BJ) - MOD. BOX JUMPER
(BD) - BODY DROP-OUT OF REAR BOX
(RB) - ROLL-BACK HARNESS (OPT)
(AB) - ABS
(MD) - WTEC III

**62202624 A**


**ELECT. DIAGRAM MOD.
BOX COMPON. MTG. 98
CUMMINS ISB (CHASSIS)**

Effective Date: 06/15/99

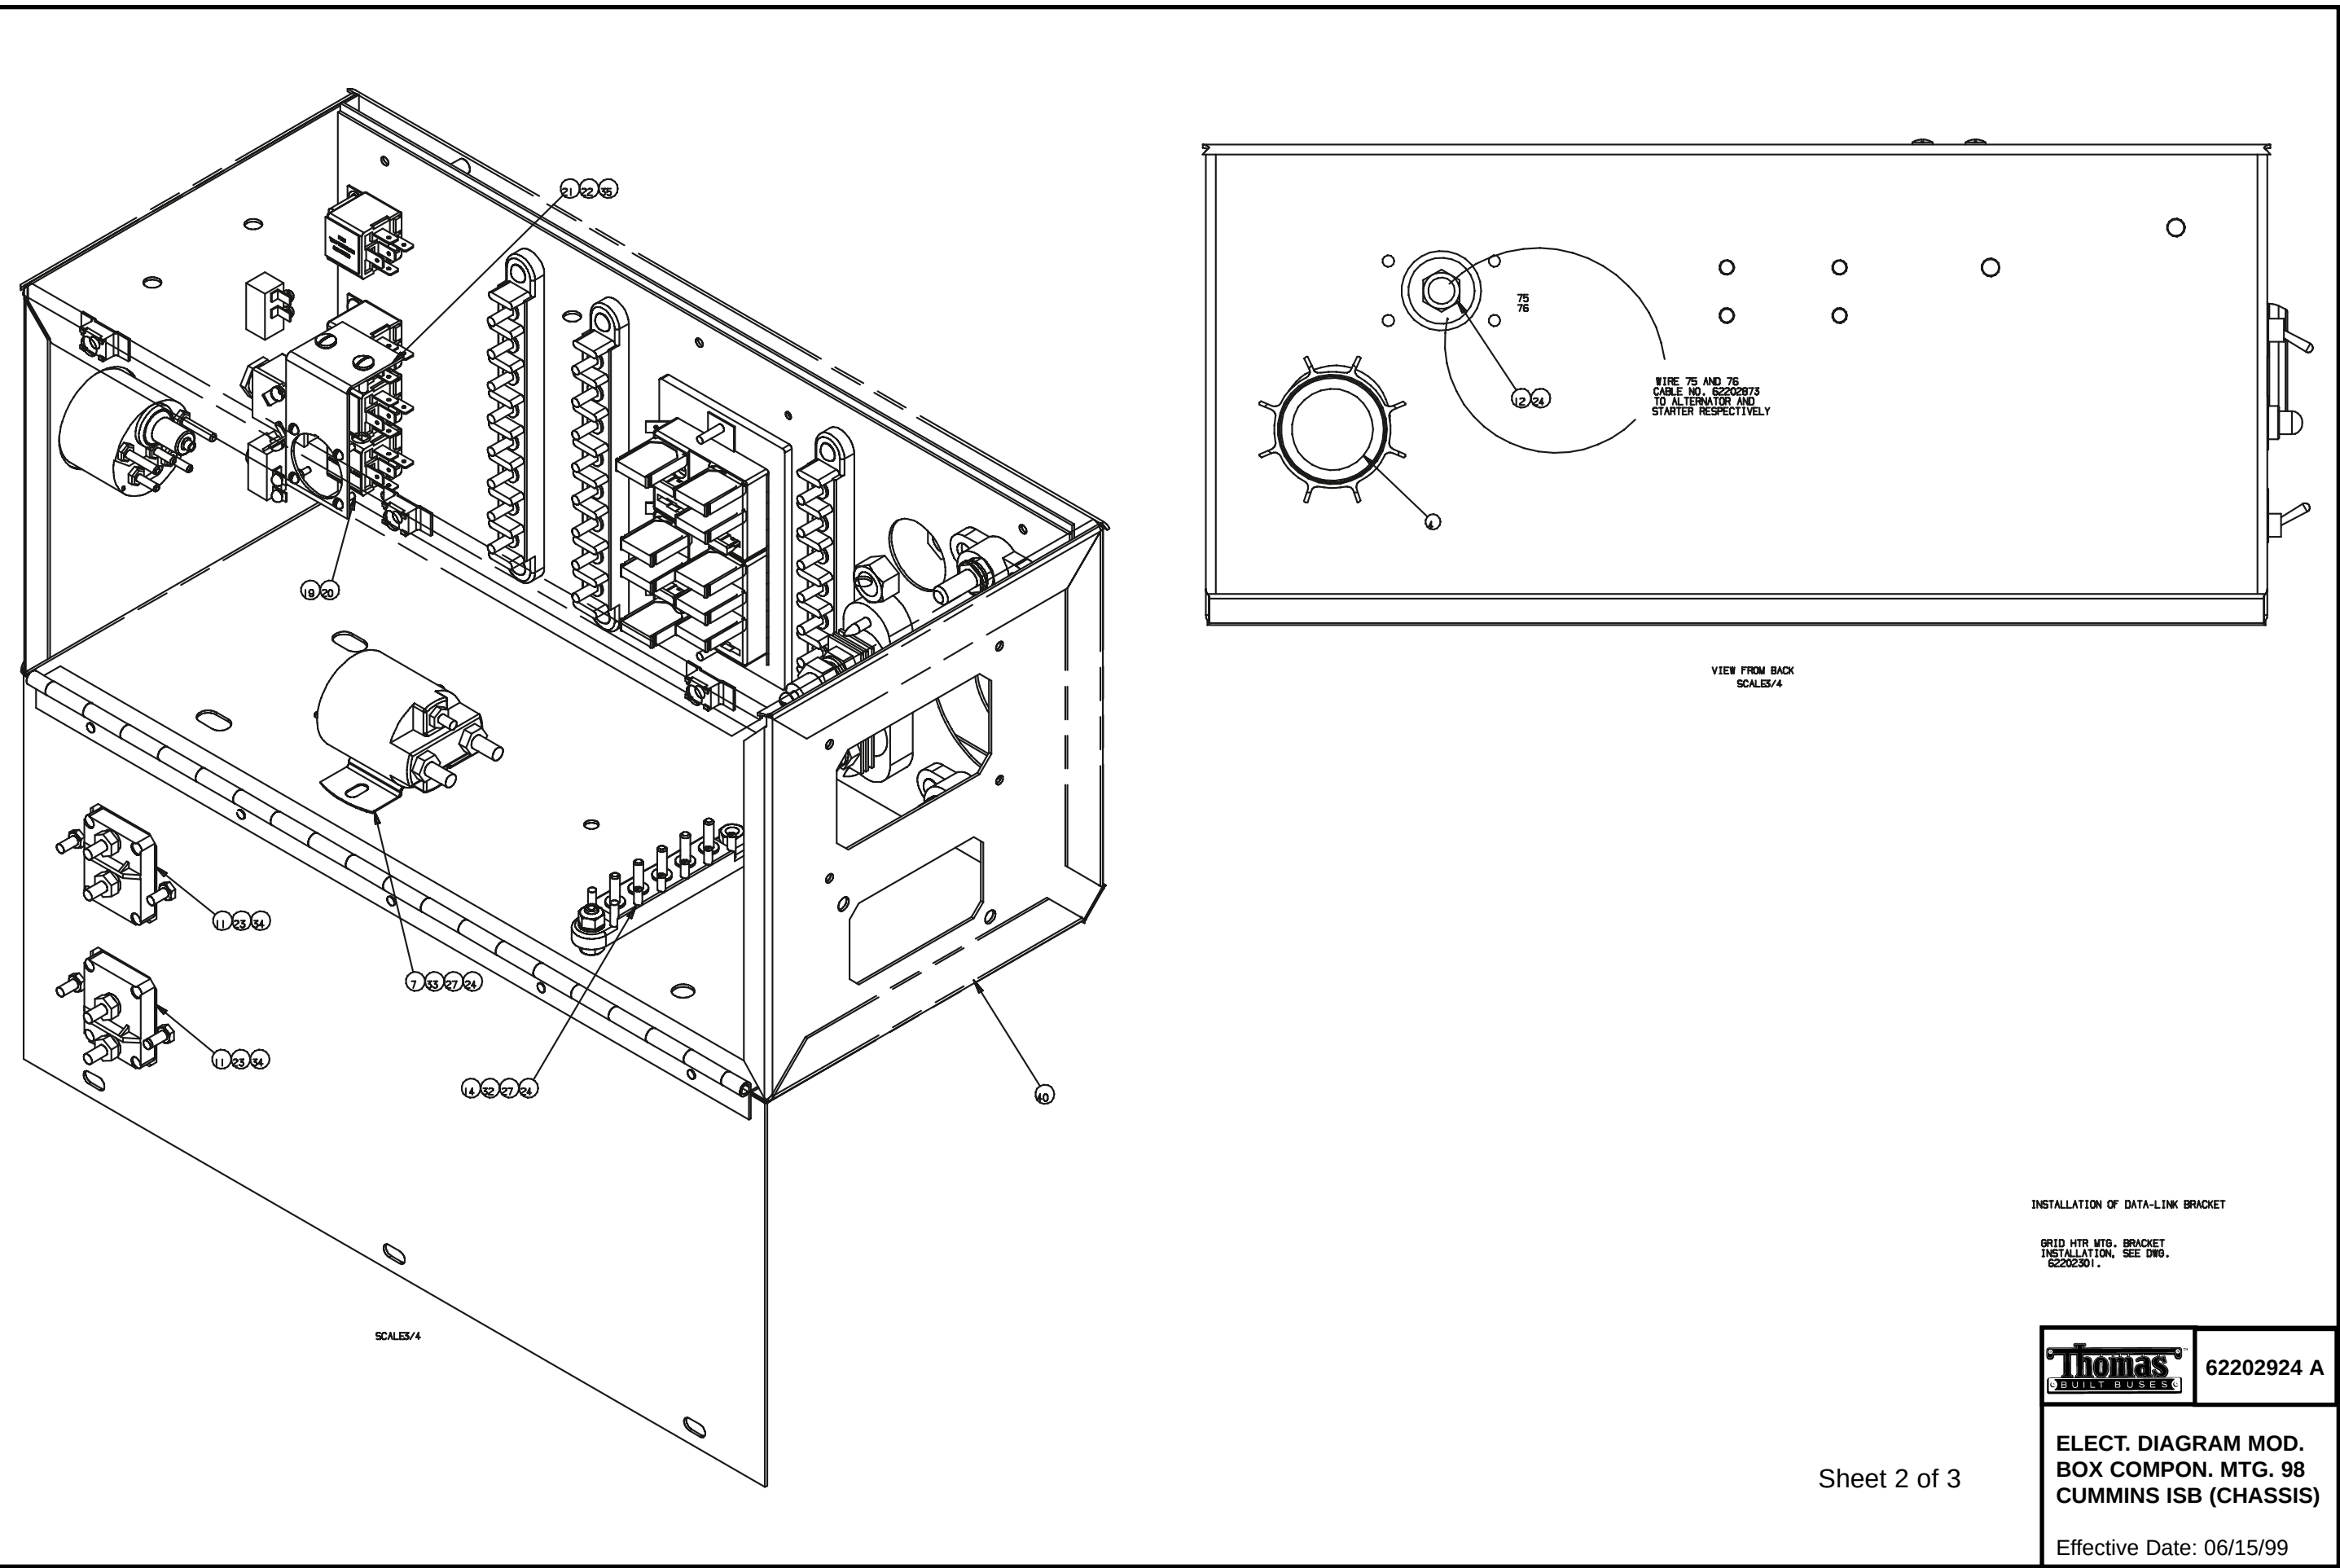

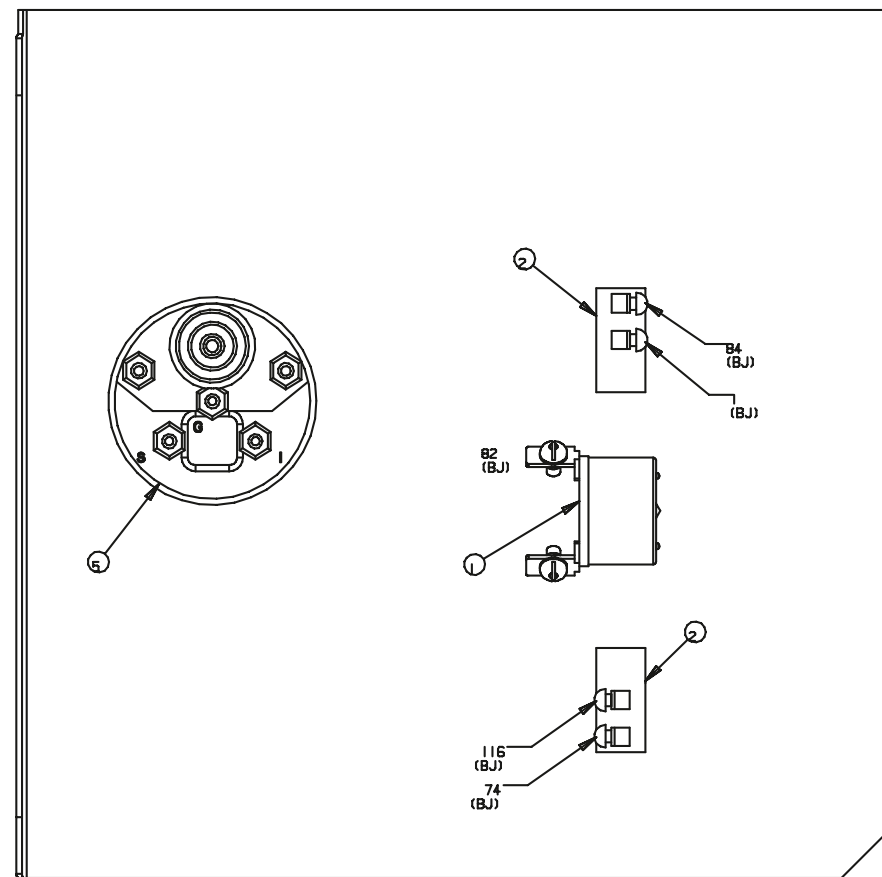

REAR BOX: BACK PANEL
VIEWED FROM INSIDE BOX

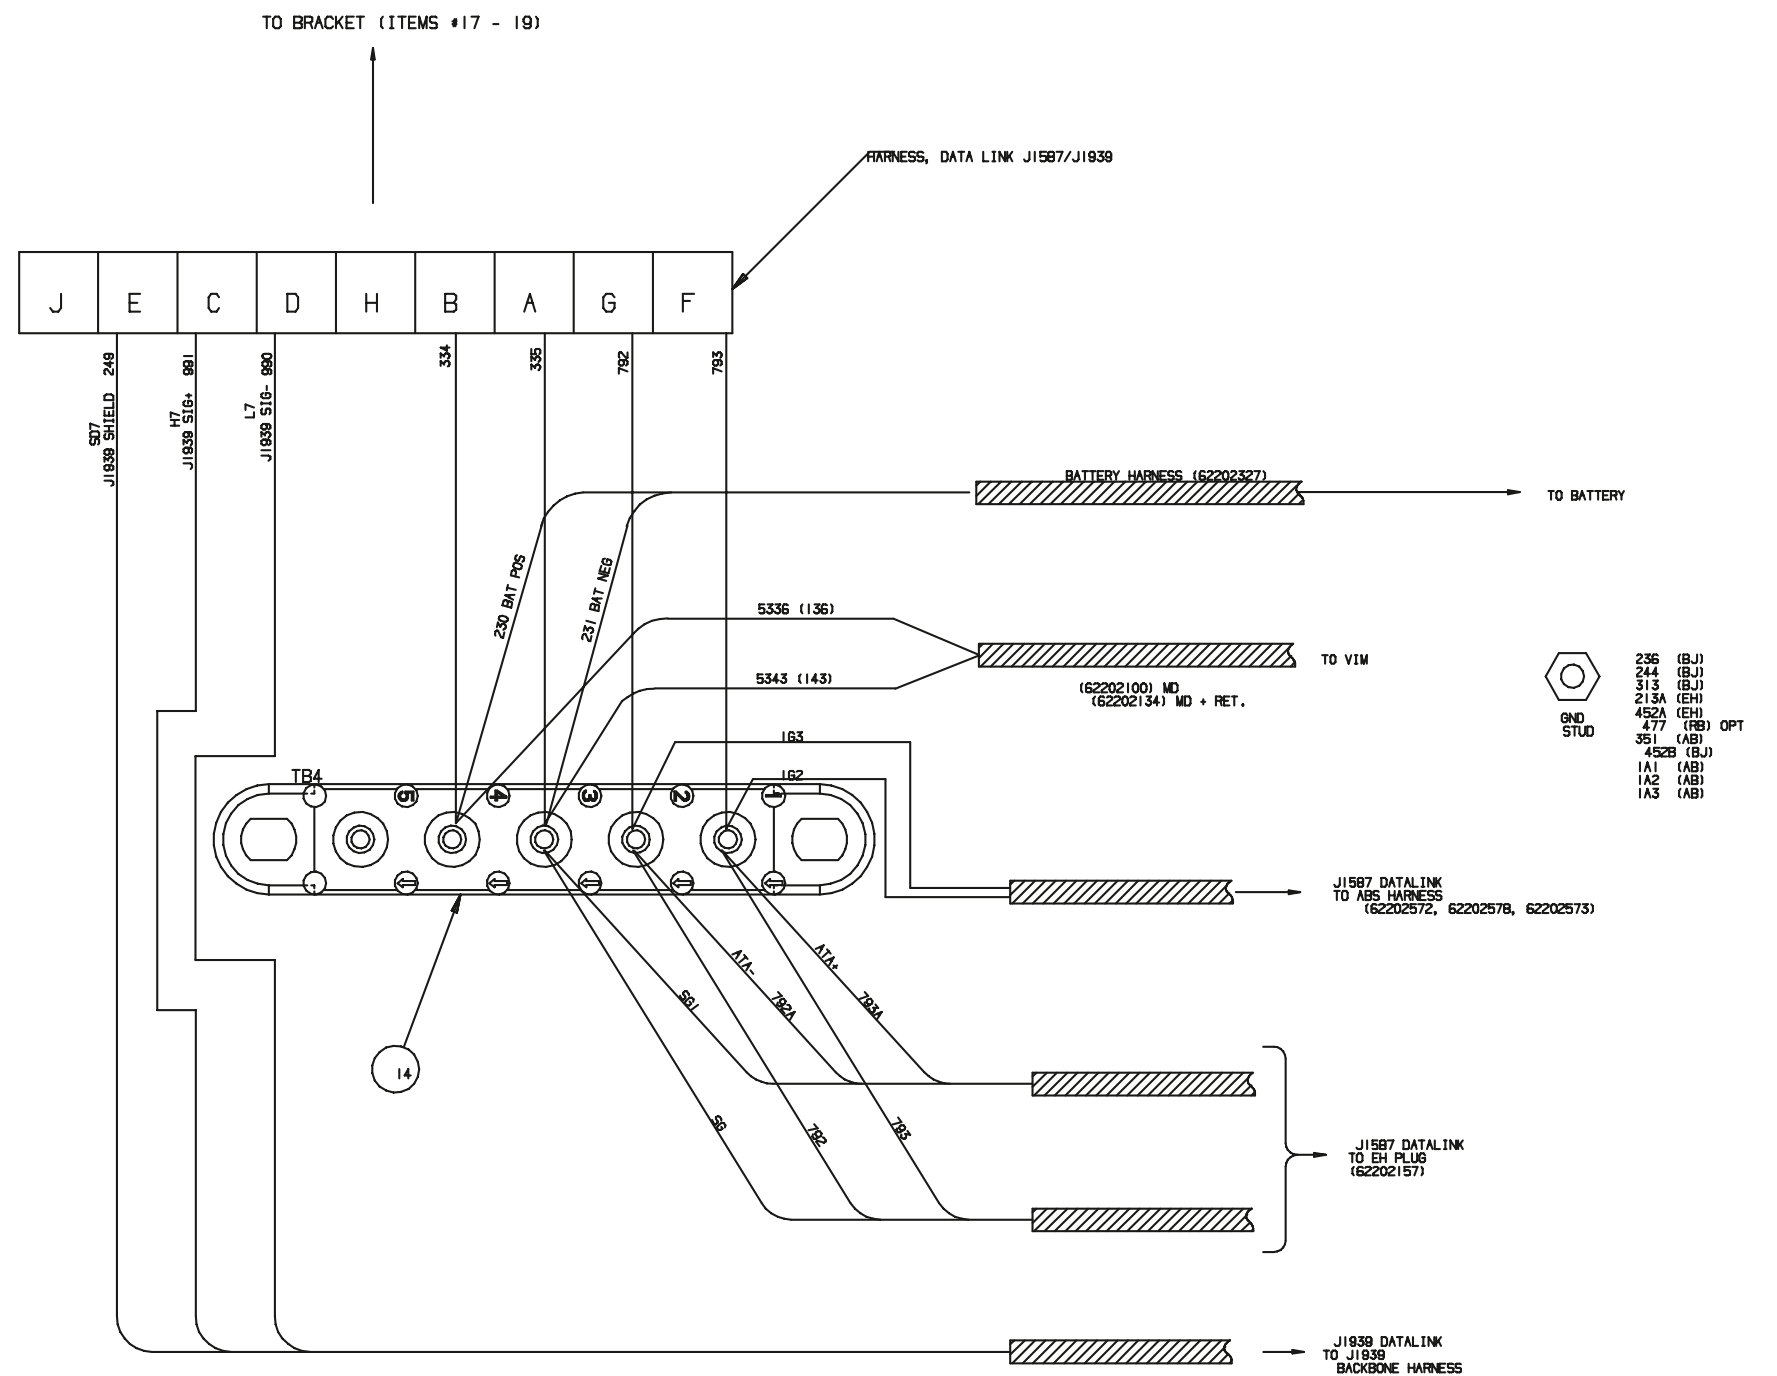


ON BOTTOM OF BOX

Sheet 3 of 3

	62202696 D
ELECT. DIAGRAM MOD. BOX COMPON. MTG. 98 CUMMINS ISB (CHASSIS)	
Effective Date: 06/15/99	


FASTENER REQMTS (STANDARD)		QTY.	PART NO.	DESCRIPTION	ITEM
QTY PER ITEM	FASTENER PART NO.				
-	-	1	62201573	PANEL, INNER ELECTRICAL, MOD. REAR BOX, MVP-ER	1
1	61370334	4	61200709	RELAY - CONTROL, SPDT	2
2	61370334	3	61201491	BLOCK, JUNCTION - 8 POST FRONT ELECTRICAL CHASSIS	3
4	61370385	1	61201062	FUSE PANEL 6/8 POSITION	4
2	61370334	3	61200463	STUD, ELECTRICAL MTG.	5
2	61370337	1	61200728	SHUNT, 150 AMP. - 50 MILLIVOLT	6
-	-	1	61200343	FUSE - 5 AMP.	7
-	-	1	61200343	FUSE - 5 AMP. (OPT B2310-06-000) ONLY	7
-	-	1	61200953	CIRCUIT BREAKER - 8 AMP.	8
-	-	4	61200936	CIRCUIT BREAKER - 10 AMP.	9
-	-	2	61200871	CIRCUIT BREAKER - 20 AMP.	10
-	-	1	61200872	CIRCUIT BREAKER - 30 AMP.	11
-	-	1	61200163	CABLE ENTRY SEAL, 1.5" I.D. (NOT SHOWN)	12
-	-	1	62210087	DIODE/WIRE ASM., ALTERNATOR (DELCO)	13
-	-	1	62201309	CABLE, AMMETER SHUNT (OPT.)	14
-	-	1	61200772	FUSE, 2 AMP (NOT SHOWN) #310	15
-	-	1	61200159	FUSEHOLDER (NOT SHOWN) #310	16

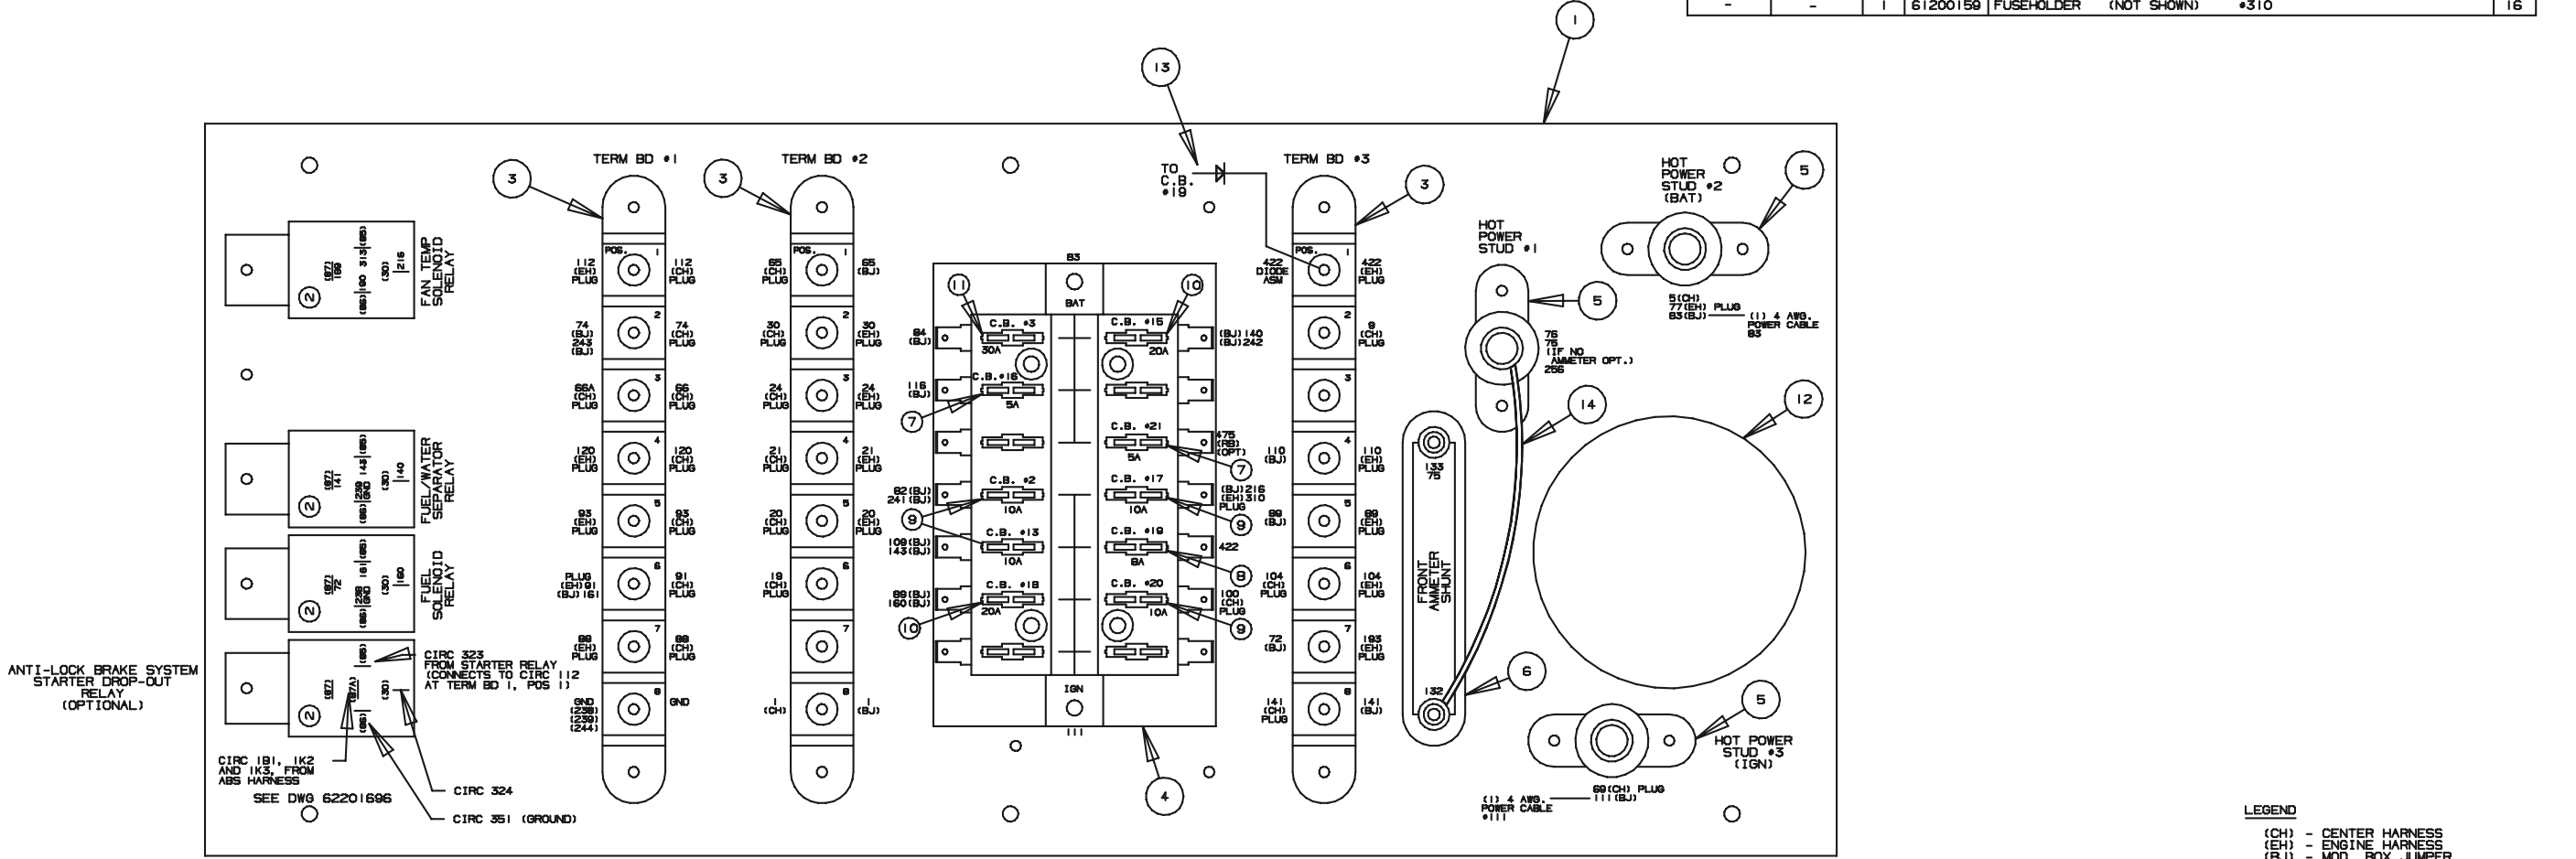


GND STUD IN MOD. REAR BOX
#106
#236
#244
#452A
#477 (RB) (OPT)

**62201743 G**

ELECT. DIAGRAM MOD.
BOX COMPON. MTG.
CUMMINS 6C (CHASSIS)

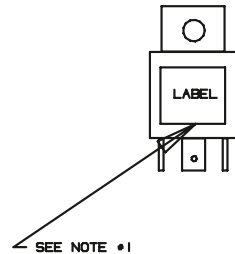


FASTENER REQMTS (STANDARD)		QTY.	PART NO.	DESCRIPTION	ITEM
QTY PER ITEM	FASTENER PART NO.				
-	-	1	62201573	PANEL, INNER ELECTRICAL, MOD. REAR BOX, MVP-ER	1
1	61370334	4	61200709	RELAY - CONTROL, SPDT	2
2	61370334	3	61201491	BLOCK, JUNCTION - 8 POST FRONT ELECTRICAL CHASSIS	3
4	61370395	1	61201062	FUSE PANEL 6/8 POSITION	4
2	61370334	3	61200463	STUD, ELECTRICAL MTG.	5
2	61370337	1	61200729	SHUNT, 150 AMP. - 50 MILLIVOLT	6
-	-	1	61200343	FUSE - 5 AMP.	7
-	-	1	61200343	FUSE - 5 AMP. (OPT B2310-06-000) ONLY	7
-	-	1	61200953	CIRCUIT BREAKER - 8 AMP.	8
-	-	4	61200936	CIRCUIT BREAKER - 10 AMP.	9
-	-	2	61200871	CIRCUIT BREAKER - 20 AMP.	10
-	-	1	61200872	CIRCUIT BREAKER - 30 AMP.	11
-	-	1	61200163	CABLE ENTRY SEAL, 1.5" I.D. (NOT SHOWN)	12
-	-	1	62210097	DIODE/WIRE ASM., ALTERNATOR (DELCO)	13
-	-	1	62201309	CABLE, AMMETER SHUNT (OPT.)	14
-	-	1	61200772	FUSE, 2 AMP (NOT SHOWN) *310	15
-	-	1	61200159	FUSEHOLDER (NOT SHOWN) *310	16
-	-	1	61200411	RELAY, IGNITION POWER	17
-	-	1	62202669	RELAY LABEL, ABS START INTERLOCK	18
-	-	1	62202679	RELAY LABEL, FUEL SOLENOID	19
-	-	1	62202681	RELAY LABEL, FUEL/WATER SEPARATOR	20
-	-	1	62202678	RELAY LABEL, FAN TEMP. SOLENOID	21

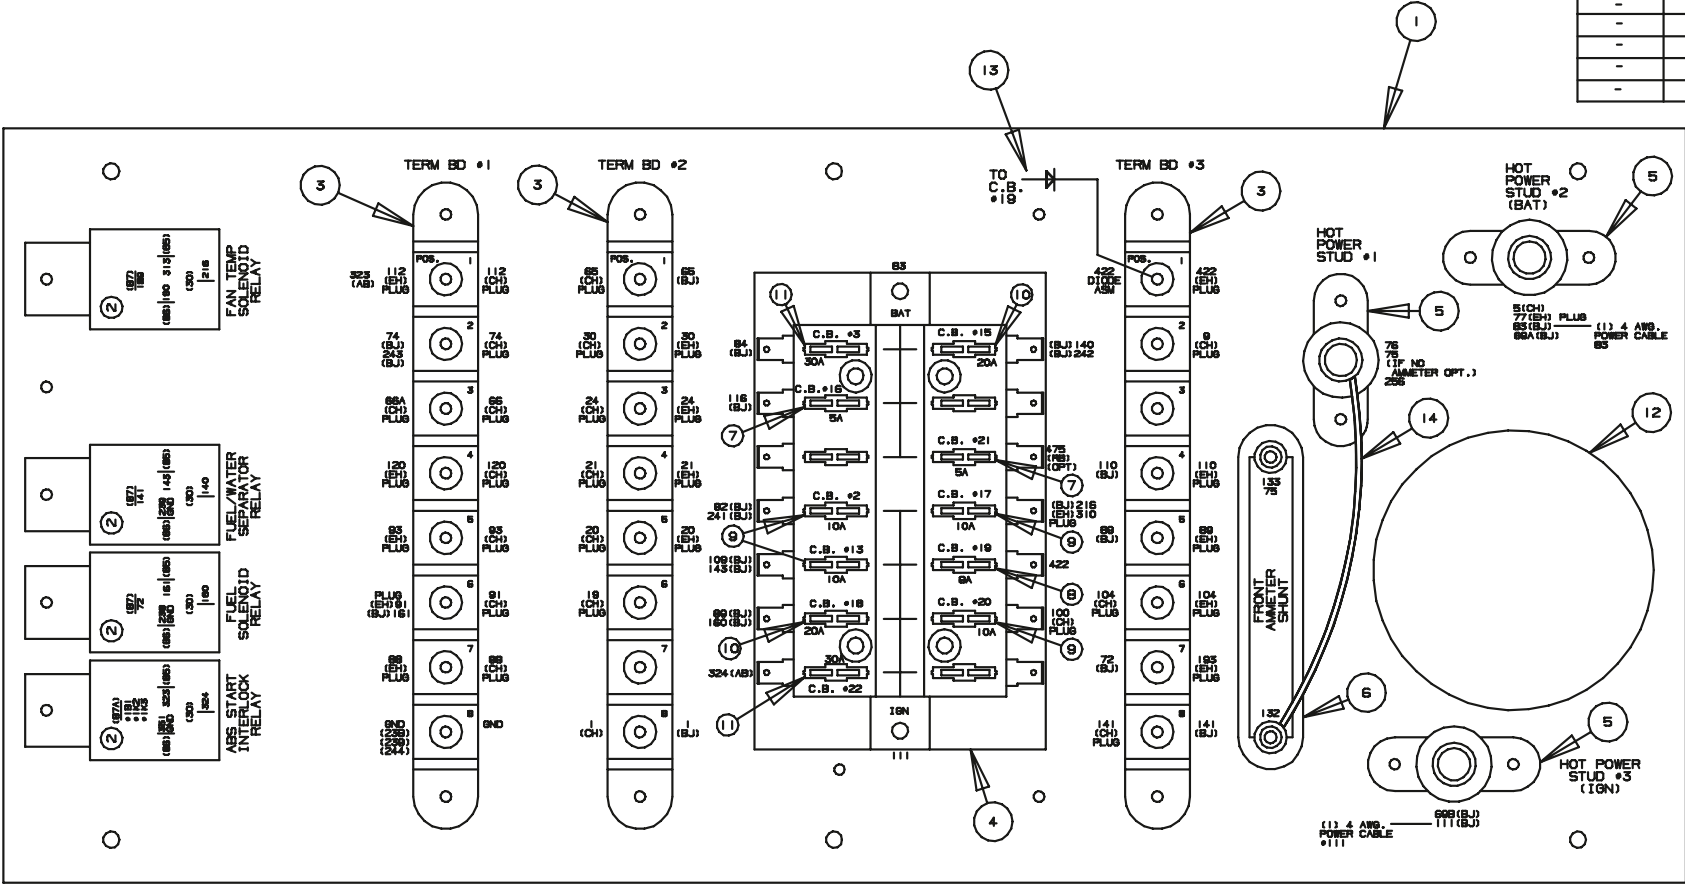

NOTES: 1) TYPICAL LABEL PLACEMENT: CENTERED ON FRONT FACE
2) REFER TO LABEL CALLOUT FOR PROPER LABEL USE

- LEGEND
- (CH) - CENTER HARNESS
 - (EH) - ENGINE HARNESS
 - (BJ) - MOD. BOX JUMPER
 - (BD) - BODY DROP-OUT OF REAR BOX
 - (RB) - ROLL-BACK ALARM HARNESS (OPT)
 - (AB) - ABS(EC-17)

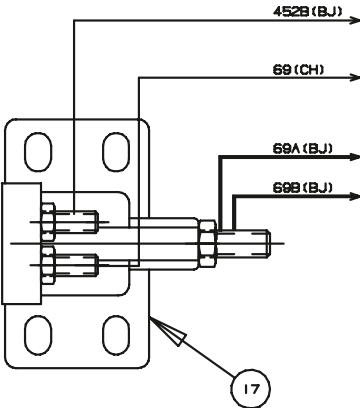

GND STUD IN MOD. REAR BOX

- *106
- *235
- *244
- *452A
- *477 (RB) (OPT)
- *351 (AB)
- *452B




62202614 D


ELECT. DIAGRAM MOD.
BOX COMPON. MTG. 97
CUMMINS 6C (CHASSIS)

Effective Date: 05/12/98


DETAIL A
FAN TEMP
SOLENOID
RELAY

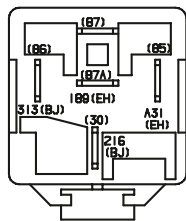


DETAIL B
FUEL/WATER
SEPARATOR
RELAY
(OPT.)

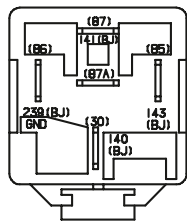

DETAIL C
ABS START
INTERLOCK
RELAY


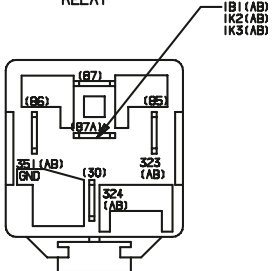


DETAIL D
KEY (ISC)
IGNITION
RELAY

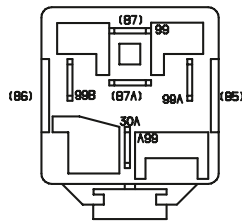

ITEM	QUANTITY	PART NUMBER	DESCRIPTION
1	1	61200100	START SWITCH
2	2	61200116	SWITCH, TOGGLE, SPST
3	3	61200130	BLOCK, JUNCTION - 8 POST FRONT ELECTRICAL CHASSIS
4	1	61200163	SEAL, CABLE ENTRY, 1 1/2 IN.
5	1	61200218	GAUGE - 2 INCH OIL PRESSURE
6	3	61200343	FUSE - 5 AMP AUTO FUSE TYPE
7	1	61200411	CONTACTOR, POWER, 12 VDC
8	3	61200463	STUD, ELECT. - MOUNTING TERMINAL BD., 3/8-16
9	3	61200709	RELAY - CONTROL WITH MTS. BRACKET,
10	1	61200728	SHUNT, AMMETER
11	1	61201062	FUSE PANEL - 14 POSITION ATC FUSING, DOUBLE BUSS INPUT
12	1	61201085	CIRCUIT BREAKER - 150 AMP 30V DC, MANUAL RESET W/SW.
13	1	61201114	RELAY - CONTROL W/ MTS. BRACKET, COIL SUPPRESS
14	1	61201434	JUNCTION BLOCK, 5 POST, 10-32 STUD TYPE
15	1	61201442	CIRCUIT BREAKER, 8 AMP 14 VDC, AUTO RESET
16	4	61201443	CIRCUIT BREAKER, 10 AMP 14 VDC, AUTO RESET
17	1	61201445	CIRCUIT BREAKER, 20 AMP 14 VDC, AUTO RESET
18	2	61201447	CIRCUIT BREAKER, 30 AMP 14 VDC, AUTO RESET
19	4	61370026	SCREW - MACHINE, #4-40 X 3/8 ROUND HEAD, ZINC
20	4	61370027	LOCK NUT - NYLON INSERT #4-40, ZINC
21	2	61370036	SCREW-MACHINE, TRUSS HEAD, PHILLIPS (BLACK OXIDE)
22	2	61370039	NUT-LOCK W/ ELASTIC B-32
23	1	62201573	PANEL, INNER ELECTRICAL MODULAR REAR ELECT. BOX
24	1	62202087	BRACKET-MTG., OFF BOARD DIAGNOSTIC CONNECTOR PLUG
25	1	62202232	ELECTRICAL BOX, MODULAR REAR WELDED ASSEMBLY, MVP-ER
26	1	62202669	CHART, RELAY LABELS ABS START-INTERLOCK
27	1	62202678	CHART, RELAY LABELS FAN TEMPERATURE SOLENOID
28	1	62202680	CHART, RELAY LABELS FUEL/WATER SEPARATOR
29	1	62202687	CHART, RELAY LABELS KEY IGNITION

NOTE: ADDITIONAL PARTS SHOWN ON SHEETS 2 AND 3

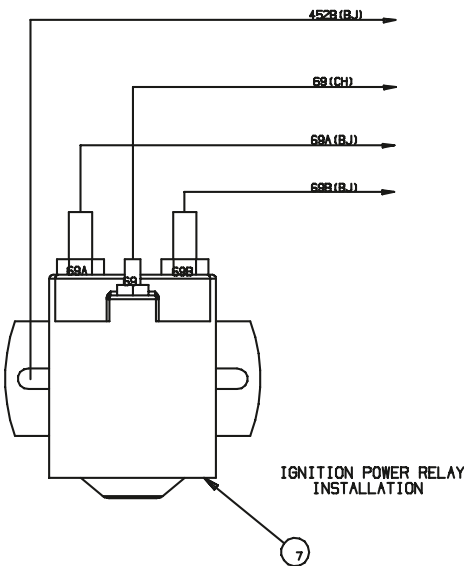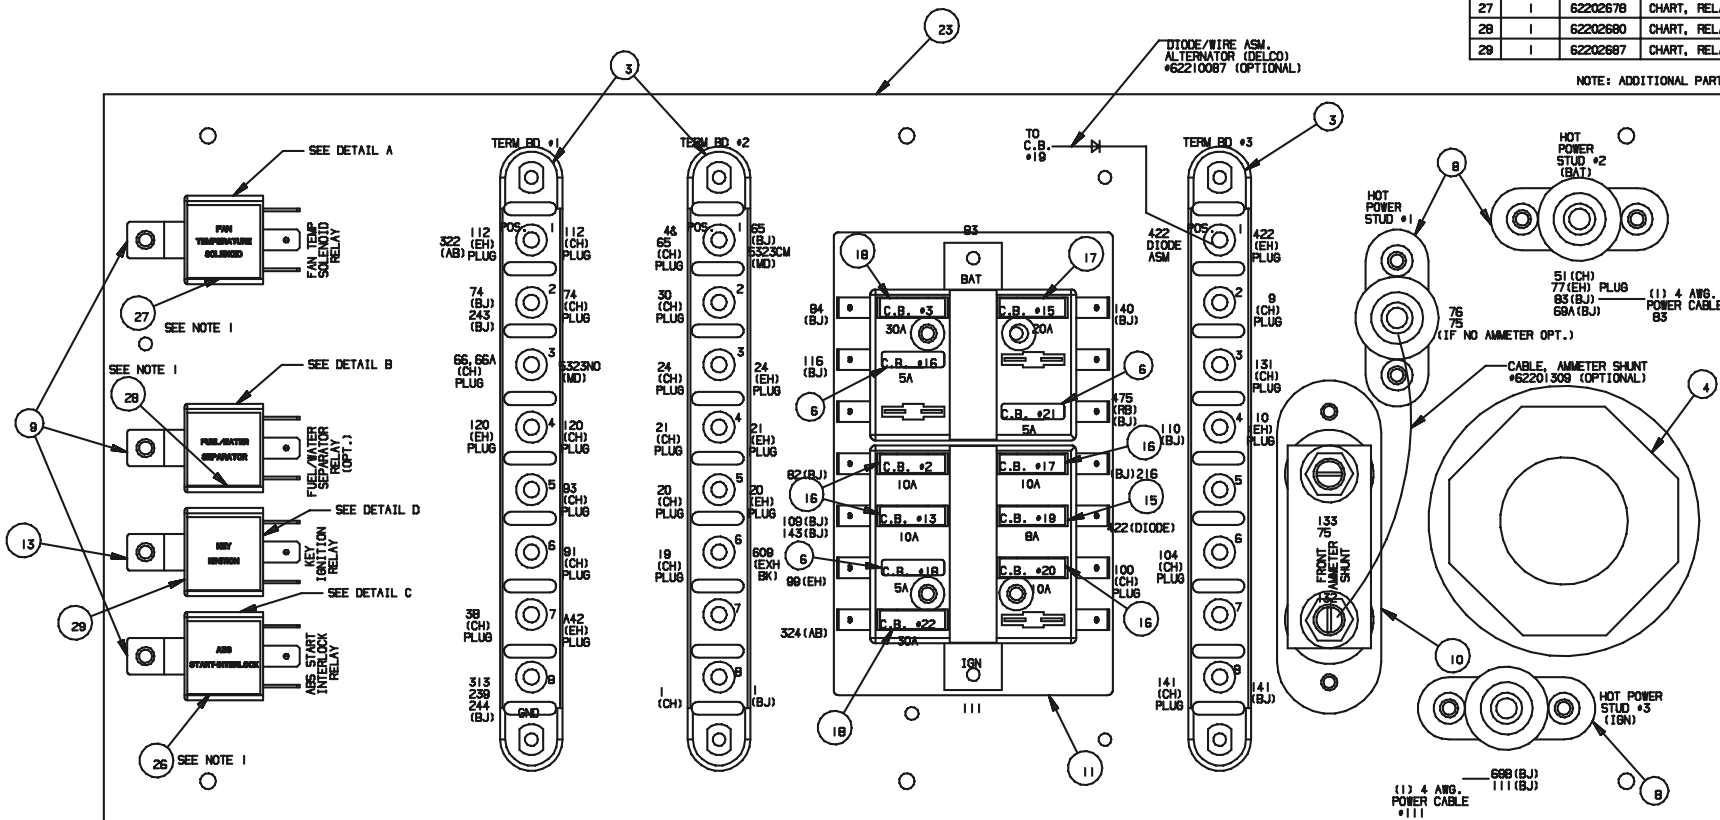

NOTES:
1) TYPICAL RELAY LABEL PLACEMENT:
CENTERED ON FRONT FACE OF RELAY,
TO READ PARALLEL TO GROUND WHEN
MOUNTED.

LEGEND


(CH) - CENTER HARNESS
(EH) - ENGINE HARNESS
(BJ) - MOD. BOX JUMPER
(BD) - BODY DROP-OUT OF REAR BOX
(RB) - ROLL-BACK HARNESS (OPT.)
(AB) - ABS
(MD) - WTEC III

Sheet 1 of 3

62202638 G

ELECT. DIAGRAM MOD.
BOX COMPON. MTG. 98
CUMMINS ISC (CHASSIS)


Effective Date: 06/15/98

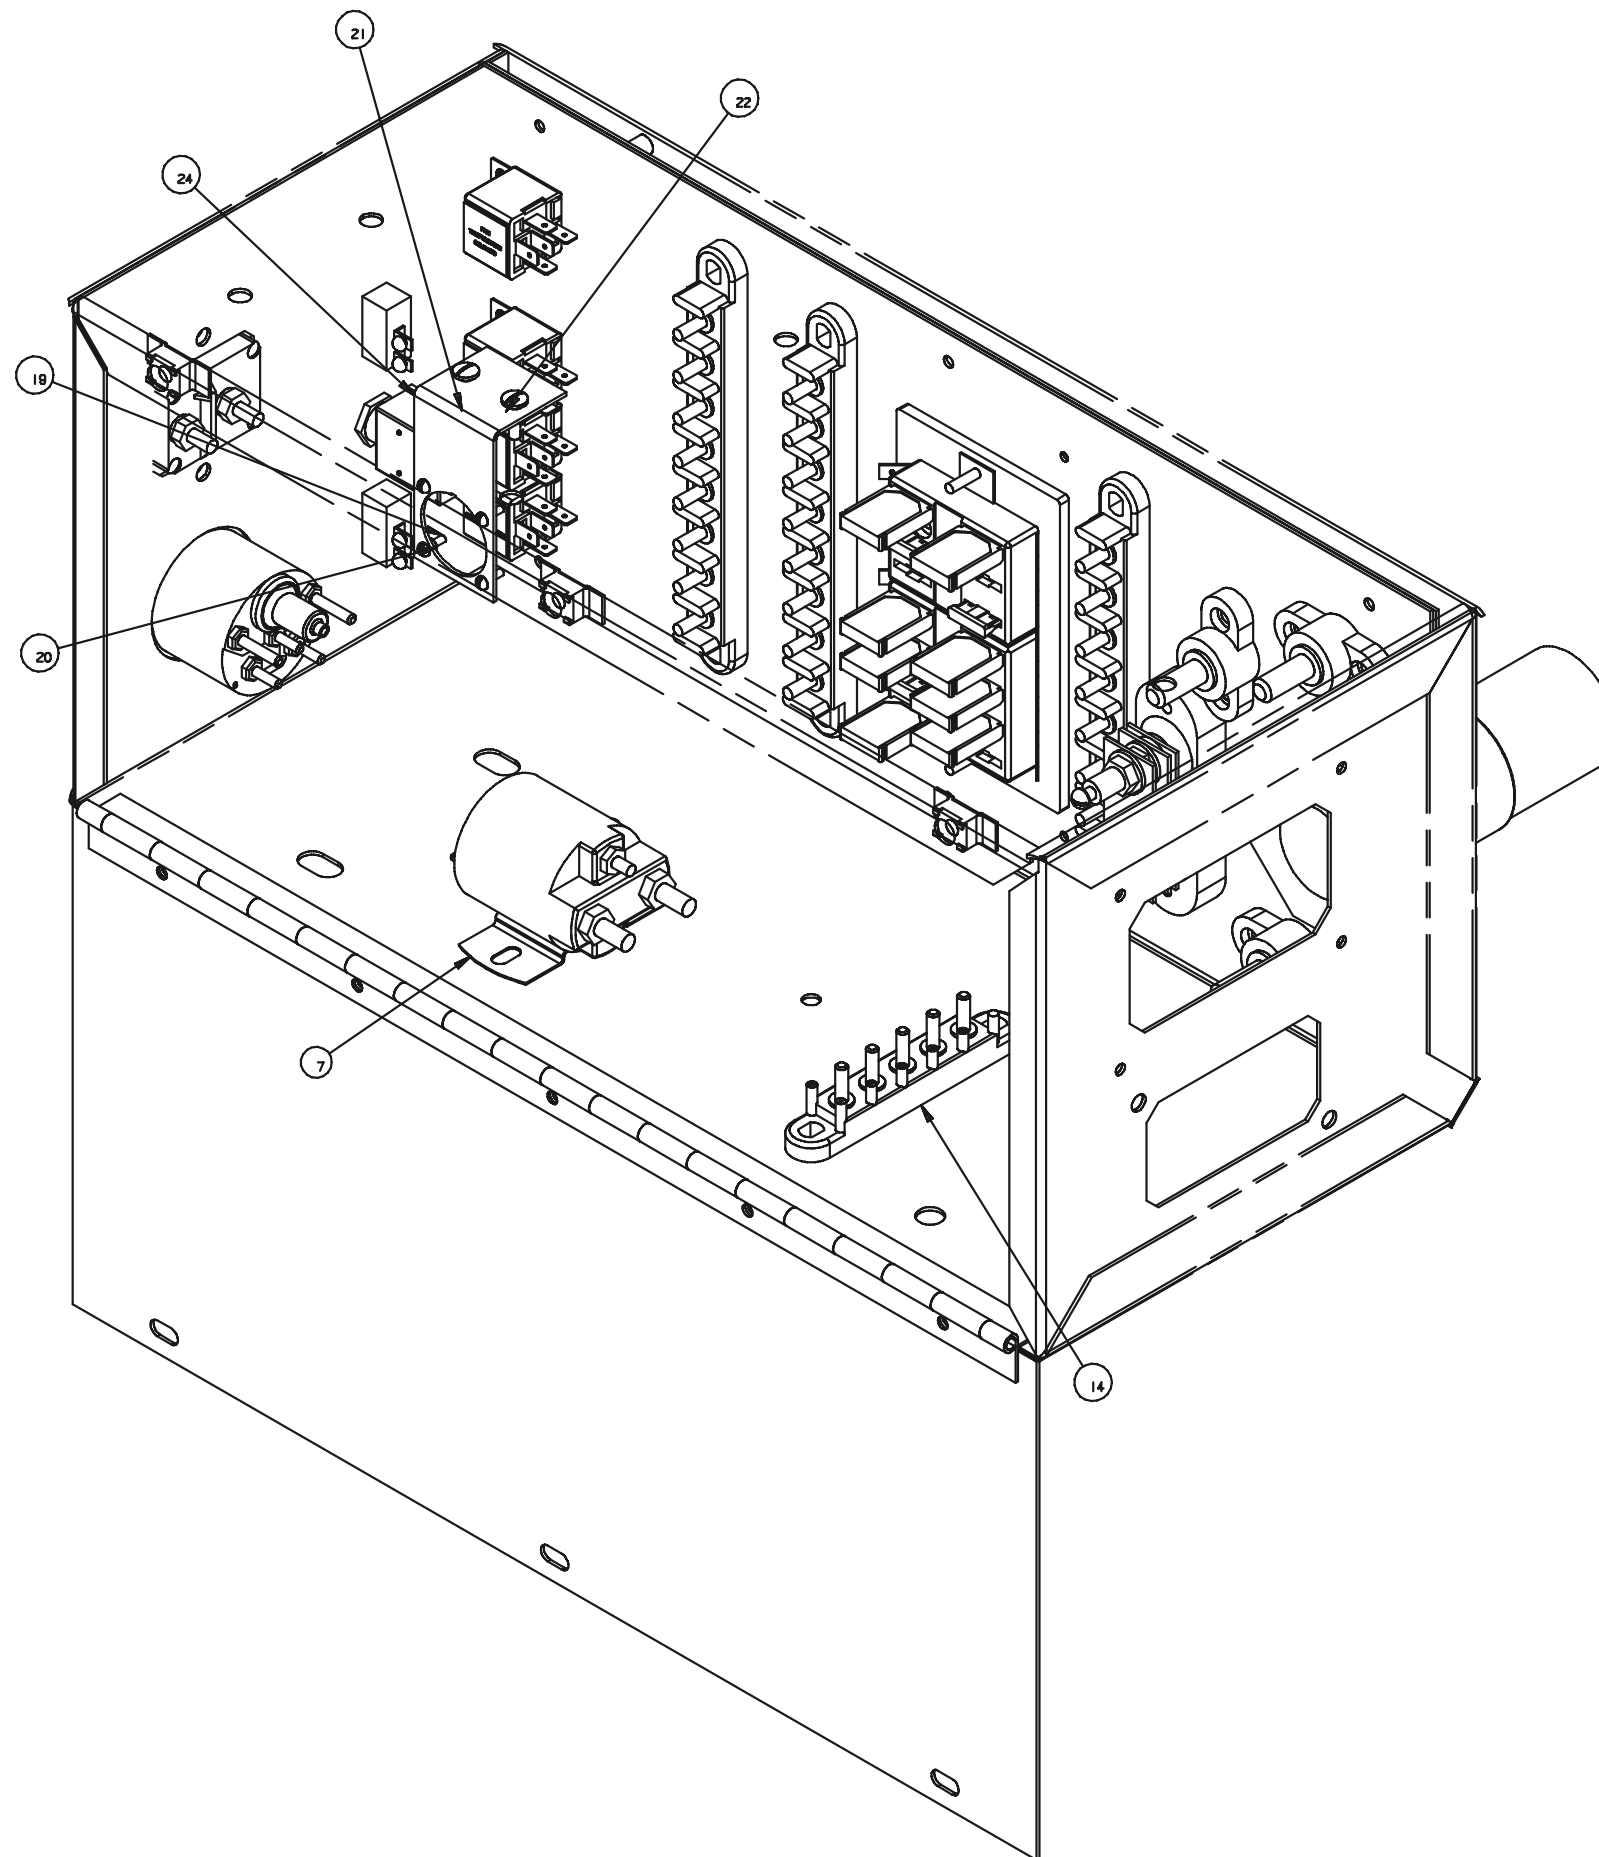


INSTALLATION OF DATA-LINK BRACKET
 GRID HTR. MTG. BRACKET
 INSTALLATION, SEE DWG.
 62202301.

Sheet 2 of 3

	62202638 G
ELECT. DIAGRAM MOD. BOX COMPON. MTG. 98 CUMMINS ISC (CHASSIS)	
Effective Date: 06/15/98	

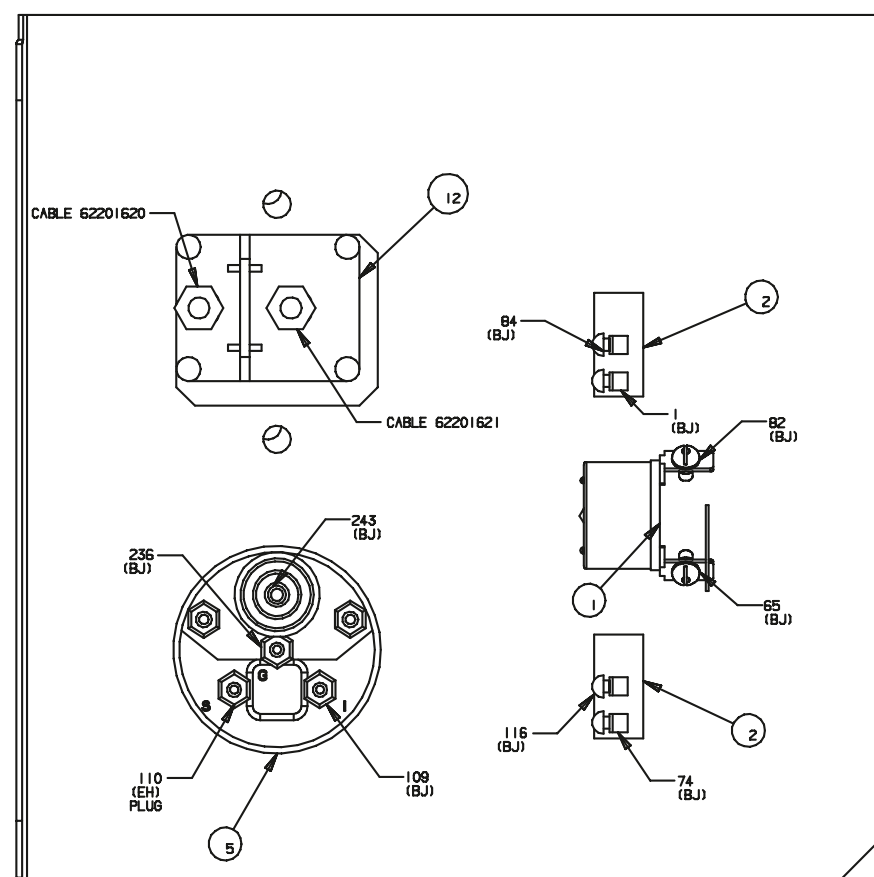

REAR BOX: BACK PANEL
VIEWED FROM INSIDE BOX

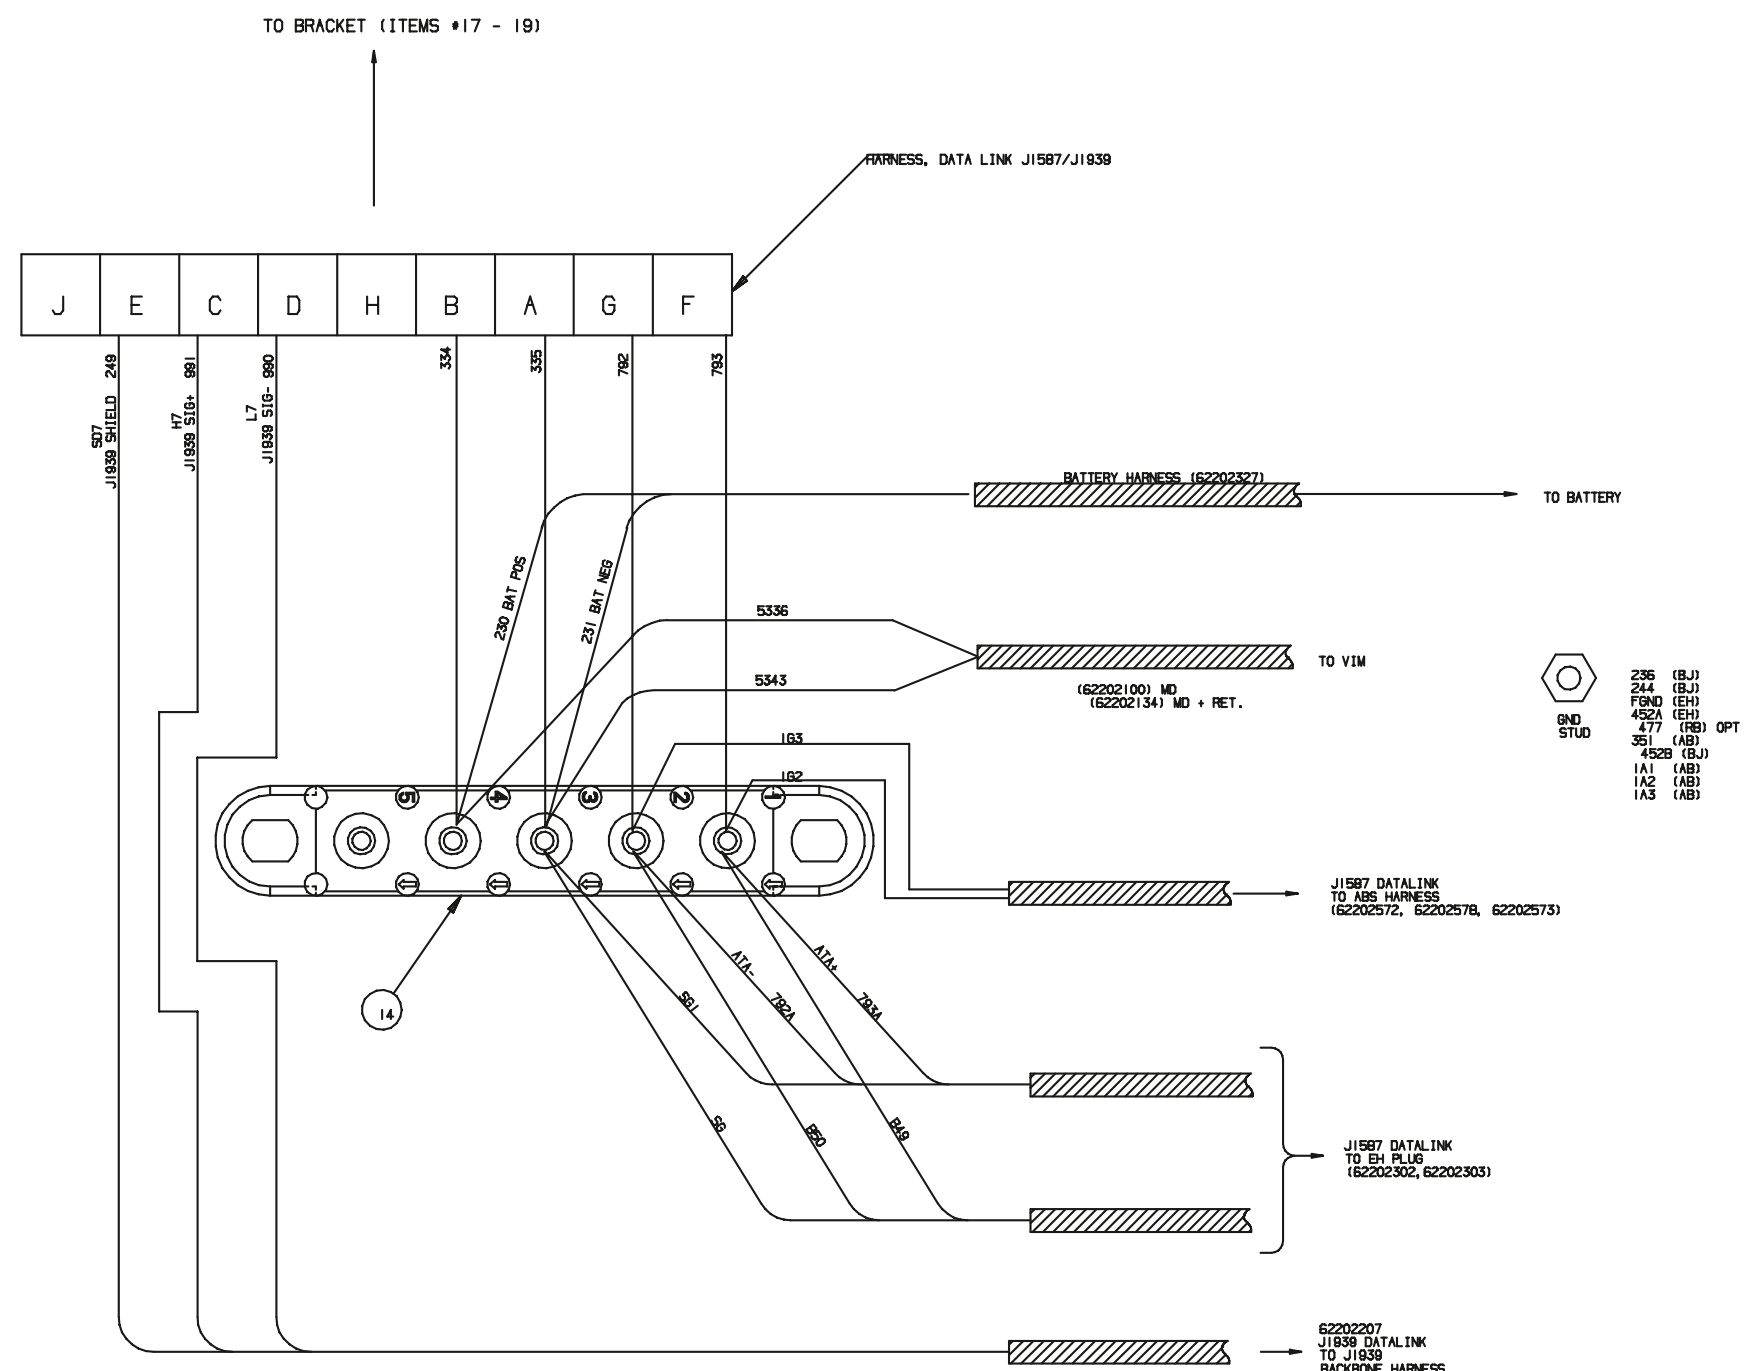

ON BOTTOM OF BOX

Thomas BUILT BUSES	62202638 G
ELECT. DIAGRAM MOD. BOX COMPON. MTG. 98 CUMMINS ISC (CHASSIS)	
Effective Date: 06/15/98	

CIR	GA	COLOR	DESCRIPTION
1	12	BLACK	LEFT REAR WARNING LIGHT (RED)
2	12	BROWN	RIGHT FRONT WARNING LIGHT (RED)
3	12	ORANGE	RIGHT REAR WARNING LIGHT (RED)
			RIGHT RED WARNING LIGHT FEED
4	12	YELLOW	LEFT FRONT WARNING LIGHT (RED)
5	12	BLUE	LEFT REAR WARNING LIGHT (AMBER)
			LEFT AMBER WARNING LIGHT FEED
6	12	WHITE	RIGHT FRONT WARNING LIGHT (AMBER)
			FRONT AMBER WARNING LIGHT FEED
7	12	RED	RIGHT REAR WARNING LIGHT (AMBER)
			RIGHT AMBER WARNING LIGHT FEED
8	12	GREEN	LEFT FRONT WARNING LIGHT (AMBER)
9	16	DARK GREEN	RIGHT TURN SIGNAL (REAR & FRONT SIDE)
10	16	YELLOW	LEFT TURN SIGNAL (REAR & FRONT SIDE)
11	16	BROWN	RIGHT TAIL LIGHT
12	16	BROWN/WHITE	LEFT TAIL LIGHT
13	16	BLUE	RIGHT BACK-UP LIGHT
14	16	BLUE/WHITE	LEFT BACK-UP LIGHT
15	16	RED	RIGHT BRAKE LIGHT
16	16	RED/WHITE	LEFT BRAKE LIGHT
17	16	WHITE	MARKER LIGHTS (REAR)
18	16	WHITE/BLACK	PANEL LIGHTS
19	12	BLACK	INTERIOR LIGHTS
20	16	WHITE/BLACK	INTERIOR LIGHTS
21	12	BLACK	INTERIOR LIGHTS
22	16	BLUE	POWER VENT OR EXTRA
23	16	RED/BLACK	POWER VENT OR EXTRA
24	16	GREEN/WHITE	POWER VENT OR EXTRA
25	16	GREEN/BLACK	POWER VENT OR EXTRA
26	16	WHITE/BLACK	REAR DESTINATION SIGN
27	16	WHITE/BLACK	FRONT DESTINATION SIGN
28	16	YELLOW	RADIO POWER (BATT.)
29	16	DARK BLUE	REAR DOOR BUZZER (GND)
30	16	LIGHT BLUE	PULL CORD OR PUSH OUT SASH (GND)
31	16	WHITE/BLACK	SIDE DOOR BUZZER (GND)
32	16	YELLOW	VANDALOCK (GND)
33	16	WHITE	BUZZER FEED (REAR OR SIDE DOOR)
34	14	RED	FAN (OVERHEAD) OR EXTRA
35	14	WHITE	FAN (OVERHEAD) OR EXTRA
36	14	YELLOW	FAN (OVERHEAD) OR EXTRA
37	14	GREEN	FAN (OVERHEAD) OR EXTRA
38	16	PURPLE/BLACK	STROBE LIGHT OR EXTRA
39	16	PURPLE/WHITE	EXTRA
40	16	WHITE	MARKER LIGHTS (FRONT)
41	12	GREEN/WHITE	DEFROST LEFT (LOW) - ER
42	12	GREEN/BLACK	DEFROST LEFT (HIGH) - ER
43	12	RED/WHITE	DEFROST RIGHT (LOW) - ER
44	12	RED/BLACK	DEFROST RIGHT (HIGH) - ER
45	14	BLUE	STEPWELL HEAT (LOW) - ER
46	14	BLUE/WHITE	STEPWELL HEAT (HIGH) - ER
47	14	YELLOW	DRIVER'S HEAT (LOW) - ER
48	14	YELLOW/WHITE	DRIVER'S HEAT (HIGH) - ER
49	16	YELLOW	FRONT LEFT TURN SIGNAL (ER ONLY)
50	16	DK. GREEN	FRONT RIGHT TURN SIGNAL (ER ONLY)

CIR	GA	COLOR	DESCRIPTION
51	16	BROWN/WHITE	PARKING LIGHTS
52	16	BLUE/WHITE	STEPWELL LIGHT (DOOR SWITCH)
52A	16	BLUE/WHITE	STEPWELL LIGHT (DOOR SWITCH)
52B	16	BLUE/WHITE	STEPWELL LIGHT (DOOR SWITCH)
53	16	BLUE	WARNING LIGHT DOOR SWITCH TO GROUND
54	16	PURPLE	EXTRA
55	16	YELLOW	WARNING LIGHT PILOT LIGHT (AMBER) - 5
56	16	RED	WARNING LIGHT & STOP LIGHT PILOT LIGHT (RED) - 3
			WARNING LIGHT & STOP LIGHT PILOT LIGHT (RED) - 1
57	16	RED	WARNING LIGHT PILOT LIGHT (AMBER) - 7
58	16	YELLOW	DOOR SW SIGNAL (GROUND) TO WARN LT FLASHER
59	14	RED/BLACK	LEFT WINDSHIELD WIPER (HIGH)
60	14	RED/WHITE	RIGHT WINDSHIELD WIPER (HIGH)
61	14	RED	LEFT WINDSHIELD WIPER (LOW)
62	14	GREEN/WHITE	RIGHT WINDSHIELD WIPER (LOW)
63	14	GREEN	LEFT WINDSHIELD WIPER (PARK)
64	14	BLACK/WHITE	RIGHT WINDSHIELD WIPER (PARK)
65	14	BLACK	EXTRA
66	14	BROWN	WINDSHIELD WASHER
67	14	PURPLE/BLACK	COLD IGNITION (ACC)
68	14	BLACK/WHITE	FAN (NEW JERSEY DOOR SWITCH)
69	14	YELLOW/BLACK	PANEL LIGHTS
70	14	WHITE/BLACK	BOOSTER PUMP
71	14	BLACK	WINDSHIELD WIPER SWITCH LIGHT
72	16	BLACK/WHITE	FAN
73	14	BROWN/WHITE	STEPLIGHT
74	16	BLACK	GROUND
75	8	GREEN	CHASSIS TO BODY FEED
76	6	RED	FEED (WARNING LIGHTS)
77	10	RED	MASTER SWITCH TERMINAL ON WELDON
78	14	BLACK	FLASHER TO MASTER SWITCH
			MASTER SWITCH TO START SWITCH
79	14	BLACK	START SWITCH TO START SWITCH (+12V)
80	14	GREEN	TERMINAL ON FLASHER
			COLD IGNITION
81	14	BLUE	STOP ARM SWITCH TO STOP ARM SOLENOID
82	14	BROWN	TERMINAL ON FLASHER
83	14	BROWN/WHITE	STOP ARM SWITCH TO FUSE PANEL
84	12	WHITE	MASTER SWITCH TO FUSE PANEL
85	14	BLACK	REAR UNDERSEAT HEATER (HIGH)
86	14	RED	REAR UNDERSEAT HEATER (LOW)
87	14	GREEN	REAR UNDERSEAT HEATER (HIGH)
88	14	WHITE	REAR UNDERSEAT HEATER (LOW)
89	14	BLACK	FRONT UNDERSEAT HEATER (HIGH)
90	14	RED	FRONT UNDERSEAT HEATER (LOW)
91	14	GREEN	FRONT UNDERSEAT HEATER (HIGH)
92	14	WHITE	FRONT UNDERSEAT HEATER (LOW)
93	16	YELLOW	COWL MOUNTED LEFT TURN SIGNAL LIGHT
94	16	BROWN	STEPLIGHT FEED (OPTION 329)
95	16	RED	BRAKE PILOT LIGHT
96	16	BLACK	JUMPER FOR 358 - (3, 4, 5, & 6) WITH FLASHER
97	16	BLACK	JUMPER TO START SWITCH
98	16	RED	ELECTRIC STOP SIGN SWITCH
99	16	BROWN	WINDSHIELD WIPER FEED
100	16	YELLOW	HEATER FEED

CIR	GA	COLOR	DESCRIPTION
101	16	GREEN	DOOR SWITCH TO GROUND
102	16	RED	WINDSHIELD WASHER FEED
103	14	GREEN	DIMMER SWITCH TO CLEARANCE LIGHT SWITCH
104	14	WHITE	DIMMER SWITCH (COMMON) TO CLEARANCE LIGHTS
105	14	RED	DIMMER SWITCH TO ELECTRONIC FLASHER
106	14	RED	ROOF MOUNTED AIR CONDITIONER
107	14	WHITE	ROOF MOUNTED AIR CONDITIONER
108	14	GREEN	ROOF MOUNTED AIR CONDITIONER
109	18	VIOLET/BLACK	RIGHT REAR SPEAKER (-)
110	18	VIOLET	RIGHT REAR SPEAKER (+)
111	18	GREEN	LEFT REAR SPEAKER (+)
112	18	GREEN/BLACK	LEFT REAR SPEAKER (-)
113	16	DARK BLUE	ESCAPE HATCH BUZZER
114	14	RED	RIGHT FRONT HEATER (LOW) - CONV.
115	14	RED/BLACK	RIGHT FRONT HEATER (HIGH) - CONV.
116	14	YELLOW	RIGHT FRONT HEATER (LOW) - CONV.
117	14	YELLOW/BLACK	RIGHT FRONT HEATER (HIGH) - CONV.
118	14	GREEN	RIGHT FRONT DEFROSTER (LOW) - CONV.
119	14	GREEN/BLACK	RIGHT FRONT DEFROSTER (HIGH) - CONV.
120	14	RED	STEPWELL DEFROSTER (LOW) - CONV.
121	14	RED/BLACK	STEPWELL DEFROSTER (HIGH) - CONV.
122	14	GREEN	STEPWELL HEATER (LOW) - CONV.
123	14	GREEN/BLACK	STEPWELL HEATER (HIGH) - CONV.
124	12	BLACK	FUSE PANEL FEED
125	16	GREEN	RIGHT FRONT HEATER (LOW) - MMFC
126	16	GREEN/BLACK	RIGHT FRONT HEATER (HIGH) - MMFC
127	16	RED	RIGHT FRONT HEATER (LOW) - MMFC
128	16	RED/BLACK	RIGHT FRONT HEATER (HIGH) - MMFC
129	16	YELLOW	RIGHT FRONT DEFROSTER (LOW) - MMFC
130	16	YELLOW/BLACK	RIGHT FRONT DEFROSTER (HIGH) - MMFC
131	16	BLUE	RIGHT FRONT DEFROSTER (LOW) - MMFC
132	16	BLUE/BLACK	RIGHT FRONT DEFROSTER (HIGH) - MMFC
133	16	PURPLE/WHITE	ROLL SIGN
134	16	PURPLE	ROLL SIGN
135	16	PURPLE	ROLL SIGN LIGHT
136	16	GREEN/BLACK	BODE DOOR (FRONT)
137	16	GREEN/WHITE	BODE DOOR (FRONT)
138	14	BROWN	EVAPORATOR COOLER
139	14	BROWN/WHITE	EVAPORATOR COOLER
140	14	GREEN	CHIME
141	14	GREEN/WHITE	REAR WINDOW WINDSHIELD WIPER
142	14	WHITE/BLACK	BODE DOOR (SIDE)
143	14	RED	BODE DOOR (SIDE)
144	14	ORANGE	BODE DOOR (SIDE)
145	14	GREEN	BODE DOOR (SIDE)
146	16	GREEN	SIGN OR CLEARANCE LIGHT
147	16	WHITE	SIGN OR CLEARANCE LIGHT
148	16	BLUE	FAN - CONV.
149	14	BLACK	RELAY TO FUSE PANEL TO FLASHER MOTOR
150	16	RED	FREQ. CONVERTER TO COLD IGNITION TO TACHOGRAPH

CIR	GA	COLOR	DESCRIPTION
151	16	WHITE	FREQ. CONVERTER TO SPEEDOMETER
152	16	BLUE	FREQ. CONVERTER TO SPEEDOMETER
153	16	BLACK	TACHOGRAPH TO HOT FEED (BATTERY)
154	16	GRAY	TACHOGRAPH TO HEADLIGHT SWITCH
155	14	BLACK	RELAY TO 358 HARNESS
156	16	YELLOW	HI-BEAM HEADLIGHT
157	16	YELLOW/BLACK	LO-BEAM HEADLIGHT
158	16	WHITE	HEADLIGHT GROUND
159	16	WHITE/BLACK	TURN SIGNAL LIGHT GROUND
160	14	BLACK	WARNING LIGHT MONITOR FEED (RED) - 1
161	14		
162	14	ORANGE	WARNING LIGHT MONITOR FEED (RED) - 3
163	14		
164	14	BLUE	WARNING LIGHT MONITOR FEED (AMBER) - 5
165	14		
166	14	RED	WARNING LIGHT MONITOR FEED (AMBER) - 7
167	14		
168	14	BROWN	TAIL LIGHT FEED
169	16	BROWN/BLACK	TAIL LIGHT (CHASSIS TO TAIL LIGHT RELAY)
170	14	BLUE	BACK-UP LIGHT FEED
171	14		
172	14	RED	BRAKE LIGHT FEED
173	14		
174	14	YELLOW	LEFT TURN SIGNAL FEED
175	14	DARK GREEN	RIGHT TURN SIGNAL FEED
176	16	BLACK	DORAN FEED
177	16	WHITE	DORAN GROUND
178	14	BLACK	REMOTE CONTROL VENT SPEED CONTROL SW. (GND)
179	14	WHITE	REMOTE CONTROL VENT DIRECTION SWITCH
180	18	GREEN	REMOTE CONTROL VENT INDICATOR LIGHT
181	18	WHITE	REMOTE CONTROL VENT GROUND
182	18	RED	REMOTE CONTROL VENT MOTOR CONTROL SW.
183	18	ORANGE	REMOTE CONTROL VENT MOTOR CONTROL SW.
184	18	BROWN	REMOTE CONTROL VENT MOTOR CONTROL SW.
185	18	BLACK	REMOTE CONTROL VENT MOTOR CONTROL SW.
186	14	RED	T2 A.C. UNIT DRIVER'S SWITCH (8)
187	14	YELLOW	T2 A.C. UNIT HIGH - LOW SWITCH (8A)
188	14	ORANGE	T2 A.C. UNIT AUTO SWITCH (14)
189	14	GREEN/BLACK	T2 A.C. UNIT AUTO SWITCH (14A)
190	14	GREEN/WHITE	T2 A.C. UNIT AUTO SWITCH (10A)
191	14	GREEN	T2 A.C. UNIT AUTO SWITCH (10)
192	14	BLUE	T2 A.C. UNIT DRIVER'S ON LIGHT (36D)
193	14	BLUE/BLACK	T2 A.C. UNIT DRIVER'S ON LIGHT (CH)
194	14	BLUE/WHITE	T2 A.C. UNIT ON-OFF SWITCH (8AA)
195	14	BLACK	SWITCH TO *9 TERMINAL ON FLASHER
196	14	BLACK	SWITCH TO RELAY
197	14	GREEN	FEED TO SWITCH
198	14	YELLOW	PILOT LIGHT (AMBER) TO GROUND
199	14	GREEN	AMBER LIGHT SWITCH TO *11 TERMINAL ON FLASHER
200	16	YELLOW	PILOT LIGHT (AMBER) TO *6 TERMINAL ON FLASHER

CIR	GA	COLOR	DESCRIPTION
201	16	RED	PILOT LIGHT (RED) TO *1 TERMINAL ON FLASHER
202	16	WHITE	STOP ARM SWITCH TO RELAY (86)
203	16	WHITE	RELAY (86) TO RELAY (87)
204	14	RED	STOP ARM SWITCH TO RELAY (30)
205	14	RED	RELAY (30) TO *3 TERMINAL ON FLASHER
206	14	BLACK	RELAY GROUND
207	14	BLACK	PILOT LIGHT RELAY TO MASTER SWITCH ON FLASHER - MARYLAND
208	16	RED	PILOT LIGHT (RED) TO GROUND
209	16	RED	JUMPER FOR PILOT LIGHT
210	16	GREEN	GROUND JUMPER
211	10	RED	FUSE PANEL TO *6 TERMINAL ON FLASHER
212	10	BLUE	FUSE PANEL TO *12 TERMINAL ON FLASHER
213	10	ORANGE	FUSE PANEL TO *1 TERMINAL ON FLASHER
214	10	BLACK	FUSE PANEL TO *7 TERMINAL ON FLASHER
215	14	BLACK	LEFT REAR WARNING LIGHT (RED) TO MONITOR
216	14	BROWN	RIGHT FRONT WARNING LIGHT (RED) TO MONITOR
217	14	ORANGE	RIGHT REAR WARNING LIGHT (RED) TO MONITOR
218	14	YELLOW	LEFT FRONT WARNING LIGHT (RED) TO MONITOR
219	14	BLUE	LEFT REAR WARNING LIGHT (AMBER) TO MONITOR
220	14	WHITE	RIGHT FRONT WARNING LIGHT (AMBER) TO MONITOR
221	14	RED	RIGHT REAR WARNING LIGHT (AMBER) TO MONITOR
222	14	GREEN	LEFT FRONT WARNING LIGHT (AMBER) TO MONITOR
223	14	RED	FEED TO OVERRIDE SWITCH
224	14	WHITE	OVERRIDE SWITCH TO *3 TERMINAL ON FLASHER
225	16	RED	START SWITCH PILOT LIGHT TO *12 TERMINAL ON FLASHER
226	16	WHITE	PILOT LIGHT (RED) TO *7 TERMINAL ON FLASHER
227	14	BLUE	LIFTS, MEMORY RADIO, BUZZER, SIDE LIGHTS & A/C
228	14	BLACK	A.C. & FANS (BONDED)
229	14	WHITE	A.C. & FANS (BONDED)
230	18	ORANGE	EXTERNAL HORN(+)
231	18	WHITE/BLACK	EXTERNAL HORN (-)
232	10	YELLOW	ELECTRICAL STEP
233	14	BLACK	A.C. & CHIME
234	8	RED	A.C. TO EVAPORATOR GROUND
235	14	BLACK	EVAPORATOR RELAY TO PRESSURE SWITCH
236	16	RED	A.C. SWITCH TO MAIN RELAY
237	16	BLUE	COLD SIDE OF FAN HI - LO SWITCH TO FAN RELAY LS EVAPORATOR
238	14	GREEN	COLD SIDE THERMOSTAT TO R.H. EVAPORATOR FREEZE SWITCH
239	14	BLUE	14 AMP FEEDER BREAKER (FIREWALL) TO HOT SIDE THERMOSTAT
240	16	YELLOW	MAIN SWITCH TO ENGINE SPEED SOLENOID (CARB)
241	14	BLACK	HI-LO PRESSURE SWITCH (CONDENSOR) TO COMPRESSOR RELAY (FIREWALL)
242	8	BLUE	MAIN RELAY (FIREWALL) TO HI-LO RELAY "BATT" LS EVAPORATOR
243	8	BLUE	HI-LO RELAY "BATT" TO CONDENSOR FANS
244	8	BLUE	HI-LO RELAY "BATT" TO LO SPEED FANS RS EVAPORATOR
245	8	BLACK	HI-LO RELAY "COLD" TO HI SPEED FANS RS EVAPORATOR
246	14	GREEN	FREEZE L.S. EVAPORATOR TO FREEZE SWITCH SWITCH RS EVAPORATOR
247	14	WHITE	FREEZE SWITCH L.S. EVAPORATOR TO HI-LO PRESSURE SW. (CONDENSOR)
248	16	RED	14 AMP BREAKER, SW. CABINET (COLD SIDE IGN. RELAY) TO A.C. SW. (DASH)
249	16	BLUE	COLD SIDE CONTROL RELAY TO "BATT" SIDE OF 14 AMP BREAKER
250	16	WHITE	AUX. SIDE OF 14 AMP BREAKER TO "BATT" SIDE CLUTCH RELAY

CIR	GA	COLOR	DESCRIPTION
251	16	WHITE	COLD SIDE CLUTCH RELAY TO COMPRESSOR CLUTCH
252	14	YELLOW	GROUND JUMPER FOR ENGINE SPEED SOLENOID
253	16	BLUE	COLD SIDE OF THERMOSTAT TO FEED SIDE FAN HIGH-LOW SWITCH
254	10	BLACK	SWAMP COOLER
255	14	WHITE	WELDON STROBE LIGHT SYSTEM FEED
256	14	BLACK	WELDON STROBE LIGHT SYSTEM GROUND
257	16	RED	STROBE LIGHT DOOR SWITCH FEED
258	16	BLACK	STROBE LIGHT DOOR SWITCH COMMON
259	16	WHITE	STROBE LIGHT DOOR SWITCH NEGATIVE
260	16	WHITE	STROBE LIGHT FOOT SWITCH
261	16	BLACK	STROBE LIGHT FOOT SWITCH
262	14	RED	CONTROL TO POWER SUPPLY (FEED)
263	14	BLACK	CONTROL TO POWER SUPPLY (COMMON)
264	16	WHITE	CONTROL TO POWER SUPPLY (NEGATIVE)
265	16	ORANGE	CONTROL TO POWER SUPPLY (RED LIGHTS)
266	16	GREEN	CONTROL TO POWER SUPPLY (AMBER LIGHTS)
267	14	GREEN	RELAY (1) TO REMOTE REGULATOR (+)
268	14	RED	RELAY (2) TO ALTERNATOR (+)
269	14	BROWN	RELAY (3) TO IGNITION SWITCH
270	14	BLUE	REMOTE REGULATOR (F) TO ALTERNATOR (F)
271	14	BLACK	REMOTE REGULATOR (-) TO ALTERNATOR (-)
272	14	GREEN	REMOTE REGULATOR (+) TO ALTERNATOR (F)
273	14	WHITE	TIME DELAY RELAY (2) TO GREEN READY PILOT LIGHT
274	14	BROWN	TIME DELAY RELAY (8) TO WAVE SWITCHES
275	14	GREEN	WAVE SWITCHES TO TIME DELAY RELAY (7)
276	14	YELLOW	RELAY (85) TO EMERGENCY RELEASE PRESSURE SWITCH
277	16	RED	ENGINE COMP LT. SW. TO ENGINE COMP LIGHTS
278	16	RED	CON 6, PIN 1, FRONT DOOR *1 PILOT
279	16	BLUE	CON 6, PIN 2, REAR DOOR *2 PILOT
280	16	BLACK	CON 6, PIN 3, SPARE
281	16	RED/WHITE	CON 6, PIN 4, FRONT & REAR DOOR PILOTS
282	16	GREEN	CON 6, PIN 5, PASSENGER STOP LAMP
283	16	RED/BLACK	CON 6, PIN 6, A/C FROM A/C POWER SWITCH
284	16	BROWN	CON 6, PIN 7, DEST. SIGN (FRONT) SWITCH
285	16	YELLOW	CON 6, PIN 8, DEST. SIGN (SIDE) SWITCH
286	16	PURPLE	CON 6, PIN 9, FOG LAMP SWITCH
287	16	ORANGE	CON 6, PIN 10, EMERGENCY SIDE EXIT SWITCH
288	16	WHITE	CON 6, PIN 11, GROUND (MAIN IN)
289	16	YELLOW/BLACK	CON 6, PIN 12, GROUND (MAIN IN)
290	16	BROWN/WHITE	CON 6, PIN 13, SPARE
291	16	BLACK/WHITE	CON 6, PIN 14, SPARE
292	16	ORANGE/BLACK	CON 6, PIN 15, PASSENGER STOP LAMP
293	16	GREEN/WHITE	CON 6, PIN 16, SPARE
294	14	RED	CON 7, PIN 1, +12V POWER (DRIVERS DOME)
295	16	GREEN	CON 7, PIN 2, +12V LIGHT DIMMER IN (TB7)
296	14	RED/WHITE	CON 7, PIN 4, +12V POWER (INTERIOR LIGHT)
297	16	BROWN	CON 7, PIN 5, GROUND LIGHT DIMMER IN (TB2)
298	14	RED/BLACK	CON 7, PIN 7, +12V POWER (INTERIOR LIGHT)
299	14	ORANGE	CON 7, PIN 8, SPARE
300	14	WHITE/BLACK	CON 8, PIN 1, MARKER LIGHT SWITCH


52001068 H

CHART - CIRCUIT,
ELECTRICAL (BODY)

CIR	GA	COLOR	DESCRIPTION
301	14	BLACK	CON *8, PIN 1, MARKER LIGHT SWITCH
302	14	BLACK/WHITE	CON *8, PIN 4, LIGHT DIMMER GROUND (TB5)
303	14	RED	CON *8, PIN 6, LIGHT DIMMER +12V (TB7)
304	14	RED/WHITE	CON *8, PIN 7, DOOR POWER (FEED +12 V.)
305	14	BLUE	CON *8, PIN 8, DOOR POWER (FROM SWITCH)
306	14	BROWN	CON *8, PIN 9, SPARE
307	14	BROWN/WHITE	CON *8, PIN 10, FRONT DESTINATION SIGN (FEED + 12V)
308	14	BLUE/WHITE	CON *8, PIN 11, FRONT DESTINATION SIGN (FROM SWITCH)
309	14	PURPLE	CON *8, PIN 12, SPARE
310	14	GREEN	CON *8, PIN 13, SPARE
311	14	GREEN/WHITE	CON *8, PIN 14, T2 FAN SWITCH (LOW)
312	14	ORANGE	CON *8, PIN 15, T2 FAN SWITCH (POWER IN)
313	14	YELLOW	CON *8, PIN 16, BOOSTER HEAT PUMP SWITCH (+12V)
314	14	YELLOW/WHITE	CON *8, PIN 17, DEFROST MIRROR #1 (FEED +12V)
315	14	GREEN/BLACK	CON *8, PIN 18, DEFROST MIRROR #1 (FROM SWITCH)
316	14	BROWN/BLACK	CON *8, PIN 19, T2 FAN SWITCH (HIGH)
317	14	ORANGE/WHITE	CON *8, PIN 20, OVERHEAD FAN #1 (FEED +12V)
318	14	YELLOW/BLACK	CON *8, PIN 21, BOOSTER HEAT PUMP POWER OUT
319	14	BLUE/BLACK	CON *8, PIN 23, OVERHEAD FAN #2 SWITCH (FEED +12V)
320	14	YELLOW/BLACK	CON *9, PIN 1, STEPWELL HEATER (+12V)
321	14	WHITE	CON *9, PIN 5, DRIVER'S HEATER (+12V)
322	14	BROWN	CON *13, PIN 16, SPARE
323	14	YELLOW	CON *10, PIN 1, UNDERSEAT HEATER (+12V)
324	14	ORANGE	CON *10, PIN 2, UNDERSEAT HEATER (+12V)
325	14	YELLOW/BLACK	CON *13, PIN 11, SPARE
326	14	BROWN/BLACK	CON *11, PIN 1, LIGHT DIMMER (POWER IN)
327	14	ORANGE/BLACK	CON *11, PIN 2, REAR UNDERSEAT HEATER
328	14	RED	CON *11, PIN 4, LIGHT DIMMER GROUND
329	14	GREEN	CON *12, PIN 1, RIGHT SIDE DEFROSTER
330	14	WHITE	CON *12, PIN 2, LEFT SIDE DEFROSTER
331	14	RED/WHITE	CON *13, PIN 3, A/C CONTROL SWITCH FAN ONLY
332	14	RED/BLACK	CONN. *13, PIN 2, SPARE
333	14	BLUE	CONN. *13, PIN 4, LIGHT DIMMER POWER HEAT SWITCH (TB4)
334	14	BLUE/WHITE	CONN. *13, PIN 5, LIGHT DIMMER GROUND HEAT SWITCH (TB 2)
335	14	BLUE/BLACK	CON *13, PIN 6, LAMP DIMMER (+12 V. IN)
336	14	GREEN	CON *13, PIN 8, A/C CONTROL SWITCH PILOT LIGHT OUT
337	14	GREEN/WHITE	CON *13, PIN 9, A/C CONTROL SWITCH PILOT LIGHT (+12 V. IN)
338	14	GREEN/BLACK	CON *13, PIN 10, LAMP DIMMER GND (TB5)
339	14	BROWN	CON *13, PIN 12, T2 A/C POWER SWITCH PILOT LIGHT OUT
340	14	BROWN/WHITE	CON *13, PIN 13, T2 A/C POWER SWITCH (TO CONTROLS OUT)
341	14	BROWN/BLACK	CON *13, PIN 14, LAMP DIMMER LOAD OUT (TB 4)
342	14	YELLOW	CON *13, PIN 15, T2 A/C POWER SWITCH (+ 12 V IN)
343	16	BLUE	HEADLIGHT RELAY (87A) TO FOG LIGHTS
344	14	RED	DOOR POWER SWITCH TO LSI
345	14	BLUE	LS1 TO R5 RELAY (85)
346	14	BROWN	R4 RELAY (87) TO REAR DOOR OPEN MAG VALVE
347	14	ORANGE	R3 RELAY (87) TO EXIT DOOR UNLOCK SOLENOID
348	14	YELLOW	5 POSITION DOOR SWITCH DECK NO. 2 (B) R3 RELAY (85)
349	14	WHITE	CON *8, PIN 2, MARKER LT. SWITCH (REAR)
350	14	WHITE	CON *8, PIN 3, MARKER LT. SWITCH (FRNT)

CIR	GA	COLOR	DESCRIPTION
351	14	GREEN	CON *8, PIN 5, SPARE
352	14	YELLOW	CON *8, PIN 22, WINDSHIELD DEFROST FAN SWITCH #1 (LOW)
353	14	YELLOW/BLACK	CON *8, PIN 24, WINDSHIELD DEFROST FAN SWITCH #1 (HIGH)
354	14	ORANGE/BLACK	CON *8, PIN 25, WINDSHIELD DEFROST FAN SWITCH #2 (LOW)
355	14	RED/BLACK	CON *8, PIN 26, WINDSHIELD DEFROST FAN SWITCH #2 (HIGH)
356	14	BLACK	CON *13, PIN 7, A/C CONTROL SWITCH A/C/ & FAN)
357	16	PINK	SWITCH CABINET JUMPERS
358	16	ORANGE	SWITCH CABINET JUMPERS
359	1	BLACK	BATTERY (+) TO EXTERNAL JUMP START BUTTON
360	1	BLACK	BATTERY (-) TO EXTERNAL JUMP START BUTTON
361	14	BLACK	5 POSITION DOOR SWITCH DECK NO. 2 TO LS2
362	14	GREEN	LS2 TO R4 RELAY (85)
363	14	BLACK/WHITE	BOOSTER PUMP FEED
364	14	ORANGE	DRIVERS UNDERSEAT HEATER FEED
365	14	BROWN	LEFT SIDE DEFROSTER FEED
366	14	BROWN/WHITE	RIGHT SIDE DEFROSTER FEED
367	14	YELLOW	SIGN SWITCH FEED
368	14	YELLOW/BLACK	INTERIOR LIGHT FEED
369	14	BLACK	R5 RELAY (87) & R6 RELAY (87) TO BRAKE OVERRIDE SW
370	14	WHITE	R1 RELAY (85) TO MORSE SHIFTER (CIRC *87)
371	14	BLUE/WHITE	R2 RELAY (87) TO FRONT DOOR SOLENOID VALVE
372	14	BROWN/WHITE	5 POS DOOR SW DECK NO. 1 (B) TO R2 & R6 RELAYS
373	14	GREEN	GROUND FOR DOOR RELAYS (86)
374	16	YELLOW	START SW PT LIGHT TO STOP ARM RELAY (30)
375	16	BROWN	STOP ARM SWITCH TO STOP ARM RELAY (86)
376	4	RED	CNTRL PANEL JUNCT. BLK. #1 TO ALT #2
377	4	RED	CNTRL PANEL JUNCTION BLOCK #5 TO ALT #1
378	4	BLACK	CNTRL PANEL GROUND STUD TO ALT GND STUD
379	8	WHITE	CNTRL PANEL TERM ST #7 TO CB ON REAR PANEL
380	14	RED	CNTRL PANEL TERM ST #3 TO ALT #1
381	14	WHITE	CNTRL PANEL TERM ST #6 TO AIR SOLENOID
382	14	BLACK	CNTRL PANEL TERM ST #4 TO ALT #2
383	4	RED	EVAP PANEL JB #7 TO CONDENSOR PANEL GND
384	8	WHITE	EVAP PANEL JB #6 TO CONTROL PANEL JB #6
385	8	GREEN	EVAP PANEL JB #4 TO CONTROL PANEL JB #4
386	16	BLUE	STOP ARM SOLENOID
387	14	BROWN	LEFT WIPER FEED - VISTA
388	14	TAN	RIGHT WIPER FEED - VISTA
389	14	BROWN/WHITE	LEFT WIPER SWITCH TO LEFT WIPER
390	14	TAN/WHITE	RIGHT WIPER SWITCH TO RIGHT WIPER
391	16	WHITE/BLACK	BACK LIGHTED LABEL LIGHTS
392	12	BLACK/WHITE	INTERIOR LIGHTS
393	8	RED	CHASSIS RELAY TO BODY RELAY (RHD)
394	16	BLUE	DOOR SWITCH RELAY (87) TO GROUND
395	16	DK GREEN	COWL MOUNTED RIGHT TURN SIGNAL LIGHT
396	12	RED	WTHR PACK CON (POS B) TO POS TERM ON BATT
397	12	BROWN	WTHR PACK CON (POS A) TO NEG TERM ON BATT
398	12	RED	WTHR PACK CON (POS. A) TO 72 HR. POS 1 TIMER (RD) AMP CON POS 1 TO ON-OFF SW
399	12	BLACK	WTHR PACK CON (POS. B) TO ON-OFF SWITCH
400	14	YELLOW	WTHR PACK CON (POS. C) TO 72 HR. TIMER (YE) AMP CONN. POS. 2
401	14	GREEN	WEATHER PACK CONN. (POS. D) TO ON-OFF SWITCH INDICATOR LIGHT (+12V)
402	14	BLUE	WEATHER PACK CONN. (POS. E) TO ON-OFF SWITCH INDICATOR LIGHT (GND)
403	14	BROWN	WEATHER PACK CONN. (POS. F) TO 72 HR. TIMER (BR) AMP CON. POS 3
404	16	GREEN/WHITE	MASTER SW., OVERRIDE SW., START SW., GROUND JUMPER CHAIN
405	16	WHITE/BLACK	PILOT LT. RELAY TO DOOR SWITCH RELAY (30)
406	16	ORANGE/WHITE	PILOT LT. RELAY TO DOOR SWITCH RELAY (85)
407	14	BLACK	FOOTWARMER (HIGH)
408	14	WHITE	FOOTWARMER (LOW)
409	16	GREEN/WHITE	MASTER SW., OVERRIDE SW., START SW., GROUND JUMPER CHAIN

CIR	GA	COLOR	DESCRIPTION
410	16	WHITE/BLACK	PILOT LT. RELAY TO DOOR SWITCH RELAY (30)
411	16	ORANGE	PILOT LT. RELAY (COIL) TO DOOR SWITCH RELAY (85)
412	16	RED	MASTER SW. RELAY (86) TO START SW. (3)
413	16	RED	START SW. (3) TO STOP SIGN FLASHER
414	16	RED	STOP SIGN FLASHER TO STOP SIGN SOLENOID
415	16	WHITE	MASTER SW. TO START SW. RELAY (86) RELAY (86)
416	16	GREEN	MASTER SW. RELAY (86) TO START SW. (1)
417	16	GREEN	START SW. (1) TO START SW. RELAY (87a)
418	16	YELLOW	MASTER SW. RELAY (85) TO GND
419	16	YELLOW	START SW. RELAY (85) TO GND
420	16	GREEN	START SW. RELAY (30) TO START SW. TERM. ON FLASHER
421	16	BLUE	START SW. (5) TO GROUND
422	16	RED	START SW. (6) TO DOOR SW. TERM. ON FLASHER
423	16	BLACK	START SW. (2) TO MASTER SW.
424	16	BLACK	MASTER SW. TO MASTER SW. RELAY (87)
425	16	BLACK	MASTER SW. RELAY (30) TO MASTER SW. TERM ON FLASHER
426	14	BLACK	DOOR CONTROLLER (OPEN)
427	14	WHITE	DOOR CONTROLLER (CLOSE)
428	14	BLUE	ELECTRIC DOOR SWITCH FEED
429	14	DARK BLUE	ELECTRIC DOOR SWITCH GROUND
430	16	RED	DOOR AIR PRESS SWITCH TO DOOR RELAY (30)
431	16	WHITE	DOOR RELAY (30) TO DOOR RELAY (85) TO OVERRIDE RELAY (86) TO GROUND
432	16	BLUE	DOOR AIR PRESS. SWITCH TO DOOR RELAY (87)
433	16	BLUE	ACTIVATION SWITCH ("OVERRIDE" SWITCH) TO LATCH RELAY (GROUND SIGNAL)
433A	16	BLUE	LATCH RELAY GROUND SIGNAL TO WARNING LIGHT FLASHER DOOR TERM
434	14	BLACK	ELECTRIC VANDALOCK (FUSE TO KEYSWITCH)
435	14	WHITE	ELECTRIC VANDALOCK (KEYSWITCH TO MOTOR)
436	14	GREEN	ELECTRIC VANDALOCK (FUSE TO MOTOR)
437	16	RED	DOOR SWITCH ON FLASHER TO FAIL-SAFE SW.
438	16	GREEN	FAIL-SAFE SWITCH TO GROUND
439	16	YELLOW	OVERRIDE SWITCH TO OVERRIDE RELAY (87 AND 85) TO DOOR RELAY (86)
440	16	GREEN	OVERRIDE SWITCH TO OVERRIDE RELAY (30)
441	16	GREEN	NC AIR SWITCH TO LATCH RELAY (86) (MANUAL ACTIVATION ("OVERRIDE") SWITCH)
442	16	BLACK	OVERRIDE AIR PRESSURE SWITCH TO +12V (HOT) (MANUAL ACTIVATION SYS. POWER FEED)
443	16	BLUE	STOP SIGN (WALK GATE) TO CONTROLLER OR ACTIVATING SWITCH
444	16	WHITE	STOP SIGN (WALK GATE) TO GROUND
445	16	WHITE/BLACK	3 POSITION SWITCH (1) TO MASTER SWITCH TERMINAL OF FLASHER
446	16	WHITE/BLACK	MASTER SWITCH TERMINAL OF FLASHER TO START SWITCH TERMINAL OF FLASHER
447	16	GREEN	START SWITCH TERMINAL OF FLASHER TO DOOR SWITCH RELAY (87)
448	16	WHITE	RELAY (87) TO CHIME (STOP ARM OVERRIDE)FF
449	16	RED	RADIO ACCESSORY POWER
450	16	BLACK	CHIME RELAY (86) TO CHIME



52001068 H

CHART - CIRCUITS,
ELECTRIC (BODY)

CIR	GA	COLOR	DESCRIPTION	CIR	GA	COLOR	DESCRIPTION	CIR	GA	COLOR	DESCRIPTION
451	16	WHITE	RESET SWITCH TO SWITCH RELAY (86 & 87) TO CHIME RELAY (87)	501	16	WHITE	EMERGENCY EXIT PILOT LIGHT GROUND	547E	12	RED	SPLICE B TO SPLICE C
452	16	RED	RESET SWITCH TO SWITCH RELAY (30) TO CHIME RELAY (30)	502	16	YELLOW	BUZZER FEED	547F	14	RED	SPLICE C TO CONN. 1, PIN E
453	16	GREEN	RESET SWITCH TO FUSE PANEL (+12 V.)	503	12	WHITE	MARKER LIGHT SWITCH FEED	547G	14	RED	SPLICE C TO CONN. 1, PIN F
454	16	GREEN	RESET SWITCH TO CHIME RELAY (85)	504	16	RED	AIR HORN	548	14	ORANGE	FUSE PANEL (ACCY) TO CONN. 2, PIN 4
455	16	GREEN	RESET SWITCH TO CHIME	505	12	WHITE	REAR HEATER SWITCH FEED	549	12	BROWN	GROUND TO SPLICE D
456	16	BLUE	SWITCH RELAY (85) TO GROUND	506	12	WHITE	REAR HEATER SWITCH FEED	549A	14	BROWN	SPLICE D TO CONN. 2, PIN 5
457	16	DARK GREEN	RIGHT COWL MOUNTED TURN SIGNAL	507	16	WHITE	EMERGENCY EXIT PILOT LIGHT FEED	549B	12	BROWN	SPLICE D TO SPLICE E TO SPLICE F
458	16	ORANGE	STARTER INTERRUPT	508	16	WHITE	COMPARTMENT LIGHT SWITCH FEED	549C	14	BROWN	SPLICE E TO CONN. 1, PIN J
459	16	ORANGE/BLACK	STARTER INTERRUPT	509	14	RED	WARNING SYSTEM POWER FEED	549D	14	BROWN	SPLICE F TO CONN. 1, PIN G
460	10	RED	FUSE PANEL TO FLASHER MOTOR	509A	14	RED	POWER FEED TO FLASHER	549E	14	BROWN	SPLICE F TO CONN. 1, PIN H
461	10	BLUE	FUSE PANEL TO RELAY	509C	14	RED	POWER FEED TO LATCH RELAY (WARN SYS)	550	14	GREEN	CONN. 2 PIN 3 TO CONN. 1, PIN C
462	18	GRAY	RIGHT FRONT SPEAKER (+)	510	16	RED/BLACK	OVERRIDE SWITCH TO DOOR SWITCH	551	14	BLACK	CONN. 2 PIN 7 TO CONN. 1, PIN B
463	16	BLACK	RADIO GROUND	511	16	RED/GREEN	TERMINAL ON WARNING SYSTEM FLASHER LATCH RELAY COIL TO DE-LATCH RELAY N.C. TERM	552	16	WH/BK	PANEL LIGHTS TO CONN. 2, PIN 8
464	18	GRAY/BLACK	RIGHT FRONT SPEAKER (-)	512	16	WHITE	WARNING SYSTEM GROUND	553	14	WHITE (YELLOW)	HEATED MIRROR + 12V (FAN POWER)
465	18	WHITE	LEFT FRONT SPEAKER (+)	513	16	RED/BLACK	DOOR SWITCH TO DE-LATCH RELAY & DIODE	554	16	GREEN	HEATED MIRROR GROUND
466	18	WHITE/BLACK	LEFT FRONT SPEAKER (-)	514	16	GREEN/BLACK	RIGHT COWL MOUNTED WARNING LIGHT	555	16	BLUE	GROUND SIGNAL TO WARNING SYS FLASHER
467	---	-----	-----	515	16	YELLOW/BLACK	LEFT COWL MOUNTED WARNING LIGHT	556	---	-----	-----
468	16	ORANGE	L.S. HEATED MIRROR	516	16	RED	BODE SIDE EXIT DOOR SWITCHES	557	---	-----	-----
469	16	BLUE	R.S. HEATED MIRROR	517	16	WHITE	BODE SIDE EXIT DOOR SWITCHES	558	---	-----	-----
470	12	GREEN	PUSHER HEATER GROUND	518	16	GREEN	BODE SIDE EXIT DOOR SWITCHES	559	---	-----	-----
471	12	GREEN	F.C. HEATER GROUND, DEFROSTER	519	16	BLACK	BODE SIDE EXIT DOOR SWITCHES	560	---	-----	-----
472	12	GREEN	F.C. HEATER GROUND, STEP	520	16	WHITE	(SED) STEPWELL LIGHT (STANDARD)	561	---	-----	-----
473	12	RED	F.C. HEATER, DEFROSTER, HIGH	521	16	WHITE/BLUE	(SED) STEPWELL LIGHT (CONT STEPWELL ILLUM)	562	---	-----	-----
474	12	YELLOW	F.C. HEATER, STEP, HIGH	522	16	ORANGE	MIRAGE LIFT	563	---	-----	-----
475	14	BROWN	F.C. HEATER, DEFROSTER, LOW	523	14	RED	DUAL CHIME SYSTEM POWER	564	---	-----	-----
476	14	WHITE	F.C. HEATER, STEP, LOW	524	14	WHITE	DUAL CHIME SYSTEM GROUND	565	---	-----	-----
477	16	BLACK	HEATER PILOT LIGHT	525	16	YELLOW/WHITE	DUAL CHIME SYSTEM DOOR SIGNAL	566	---	-----	-----
478	16	GREEN	HEATER PILOT LIGHT GROUND	526	16	RED	DUAL CHIME SYSTEM CHIME SIGNAL (TO TIMER)	567	---	-----	-----
479	14	RED/BLACK	DEFROSTER HIGH CONTROL	527	16	YELLOW/WHITE	DUAL CHIME SYSTEM NON ADA STOP REQ SIG	568	---	-----	-----
480	14	YELLOW/WHITE	STEP HEAT HIGH CONTROL	528	16	YELLOW/BLACK	DUAL CHIME SYSTEM ADA STOP REQ SIG	569	---	-----	-----
481	16	BLACK	PANEL LIGHT JUMPER	529	16	BLUE	DUAL CHIME SYSTEM NON-ADA PILOT	570	---	-----	-----
482	16	GREEN	PANEL LIGHT GROUND JUMPER	530	14	RED	DUAL CHIME SYSTEM ADA PILOT	571	---	-----	-----
483	8	RED	JUMPER, SOLENOID-TO-HOT FUSE BLOCK	531	16	RED	DUAL CHIME SYSTEM LIFT DOOR SIGNAL	572	---	-----	-----
484	2	RED	JUMPER, CHASSIS SOLENOID-TO-TERM. POST	532	14	ORANGE	READING LIGHT POWER	573	---	-----	-----
485	4	RED	JUMPER, TERM. POST-TO-SOLENOIDS	533	14	BLACK	READING LIGHT GROUND	574	---	-----	-----
486	4	RED	JUMPER, SOLENOID COLD-TO-FUSE BLOCKS	534	16	WHITE	DOOR INHIBIT GROUND	575	18	RED	FROM SP1 (-) TO SP3 (+)
487	16	GREEN/BLACK	INTERMITTENT WIPER/S.C. HEADLIGHT INTERLOCK FEED	535	14	RED	DOOR INHIBIT POWER FEED	576	18	ORANGE	FROM SP2 (-) TO SP4 (+)
488	16	RED/BLACK	INTERMITTENT WIPER/S.C. HEADLIGHT INTERLOCK FEED	536	14	RED	T2 AC UNIT (AUTO)	577	18	BLUE	FROM SP5 (-) TO SP7 (+)
489	16	ORANGE/WHITE	ADDITIONAL SIDE DOOR BUZZER GROUND	537	14	YELLOW	T2 AC UNIT (COOL)	578	18	YELLOW	FROM SP6 (-) TO SP8 (+)
490	16	RED	REAR STOP SIGN FEED	538	14	ORANGE	T2 AC UNIT (HEAT)	579	2	RED	BRAUN LIFT 12 V BATT POWER
491	16	GREEN	REAR STOP SIGN SOLENOID	539	14	GREEN/BLACK	T2 AC UNIT (VENT)	580	12	RED	BRAUN LIFT TBB SOLN COIL PWER (COLD IGN)
492	16	BLACK	REAR STOP SIGN PILOT LIGHT	540	14	GREEN/WHITE	T2 AC UNIT (FAN SPEED)	581	12	BLACK	BRAUN LIFT TBB SOLN GND
493	16	WHITE	REAR STOP SIGN PILOT LIGHT	541	14	GREEN	T2 AC UNIT (DRIVER'S DEFROST)	582	---	-----	-----
494	16	BROWN	DOOR LIGHT FEED	542	14	BLUE	T2 AC UNIT (WATER TEMPERATURE)	583	---	-----	-----
495	12	BLACK	WARNING LIGHT MONITOR FEED (RED)	543	14	BLUE/BLACK	T2 AC UNIT (BOOST PUMP)	584	---	-----	-----
496	12	ORANGE	WARNING LIGHT MONITOR FEED (RED)	544	14	BLUE/WHITE	T2 AC UNIT AC FAILURE LIGHT	585	---	-----	-----
497	12	BLUE	WARNING LIGHT MONITOR FEED (AMBER)	545	14	ORANGE/WHITE	T2 AC UNIT COOLANT VALVE	586	---	-----	-----
498	12	RED	WARNING LIGHT MONITOR FEED (AMBER)	546	16	YELLOW	24 V ALT IGN WIRE	587	---	-----	-----
499	12	WHITE	BOOSTER PUMP SWITCH FEED	547	12	RED	FUSE PANEL (BATT.) TO SPLICE A	588	---	-----	-----
500	12	WHITE	INTERIOR LIGHT SWITCH FEED	547A	14	RED	SPLICE A TO CONN. 2, PIN 2	589	---	-----	-----
				547B	14	RED	SPLICE A TO CONN. 1, PIN A	590	---	-----	-----
				547C	12	RED	SPLICE A TO SPLICE B	591	---	-----	-----
				547D	14	RED	SPLICE B TO CONN. 2, PIN 6	592	---	-----	-----
								593	---	-----	-----
								594	---	-----	-----
								595	---	-----	-----
								596	---	-----	-----
								597	---	-----	-----
								598	---	-----	-----
								599	---	-----	-----

CIR	GA	COLOR	DESCRIPTION	CIR	GA	COLOR	DESCRIPTION	CIR	GA	COLOR	DESCRIPTION	
600	---	-----	-----	659	---	-----	-----	00	GND	16	BLACK	COMMON GROUND
601	---	-----	-----	660	---	-----	-----	00	SR	14	YELLOW	STOP REQUEST
602	---	-----	-----	661	---	-----	-----	00	SP1	16	YELLOW	TIMEDELAY TO FRT & REAR DOOR MOTORS
603	---	-----	-----	662	---	-----	-----	00	SP2	16	BLUE	T.B. TO TO DOOR VLV TO W/C
604	---	-----	-----	663	---	-----	-----	00	SP3	16	ORANGE	EXTRA WIRE
605	---	-----	-----	664	---	-----	-----	00	SP4	16	GREEN	EXTRA WIRE
606	---	-----	-----	665	---	-----	-----	00	SP5	16	BLUE	EXTRA WIRE
607	---	-----	-----	666	---	-----	-----	00	SP6	16	YELLOW	EXTRA WIRE
608	---	-----	-----	667	---	-----	-----	00	SP7	16	BLACK	EXTRA WIRE
609	---	-----	-----	668	---	-----	-----	00	010A	16	WHITE	SIDE EXIT DOOR
610	---	-----	-----	669	---	-----	-----	00	2101	16	RED/WHITE	SIDE EXIT DOOR
611	---	-----	-----	670	---	-----	-----	00	6009	16	GREEN	SIDE EXIT DOOR
612	---	-----	-----	671	---	-----	-----	00	6010	16	BLUE	SIDE EXIT DOOR
613	---	-----	-----	672	---	-----	-----	00	9141	16	BLACK	SIDE EXIT DOOR
614	---	-----	-----	673	---	-----	-----	00	9143	16	ORANGE	SIDE EXIT DOOR
615	---	-----	-----	674	---	-----	-----	00	9145	16	GREEN	SIDE EXIT DOOR
616	---	-----	-----	675	---	-----	-----	00	9146	16	ORANGE	SIDE EXIT DOOR
617	---	-----	-----	676	---	-----	-----	00	9147	16	GREEN	SIDE EXIT DOOR
618	---	-----	-----	677	---	-----	-----	00	9150	16	YELLOW	FRONT DOOR ALARM
619	---	-----	-----	678	---	-----	-----	00	9201	16	ORANGE	SPEAKER (-) (CURB SIDE FRONT)
620	---	-----	-----	679	---	-----	-----	00	9202	16	BLUE	SPEAKER (+) (CURB SIDE FRONT)
621	---	-----	-----	680	---	-----	-----	00	9203	16	YELLOW	SPEAKER (-) (STREET SIDE FRONT)
622	---	-----	-----	681	---	-----	-----	00	9204	16	GREEN	SPEAKER (+) (STREET SIDE FRONT)
623	---	-----	-----	682	---	-----	-----	00	9205	16	YELLOW	SPEAKER JUMPER (CURB SIDE FRONT)
624	---	-----	-----	683	---	-----	-----	00	9206	16	GREEN	SPEAKER JUMPER (CURB SIDE REAR)
625	---	-----	-----	684	---	-----	-----	00	9207	16	ORANGE	SPEAKER JUMPER (STREET SIDE FRONT)
626	---	-----	-----	685	---	-----	-----	00	9208	16	BLUE	SPEAKER JUMPER (STREET SIDE REAR)
627	---	-----	-----	686	---	-----	-----	00	9211	16	ORANGE	SPEAKER (-) (CURB SIDE REAR)
628	---	-----	-----	687	---	-----	-----	00	9212	16	BLUE	SPEAKER (+) (CURB SIDE REAR)
629	---	-----	-----	688	---	-----	-----	00	9213	16	YELLOW	SPEAKER (-) (STREET SIDE REAR)
630	---	-----	-----	689	---	-----	-----	00	9214	16	GREEN	SPEAKER (+) (STREET SIDE REAR)
631	---	-----	-----	690	---	-----	-----	---	---	---	-----	-----
632	---	-----	-----	691	---	-----	-----	---	---	---	-----	-----
633	---	-----	-----	692	---	-----	-----	---	---	---	-----	-----
634	---	-----	-----	693	---	-----	-----	---	---	---	-----	-----
635	---	-----	-----	694	---	-----	-----	---	---	---	-----	-----
636	---	-----	-----	695	---	-----	-----	---	---	---	-----	-----
637	---	-----	-----	696	---	-----	-----	---	---	---	-----	-----
638	---	-----	-----	697	---	-----	-----	---	---	---	-----	-----
639	---	-----	-----	698	---	-----	-----	---	---	---	-----	-----
640	---	-----	-----	699	---	-----	-----	---	---	---	-----	-----
641	---	-----	-----	700	---	-----	-----	---	---	---	-----	-----
642	---	-----	-----	701	---	-----	-----	---	---	---	-----	-----
643	---	-----	-----	702	---	-----	-----	---	---	---	-----	-----
644	---	-----	-----	703	---	-----	-----	---	---	---	-----	-----
645	---	-----	-----	704	---	-----	-----	---	---	---	-----	-----
646	---	-----	-----	705	---	-----	-----	---	---	---	-----	-----
647	---	-----	-----	706	---	-----	-----	---	---	---	-----	-----
648	---	-----	-----	707	---	-----	-----	---	---	---	-----	-----
649	---	-----	-----	708	---	-----	-----	---	---	---	-----	-----
650	---	-----	-----	709	---	-----	-----	---	---	---	-----	-----
651	---	-----	-----	710	---	-----	-----	---	---	---	-----	-----
652	---	-----	-----	711	---	-----	-----	---	---	---	-----	-----
653	---	-----	-----	712	---	-----	-----	---	---	---	-----	-----
654	---	-----	-----	713	---	-----	-----	---	---	---	-----	-----
655	---	-----	-----	714	---	-----	-----	---	---	---	-----	-----
656	---	-----	-----	715	---	-----	-----	---	---	---	-----	-----
657	---	-----	-----	716	---	-----	-----	---	---	---	-----	-----
658	---	-----	-----	717	---	-----	-----	---	---	---	-----	-----

SPACE EACH LINE .1750 FROM LINE ABOVE .
ALIGN TEXT TO COLUMN ABOVE .



52001068 H

CHART - CIRCUITS,
ELECTRICAL

CIRC #	AWG	COLOR	CIRCUIT DESCRIPTION
1	10	VIOLET	IGNITION SW. (BAT) TO REAR IGN. TOGGLE SWITCH
2	10	VIOLET/WHITE	IGNITION SW (IGN) TO IGN. POWER RELAY (IGN)
3	16	RED	CIRCUIT BREAKER #8 TO FUEL GAGE (1)
4	14	VIOLET/WHITE	IGNITION SWITCH (ST) TO NEUTRAL SWITCH
5	2	RED	CIRCUIT BREAKER #1 (LOAD) TO HOT BUSS BAR
6	16	LT. GREEN/BLACK	FUEL GAGE (S) TO FUEL SENDER
7	16	RED/WHITE	FUEL GAGE (I) TO SPEEDOMETER (+)
8	16	RED/WHITE	SPEEDOMETER (+) TO VOLTMETER (I)
9	14	RED	SPARE LEAD (DASH PANEL TO ENGINE)
10	16	WHITE/BLACK	SPEEDOMETER (-) TO VOLTMETER GROUND
11	16	WHITE	SPEEDOMETER (-) TO LEFT FRONT WHEEL (GND)
12	16	LT. GREEN	SPEEDOMETER (TACH. INPUT) TO LEFT FRONT WHEEL (SPEED)
13	16	RED/BLACK	VOLTMETER (I) TO WARNING BUZZER
14	16	RED/BLACK	VOLTMETER (I) TO OIL PRESSURE GAGE (I)
15	16	WHITE/BLACK	VOLTMETER GROUND TO GROUND LUG ON DASH
16	10	WHITE	GROUND LUG ON DASH TO GROUND ON FRAME
17	16	WHITE/BLACK	LOW AIR SWITCHES (GROUND) TO GROUND LUG ON DASH
18	16	WHITE	GROUND LUG ON DASH TO TACHOMETER (-)
19	14	YELLOW	SPARE LEAD (DASH PANEL TO ENGINE)
20	16	LT. GREEN/WHITE	TACHOMETER (+) TO ALTERNATOR
21	16	LT. GREEN/BLACK	OIL PRESSURE GAGE (S.) TO OIL PRESSURE SENDER
22	16	RED/WHITE	OIL PRESSURE GAGE (I) TO WATER TEMP. GAGE (I)
23	16	RED/WHITE	OIL PRESSURE GAGE (I) TO WARNING LIGHT (POWER)
24	16	LT. GREEN	WATER TEMP. GAGE (I) TO WATER TEMP. SENDER
25	16	RED/BLACK	WATER TEMP. GAGE (I) TO EXHAUST BRAKE DASH SW.
26	16	GRAY	LOW AIR SWITCHES TO WARNING BUZZER
27	16	GRAY/BLACK	LOW AIR SWITCHES TO WARNING LIGHT
28	16	GRAY/WHITE	LOW AIR SWITCH TO LOW AIR SWITCH (GROUND JUMPER)
29	16	GRAY	LOW AIR SWITCH TO LOW AIR SWITCH (HOT JUMPER)
30	16	PINK	WARNING LIGHT TO LOW OIL PRESSURE SWITCH
31	10	RED/BLACK	CIRCUIT BREAKER #4 TO HEADLIGHT SWITCH (BAT.)
32	14	YELLOW/BLACK	HEADLIGHT SWITCH (H) TO TURN SIGNAL SWITCH
33	14	BROWN	HEADLIGHT SWITCH (P) TO PK. LT. SERVICE TERM.
34	14	BROWN/WHITE	HEADLIGHT SWITCH (T) TO TAIL LIGHT SERVICE TERM.
35	14	LT. BLUE	HEADLIGHT SWITCH (D) TO DASH LIGHT SERVICE TERM.
36	16	LT. BLUE/WHITE	HEADLIGHT SWITCH (D) TO DASH LIGHT JUNCTION #1
37	16	LT. BLUE/BLACK	DASH LIGHT JUNCTION #1 TO DASH LIGHT JUNCTION #2
38	14	DK. BLUE	EXHAUST BRAKE DASH SW. TO MICROSWITCH OR JAKE BRAKE DASH SW TO THROTTLE MICROSWITCH
39	16	PINK/BLACK	HI-BEAM INDICATOR LIGHT TO DIMMER SWITCH
40	16	PINK	LEFT TURN INDICATOR LIGHT TO TURN SIGNAL SWITCH
41	16	PINK/WHITE	RIGHT TURN INDICATOR LIGHT TO TURN SIGNAL SWITCH
42	14	ORANGE	TURN SIGNAL SW. TO LEFT SIGNAL SERVICE TERM.
43	14	ORANGE/BLACK	TURN SIGNAL SW. TO RIGHT SIGNAL SERVICE TERM.
44	14	ORANGE/WHITE	TURN SIGNAL SW. TO TURN SIGNAL FLASHER
45	14	PINK/WHITE	HORN BUTTON LEAD TO HORN RELAYS (S)
46	14	YELLOW	HAZARD LIGHT SW. (YELLOW) TO HAZARD LT FLASHER
47	16	RED/WHITE	WATER TEMP. GAGE (I) TO TRANSMISSION TEMP. GAGE (I)
48	14	RED/BLACK	CIRCUIT BREAKER #7 TO HORN RELAY (CENTER LUG)
49	14	PINK/WHITE	HORN RELAY (H) TO RIGHT HORN
50	14	PINK/BLACK	HORN RELAY (H) TO LEFT HORN
51	14	YELLOW/WHITE	HEADLIGHT RELAY TO HI-BEAM
52	14	YELLOW/BLACK	HEADLIGHT RELAY TO LO-BEAM
53	14	RED/BLACK	CIRCUIT BREAKER #9 TO TURN SIGNAL FLASHER
54	14	RED/BLACK	CIRCUIT BREAKER #6 TO HAZARD LIGHT FLASHER
55	16	LT. GREEN	TRANSMISSION TEMP. GAGE (S) TO TRANSMISSION TEMP. SENDER
56	14	BLACK JUMPER	DIODE 622007B1 TO HEADLIGHT RELAY NO. 30 (OPTIONAL)
57	14	RED	CIRCUIT BREAKER # 14 TO "BATT." LIGHT RELAY
58	14	YELLOW	
59	14	RED/BLACK	CIRCUIT BREAKER #5 TO FRONT STOPLIGHT SW. (POWER)
60	14	ORANGE/WHITE	FRONT STOPLIGHT SWITCH TO STOPLIGHT SERVICE TERMINAL
61	14	ORANGE	FRONT STOPLIGHT SW. TO REAR STOPLIGHT SW. (HOT JUMPER)
62	14	ORANGE/BLACK	FRONT STOPLIGHT SW. TO REAR STOPLIGHT SW. (SERVICE JUMPER)
63	16	LT. BLUE	DASH LIGHT SERVICE TERMINAL TO SHIFT TOWER LIGHT
64	16	WHITE/BLACK	REVERSE PILOT LIGHT TO GROUND ON FRAME
65	14	VIOLET/WHITE	REAR START BUTTON TO NEUTRAL SWITCH
66	14	VIOLET	NEUTRAL SW. TO REAR DOOR STARTER INTERLOCK SW.
67	14	RED/BLACK	CIRCUIT BREAKER #9 TO REVERSE SWITCH
68	14	BLACK	REVERSE SWITCH TO BACK UP LIGHT SERVICE TERMINAL
69	10	RED	IGN. POWER RELAY (LOAD) TO CIRC. BREAKER #2 (BAT)
70	4	RED/WHITE	IGN. POWER RELAY (BAT) TO HOT BUSS BAR
71	4	RED/BLACK	IGN. POWER RELAY (LOAD) TO COLD BUSS BAR
72	14	VIOLET/WHITE	FUEL RELAY (B7) TO FUEL SOLENOID
73	16	RED	ENGINE COMPARTMENT LT. SW. TO ENGINE COMP. LIGHTS
74	16	PINK/WHITE	HIGH WATER TEMP. SW. TO LOW OIL PRESSURE SWITCH
75	4	RED	ALTERNATOR OUTPUT TO CIRC. BREAKER #1 (BAT)
76	2	RED/WHITE	STARTER SOLENOID (BAT.) TO CIRCUIT BREAKER #1 (BAT.)
77	10	RED/WHITE	CIRCUIT BREAKER #1 (LOAD) TO STARTER RELAY (BAT)
78	10	RED/BLACK	STARTER RELAY (LOAD) TO STARTER SOLENOID SWITCH
79	14	DK. BLUE/WHITE	CIRCUIT BREAKER #2 TO "IGN" ON BLOWER DRIVEN ALTERNATOR
81	10	GRAY/BLACK	HEATED DRAIN TANK HOT JUMPER
82	14	RED/WHITE	CIRCUIT BREAKER #2 (LOAD) TO REAR START BUTTON
83	10	RED/WHITE	CIRC. BREAKER #1 (LOAD) TO CIRCUIT BREAKER #3 (BAT.)
84	10	RED/BLACK	CIRC. BREAKER #3 (LOAD) TO REAR IGN. TOGGLE SWITCH
85	10	GRAY	CIRC. BREAKER #12 (LOAD) TO HEATED AIR TANK DRAIN
86	2	RED/BLACK	MASTER SWITCH TO CIRCUIT BREAKER #1
87	16	DK. BLUE/WHITE	NEUTRAL SWITCH TO FAST IDLE DASH SWITCH
88	16	DK. BLUE/WHITE	FAST IDLE DASH SWITCH TO FAST IDLE SOLENOID
89	14	RED/BLACK	CIRCUIT BREAKER #2 (LOAD) TO KYSOR ALARMSTAT (c)
90	14	DK. GREEN/WHITE	KYSOR PRESSURESTAT (c) TO KYSOR ALARMSTAT (NC)
91	14	DK. GREEN	KYSOR PRESSURESTAT (NO) TO KYSOR MODULE (3)
92	14	DK. GREEN/WHITE	KYSOR PRESSURESTAT (NC) TO KYSOR ALARMSTAT (NO)
93	14	DK. GREEN/WHITE	KYSOR ALARMSTAT (NO) TO KYSOR BELL (POWER)
94	14	DK. GREEN	KYSOR BELL (POWER) TO KYSOR LIGHT (POWER)
95	14	DK. GREEN	KYSOR LIGHT (GROUND) TO KYSOR BELL (GROUND)
96	14	DK. GREEN/BLACK	KYSOR BELL (GROUND) TO KYSOR MODULE (4)
97	14	DK. GREEN/BLACK	KYSOR MODULE (4) TO GROUND IN FRONT PANEL
98	14	DK. GREEN/WHITE	KYSOR MODULE (2) TO FRONT PANEL (CIRC. #4)

CIRC #	AWG	COLOR	CIRCUIT DESCRIPTION
99	14	RED	CIRC. BREAKER #10 TO KYSOR MODULE FUSE
100	14	GRAY	CIRC. BREAKER #13 (LOAD) TO AIR DRYER
101	14	DK. BLUE	EXHAUST BRAKE MICROSWITCH TO BRAKE SOLENOID
103	14	DK. BLUE/BLACK	CIRCUIT BREAKER #11 TO ETHER START SWITCH
104	14	DK. BLUE/WHITE	ETHER START SWITCH TO ETHER VALVE SOLENOID
105	14	DK. BLUE/WHITE	ETHER VALVE SOLENOID TO OVERRIDE THERMOSTAT
106	14	WHITE/BLACK	OVERRIDE THERMOSTAT TO GROUND ON ALTERNATOR (NEG)
107	14	BLACK/WHITE	REVERSE SWITCH TO BACK-UP ALARM (+)
108	14	WHITE/BLACK	BACK ALARM (-) TO GROUND
109	16	RED	CIRC. BREAKER #2 TO REAR PANEL GAUGES (HOT)
110	14	LT. GREEN/BLACK	ENG. COMP. OIL PRESSURE GAGE TO ADDED SENDER
111	10	RED/WHITE	CIRC. BREAKER #2 TO CIRC. BREAKER #13 (HOT JUMPER)
112	14	VIOLET/WHITE	REAR DOOR STARTER INTERLOCK SW. TO STARTER RELAY
113	16	WHITE/BLACK	FAST IDLE INDICATOR LIGHT TO GND. AT BUZZER
115	14	PINK/WHITE	IGN. SWITCH (ACCC) TO SERVICE TERM. #10
116	14	LT. GREEN/WHITE	CIRC. BREAKER #3 TO ENG. COMP. LIGHT SW.
117	16	WHITE/BLACK	FAST IDLE SOLENOID TO GROUND ON DASH
118	14	DK. GREEN	CIRC. BREAKER #11 TO KYSOR COOLANT LEVEL MODULE (1)
119	14	WHITE	GROUND IN FRONT PANEL TO COOLANT MODULE (4)
120	14	DK. GREEN/WHITE	COOLANT PROBE TO COOLANT MODULE (2)
121	14	VIOLET/WHITE	STARTER RELAY (LOAD) TO FUEL START SOLENOID (CATERPILLAR TURBO ONLY)
122	14	DK. BLUE	JAKE BRAKE DASH SW. (#1) TO LEFT CYLINDER BANK
123	14	DK. BLUE/WHITE	JAKE BRAKE DASH SW. (#2) TO RIGHT CYLINDER BANK
124	14	DK. BLUE	CIRC. BREAKER #13 TO JAKE BRAKE TRANS. PRESSURE SW.
125	14	DK. BLUE/BLACK	JAKE BRAKE TRAN. SW. TO THROTTLE MICROSWITCH
126	10	VIOLET/WHITE	MASTER CONTROL SWITCH (1) TO IGN. SW. (B)
127	14	BROWN/WHITE	MASTER CONTROL SWITCH (2) TO PARK & TAIL LIGHT RELAY (COIL)
128	14	YELLOW/BLACK	MASTER CONTROL SWITCH (3) TO HEADLIGHT RELAY (COIL)
129	10	YELLOW	HEADLIGHT RELAY TO PK. & TAIL LT. RELAY (HOT JUMPER)
130	14	WHITE	HEADLIGHT GROUND TO FRAME GROUND
131	14	RED	CIRC. BREAKER NO. 13 TO REVERSE SWITCH AT TRANSMISSION
132	16	LT. GREEN	AMMETER SHUNT TO FRONT DASH AMMETER (+)
133	16	LT. GREEN/WHITE	AMMETER SHUNT TO FRONT DASH AMMETER (-)
134	16	LT. GREEN	AMMETER SHUNT TO REAR DASH AMMETER (+)
135	16	LT. GREEN/BLACK	AMMETER SHUNT TO REAR DASH AMMETER (-)
136	16	RED/BLACK	WATER TEMP. GAGE (I) TO TACHOMETER
137	16	RED/WHITE	WATER TEMP. GAGE (I) TO TEMP. & PRESSURE WARNING LIGHT
138	16	PINK	TEMP. & PRESSURE WARNING LIGHT TO WARNING BUZZER
139	14	RED	CIRC. BREAKER NO. 1 (LOAD) TO CIRC. BREAKER NO. 15 (BATT.)
140	14	RED/WHITE	CIRC. BREAKER NO. 15 (LOAD) TO FUEL HEATER RELAY NO. 30
141	14	RED	FUEL HEATER RELAY (NO. 87) TO FUEL HEATER
142	14	WHITE	FUEL HEATER RELAY (NO. 86) TO FUEL HEATER.
143	16	RED	FUEL HEATER RELAY (NO. 86) TO CIRCUIT BREAKER #13
144	14	WHITE	FUEL HEATER RELAY (NO. 86) TO GND. AT ELEC. PANEL LOWER ANGLE
145	16	WHITE	FUEL GAGE SENDER MTR. SCREW TO FRAME GROUND
146	16	RED	KYSOR LOW COOLANT MODULE (1) TO WARNING LIGHTS
147	16	DK. GREEN/WHITE	KYSOR LOW COOLANT MODULE (3) TO WARNING LIGHTS
148	16	LT. BLUE/BLACK	TAIL/MARKER LT. JUNCTION TO FRONT STEP LIGHT
149	14	YELLOW/WHITE	DIMMER SW. (32) TO HD.LT. RELAY TERMINAL NO. 30
150	14	RED/WHITE	CIRC. BREAKER NO. 4 TO VISUAL HORN FEED
151	14	RED/BLACK	CIRC. BREAKER NO. 4 TO VISUAL HORN RELAY TERM. #30
152	14	YELLOW/BLACK	TURN SIGNAL SW. TO HD. LT. RELAY COIL
153	14	YELLOW/BLACK	HD. LT. RELAY COIL TO VISUAL HORN RELAY COIL
154	14	YELLOW/WHITE	HD. LT. RELAY (N.O.) TO VISUAL HORN RELAY (N.O.)
155	14	ORANGE/BLACK	DROP FOR HAZARD SWITCH
156	14	ORANGE	DROP FOR HAZARD SWITCH
157	14	WHITE	VISUAL HORN RELAY TO HD. LT. RELAY TERM. #86
158	14	WHITE	HD. LT. RELAY TO GROUND STUD
159	16	BLACK/WHITE	REVERSE PILOT LIGHT FEED
160	14	RED/WHITE	CIRCUIT BREAKER #13 TO FUEL RELAY (30)
161	14	DK. BLUE/WHITE	FUEL RELAY COIL (B6) TO SERVICE TERMINAL #91
162	14	RED/WHITE	CIRCUIT BREAKER #16 TO RETARDER POWER SWITCH
163	14	RED/BLACK	CIRCUIT BREAKER #16 TO RETARDER ON SWITCH
164	14	RED	CIRCUIT BREAKER #16 TO RETARDER OVERHEAT PILOT LT.
165	14	DK. BLUE	RETARDER ON SWITCH TO RETARDER ON PILOT LIGHT
166	14	DK. BLUE/WHITE	RETARDER POWER SWITCH TO ACCELERATOR INTERLOCK
167	14	DK. BLUE/BLACK	RETARDER OVERHEAT PILOT LIGHT TO TRANSMISSION SENSOR
168	14	WHITE/BLACK	RETARDER POWER SWITCH TO DASH GROUND
169	14	WHITE	RETARDER ON PILOT LIGHT TO DASH GROUND
170	3/0	BLACK	BATTERY (NEG) TO STARTER
171	2	BLACK	STARTER TO CIRCUIT BREAKER #17
172	16	BLACK/WHITE	ALTERNATOR FIELD CIRCUIT
173	16	BLACK/WHITE	ALTERNATOR FIELD CIRCUIT
174	14	BLACK	CIRC. BKR. #16 TO BRAKE & AIR ACCELERATOR INTERLOCK SW.
175	10	VIOLET/WHITE	FUEL SOLENOID TO GROUND
176	14	VIOLET/WHITE	FUEL SOLENOID RELAY WITH KYSOR SHUTDOWN
177	14	WHITE	AIR INTAKE HEATER CONTROLLER PILOT LT TO CIRC. #19
178	16	BLUE	AIR INTAKE HEATER CONTROLLER TO CIRCUIT BKR. #2
179	8	BLUE	AIR INTAKE HEATER TO 150 AMP BREAKER
180	8	BLUE/WHITE	AIR INTAKE HEATER TO ALTERNATOR GROUND
181	14	WHITE	BODY BLOCK HEATER RECEPTICAL TO TANK TYPE BLOCK HT.
182	14	GREEN	BODY BLOCK HEATER RECEPTICAL TO GROUND
183	14	BLACK	BODY BLOCK HEATER RECEPTICAL TO TANK TYPE BLOCK HTR.
184	14	WHITE	TRANSMISSION SENSOR TO GND ON TRNS. FILTER BRACKET.
185	16	PINK	AIR DUMP SWITCH TO PILOT LIGHT (4" JUMPER)
186	16	LT. GREEN/BLACK	SPEEDOMETER TO (SIGNAL) SENDING UNIT
187	16	LT. GREEN/WHITE	SPEEDOMETER TO (SIGNAL GROUND) SENDING UNIT
188	16	GREEN	GAUGES TO REAR PANEL GROUND
189	16	BROWN/BLACK	FAN RELAY (B7) TO FAN SOLENOID
190	16	BROWN/WHITE	FAN RELAY (B6) TO FAN TEMP. SENSOR
191	14	VIOLET/BLACK	FUEL SHUTDOWN SOLENOID TO GROUND ON REAR PNL.
192	10	VIOLET/WHITE	STARTER RELAY TO FUEL SHUTDOWN SOLENOID
193	14	VIOLET	FUEL SHUTDOWN SOLENOID TO FUEL RELAY (B7)
194	10	WHITE	ALTERNATOR GND. TO GROUND STUD ON REAR PANEL
195	16	LT. GREEN/WHITE	REAR WATER TEMP. GAGE TO WATER TEMP. SENSOR
196	14	DK. BLUE/WHITE	RETARDER ON SWITCH TO RETARDER STOP LIGHT SW.
197	14	DK. BLUE	RETARDER STOP LIGHT SWITCH TO BRAKE LT. SW. (B2)

CIRC #	AWG	COLOR	CIRCUIT DESCRIPTION
198	16	RED	COLD IGNITION TO FREQUENCY CONVERTER
199	14	WHITE	BRAKE RETARDER TO FOOT TREADLE
200	14	BLACK	BRAKE RETARDER TO FOOT TREADLE
201	14	YELLOW/BLACK	HEADLIGHT DIODE TO HEADLIGHT RELAY
202	14	ORANGE	DIMMER SWITCH TO TURN SIGNAL CONNECTOR (PIN 7)
203	14	ORANGE/WHITE	TURN SIGNAL CONNECTOR (PIN 8) TO DIMMER SWITCH
204	14	PINK/BLACK	HORN RELAY TO TURN SIGNAL CONNECTOR (PIN 6)
205	16	RED	COLD IGNITION TO PARK BRAKE CONTROL PRESSURE STAT. SW.
206	16	LT. GREEN/WHITE	PARK BRAKE CONTROL PRESSURE STAT SW. TO LOWER DASH PILOT LT.
207	10	RED	MISCELLANEOUS WIRING
208	14	RED	MISCELLANEOUS WIRING
209	14	BLACK	MISCELLANEOUS WIRING
210	16	GREEN/BLACK	RIGHT TURN INDICATOR LIGHT TO RIGHT REAR LAMP
211	16	GREEN/WHITE	LEFT TURN INDICATOR LIGHT TO LEFT REAR LAMP
212	16	YELLOW	TRANS. MODULATOR RELAY TO SKINNER SOLENOID
213	16	RED	TRANS. MODULATOR TO CIRCUIT BREAKER #13
214	14	YELLOW/BLACK	HEADLIGHT HAZARD FLASHER INPUT TERMINAL
215	16	BLUE	CIRCUIT BREAKER #13 TO FAN RELAY (30)
216	16	WHITE	FAN RELAY (B6) TO FAN RELAY (30)
217	16	WHITE	FUEL RELAY (B6) TO GROUND ON REAR PANEL
218	16	BROWN	CONNECTOR 5, PIN 12 TO DOOR RELAY
219	16	YELLOW	CONNECTOR 5, PIN 5 TO LIFT PILOT LIGHT
220	16	GREEN	CONNECTOR 5, PIN 9 TO SERVICE TERMINAL 220
221	16	ORANGE	CONNECTOR 5, PIN 10 TO LOW ALTERNATOR LAMP
222	14	WHITE	CONNECTOR 5, PIN 13 TO GROUND AT DASH
223	16	BLUE	VOLTMETER GROUND TO VOLTMETER GAUGE (S)
224	14	ORANGE	WATER TEMP. GAGE GROUND TO ENGINE OIL PRESSURE GAUGE GROUND TO VOLTMETER GROUND
225	14	BROWN	TACHOMETER GROUND TO SPEEDOMETER GROUND
226	14	BLACK	FUEL GAGE GROUND TO TRANSMISSION OIL TEMPERATURE GAUGE GROUND TO SPEEDOMETER GROUND
227	16	YELLOW	SPEEDOMETER LIGHT TO #37 JUNCTION
228	16	ORANGE	TACHOMETER LIGHT TO #36 JUNCTION
229	10	GREEN	VOLTMETER GROUND TO TERMINAL BOARD #1 (TB1)
230	8	RED	BATTERY (+) TO BUSS BAR (+)
231	8	GREEN	BATTERY (-) TO BUSS BAR (-)
232	14	ORANGE	TB4 TO TB7, CPC CONNECTOR PANEL (JUMPER)
233	14	WHITE	TB2 TO TB1, CPC CONNECTOR PANEL (JUMPER)
234	14	BLUE	TB6 TO TB2, CPC CONNECTOR PANEL (JUMPER)
235	14	RED	TB5 TO TB6, CPC CONNECTOR PANEL (JUMPER)
236	14	BLACK/WHITE	REAR PANEL ENG. OIL PRESS GA. GND TO TERM. BD #1 (POS. 8)
237	14	RED	IGN. HOT POWER STUD NO. 3 TO CIRCUIT BREAKER NO. 2 (BATT.)
238	14	GREEN/WHITE	FUEL SOLENOID RELAY GND. (B6) TO TERM. BD NO. 1 (POS. 8)
239	14	YELLOW/WHITE	FUEL/WATER SEP. RELAY GND (B6) TO TERM. BD NO. 1 (POS. 8)
240	14	ORANGE/WHITE	AIR INLET HEATER RELAY GND (B6) TO TERM. BD NO. 1 (POS 8)
241	14	BLACK	AIR INLET HEATER RELAY (B5) TO CIRCUIT BREAKER NO. 2 (LOAD)
242	14	RED/WHITE	AIR INLET HEATER RELAY (30) TO CIRCUIT BREAKER NO. 15 (LOAD)
243	14	WHITE	TERM. BD #3 (POS. 8) GND TO REAR PANEL GND, STUD
244	14	BLACK/WHITE	TERM. BD #1 (POS. 8) GND TO REAR PANEL GND, STUD
245	16	BLACK	INLET AIR HEATER RELAY (B7) TO INLET AIR HEATER OIL PRESS. SW
246	16	RED	STARTER RELAY (LOAD) TO INLET AIR HEATER CONTROL MODULE (B)
247	16	BLUE	INLET AIR HEATER CONTROL MODULE (A) TO TERM BD. NO. 3 (POS. 8)
248	2	RED	INLET AIR HEATER 105 AMP CB TO INLET AIR HEATER CONTACTOR (LOAD)
249	16	ORANGE	INLET AIR HEATER WATER TEMP SW TO INLET AIR HEATER CONTROL MODULE (E)
250	16	YELLOW	INLET AIR HEATER CONTACTOR TO INLET AIR HEATER CONTROL MODULE (D)
251	16	GREEN	INLET AIR HEATER CONTROL RELAY (B7) TO INLET AIR HEATER CONTACTOR (COIL)
252	16	BLACK	INLET AIR HEATER CONTROL RELAY (B7) TO INLET AIR HEATER CONTROL MODULE (F)
253	16	WHITE	INLET AIR HEATER WATER TEMP SW TO GND STD IN REAR PANEL
254	16	GREEN	INLET AIR HEATER OIL PRESS SW TO INLET AIR HEATER CONTROL MODULE (C)
255	14	WHITE	FUEL SOLENOID GND TO GND STUD IN REAR PANEL
256	2	RED	AMP SHUNTOR HOT POWER STUD #1 TO 105 AMP CB AIR INLET HEATER
257	14	WHITE	FAN SOLENOID TO FRAME GND (JUMPER)
258	14	BROWN/WHITE	CIRCUIT BREAKER #11 TO DRL TAILLIGHT RELAY CONTACT TERM. 87A
259	14	YELLOW	CIRCUIT BREAKER #11 TO DRL HEADLIGHT DIODE
260	14	YELLOW/WHITE	DRL HEADLIGHT DIODE TO DRL HEADLIGHT RELAY CONTACT TERM. 30
261	14	YELLOW/BLACK	DRL HEADLIGHT RELAY CONTACT TERM. 30 TO HEADLIGHT RELAY CONTACT TERM. 30
262	14	BROWN	DRL TAILLIGHT RELAY CONTACT TERM. 30 TO TAILLIGHT SERVICE TERM.
263	14	BROWN	CIRCUIT BREAKER #11 TO DRL PARK LIGHT RELAY CONTACT TERM. 87A
264	14	BROWN/WHITE	DRL PARK LIGHT RELAY CONTACT TERM. 30 TO PARK LIGHT SERVICE TERM.
265	14	BROWN	HEADLIGHT

CIRC #	AWG	COLOR	CIRCUIT DESCRIPTION
268	14	YELLOW	HEADLIGHT SOLENOID (COIL) TO DRL HEADLIGHT RELAY COIL TERM. 85
269	14	BROWN/WHITE	PARK AND TAIL LIGHT SOLENOID (COIL) TO DRL PARK LIGHT RELAY COIL TERM. 85
270	14	BROWN	PARK AND TAIL LIGHT SOLENOID (COIL) TO DRL TAIL LIGHT RELAY COIL TERM. 85
271	14	RED	CIRCUIT BREAKER #13 TO ALTERNATOR OIL PRESS/EXT EXCITER RELAY TERM. 85 & 30
272	2/0	RED	ALTERNATOR OUTPUT POSITIVE (B+) TO 150 AMP CHASSIS CIRCUIT BREAKER
273	4/0	BLACK	STARTER NEGATIVE POST TO FRAME GND
274	4/0	BLACK	ALTERNATOR NEGATIVE POST TO STARTER NEGATIVE POST
275	4/0	RED	ALTERNATOR OUTPUT POSITIVE (B+) TO STARTER POSITIVE POST
276	14	RED	CIRCUIT BREAKER #11 TO W/S WIPER/HEADLIGHT INTERLOCK RELAY TERM. 87
277	14	RED/BLACK	CIRCUIT BREAKER #11 TO W/S WIPER/PARK LIGHT INTERLOCK RELAY TERM. 87
278	14	RED/WHITE	CIRCUIT BREAKER #11 TO W/S WIPER/TAIL LIGHT INTERLOCK RELAY TERM. 87
279	14	RED	CIRCUIT BREAKER #11 TO W/S WIPER/LIGHTING CONTROL RELAY TERM. 30
280	14	YELLOW	W/S WIPER/HEADLIGHT INTERLOCK RELAY TERM. 30 TO ANTI-FEEDBACK DIODE
281	14	BROWN	W/S WIPER/PARK LIGHT INTERLOCK RELAY TERM. 30 TO PARK LIGHT SERVICE TERM.
282	14	BROWN/BLACK	W/S WIPER/TAIL LIGHT INTERLOCK RELAY TERM 30 TO TAIL LIGHT SERVICE TERM.
283	14	ORANGE	W/S WIPER/LIGHTING CONTROL RELAY TERM. 87 TO HEADLIGHT, TAIL, PARK INTERLOCK RELAY TERM. 85
284	14	BLACK	W/S WIPER/LIGHTING CONTROL RELAY TERM. 85 TO W/S WIPER SW. DIODES
285	14	RED	W/S WIPER SW DIODE TO W/S WIPER SW LEFT MOTOR (HIGH)
286	14	RED/WHITE	W/S WIPER SW DIODE TO W/S WIPER SW LEFT MOTOR (LOW)
287	12	RED	WEATHER PACK CONNECTOR (POS. B) BAT. +12V TO MAIN CIRCUIT BREAKER (150 AMP) NO. 1, (LOAD)
288	12	BROWN	WEATHER PACK CONNECTOR (POS. A) BAT. GND TO REAR ELECT. PANEL GND STD.
289	14	RED	WEATHER PACK CONNECTOR (POS. A) TO 72 HR TIMER (RED) & (RED) TO ON-OFF SW
290	14	BLACK	WEATHER PACK CONNECTOR (POS. B) TO ON-OFF SW
291	14	YELLOW	WEATHER PACK CONNECTOR (POS. C) TO 72 HR TIMER (YELLOW)
292	14	GREEN	WEATHER PACK CONNECTOR (POS. D) TO ON-OFF SW INDICATOR LIGHT (+12V)
293	14	BLUE	WEATHER PACK CONNECTOR (POS. E) TO ON-OFF SW INDICATOR LIGHT (GND)
294	14	BROWN	WEATHER PACK CONNECTOR (POS. F) TO 72 HR TIMER (BROWN)
295	14	RED	CHASSIS ELECT SIDE PANEL CONNECTION TO PALL FILTER PRESS. SW. B (RED)
296	14	WHITE	CHASSIS ELECT SIDE PANEL CONNECTION TO PALL FILTER PRESS. SW. A (WHITE)
297	14	BLACK	CHASSIS ELECT SIDE PANEL GND. STUD TO PALL FILTER PRESS. SW. C (BLACK)
298	14	RED/WHITE	CHASSIS ELECT SIDE PANEL CIRCUIT BREAKER NO. 7 TO PALL LED DASH SW. RESISTOR
299	14	BLACK	FEMALE CONNECTOR #4 (61200632) POS. 5 TO MASTER CONTROL SW. (6)
300	14	BLACK	FEMALE CONNECTOR #4 (61200628) POS. 5 TO CHASSIS SIDE PANEL TB #3, POS.1
301	2	RED	INLET AIR HEATER CONTACTOR (LOAD) TO INLET AIR HEATER ELEMENT
302	14	BLACK/WHITE	INLET AIR HEATER CONTROL RELAY TERM. 87 TO TERM. BD. 2 (POS.7)
303	16	BLACK	WIPER PILOT LIGHT TO WASHER PILOT LIGHT TO DASH LIGHT JUNCTION #1 (+12V)
304	16	WHITE	WIPER PILOT LIGHT TO WASHER PILOT LIGHT TO SPEEDOMETER GA. BRACKET GND.
305	16	BLACK	FUEL GA. GND TO LEFT TURN SIGNAL INDICATOR GND, TO LOW WATER INDICATOR GND, TO HI BEAM GND, TO RIGHT TURN SIGNAL INDICATOR GND.
306	16	BLACK	FAST IDLE SWITCH INDICATOR LAMP GND TO TACHOMETER GA. GND
307	14	YELLOW	HEADLIGHT SWITCH (H) TO HEADLIGHT SW. MASTER RELAY COIL TERM. 85
308	14	BROWN	FUEL SOLENOID PULL-IN RELAY (ENG COMPT.) COIL TO STARTER SOLENOID
309	10	BLUE	FUEL SOLENOID PULL-IN RELAY (ENG. COMPT.) POWER SIDE TO STARTER/BATTERY POSITIVE JUNCTION.
310	14	RED	CIRCUIT BREAKER TO NO. 13 TO FAN RELAY CONTACT TERM. 30
311	14	BLUE	AIR TEMP SENSOR PLUG-IN (POS. B) TO FAN RELAY COIL TERMINAL 85
312	14	BLACK	AIR TEMP SENSOR PLUG-IN (POS C) TO FAN WATER TEMP SENSOR
313	14	WHITE	FAN RELAY COIL TERM 85 (GND) TO GND STUD IN REAR ELECT. BOX
314	14	RED	CIRCUIT BREAKER NO 13 TO FAN RELAY CONTACT TERM 30
315	14	BROWN	LOW/HIGH PRESSURE GAS VALVE RELAY TERM 85 TO STARTER SOLENOID TERM (R)
316	14	BLACK	LOW/HIGH PRESSURE GAS VALVE RELAY TERM 30 TO OIL PRESSURESTAT (GAS VALVE) 12V FEED
317	14	WHITE	OIL PRESSURESTAT (GAS VALVE) +12V RETURN TO TERM BD. NO. 3 POS. 2
318	14	RED	CIRCUIT BREAKER NO 2 TO ENGINE IGNITION COIL (POS)
319	14	BLUE	LOW PRESSURE GAS SHUTOFF VALVE TO +12V TO TERM BD. NO. 3 POS 2
320	14	WHITE	LOW PRESSURE GAS SHUTOFF VALVE GND TO GND STUD IN REAR ELECT. BOX
321	14	BROWN	LOW/HIGH PRESSURE GAS VALVE RELAY TERM 87 TO TERM BD NO. 3 POS. 1
322	14	BLACK	TERM. BD. NO. 2 POS. 6 (WITH CIRC. # 19 TO TERM. BD. NO. 3 POS. 1
323	14	RED	MODULAR REAR ELECT. BOX TERM BD. NO. 1 POS. 1 TO CRANK INTERLOCK/POWER INPUT RELAY TERM 85
324	10	RED	CIRCUIT BREAKER NO. 19 (30 AMP) TO CRANK INTERLOCK/POWER INPUT RELAY TERM 85
325	10	RED	HOT POWER STUD NO. 3 TO CIRCUIT BREAKER NO. 19
326	14	BROWN	ABS WARNING LAMP RELAY TERM 87A TO ABS DASH WARNING LAMP
327	14	BLUE	CIRCUIT BREAKER NO 11 TO ABS WARNING LAMP RELAY TERM 85 AND 30
328	14	RED	CIRCUIT BREAKER NO 11 TO RETARDER INTERLOCK RELAY TERM 85 AND 30
329	14	BLACK	RETARDER INTERLOCK RELAY TERM 87A TO RETARDER IN USE CIRCUIT (IN SERIES)
330	14	BLACK	(JUMPER) FRONT ELECTRIC SIDE PANEL TERM. BD. POS. 6 TO #19
331	14	RED	CNG ELECTRONIC OVERSPEED GOVERNOR (RED WIRE) TO CIRCUIT BREAKER NO. 15 (LOAD)
332	14	GREEN	TERM. BD. NO. 3, POS. 7 TO CNG ENGINE IGNITION COIL (BROWN WIRE)
333	14	BLACK	CNG ELECTRONIC OVERSPEED GOVERNOR (BLACK WIRE) TO GND STUD IN MODULAR REAR ELECT BOX
334	14	RED	BATTERY (+) FUSED, 10 AMP, UNCONDITIONED, UNSWITCHED (ANTI-LOCK DIAGNOSTIC PLUG)
335	14	BLACK	BATTERY (-) (ANTILOCK DIAGNOSTIC CONNECTOR PLUG)
336	14	WHITE	SPARE (ANTILOCK DIAGNOSTIC CONNECTOR PLUG)
337	14	BLUE	ENGINE PROGRAMMING (ANTILOCK DIAGNOSTIC CONNECTOR PLUG)
338	14	WHITE	REVERSE RELAY (TERM. 86) GND TO FRONT SIDE ELECT. PANEL TERM. BD. (BACK-UP LIGHTS)
339	14	RED	CIRCUIT BREAKER NO. 8 TO REVERSE RELAY (TERM. 30)
340	14	RED	REVERSE RELAY (TERM. 87) TO FRONT SIDE ELEC. PANEL TERM. BD. (BAK-UP LIGHTS)
341	14	BLACK	(JUMPER) 5 AMP FUSE & FUSE HOLDER TO FAST IDLE SYSTEM PRESSURESTAT (PARK BRAKE SHIFTER)
342	14	BLACK	(JUMPER) FAST IDLE SYSTEM PRESSURESTAT (PARK BRAKE SHIFTER) TO FRONT SIDE PANEL TERM. BD. #87
343	14	RED	CIRCUIT BREAKER NO. 12 TO DRAINS MOMENTARY SW. INPUT
344	14	BLUE	DRAINS MOMENTARY SW. OUTPUT (RS) TO RS SOLENOID DRAIN VALVES
345	14	BROWN	DRAINS MOMENTARY SW. OUTPUT (LS) TO LS SOLENOID DRAIN VALVES
346	14	BLACK	LS SOLENOID DRAIN VALVES GND TO GND ON FRAME
347	14	BLACK	RS SOLENOID DRAIN VALVES GND TO GND ON FRAME
348	14	BLACK	SERIAL A (+) TERMINAL BD. (REAR BOX) TO SERIAL B (+) DIAGNOSTIC CONNECTOR PLUG, PIN A
349	14	WHITE	SERIAL B (-) TERMINAL BD. (REAR BOX) TO SERIAL B (-) DIAGNOSTIC CONNECTOR PLUG, PIN B
350	16	WHITE	ABS DASH WARNING LAMP GND TO GAUGE GND
351	16	WHITE	CRANK INTERLOCK/POWER INPUT RELAY TERM. 86 TO GND
352	16	RED	GFI IGNITION RELAY NO. 1, TERM. 85 TO FUSE NO. 3 (3 AMP)
353	16	RED	GFI IGNITION RELAY NO. 1, TERM. 30 TO FUSE NO. 2 (10 AMP)
354	16	RED	GFI HARNESS CONNECTOR P12, PIN A TO FUSE NO. 1 (3 AMP)
355	16	BLUE	GFI HARNESS CONNECTOR P12, PIN B TO IGNITION RELAY NO. 1, TERM. 87
356	16	GREEN	GFI HARNESS CONNECTOR P12, PIN C TO IGNITION RELAY NO. 1, TERM. 87
357	16	BROWN	GFI HARNESS CONNECTORS J21/J22 TO IGNITION RELAY NO. 1, TERM.87
358	16	GREEN	GFI HARNESS CONNECTOR J9 TO MODULAR REAR ELECT. BOX TO FRONT, FUEL GAUGE (#122)
359	16	WHITE	GFI HARNESS CONNECTOR J9 TO MODULAR REAR ELECT. BOX TO FRONT, FUEL GAUGE (#123)
360	16	BLUE	GFI HARNESS CONNECTOR J11 TO MODULAR REAR ELECT. BOX, TERM. BD. NO. 1, POS. 1 (#112)
361	16	RED	ALTRONIC IGNITION MODULE (+12V) TO FUSE NO.4 (10 AMP) AT CIRCUIT BREAKER NO.15(SW/+12V IGN.)
362	16	WHITE	ALTRONIC IGNITION MODULE (GND) TO GND STUD IN MOD. REAR BOX, FUSED AT 10 AMP
363	16	RED	SIGNAL GENERATOR (+12V INPUT) TO C.B. NO.15, SWITCHED +12V IGNITION

CIRC #	AWG	COLOR	CIRCUIT DESCRIPTION
364	10	RED	CIRCUIT BREAKER NO.4 TO HIGH BEAM HEADLIGHT RELAY TERM. 30
365	18	GREEN	CONNECTOR P3, PIN B, MATES TO GFI HARNESS CONNECTOR J3, PIN B TO CONNECTOR P3A, PIN B
366	18	RED	CONNECTOR P3, PIN C, MATES TO GFI HARNESS CONN. J3, PIN C TO CONN. P3A, PIN C TO REGULATOR
367	18	BLACK	CONNECTOR P3, PIN E, MATES TO GFI HARNESS CONN. J3, PIN E, TO CONN. P3A, PIN E TO REGULATOR
368	16	BLACK	CONNECTOR P3, PIN F, MATES TO GFI HARNESS CONN. J3, PIN F, TO CONN. P3A, PIN F TO REGULATOR
369	16	BLACK	CONNECTOR P3, PIN G, MATES TO GFI HARNESS CONN. J3, PIN G, TO CONN. P3A, PIN G TO REGULATOR
370	18	BLUE	CONN. P1, PIN B, MATES TO GFI HARNESS CONN. J1, PIN B TO CONN. P1A, PIN B TO INTAKE AIR SENSOR
371	18	BLUE	CONN. P1, PIN A, MATES TO GFI HARNESS CONN. J1, PIN A TO CONN. P1A, PIN A TO INTAKE AIR TEMP. SENSOR
372	18	2 WIRE SHLD.	CABLE CONN. P5, PIN A, MATES TO GFI HARNESS CONN. J5, PIN A, TO SIGNAL GENERATOR CONN., PIN C
373	18	2 WIRE SHLD.	CABLE CONN. P5, PIN B, MATES TO GFI HARNESS CONN. J5, PIN B, TO SIGNAL GENERATOR CONN., PIN A
374	18	WHITE	CONN. P5, PIN F, MATES TO GFI HARNESS CONN. J5, PIN F, TO ALTRONIC IGN. MODULE 3 WAY CONN., PIN C
375	18	RED	CONN. P5, PIN G, MATES TO GFI HARNESS CONN. J5, PIN G TO ALTRONIC IGN. MODULE 3 WAY CONN. PIN A
376	18	WHITE	CONN. P5, PIN H, MATES TO GFI HARNESS CONN. J5, PIN H TO GND (SAME POINT AS RLI ON GFI HARNESS)
377	16	WHITE	SIGNAL GENERATOR CONN., PIN B TO GND (SAME POINT AS RLI ON GFI HARNESS)
378	16	BLACK	ALTRONIC IGNITION MODULE 4 WAY CONN. PIN A TO 6 - TOWER COIL MODULE CONN. PIN B
379	16	BLACK	ALTRONIC IGNITION MODULE 4 WAY CONNECTOR PIN B TO 6-TOWER COIL MODULE CONN. PIN C
380	16	BLACK	ALTRONIC IGNITION MODULE 4 WAY CONNECTOR PIN C TO 6- TOWER COIL MODULE CONNECTOR PIN C
381	16	BLACK	ALTRONIC IGNITION MODULE 4 WAY CONNECTOR PIN D TO 6- TOWER COIL MODULE CONNECTOR PIN D
382	14	WHITE	GND STUD IN MODULAR REAR BOX TO GND POST STUD ON GFI COMPU VALVE MTG. BRACKET
383	18	YELLOW	VEHICLE INTERFACE CONNECTOR (F-2) FAST IDLE RELAY (SF3) COMMON TO CIRCUIT #67 (AT DASH PANEL)
384	18	RED	VEHICLE INTERFACE CONNECTOR (F-3) FAST IDLE RELAY (SF3) N.O. TO CIRCUIT #87 (AT DASH PANEL)
385	14	BLACK	FUEL FILL DOOR SW. (CNG) TO MODULAR REAR ELECT. BOX TERM. BD. NO. 3, POS. 5
386	14	WHITE	FUEL FILL DOOR SW. (CNG) TO MODULAR REAR ELECT. BOX TERM. BD. NO. 1, POS. 1
387	14	YELLOW	FRONT SIDE ELECT. PANEL DROP OUT TO LUGGAGE COMPARTMENT LAMP(S) DROP OUT
388	14	BLACK	MOD. REAR ELECT. BOX POWER TERM. BD. (BAT. POS. +12V) TO FRONT SIDE PANEL GAS SENSOR TERM.BD.
389	14	WHITE	MOD. REAR ELECT. BOX POWER TERM. BD. (BAT. NEG GND) TO FRONT SIDE PANEL GAS SENSOR TERM. BD.
390	14	LT. BLUE	SIDE PANEL CIRCUIT BREAKER NO. 19 TO HEADLIGHT SW. (5) (TAIL/MARKER L&T, INPUT)
391	14	RED	SIDE PANEL CIRCUIT BREAKER NO.22 TO DUAL ALARM WARNING BUZZER (BAT) TERM. (W/#13)
392	14	RED	HEATED AIR TANK RELAY COIL (85) TO SIDE PANEL CIRCUIT BREAKER NO.13
393	10 OR 14	RED	FRONT PANEL CIRCUIT BREAKER NO.22 TO HYDRO-MAX RESERVE PUMP RELAY (30)
394	14	RED	FRONT PANEL CIRCUIT BREAKER NO.23 TO ELECT. FAN CONTROL RELAY (30)
395	2	RED	FRONT PANEL MAIN 150 AMP CIRCUIT BREAKER TO BODY MAIN POWER SOLENOID (BAT. HOT FEED)
396	14	WHITE	FRONT PANEL GND STUD TO SIDE PANEL GND STUD
397	10	WHITE	SIDE PANEL GND STUD TO FRAME GND
398	14	GREEN	BRAKE WARNING LAMP TO HYDRO-MAX CONTROL MODULE (C)
399	14	BROWN	DUAL ALARM WARNING BUZZER(S) TO HYDRO-MAX CONTROL MODULE(C)
400	14	ORANGE/WHITE	FRONT PANEL CIRCUIT BREAKER NO.5 TO HYDRAULIC BRAKE SWITCH (INPUT)
401	14	ORANGE/BLACK	STOP LIGHT SWITCH TO HYDRO-MAX CONTROL MODULE (H)
402	14	RED	DIODE ASM. 1 & 2 (OUTPUT) TO HYDRO-MAX RESERVE PUMP MOTOR RELAY (85)
403	14	WHITE	GND STUD ON FRONT PANEL TO HYDRO-MAX CONTROL MODULE (D)
404	14	RED/BLACK	DIODE ASM. 1 & 2 (OUTPUT) TO HYDRO-MAX CONTROL MODULE (E)
405	14	WHITE	HYDRO-MAX RESERVE PUMP MOTOR RELAY (86) TO HYDRO-MAX CONTROL MODULE (A)
406	10	RED	HYDRO-MAX RESERVE PUMP MOTOR RELAY (87) TO HYDRO-MAX RESERVE PUMP MOTOR
407	14	RED	HYDRO-MAX RESERVE PUMP MOTOR TO HYDRO-MAX CONTROL MODULE (F)
408	14	WHITE/BLACK	HYDRO-MAX CONTROL MODULE (A) TO PRESSURE DIFFERENTIAL SWITCH
409	14	WHITE	PRESSURE DIFFERENTIAL SWITCH TO FLOW SWITCH
410	14	ORANGE/BLACK	DIODE ASM./(INPUT) TO HYDRO-MAX CONTROL MODULE (G)
411	14	RED	PARK BRAKE WARNING LAMP TO BRAKE WARNING LAMP
412	14	WHITE	IGNITION SW. (GND) POS. TO PARK BRAKE WARNING LAMP (INPUT)
413	14	BLUE	PARK BRAKE SWITCH TO PARK BRAKE WARNING LAMP
414	16	RED	ELECT. FAN CONTROL RELAY (87A) TO DIODE ASM.
415	14	RED	IGNITION SW. (IGN, RUN) POS. TO ALTERNATOR EXTERNAL IGN. POST
416	16	BLUE	BRAKE WARNING LAMP (+12V) TO LOW BRAKE FLUID WARNING LAMP
417	16	BLUE/WHITE	LOW BRAKE FLUID WARNING LAMP TO LOW LEVEL SW. IN BRAKE FLUID RESERVOIR
418	16	WHITE	LOW LEVEL SW. IN BRAKE FLUID RESERVOIR TO GND STUD ON FRONT PANEL
419	14	WHITE	STOP LAMP RELAY GND TO GND STUD ON FRONT PANEL
420	14	WHITE	HEATED AIR TANK DRAIN RELAY GND TO GND STUD ON FRONT PANEL
421	14	GRAY/WHITE	HEATED AIR TANK DRAIN RELAY (87) TO AIR TANK HEATED DRAINS
422	14	BLACK	DIODE ASM. (OUTPUT) TO DELCO 21SI ALTERNATOR TERMINAL "I"
423	14	RED	DIODE ASM. NO. 1 & 2 (OUTPUT) JUMPER
424	16	WHITE	PARK BRAKE SW. AND HYD. BRAKE FLOW SW. (GND) TO GND STUD ON SIDE ELECT. PANEL
425	16	RED	2 AMP INLINE FUSE HOLDER TO INDEX FAN/SHUTTER SENSOR (+12V) POS. A
426	16	BLACK	INDEX FAN/SHUTTER SENSOR (GND) POS. B TO GND STUD ON FRONT PANEL
427	16	BLUE	INDEX FAN/SHUTTER SENSOR (175°F NC) POS. C TO INDEX SHUTTER INLET AIR TEMP. SENSOR POS. A
428	16	RED	7.5 AMP INLINE FUSEHOLDER TO SHUTTER CONTROL RELAY (+12V) TERM. 30
429	16	BLUE	INDEX SHUTTER INLET AIR TEMP. SENSOR (POS. B) TO SHUTTER CONTROL RELAY TERM. 85
430	16	WHITE	INDEX SHUTTER INLET AIR TEMP. SENSOR (POS. C) TO GND STUD ON FRONT PANEL
431	16	WHITE	ELECT. FAN CONTROL RELAY TERM. 86 TO GND STUD ON FRONT PANEL
432	16	WHITE	SHUTTER CONTROL RELAY TERM. 86 TO GND STUD ON FRONT PANEL
433	16	BLUE	SHUTTER CONTROL RELAY TERM. 87 TO SHUTTER SOLENOID (+12V)
434	16	WHITE	ELECT. FAN CLUTCH (GND) POS. B TO GND STUD ON FRONT PANEL
435	14	RED	FRONT PANEL CIRCUIT BREAKER NO.24 TO 7.5 AMP INLINE FUSE HOLDER
436	14	RED	FRONT PANEL CIRCUIT BREAKER NO.24 TO 2 AMP INLINE FUSE HOLDER
437	16	WHITE	SHUTTER SOLENOID GND TO FRAME GND
438	14	WHITE	STARTER RELAY COIL GND TO FRONT PANEL GND STUD
439	16	WHITE	SPEEDOMETER GA "GND" TERM. TO RIGHT TURN SIGNAL DASH INDICATOR GND
440	16	WHITE	RIGHT TURN SIGNAL DASH IND. GND TO HI-BEAM DASH INDICATOR GND
441	16	WHITE	HI-BEAM DASH IND. GND TO LEFT TURN SIGNAL DASH INDICATOR GND
442	16	BLACK	SIDE PANEL CIRCUIT BREAKER NO. TO AIR DRYER RELAY COIL 85
443	16	WHITE	AIR DRYER RELAY 86 TO FRONT PANEL GND STUD
444	14	RED/WHITE	FRONT PANEL MAXIFUSE CIRCUIT BREAKER NO. TO AIR DRYER RELAY 30
445	14	WHITE	AIR DRYER HEATER GND TO FRAME GND
446	14	BROWN	PARK LAMPS (ER) LS
447	14	BROWN	PARK LAMPS (ER) RS
448	14	WHITE	AUDIBLE TURN SIGNAL BUZZER GND TO GND STUD ON SIDE PANEL
449	14	WHITE	W/S WIPER LIGHTING CONTROL RELAY TERM. 86 TO GND LUG SIDE PANEL
450	14	WHITE	W/S WIPER HEAD LIGHT RELAY TERM. 86 TO GND LUG SIDE PANEL
451	14	WHITE	W/S WIPER TAIL LIGHT RELAY TERM. 86 TO GROUND LUG SIDE PANEL
452	16	WHITE	FAN (AIR) SOLENOID VALVE GND TO STARTER RELAY MTG. BRACKET
453	16	WHITE	STARTER RELAY COIL GND TO MTG. BRACKET

- NOTES:
- 1.) WIRING COLORS-FIRST COLOR INDICATES BASE COLOR OF WIRE. ONE DIAGONAL SLASH INDICATES ONE TRACER STRIPE, TWO DIAGONAL SLASH MARKS INDICATE TWO TRACER STRIPES USED.
 - 2.) COLOR CODES ARE DIVIDED INTO GROUPS AS FOLLOWS:
 RED-GENERATOR & MAIN FEED CIRCUITS
 VIOLET-ENGINE CONTROL CIRCUITS
 DK BLUE-ENGINE ACCESSORY CIRCUITS
 YELLOW-HEADLIGHT CIRCUITS
 BROWN-CLEARANCE IDENTIFICATION MARKER & TAIL LIGHTS CIRCUIT
 LIGHT BLUE-INTERIOR LIGHTING CIRCUITS
 ORANGE-TURN SIGNAL, HAZARD & STOP LIGHTS CIRCUITS
 LIGHT GREEN-INSTRUMENT CIRCUITS
 GRAY-BRAKE SYSTEMS CIRCUIT
 BLACK-BACK UP LIGHTS
 PINK-DRIVE AID CIRCUITS
 DK GREEN-KYSOR PROTECTION CIRCUITS
 WHITE-GROUND CIRCUITS













62201002 L


CHART - ELECTRICAL
CIRCUITS w/COLOR
CODES, 1990 (CHASSIS)

SHEET 2 OF 3


**MVP-ER
MAIN BODY
SCHEMATICS**

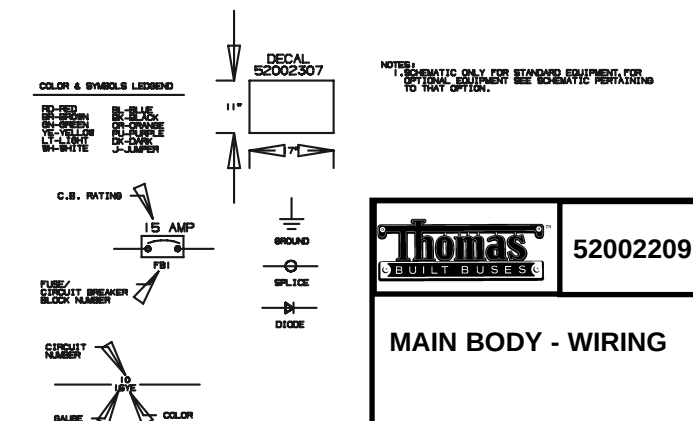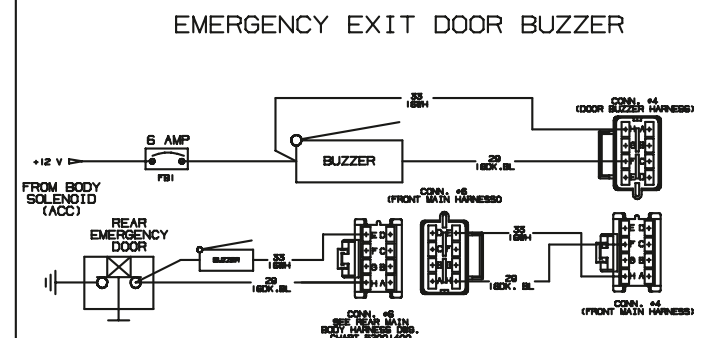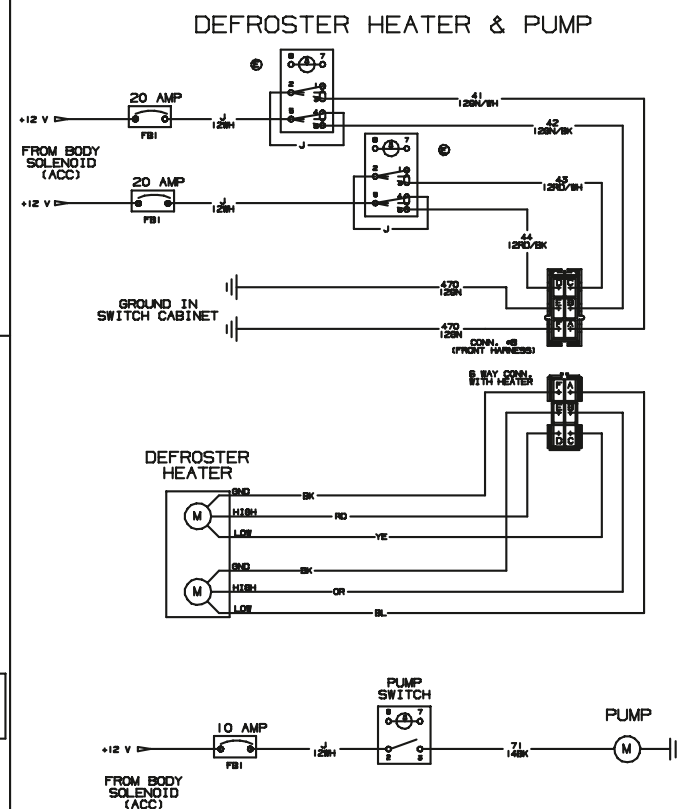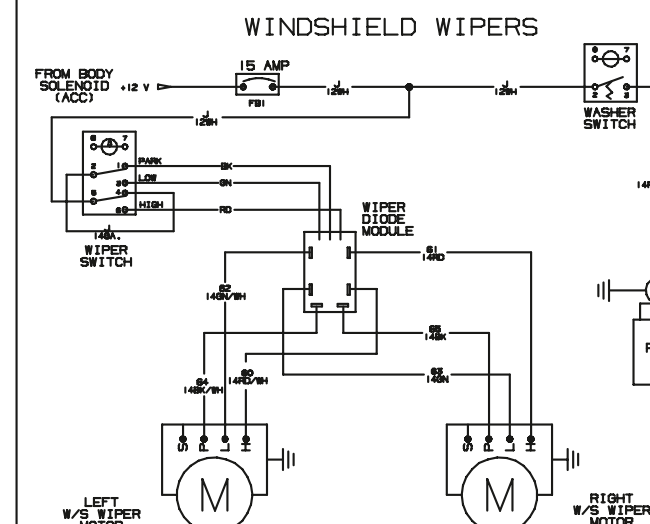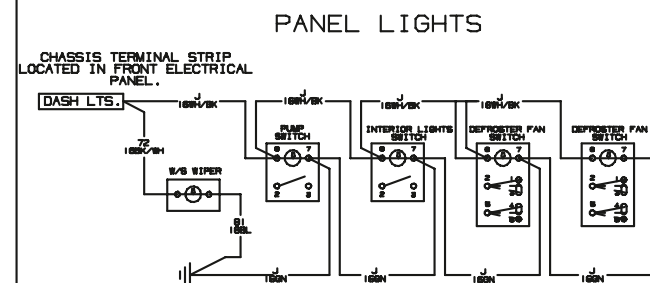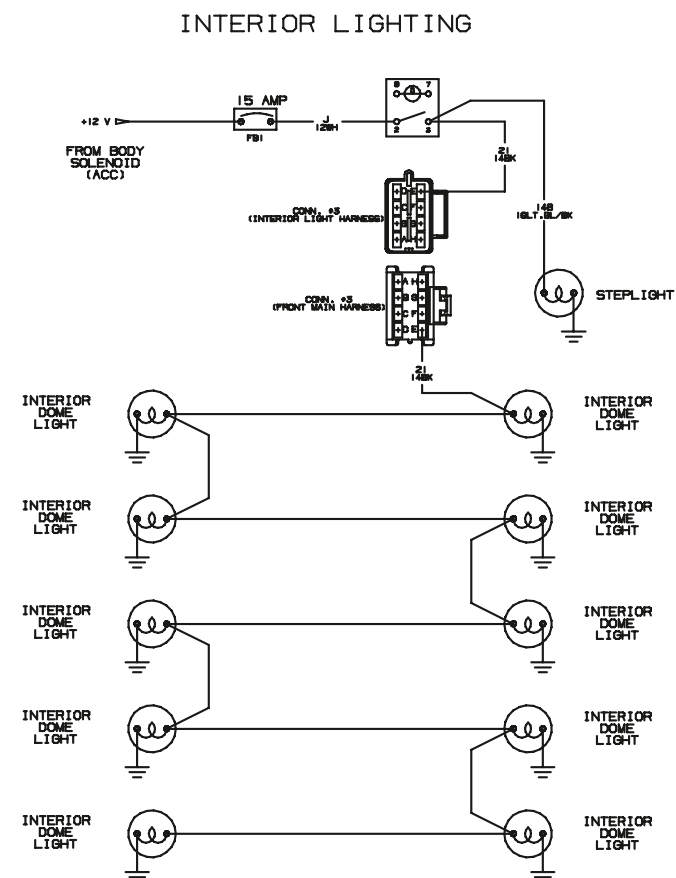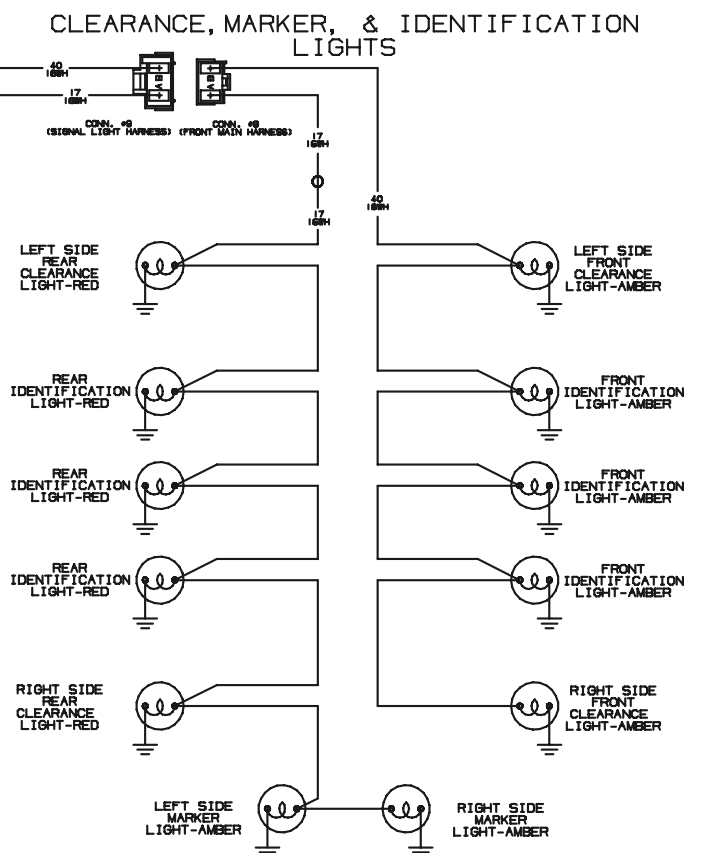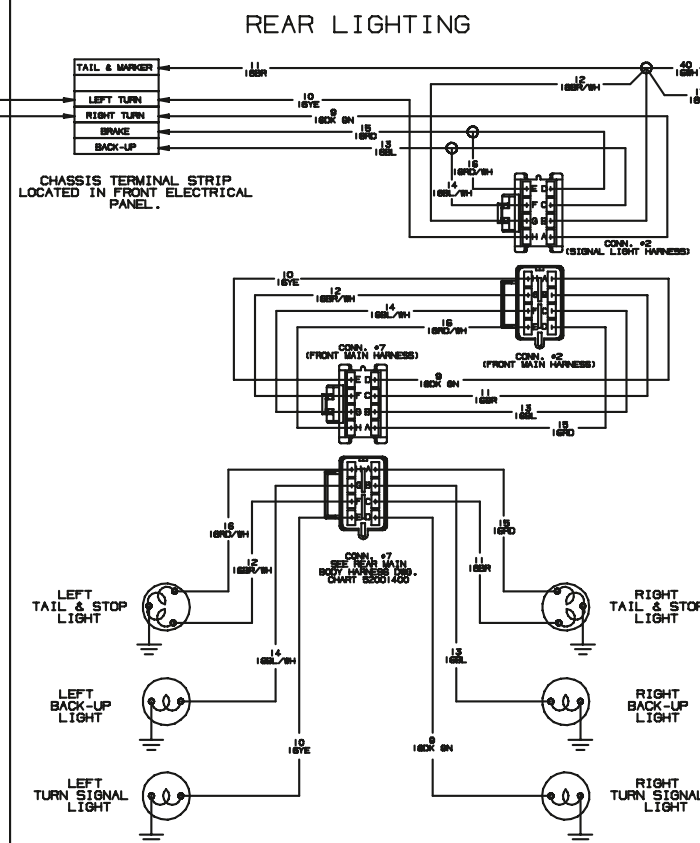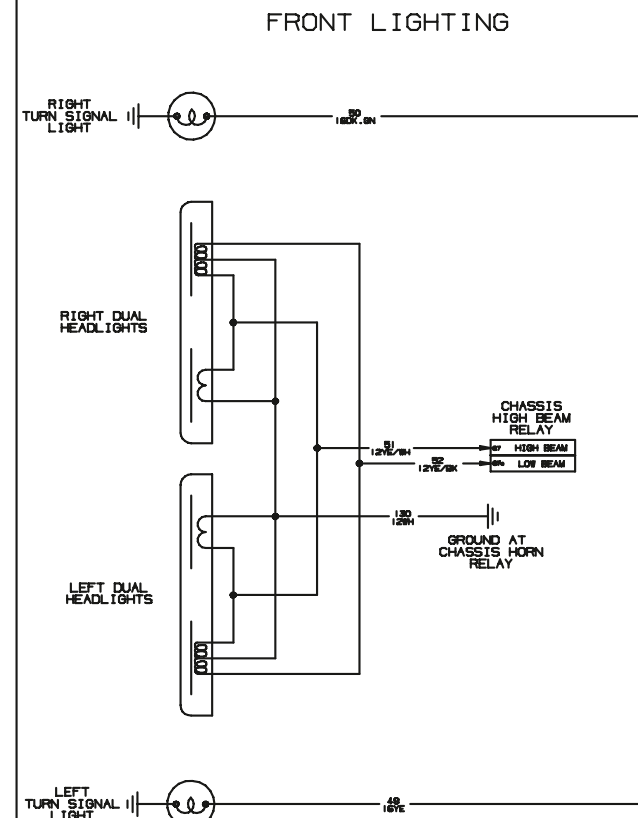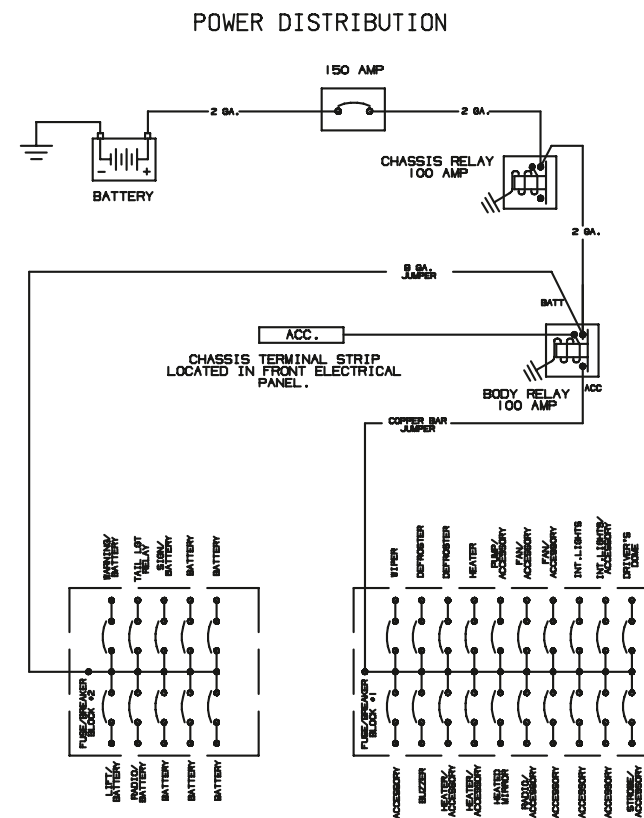


**MVP-ER
LIGHTS
SCHEMATICS**

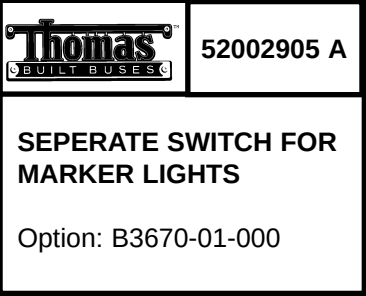


EMERGENCY EXIT DOOR BUZZER

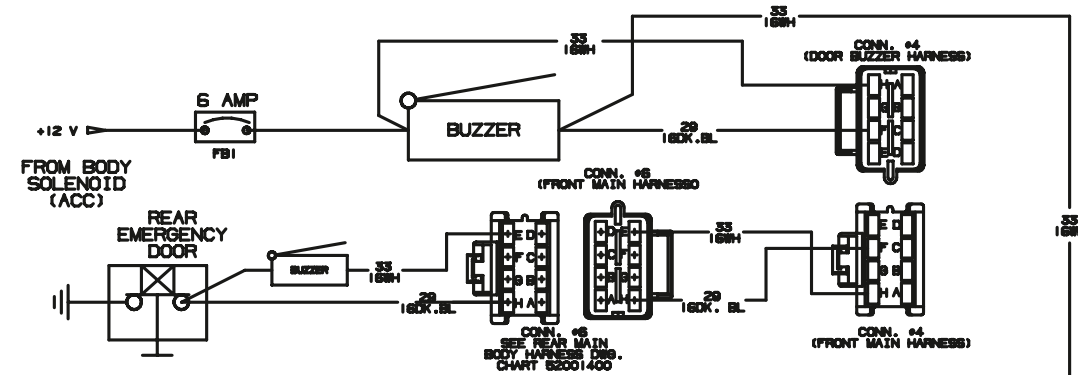

INTERIOR LIGHTING

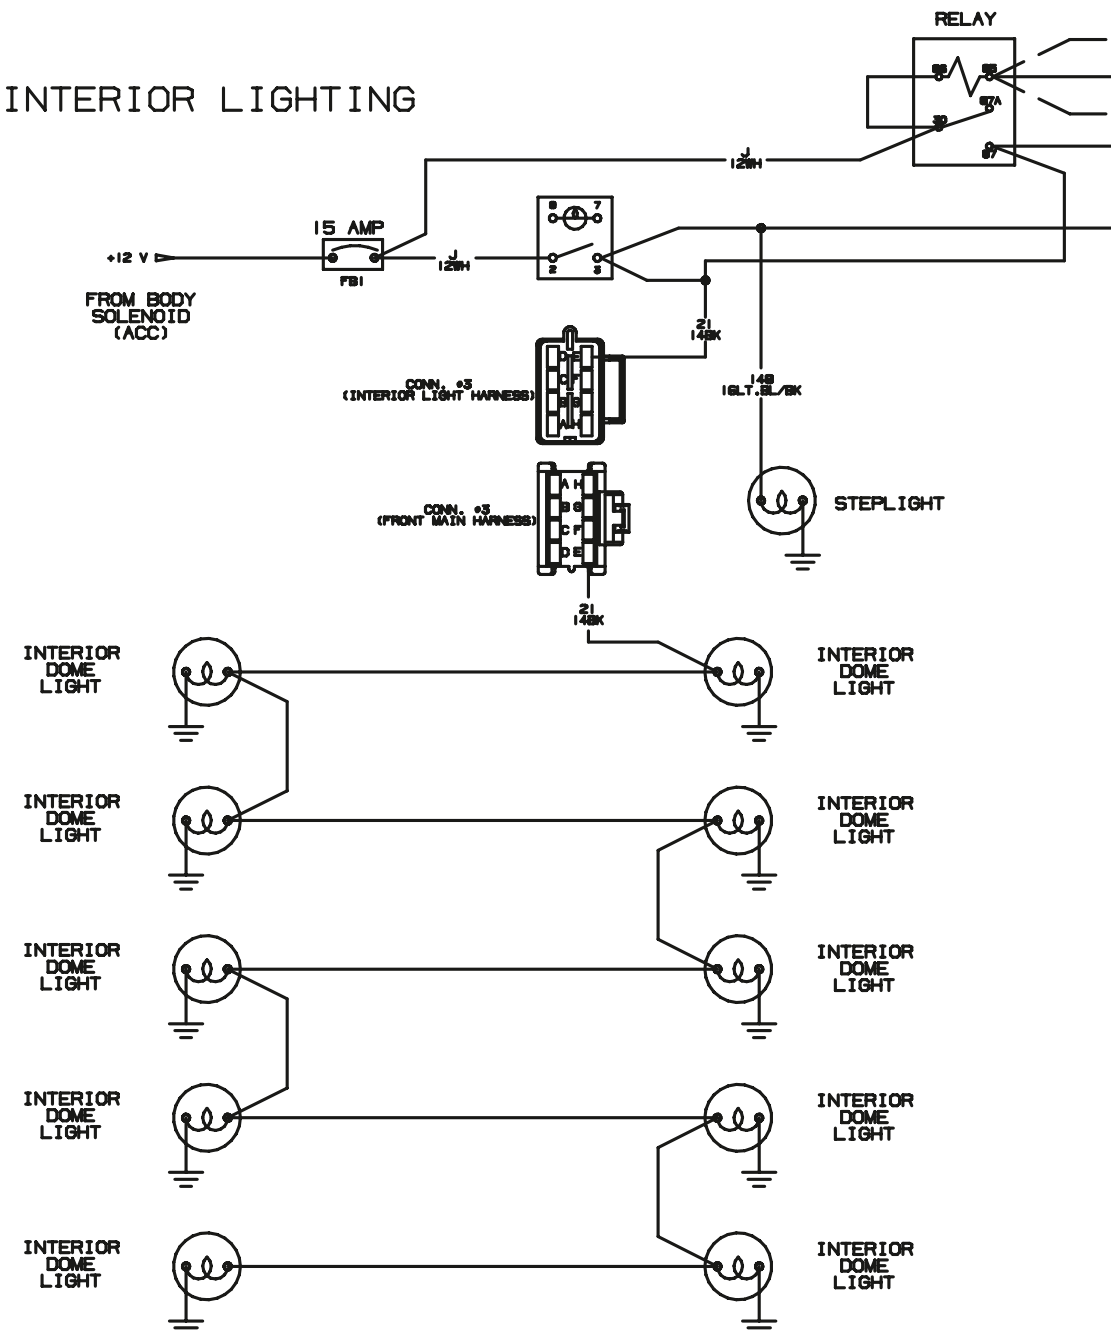

OPTIONAL EQUIPMENT

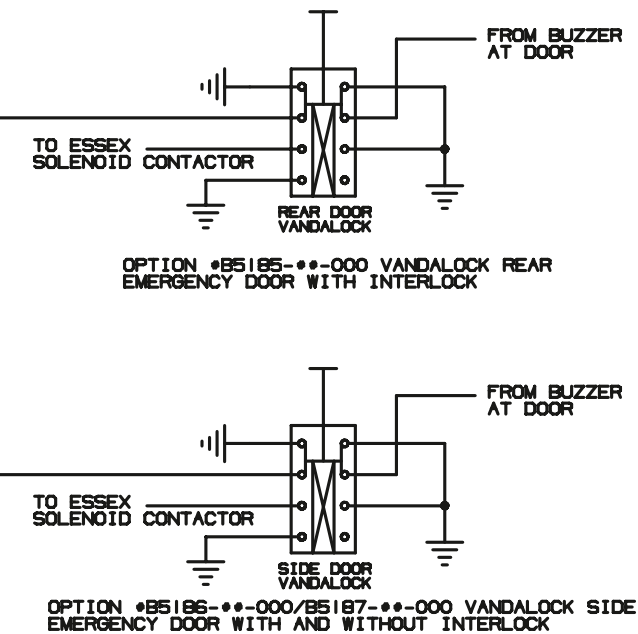


NOTE: DASHED LINE DENOTES OPTIONAL EQUIPMENT

	52003256 A
EMERGENCY DOOR ACTI- VATED DOME LIGHTS, w/ and w/o VANDALOCK	




52002281 B

**OPENING ACTIVATED
DOME LIGHTS
w/VANDALOCK**

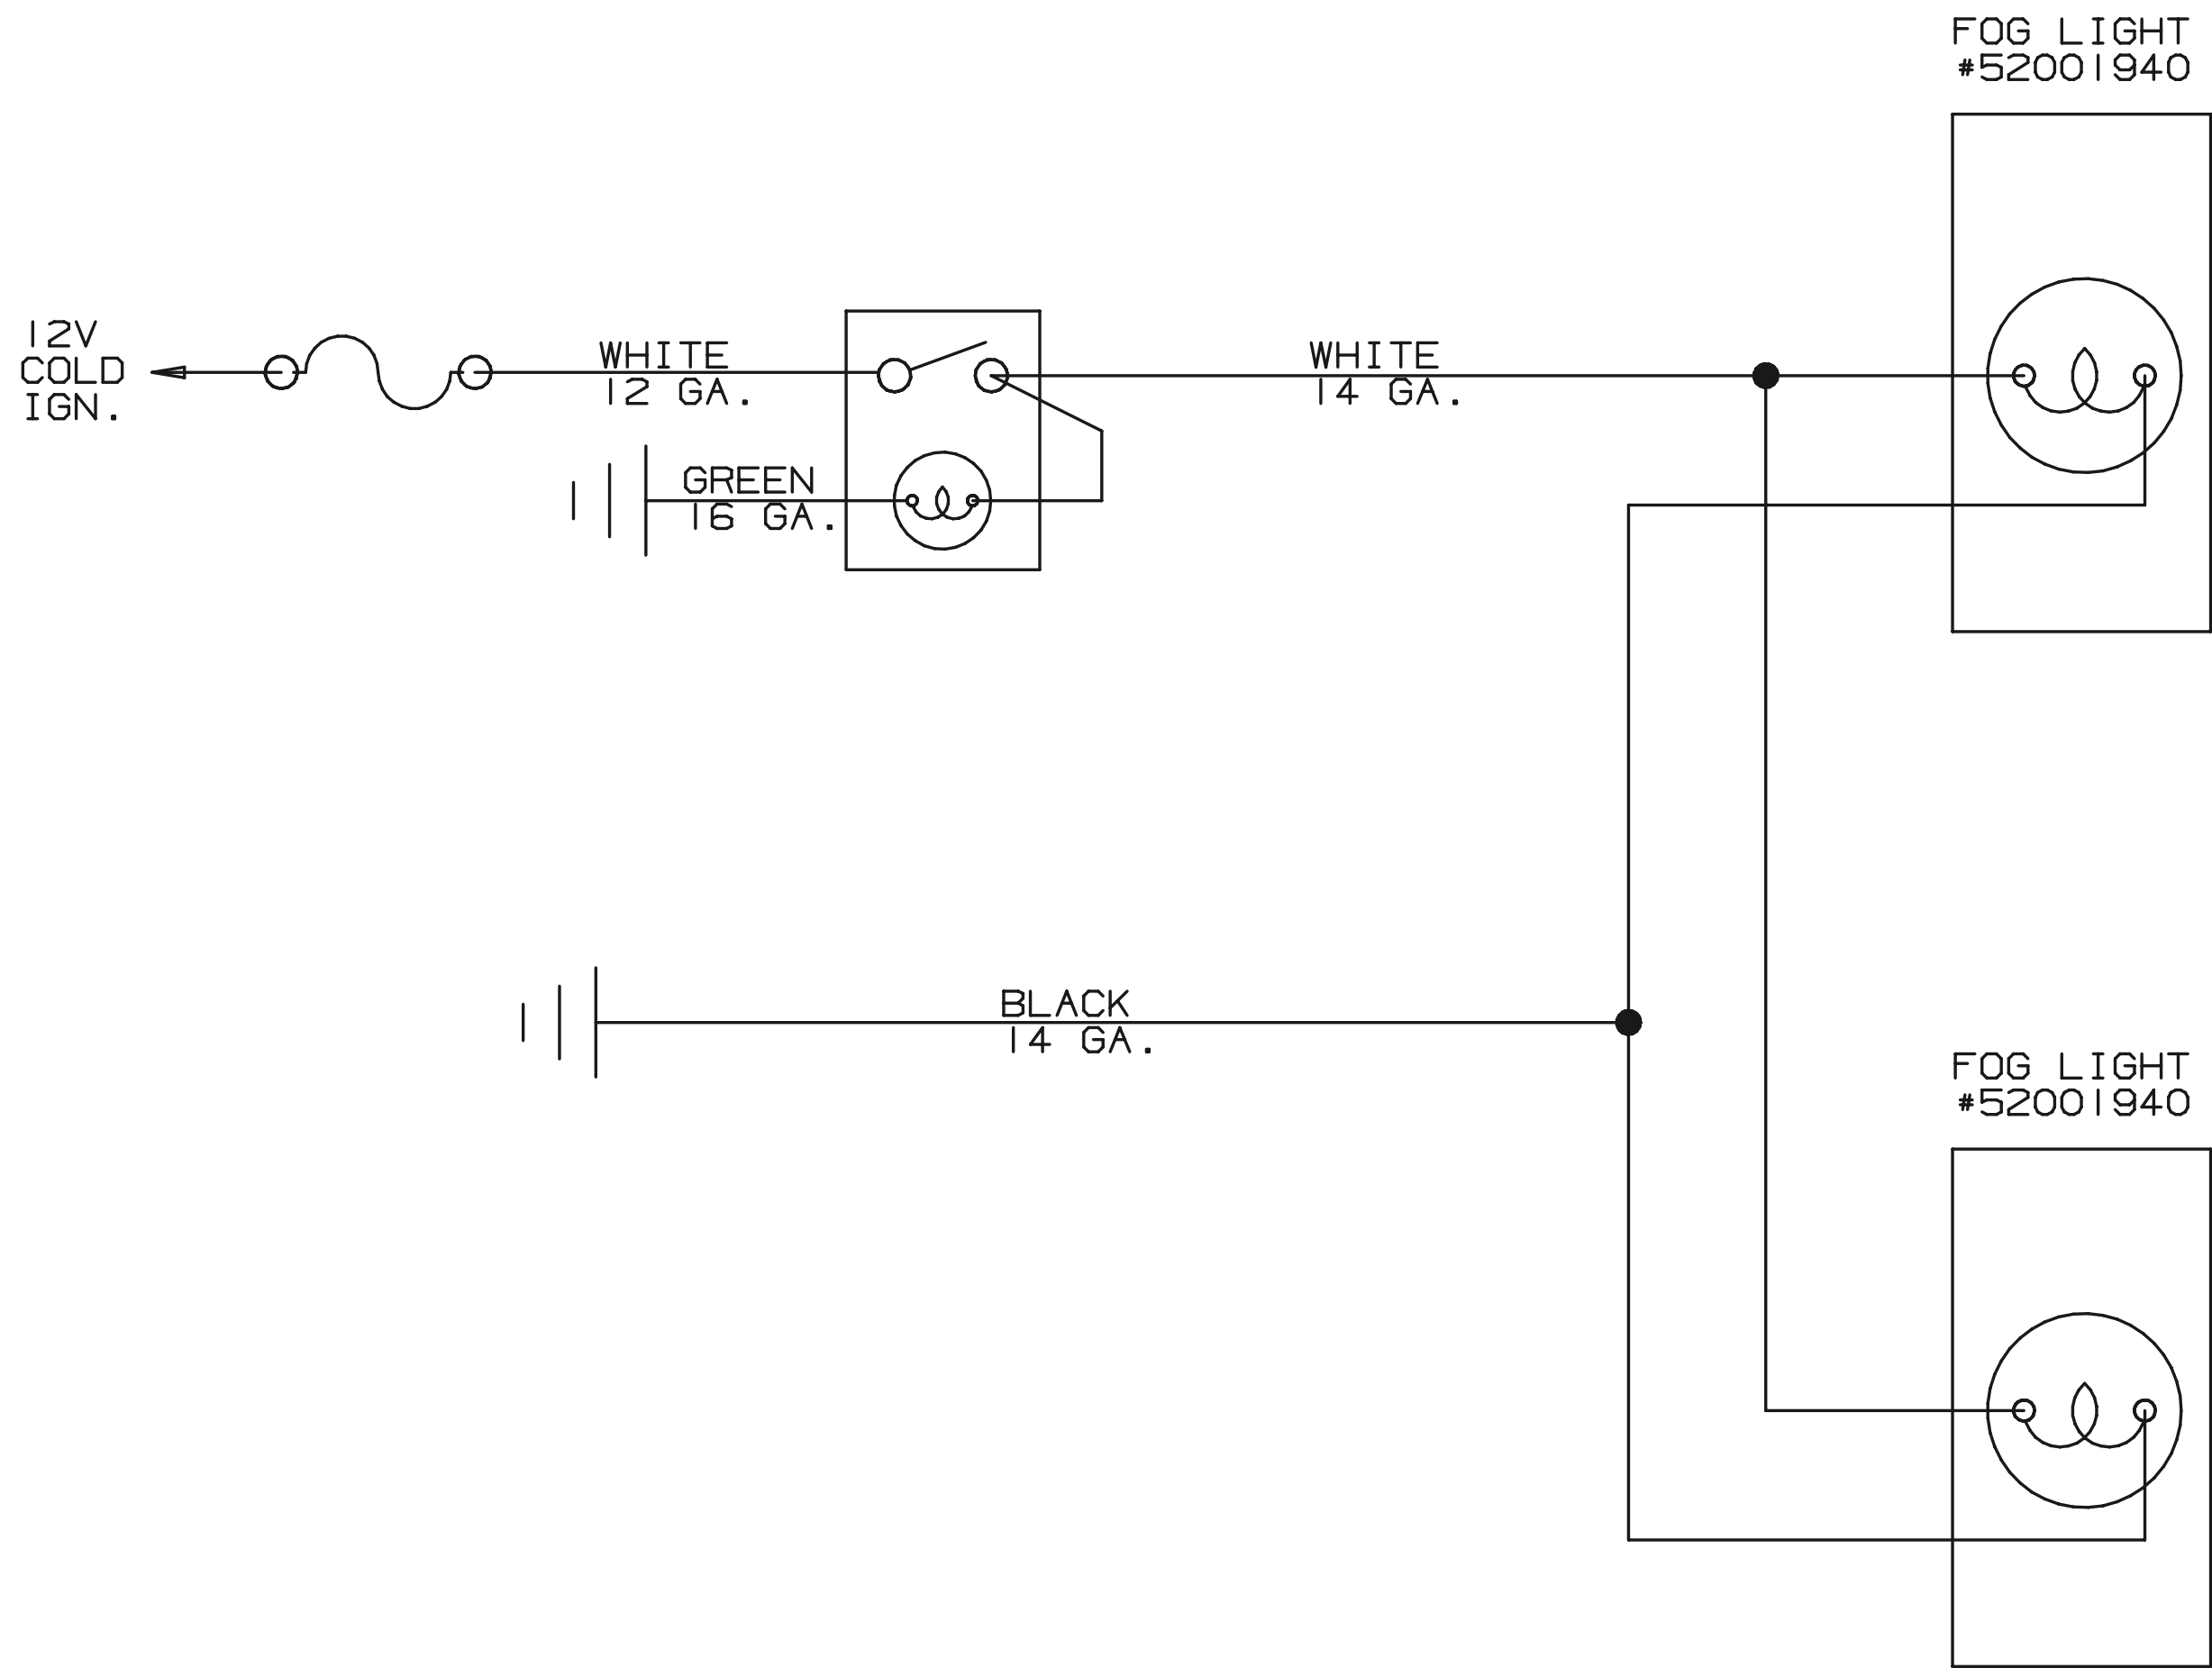

	52001947 A
FOG LIGHT	
Option: B3680-04-000	

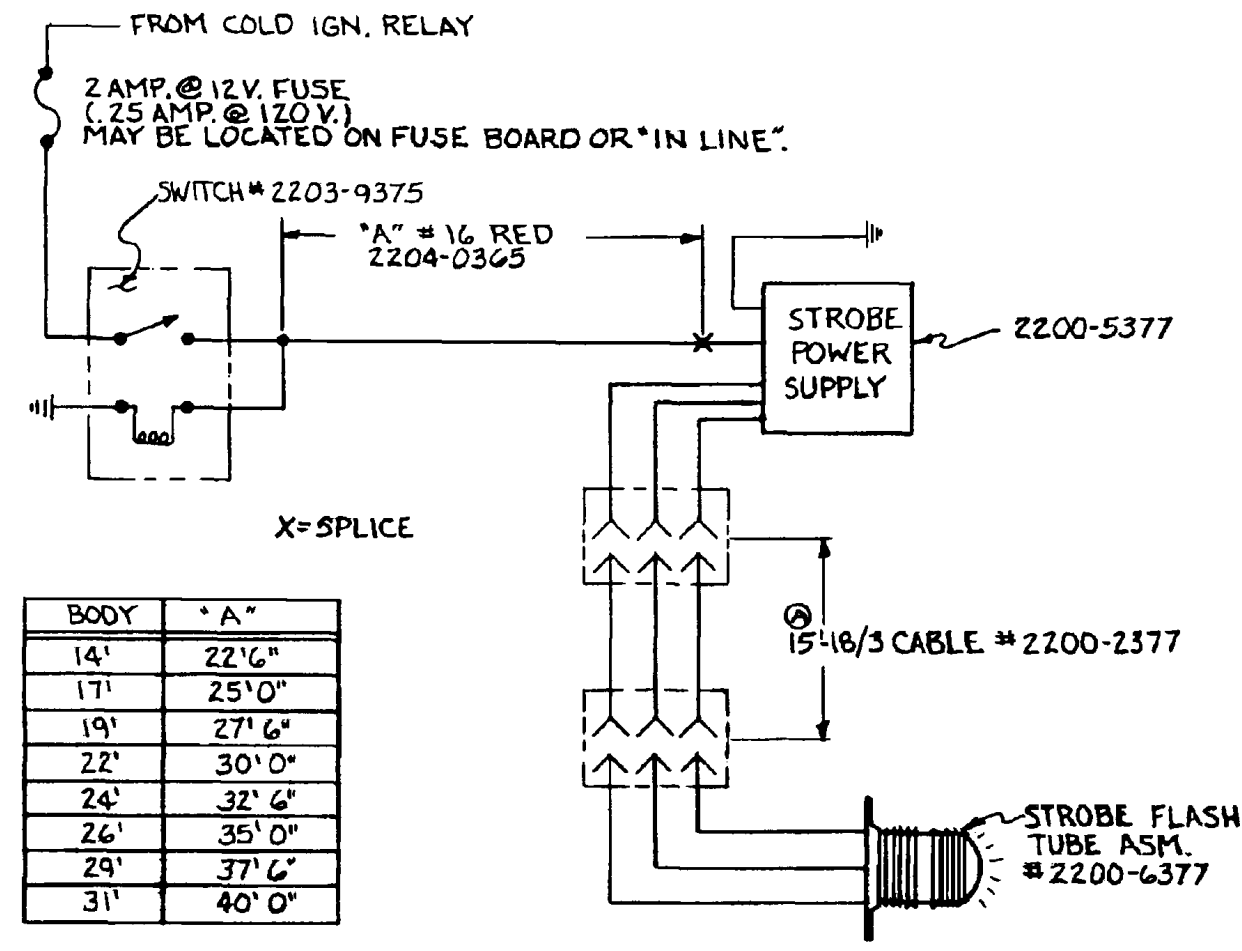

2200-3377 = KIT (2200-2371, 2200-5377, & 2200-6377)
 2200-7377 - REPLACEMENT FLASH TUBE FOR ABOVE KIT.

MATERIALS:

QTY.	PART #	TITLE
1 Ea.	2200-3377	Model SS 206 Aero Flash 16-0-0001
35'	2204-0365	Strobe (10 profile)
1 Ea.	2203-9375	Wire - #16 ga. red (2' for center roof option)
1 Ea.	2003-9376	Switch - spst w/ red pilot
2 Ea.	N/A	Label - SW, "strobe light"
1 Ea.	N/A	Jumper - 10" #16
1 Ea.	N/A	Jumper - 3" #16
2 Ea.	2202-0369	Terminal - Flange, 16-14 Wire
4 Ea.	2202-1365	Terminal - Female Snap on 16 - 14 Wire
1 Ea.	2202-3376	Connector - Pigtail, Nylon, NC 1610
1 Ea.	2207-1376	Holder - Fuse, "in-line"
1 Ea.	2200-4377	Fuse - 2 amp
6 Ea.	2992-0003	Screw - #10 Truss H D, C.R. (S.T.)
13"	2800-1373	Immont Sealer, Blk. tape


- INSTALLATION: OPTION # B3710-01-000 (Rear Roof)**
- The switch is to be mounted in the switch cabinet as close as practical to the warning light switches & labeled.
 - It is to be fed hot from the cold side of the ign. relay. It is to be fed thru an "in-line" fuse holder w/ a 2 amp. fuse (could be 1 amp. at 120V). The switch pilot light is to be fed from the cold side of the switch & grounded in the switch cabinet.
 - The red #16 Ga. wire is to be run from the cold side of the switch to the approx. center of the rear header along the conv. wiring route.
 - The D.C. power supply is to be located on the flange of the rear header. The black wire from the power supply is to be grounded to the rear header under the power supply case flange. 2 #10 screws are to be used to secure the power supply. The red wire is to be butt spliced to the red wire from the power supply.
 - The #18/3 shielded cable is to be run from the power supply to the position shown for the strobe tube assembly on drawing #2206-8376.
 - The strobe tube asm. is to be located as shown on the above mentioned drawing. A 1" dia. hole will be required to bring wiring thru the roof sheet. The flange of the strobe tube asm. is to be caulked w/ a suitable sealer such as Immont Sealer Tape. The strobe tube asm. is to be secured w/ 4 #10 tapping screws.
- For wiring diagram refer to drawing #2200-1377.

- Installation: Option # B3701-00-000 (Center Roof) (B)**
- All instructions are same as above except Items #3 & 4 should read as follows:
- The red #16 gage wire is to run from the cold side of the switch to the power supply.
 - The power supply is to be located in switch cabinet & secured using (2) #10 screws. The red wire from the switch is to be "butt" spliced to the red wire from power supply.

MATERIALS:


QTY.	PART #	TITLE
1 Ea.	2203-9375	Switch - SPST w/red pilot
1 Ea.	2203-9376	Label - SW "strobe light"
35'	2204-0365	Wire - #16 ga. red
2 Ea.	N/A	Jumper - 10", #16
1 Ea.	N/A	Jumper - 3", #16
2 Ea.	2202-0369	Terminal - Flange, 16 - 14 wire
4 Ea.	2202-1365	Terminal - Female, snap-on, 16-14
1 Ea.	2207-1376	Holder - Fuse, "in-line"
1 Ea.	2200-4377	Fuse - 2 Amp.
1 Ea.	2200-2377	Cable - 1813 Shielded, W/plubs

	22001377 B
	STROBE LIGHT

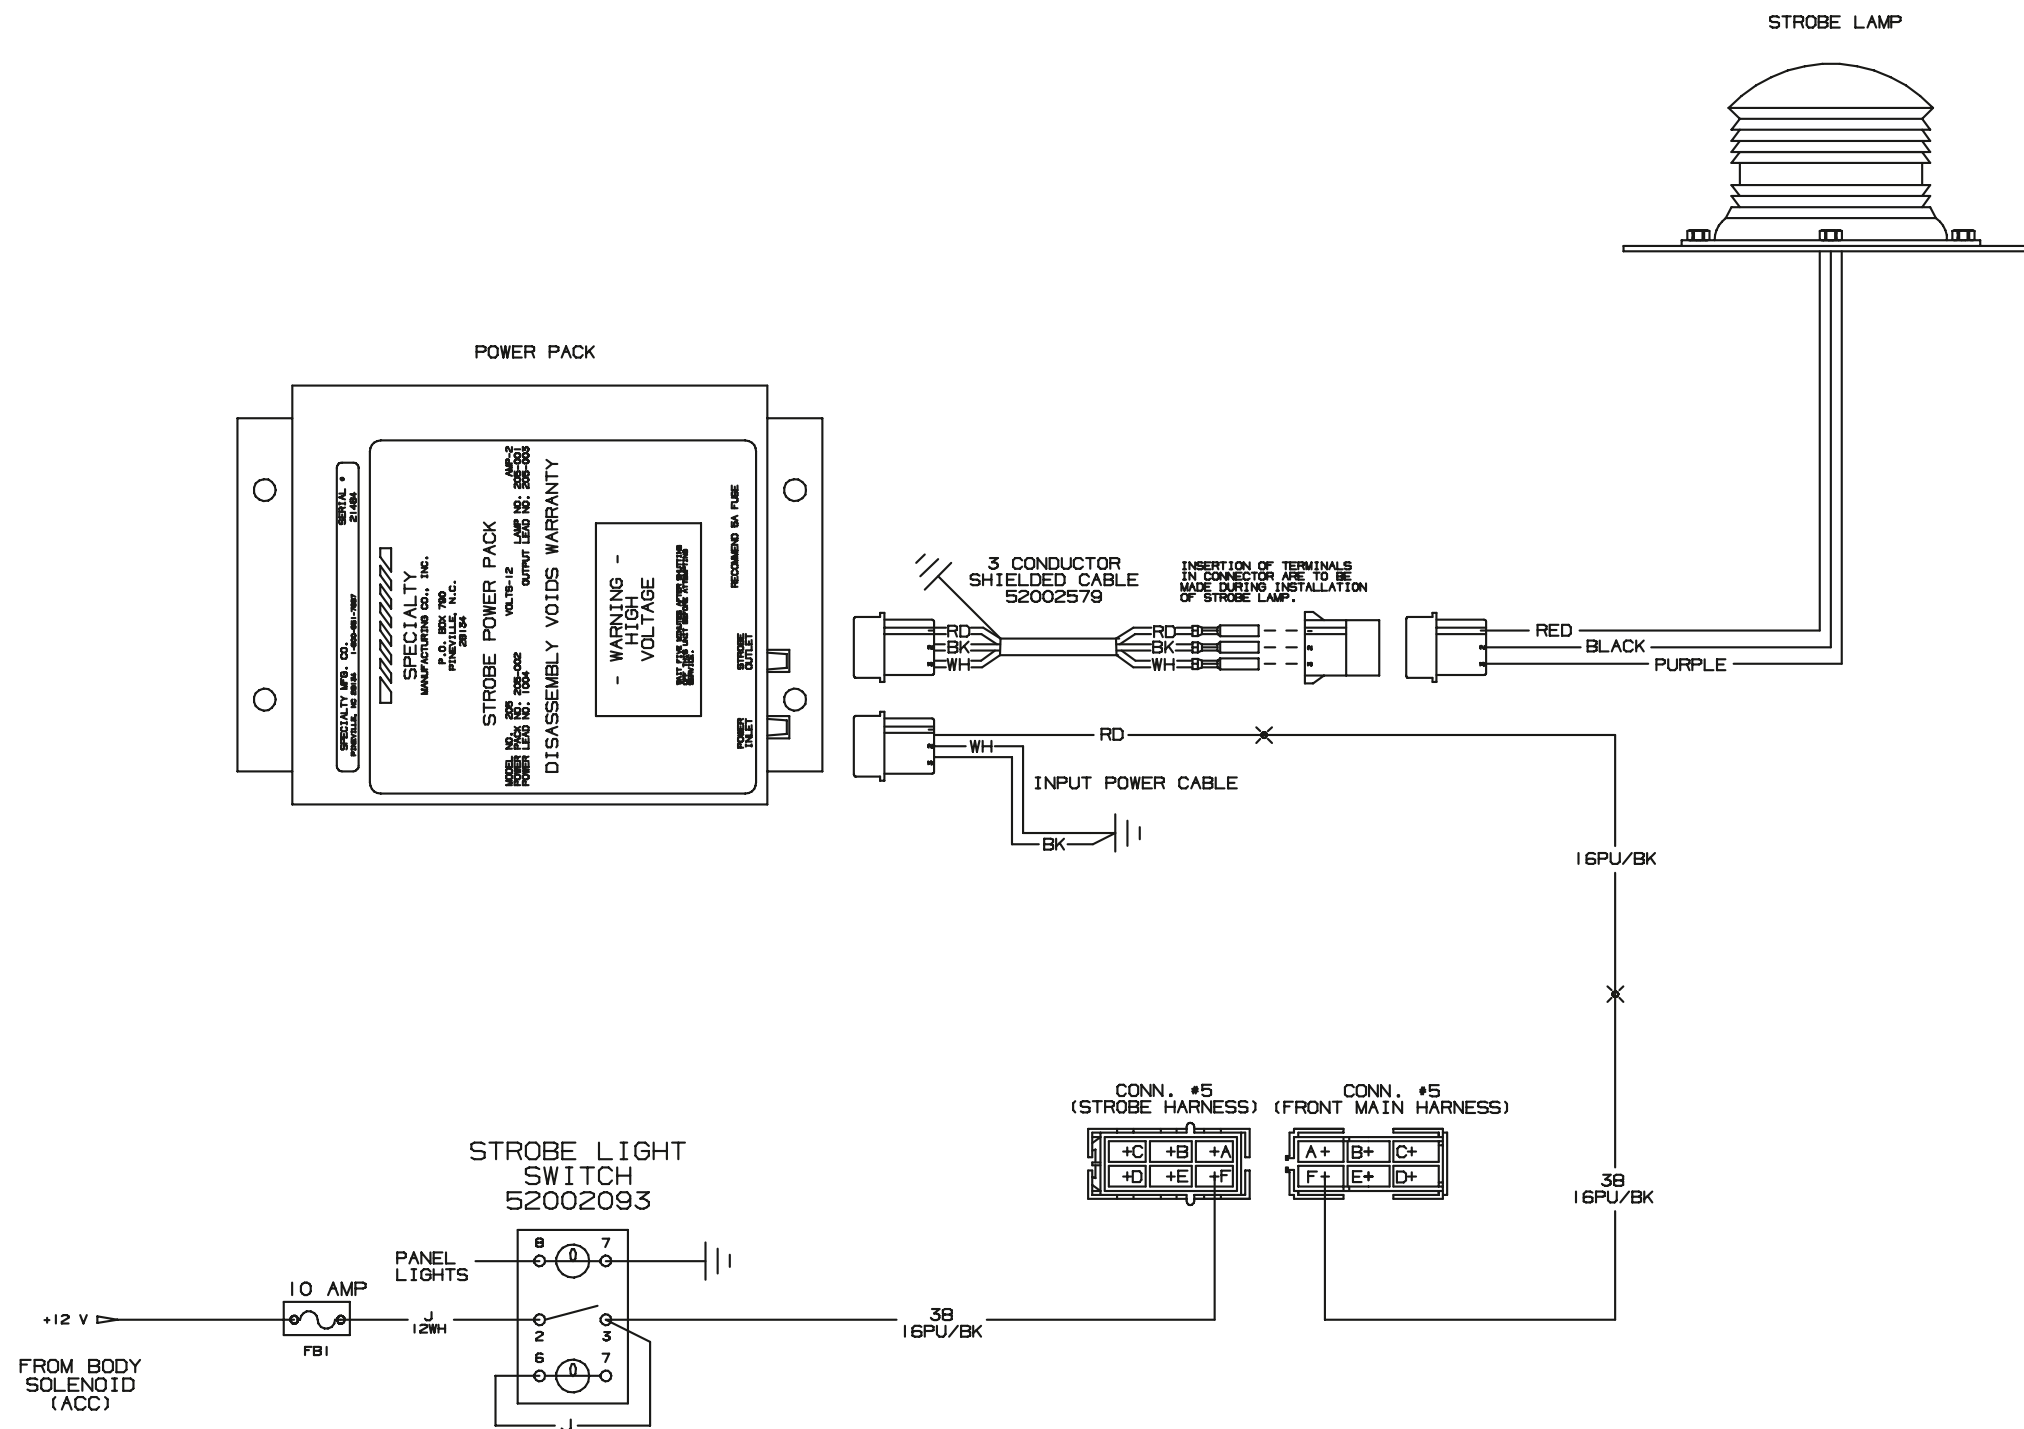


	52002582 A
STROBE LIGHT, ROOF MOUNTED, SPECIALTY MODEL #205-202	

NOTES:
1. POWER PACK, STROBE LAMP,
INPUT POWER CABLE, AND
AMP CONNECTOR ARE PART
OF KIT #52002574.

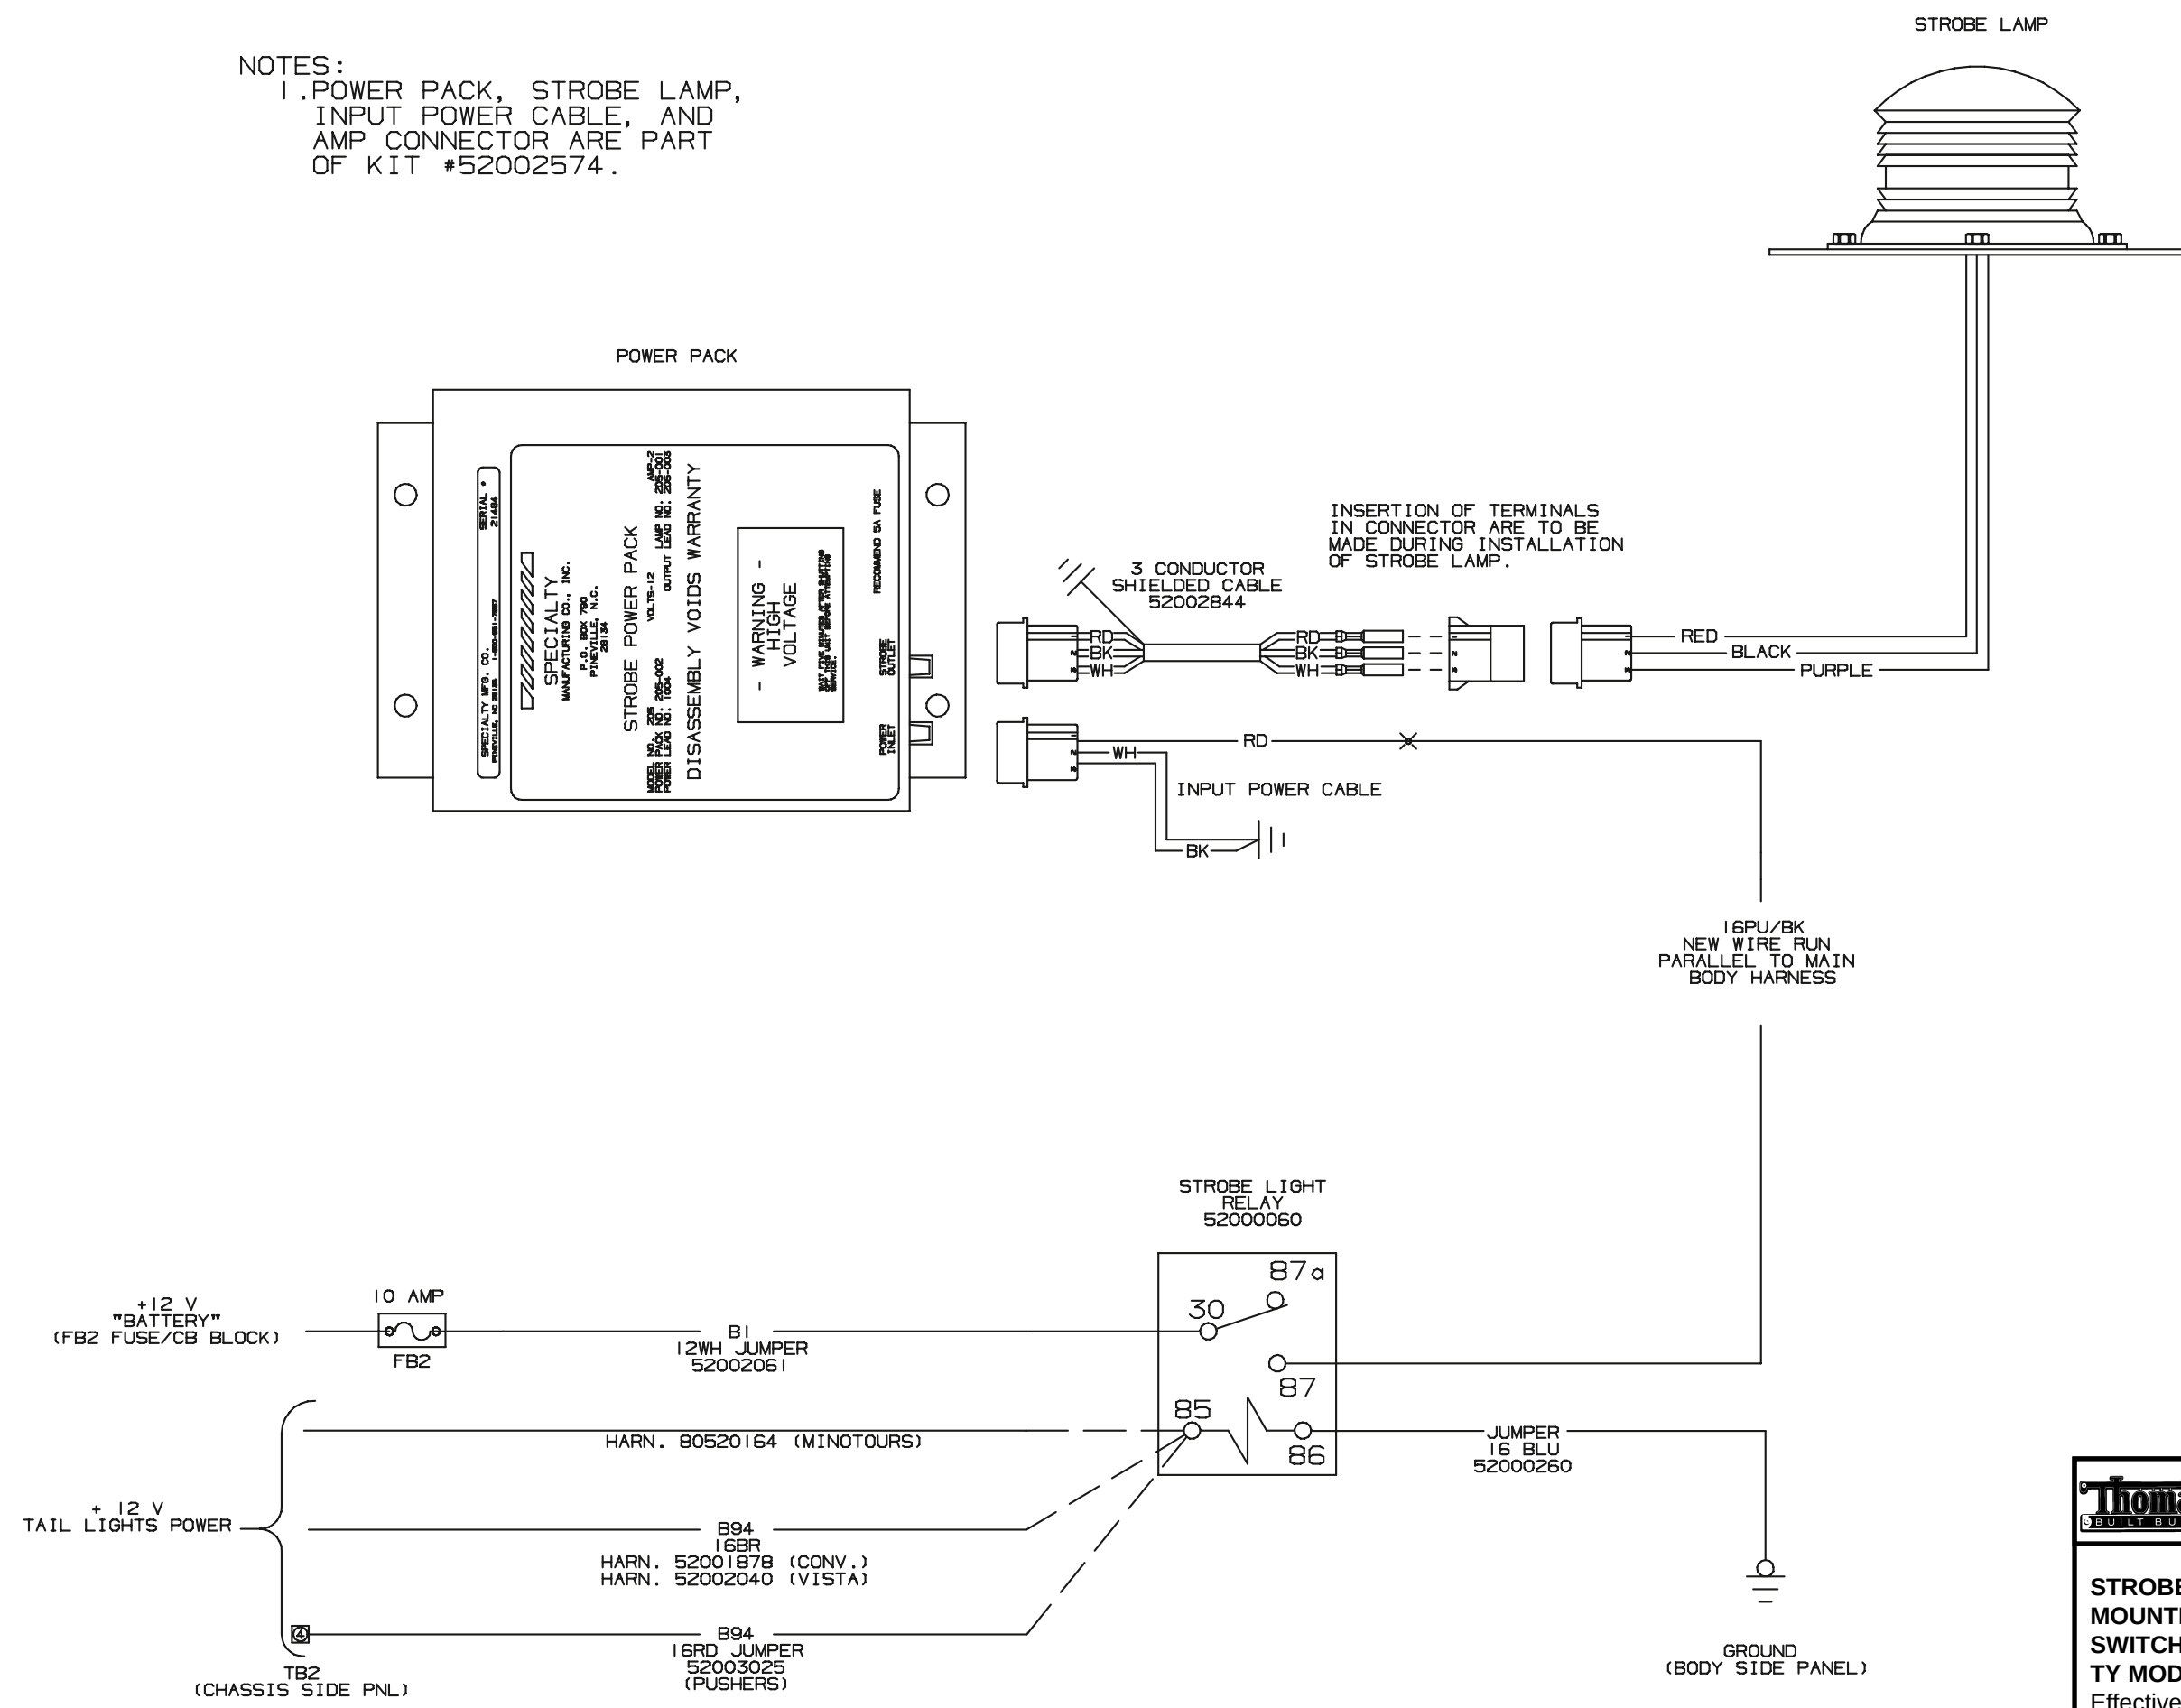


Thomas BUILT BUSES	52003000 A
STROBE LIGHT ROOF MOUNTED, HEADLIGHT SWITCH WIRED SPECIALTY MODEL #205-202	
Effective Date: 01/21/99	

NOTES:
1. POWER PACK, STROBE LAMP,
INPUT POWER CABLE, AND
AMP CONNECTOR ARE PART
OF KIT #52003064.

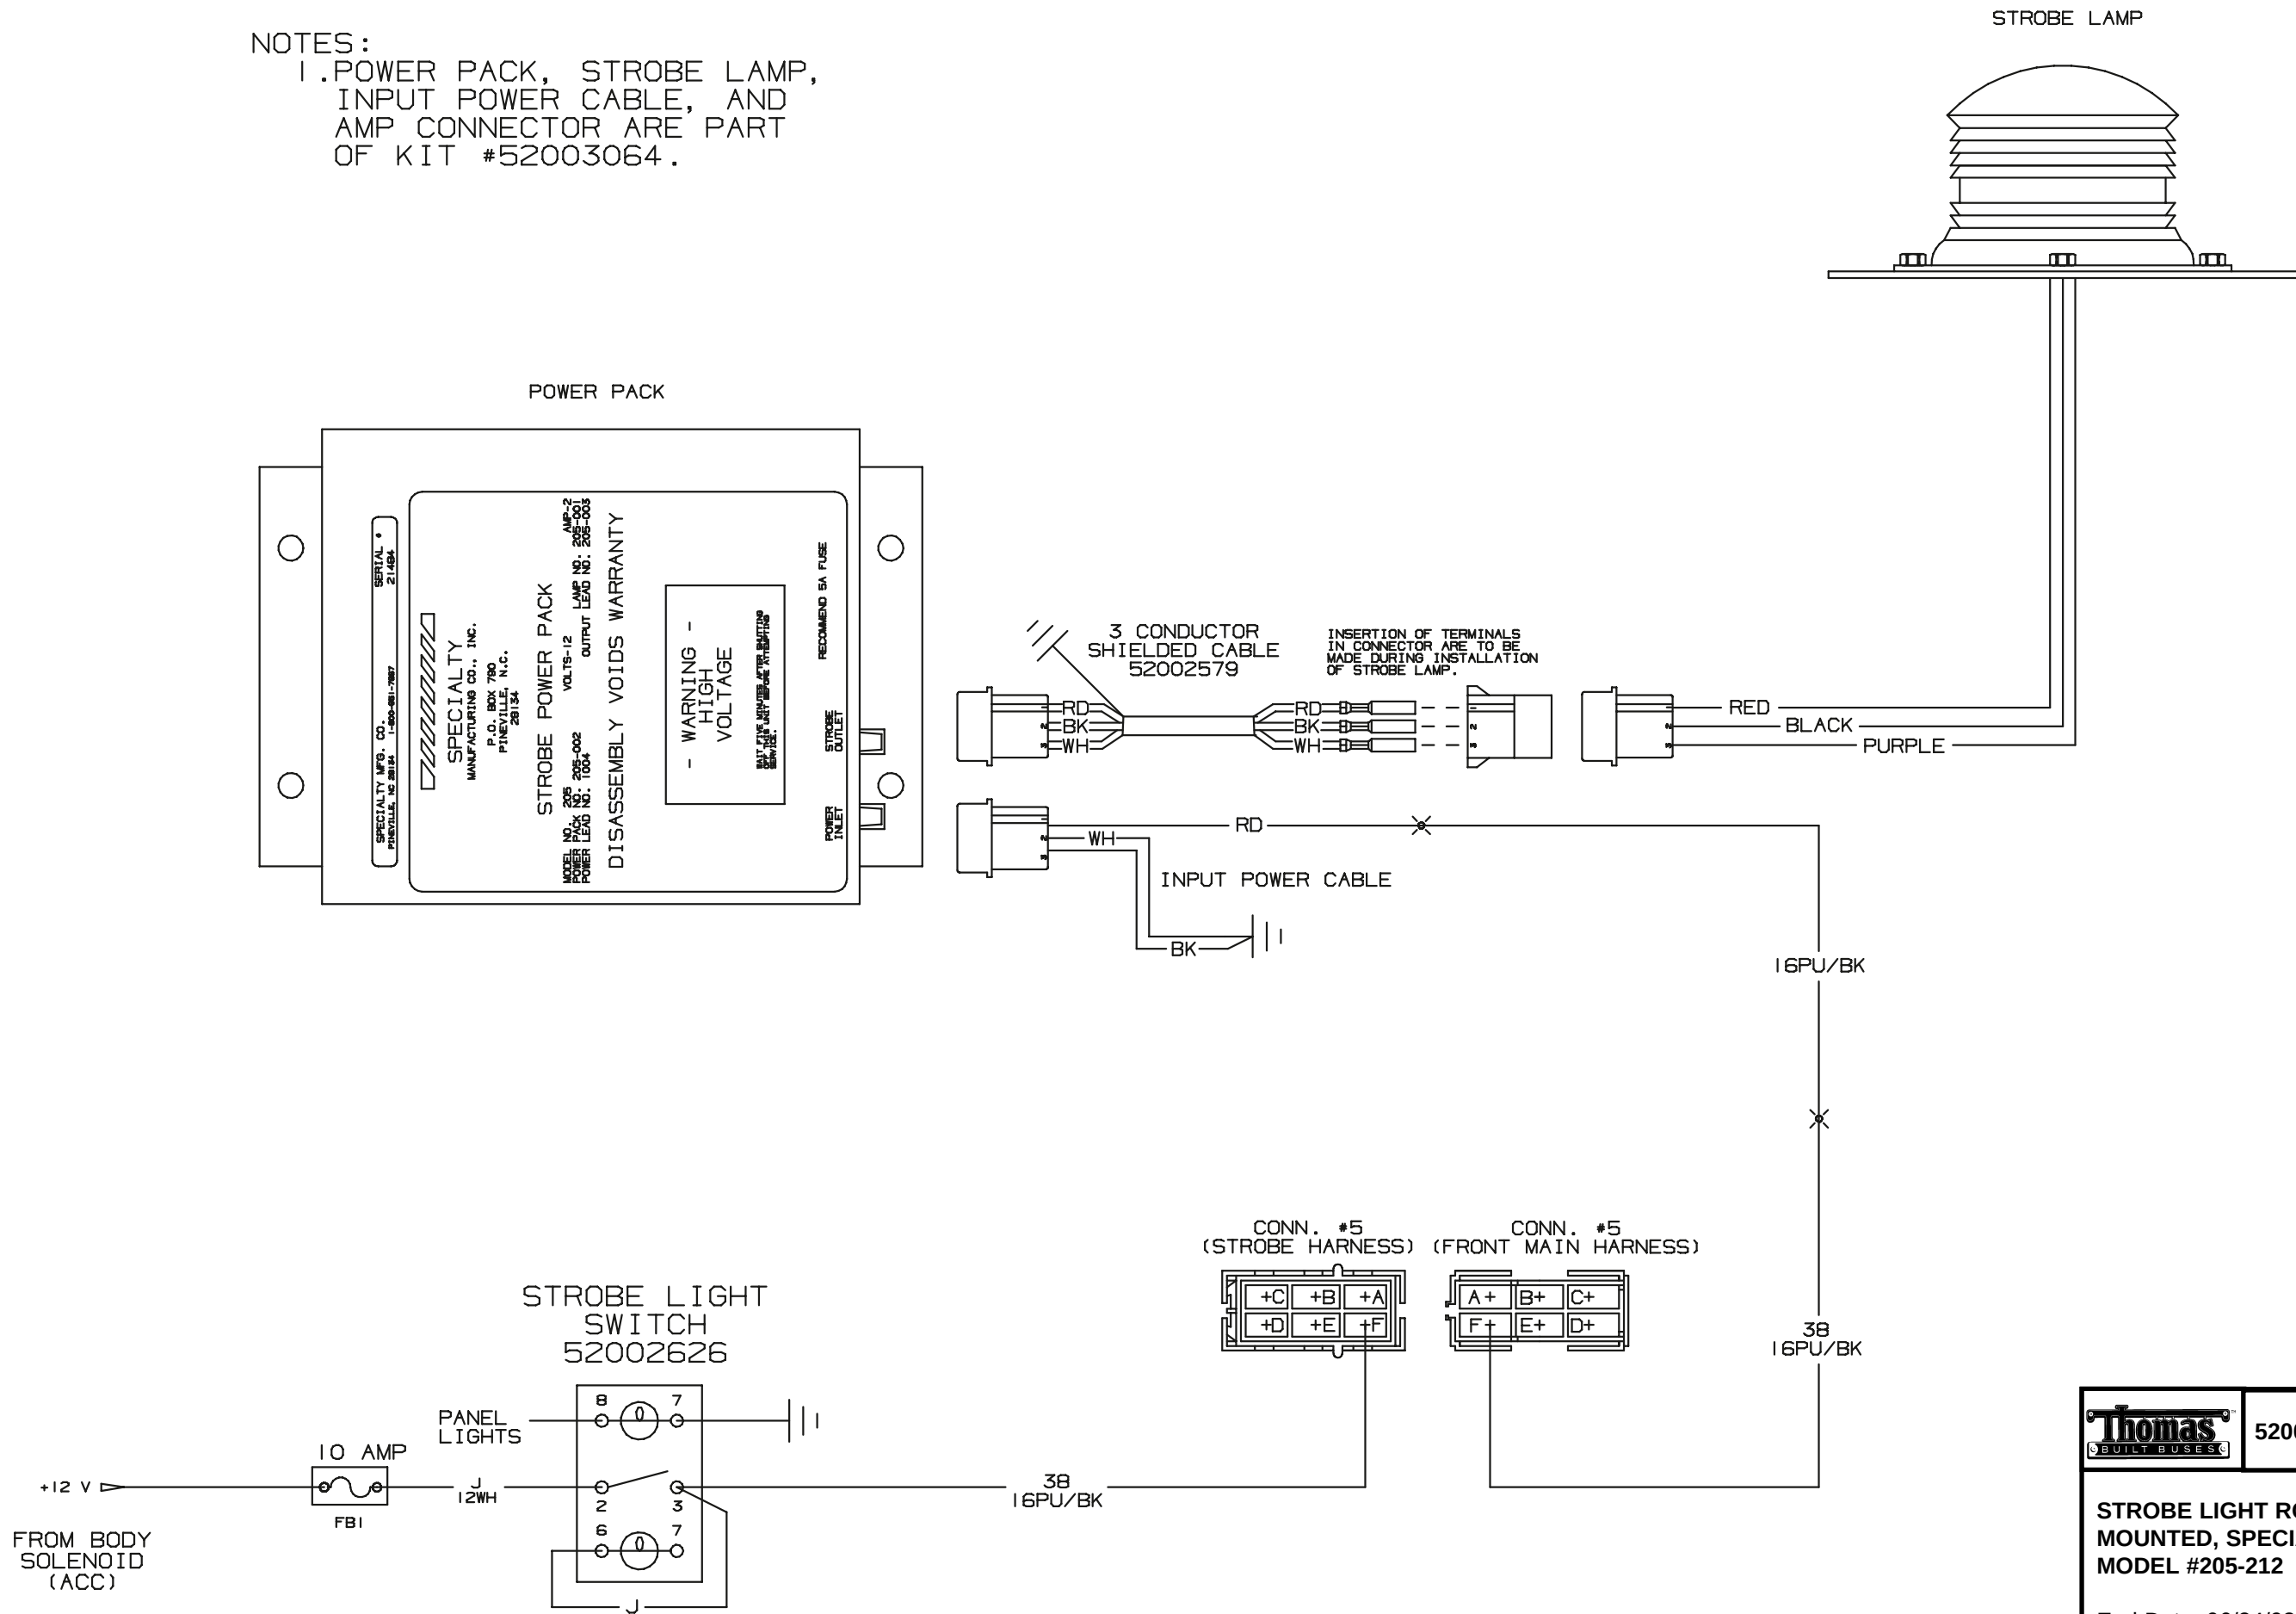


	52003065 B
STROBE LIGHT ROOF MOUNTED, SPECIALTY MODEL #205-212	
End Date: 06/24/98	

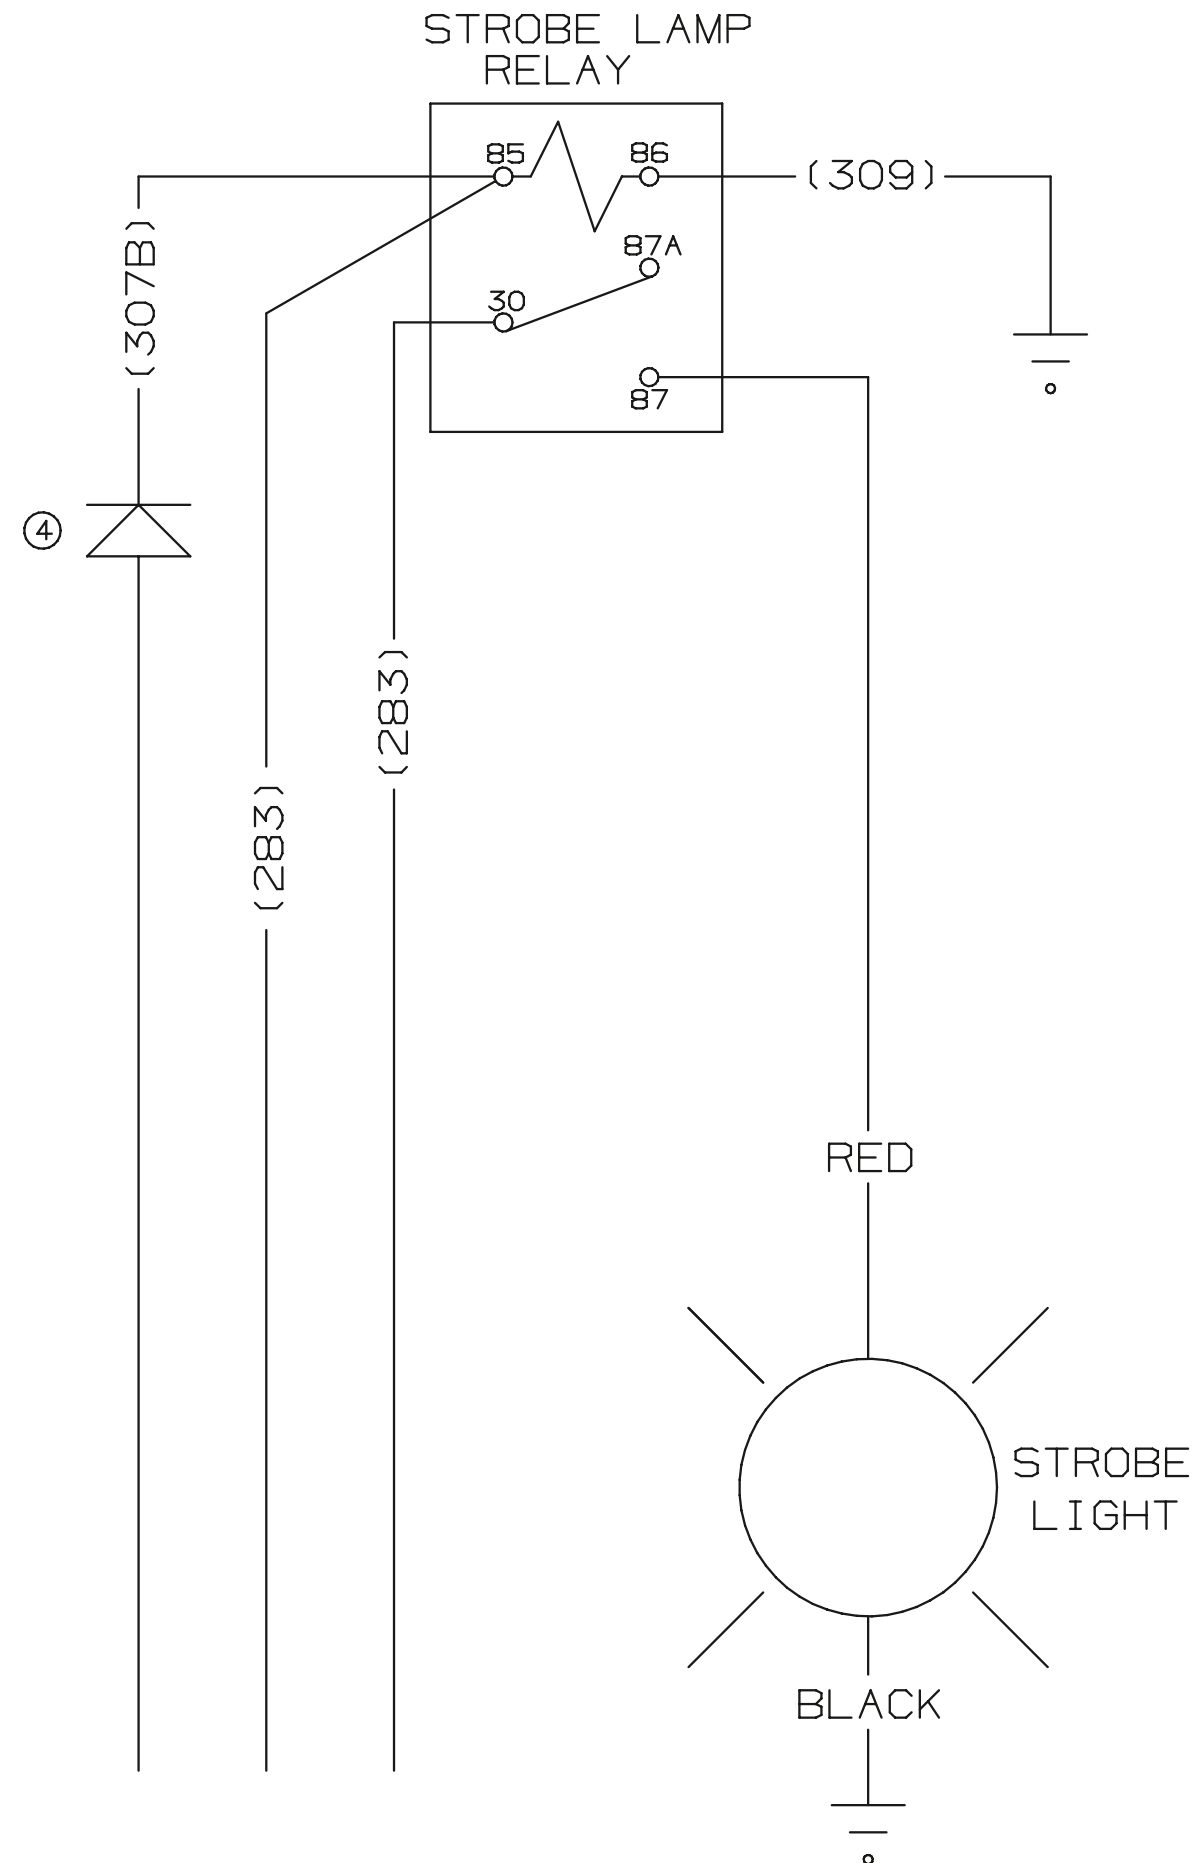

Thomas BUILT BUSES	52003154 A
STROBE LIGHT MODEL #515-410	
Effective Date: 06/25/98	

SWITCH LAYOUT

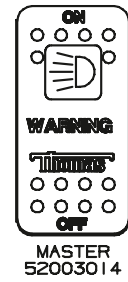


MASTER
52003014






PILOT LIGHT
52002430

FOOT
OPERATED
SWITCH
(MOMENTARY)

ACTIVATION
22146365

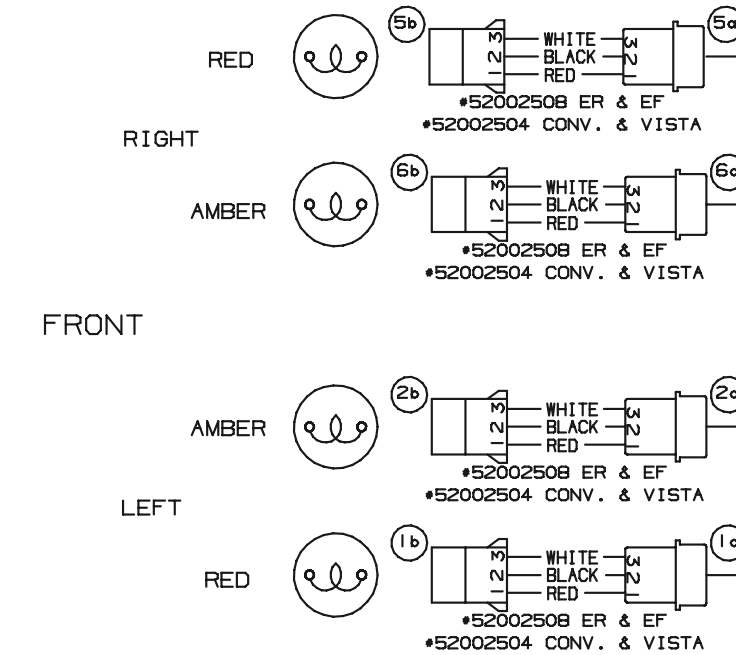

STROBE LIGHTHEADS: RED #52002431
AMBER #52002481

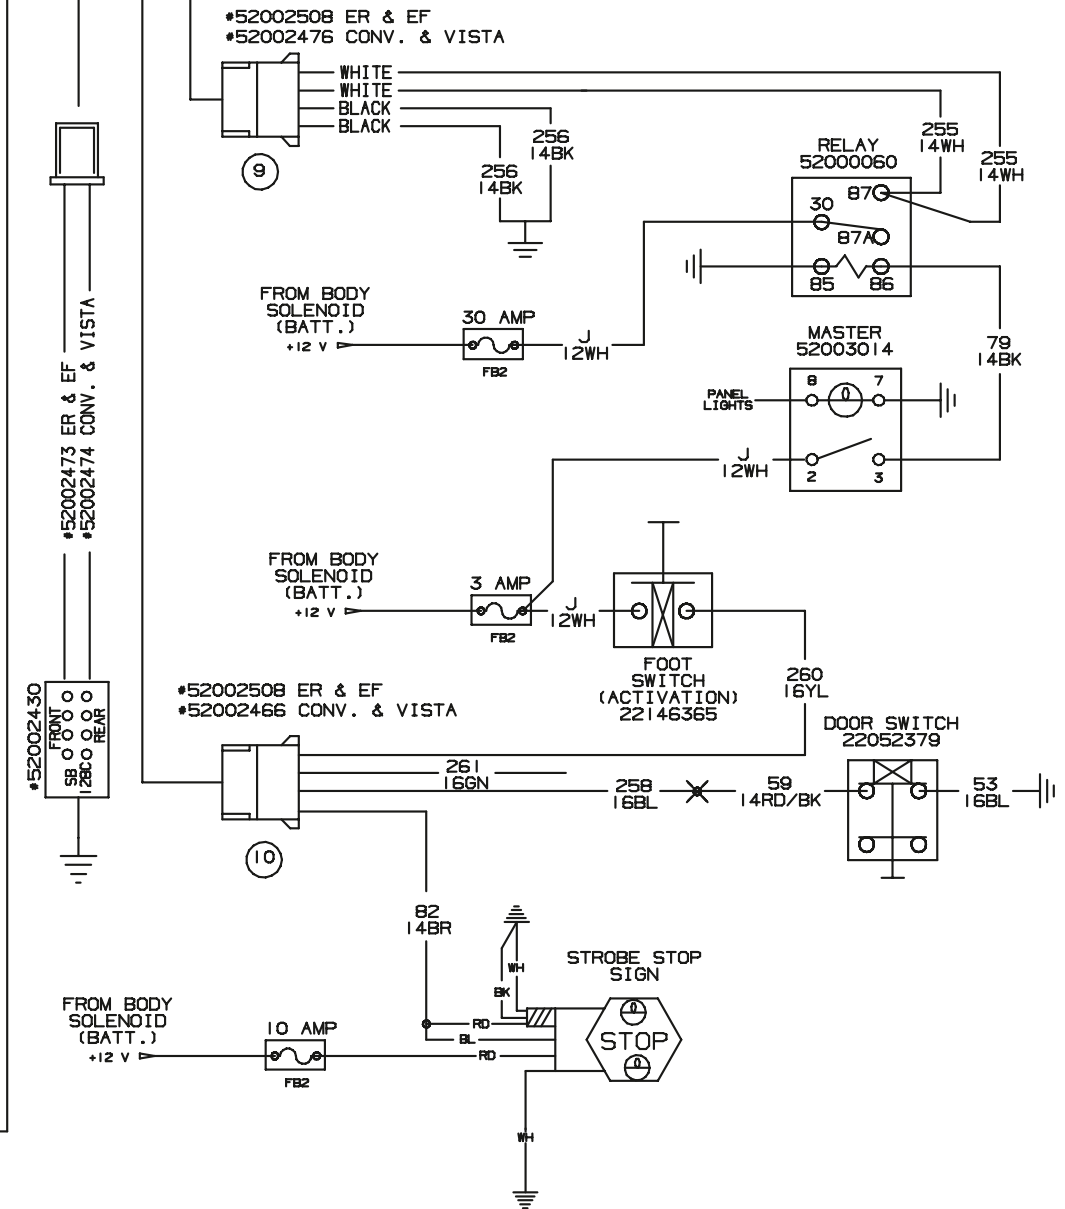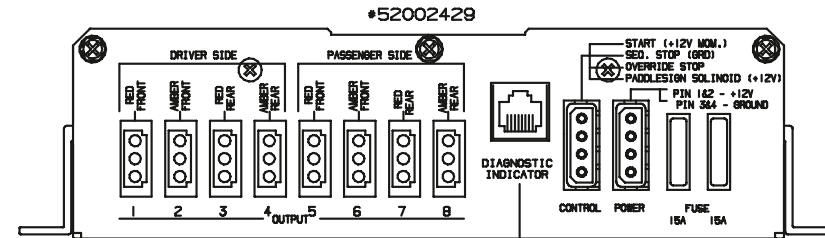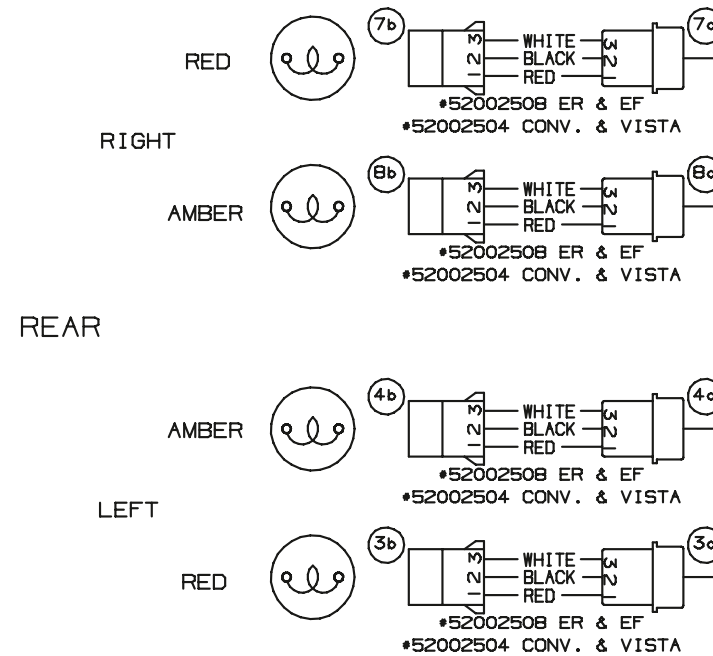

B3580-30-000 SYSTEM OPERATION

1. (4) 5 1/2 AMBER STROBE LIGHTS AND (4) 5 1/2 RED STROBE LIGHTS.
2. AMBER LIGHTS MANUALLY ENERGIZED BY FOOT OPERATED SWITCH LOCATED ON THE DRIVER'S FLOOR.
3. RED LIGHTS AUTOMATICALLY ENERGIZED (WITH AMBER LIGHTS AUTOMATICALLY DE-ENERGIZED) WHEN BUS SERVICE DOOR IS OPENED.
4. RED LIGHTS AND STOP ARM ACTIVATED WHENEVER SERVICE DOOR IS OPENED (NONSEQUENTIAL).
5. MASTER SWITCH LOCATED IN SWITCH PANEL.
6. RED AND AMBER PILOT LIGHTS IN SWITCH CABINET TO INDICATE SYSTEM OPERATION.
7. WHELEN SCHOOL BUS STROBE WARNING SYSTEM.




52002432 C

**STROBE WARNING
SYSTEM, WHELEN
SCHOOL**

Option: B3580-30-000

SWITCH LAYOUT

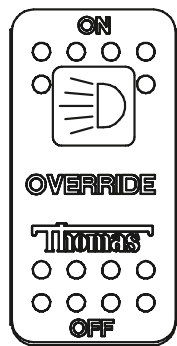

OVERRIDE
52002641

OTHER SWITCHES PER WARNING
SYSTEM OPTION. (SEE ORDER)

B3822-01-000
OPTION DESCRIPTION

- 1. ACTIVATION OF MOMENTARY "OVERRIDE" SWITCH WHEN AMBER LIGHTS HAVE BEEN ACTIVATED WILL ACTIVATE RED LIGHTS WITHOUT OPENING DOOR.
- 2. RED LIGHTS WILL BE DE-ACTIVATED WHEN DOOR IS CLOSED.
- 3. ALL FEATURES OF WARNING SYSTEM REMAIN UNCHANGED.


THIS SWITCH SHOULD
BE LOCATED ON THE
SWITCH PANEL.

ITEM	PART NO.	DESCRIPTION	QTY
①	52002641	SWITCH - OVERRIDE	1
②	52000060	RELAY - SPDT, 30/20 AMP	1
③	(SEE CHART)	HARNESS - WIRING	1
④	52001817	SWITCH - STOPLIGHT, N.C.	1
⑤	22036377	SWITCH - STOPLIGHT, N.O.	REF

ITEM ⑤ IS PART OF THE WARNING SYSTEM OPTION.

MODEL	HARNESS
CONVENTIONAL	52002672
VISTA	52002673
FORWARD CONTROL ALL REAR ENGINE	52002674

ALL HARNESSES SHOWN
ON DRAWING 52002695


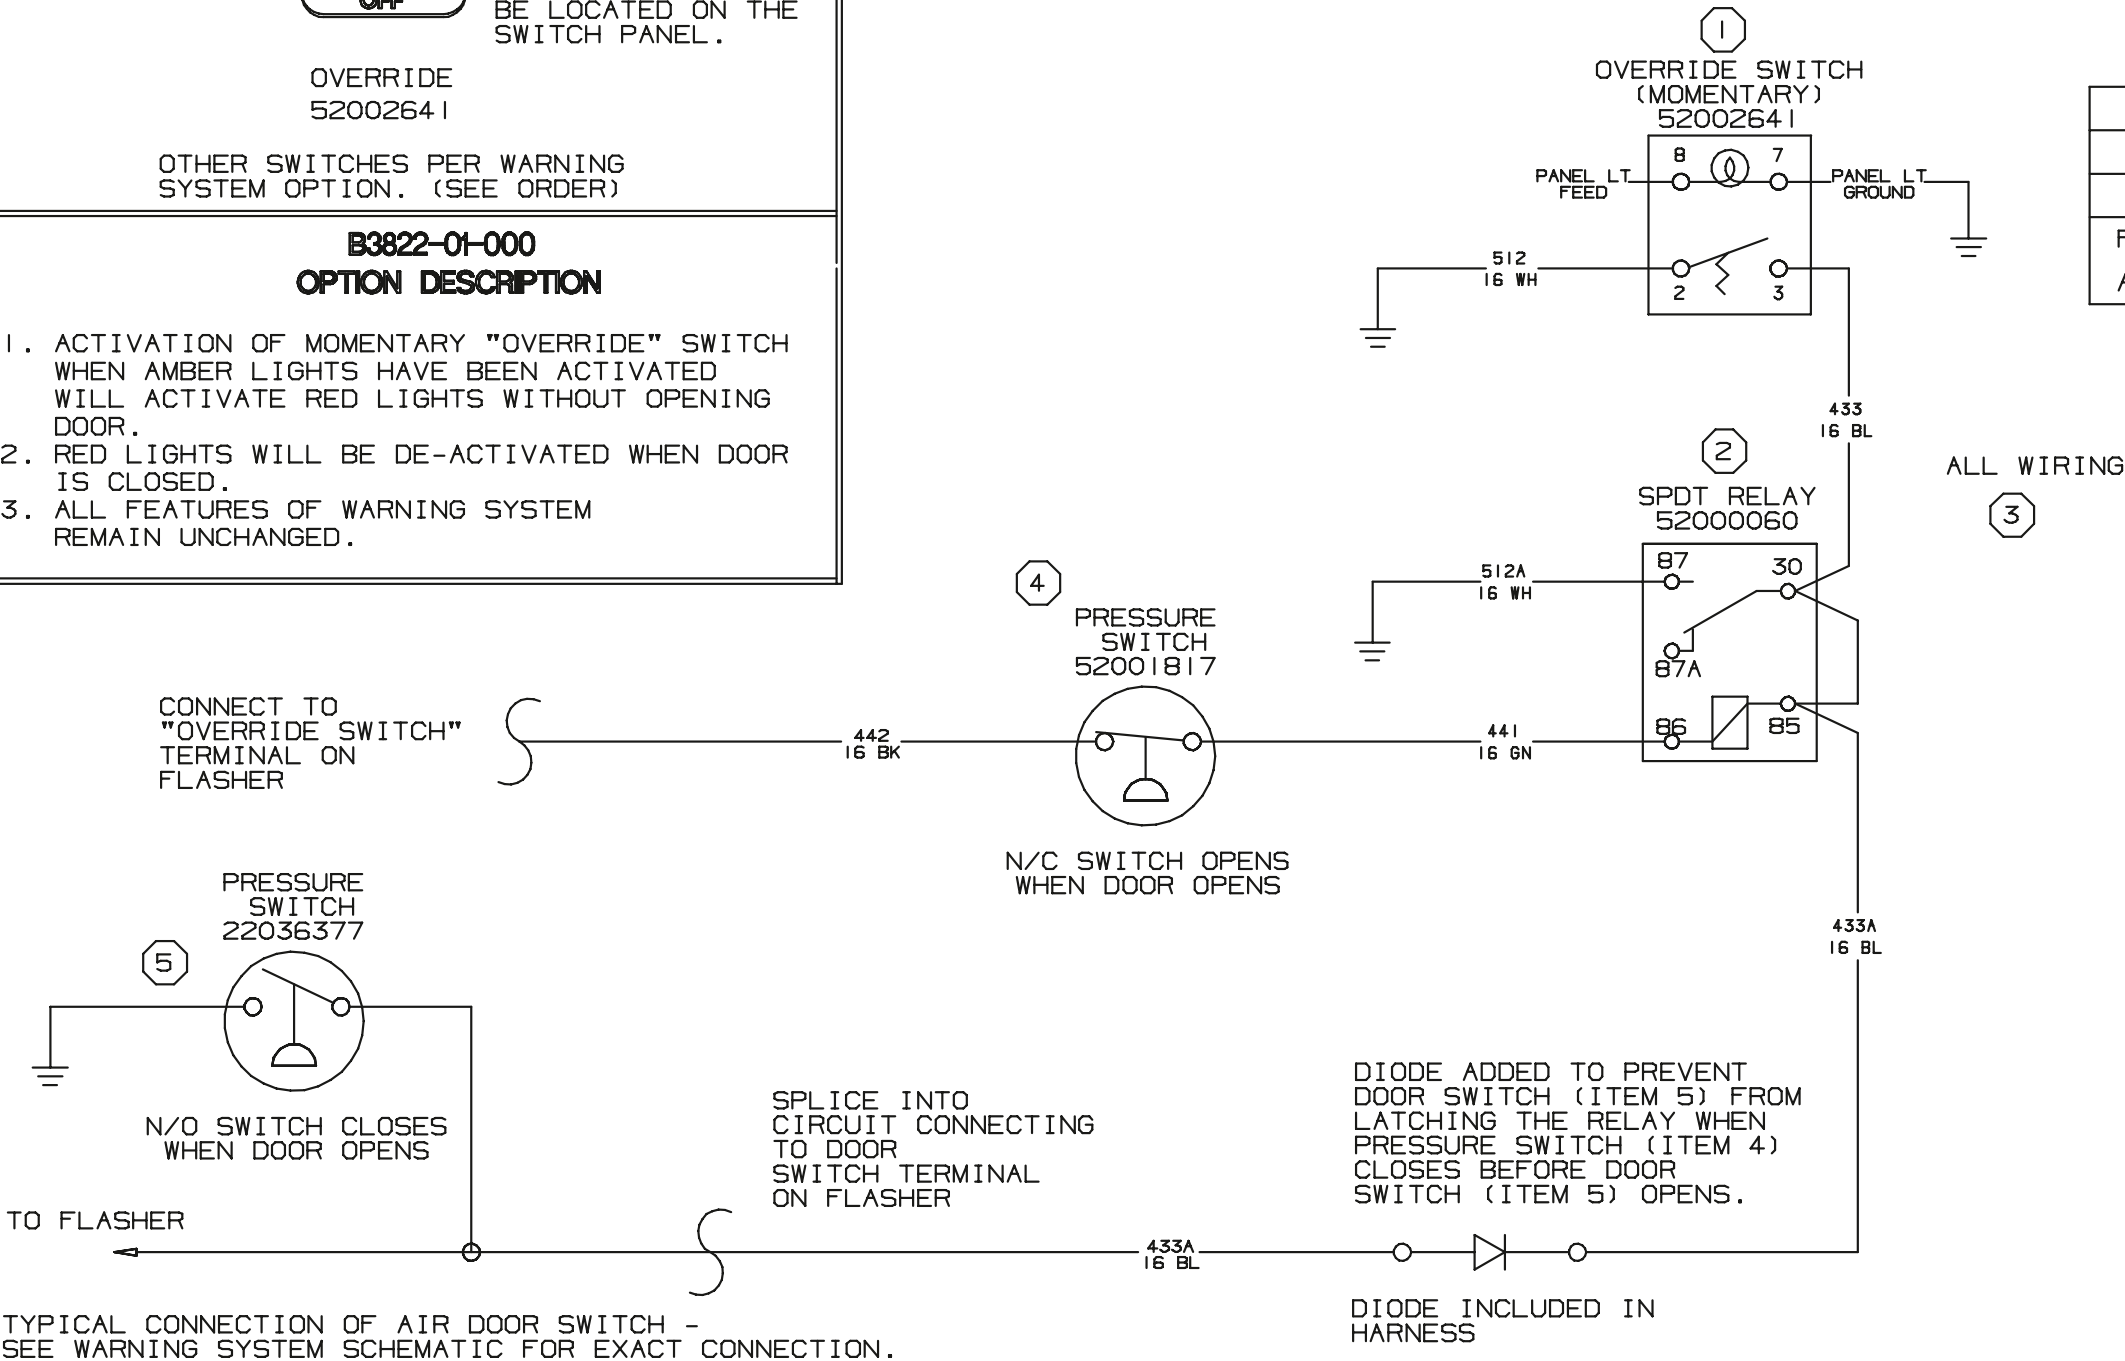


COMPUTER ORIGINAL -- DO NOT MAKE MANUAL CHANGES

**52002670 C**

 RED WARNING LIGHT
OVERRIDE SWITCH

#52002684 PILOT LIGHT

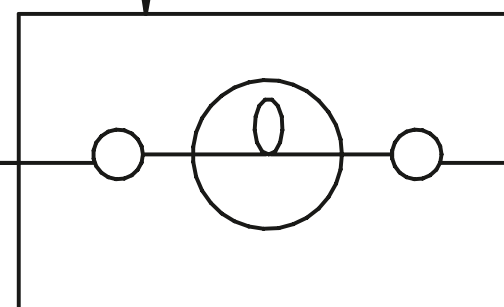

CIRCUIT #13
BLUE
(BACK-UP LIGHT)
SPLICE INTO BODY
HARNESS UNDER DASH


OPTION #B 3100-04-000

	52002710 A
PILOT LIGHT, GREEN, "REVERSE GEAR"	

**MVP-ER
EIGHT LIGHT
WARNING SYSTEM
SCHEMATICS**

The diagram shows two components. On the left is the MASTER 52003014 control panel, which is a rectangular unit with a top section labeled 'ON' and a bottom section labeled 'OFF'. The top section contains a light bulb icon and the word 'WARNING'. The bottom section contains a horizontal bar with the word 'Warning' written on it. On the right is the PILOT 52002131 warning light, which is a rectangular unit with the word 'WARNING' written vertically inside a frame.

 1. FOUR 7" RED LIGHTS.
2. RED LIGHTS ACTIVATED BY A SWITCH LOCATED ON THE SWITCH PANEL.
3. RED PILOT LIGHT IN SWITCH PANEL TO INDICATE SYSTEM OPERATION.
4. STOP ARM ONLY ACTIVATED WHEN SERVICE DOOR IS OPEN AND WARNING LIGHTS ARE ON.
5. BADER BROWN FLASHER



SWITCH LAYOUT




MASTER
52003014



PILOT
52002131

B3540-13-000
SYSTEM OPERATION


1. FOUR 7" RED LIGHTS.
2. TWO 7" COWL MOUNTED LIGHTS.
3. TWO 7" LIGHTS INCORPORATED IN THE REAR TURN SIGNALS.
4. RED LIGHTS ACTIVATED BY A SWITCH LOCATED ON THE SWITCH PANEL.
5. RED PILOT LIGHT IN SWITCH PANEL TO INDICATE SYSTEM OPERATION.
6. STOP ARM ONLY ACTIVATED WHEN SERVICE DOOR IS OPEN AND WARNING LIGHTS ARE ON.
7. ELS MODEL B-4 FLASHER.
8. MUST ALSO ORDER OPTION B3350-02-000 (DIRECTIONAL REAR).

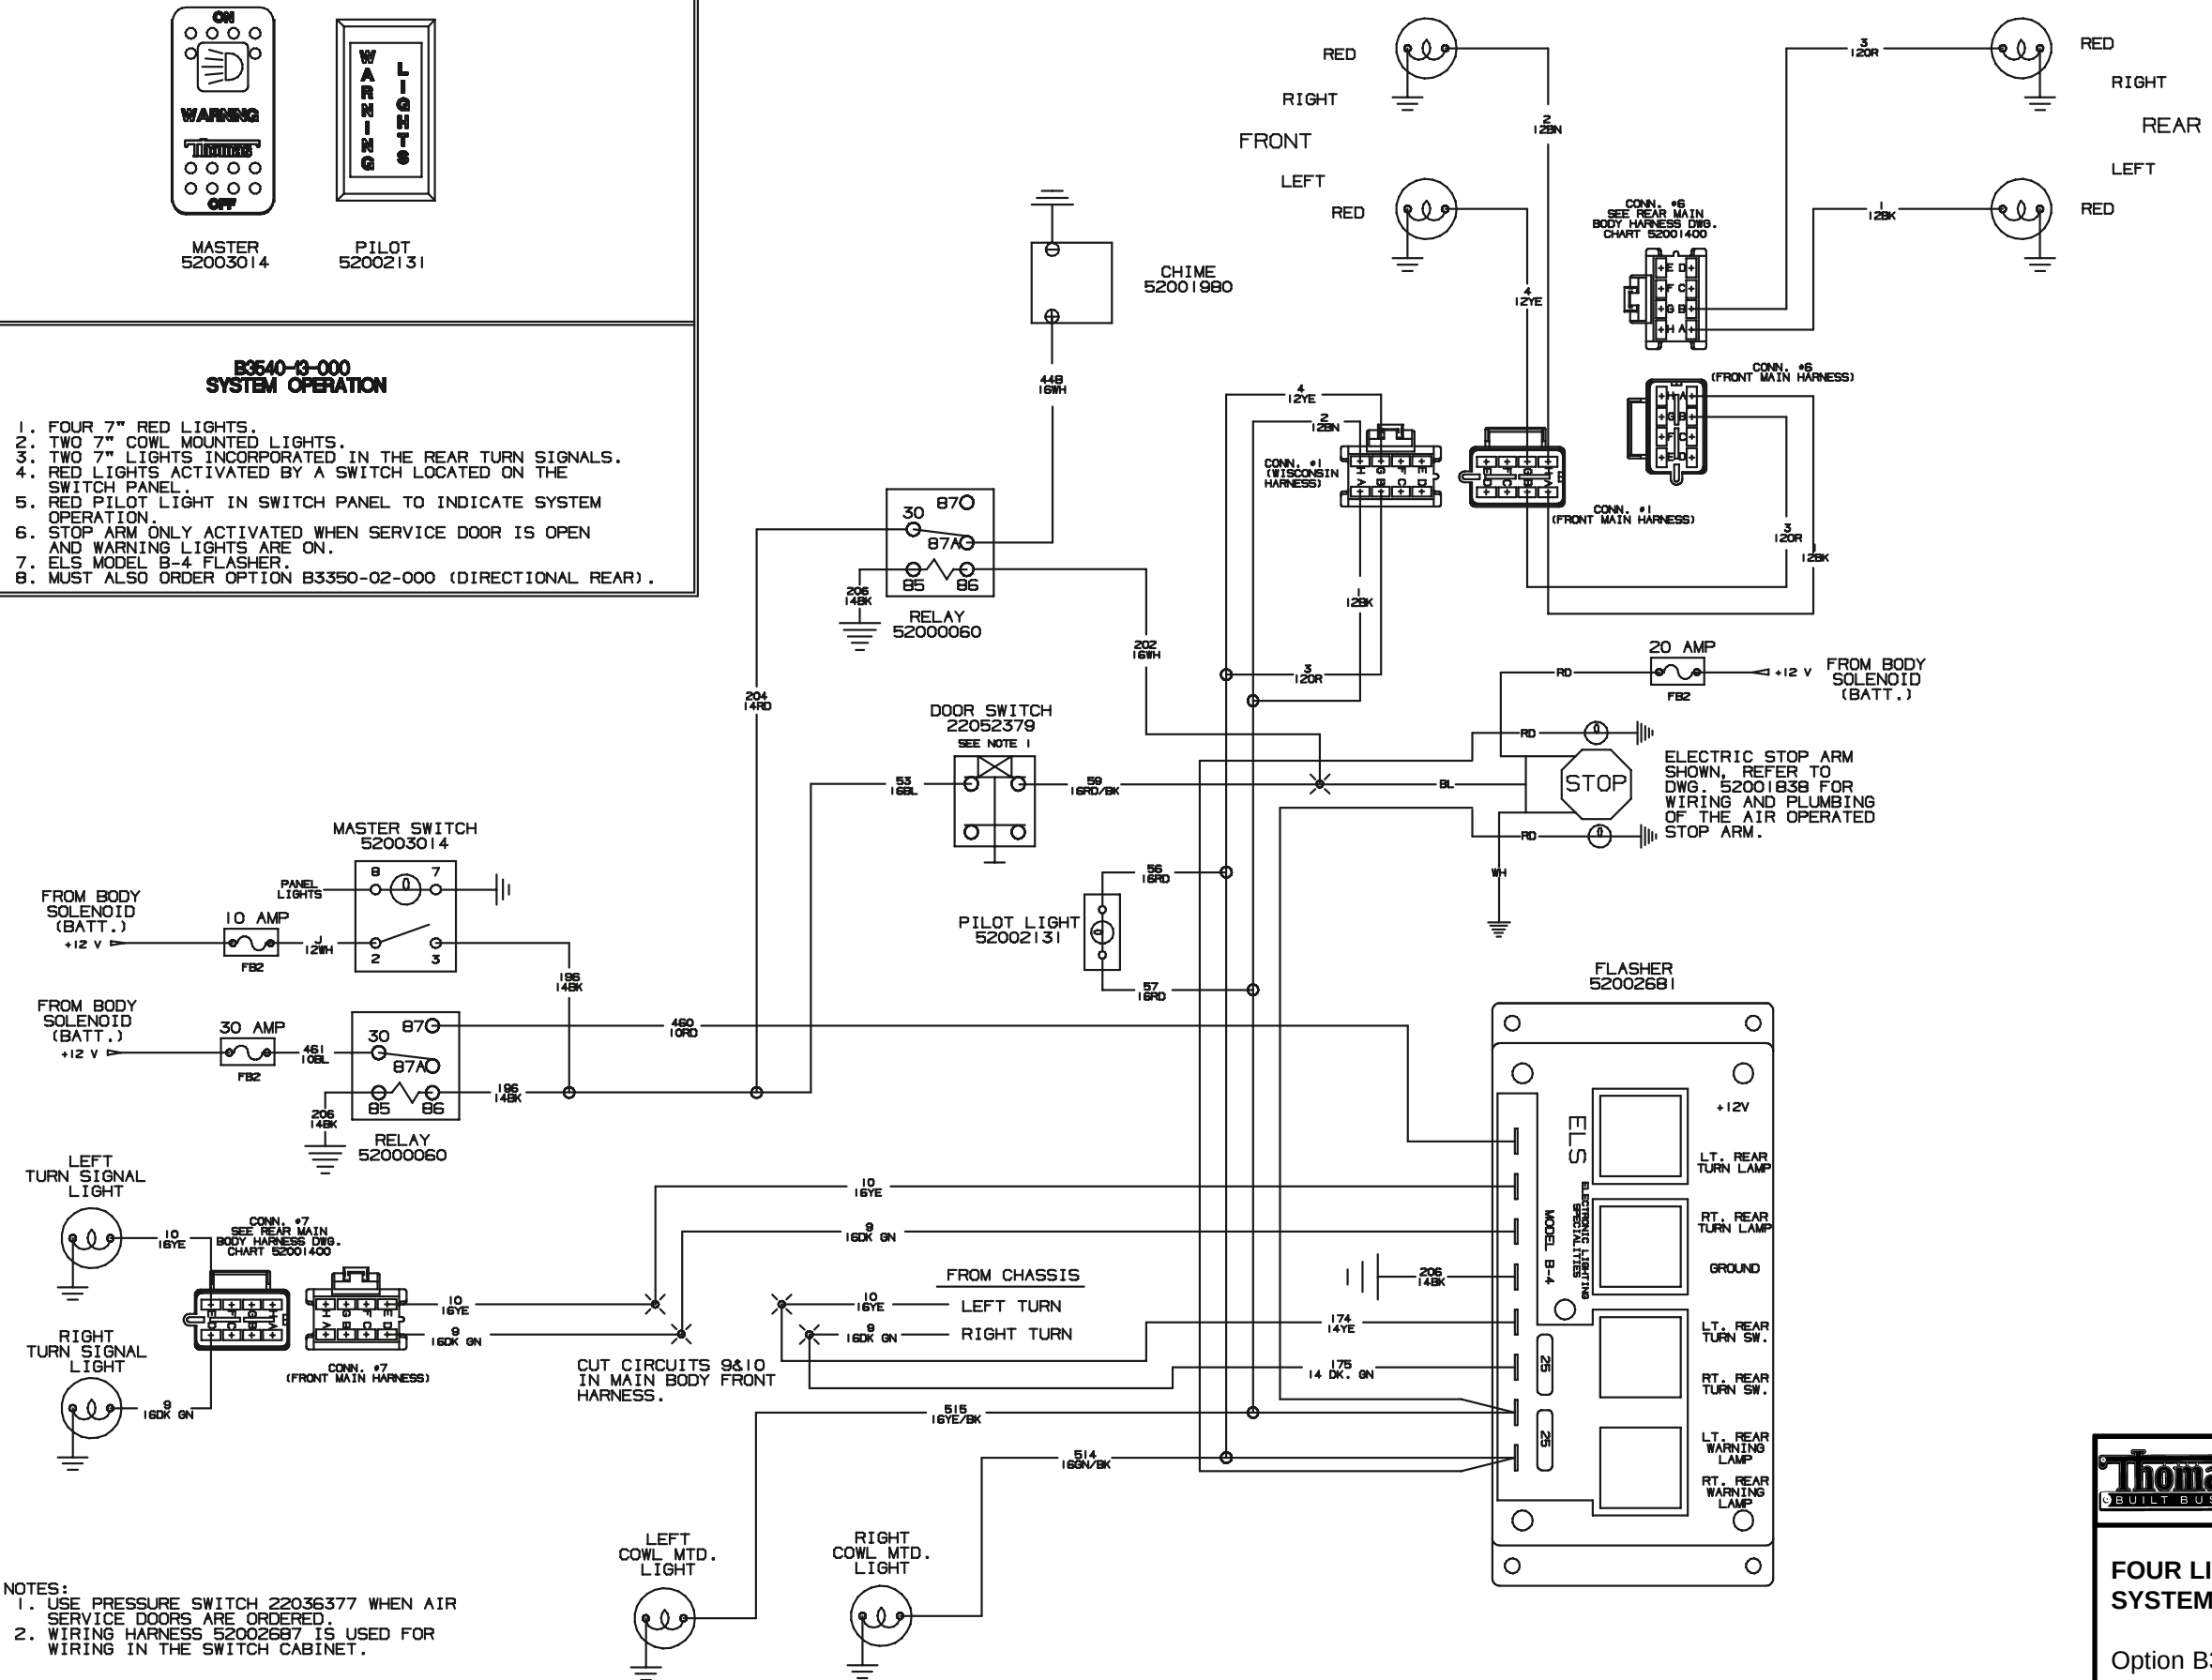

- NOTES:
1. USE PRESSURE SWITCH 22036377 WHEN AIR SERVICE DOORS ARE ORDERED.
 2. WIRING HARNESS 52002687 IS USED FOR WIRING IN THE SWITCH CABINET.


	52002682 C
FOUR LIGHT WARNING SYSTEM (WISCONSIN)	
Option B3540-13-000	

SWITCH LAYOUT

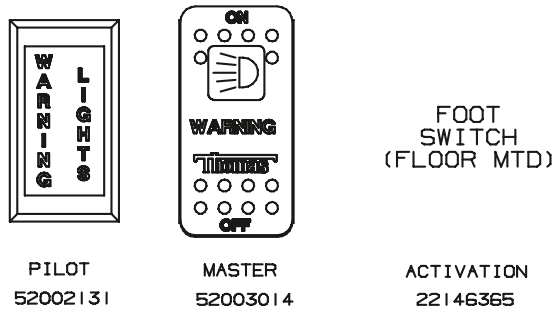

B3580-03-000
SYSTEM OPERATION

1. FOUR 7" AMBER LIGHTS AND FOUR 7" RED LIGHTS.
2. AMBER LIGHTS MANUALLY ENERGIZED BY FOOT OPERATED SWITCH LOCATED ON THE DRIVERS TOE BOARD.
3. RED LIGHTS AUTOMATICALLY ENERGIZED (WITH AMBER LIGHTS AUTOMATICALLY DE-ENERGIZED) WHEN BUS SERVICE DOOR IS OPENED.
4. RED LIGHTS AND STOP ARM ACTIVATED WHENEVER SERVICE DOOR IS OPENED (NONSEQUENTIAL).
5. RED PILOT LIGHT IN SWITCH CABINET TO INDICATE SYSTEM OPERATION.
6. WELDON 7000 ELECTRONIC FLASHER.

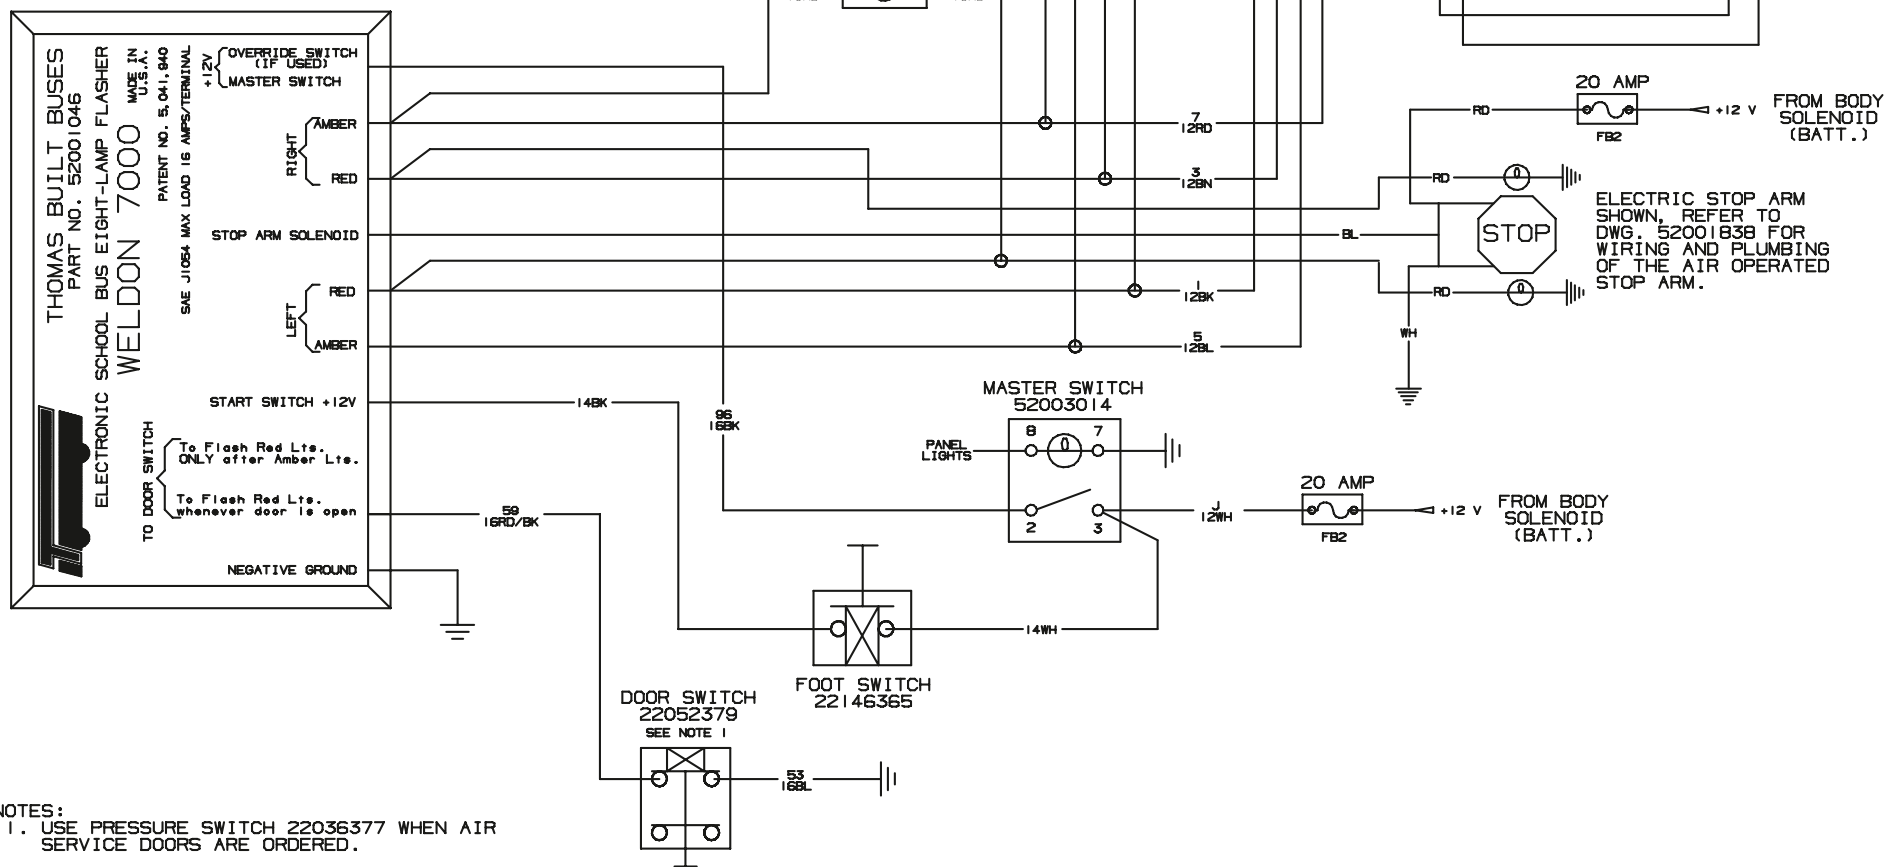

NOTES:
1. USE PRESSURE SWITCH 22036377 WHEN AIR SERVICE DOORS ARE ORDERED.


	52002360 C
EIGHT LIGHT WARNING SYSTEM	
Option B3580-03-000	

PILOT
5200224 I

MASTER/
ACTIVATION
52003015


B3580-04-000
SYSTEM OPERATION

1. FOUR 7" AMBER LIGHTS AND FOUR 7" RED LIGHTS.
2. AMBER LIGHTS MANUALLY ENERGIZED BY ROCKER SWITCH LOCATED ON THE SWITCH PANEL.
3. RED LIGHTS AUTOMATICALLY ENERGIZED (WITH AMBER LIGHTS AUTOMATICALLY DE-ENERGIZED) WHEN BUS SERVICE DOOR IS OPENED.
4. RED LIGHTS AND STOP ARM ACTIVATED WHENEVER SERVICE DOOR IS OPENED (NONSEQUENTIAL).
5. MASTER SWITCH LOCATED IN SWITCH PANEL.
6. RED AND AMBER PILOT LIGHT IN SWITCH CABINET TO INDICATE SYSTEM OPERATION.
7. WELDON 7000 ELECTRONIC FLASHER.

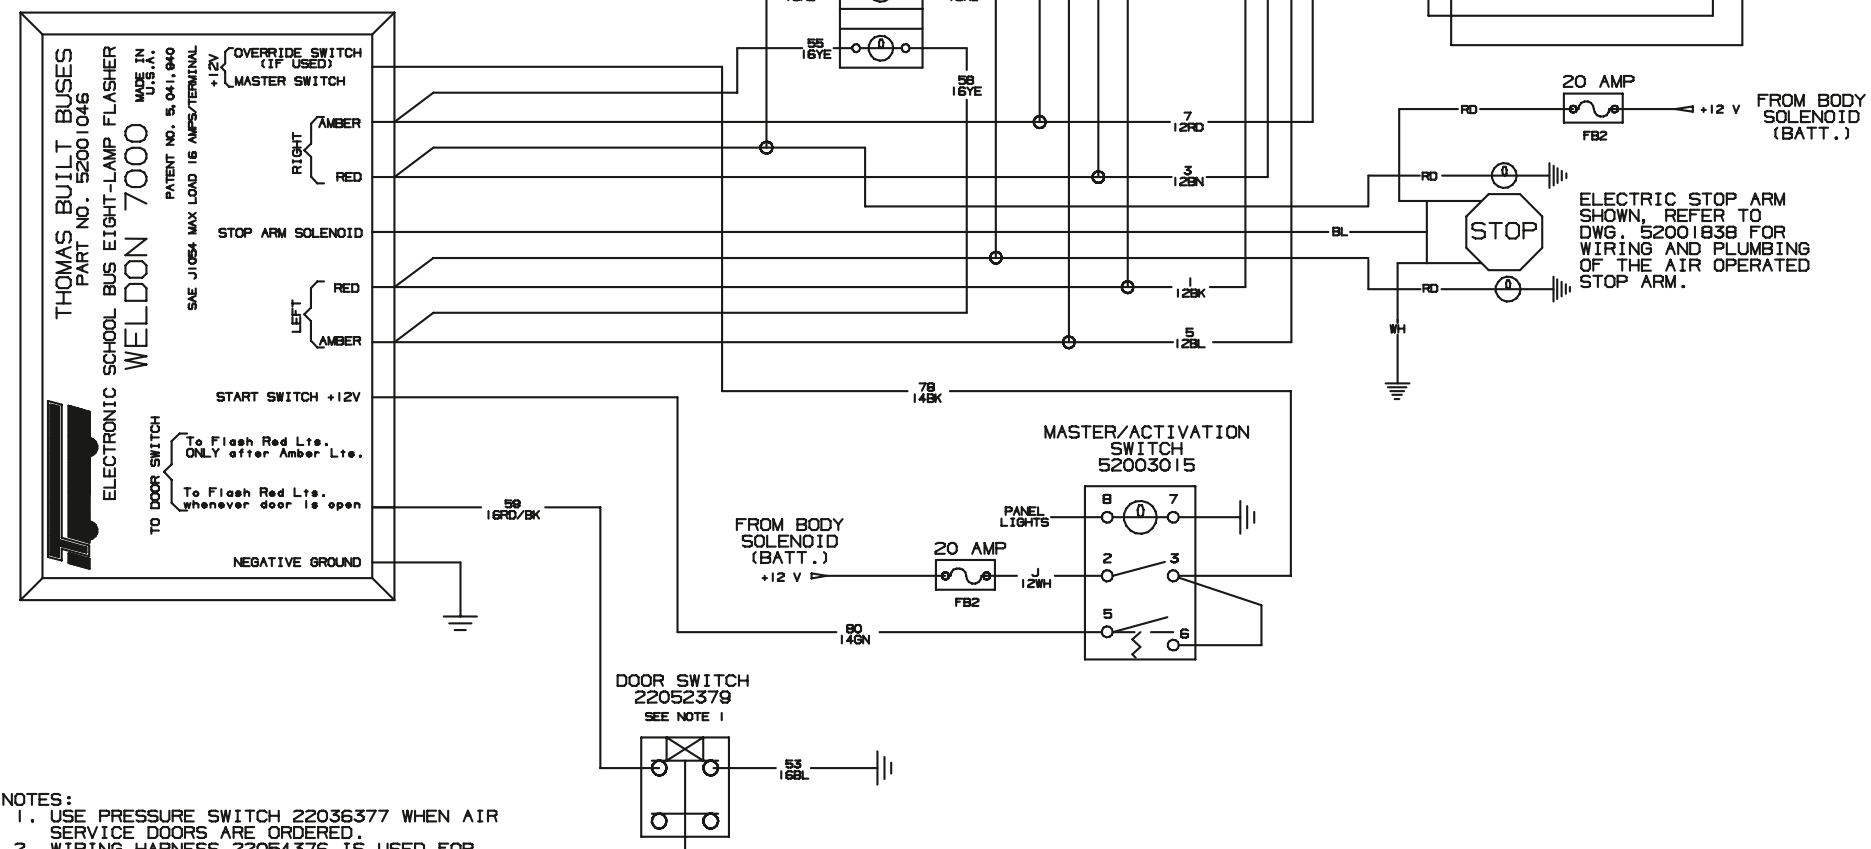

NOTES:

1. USE PRESSURE SWITCH 22036377 WHEN AIR SERVICE DOORS ARE ORDERED.
2. WIRING HARNESS 22054376 IS USED FOR WIRING INSIDE THE SWITCH CABINET.

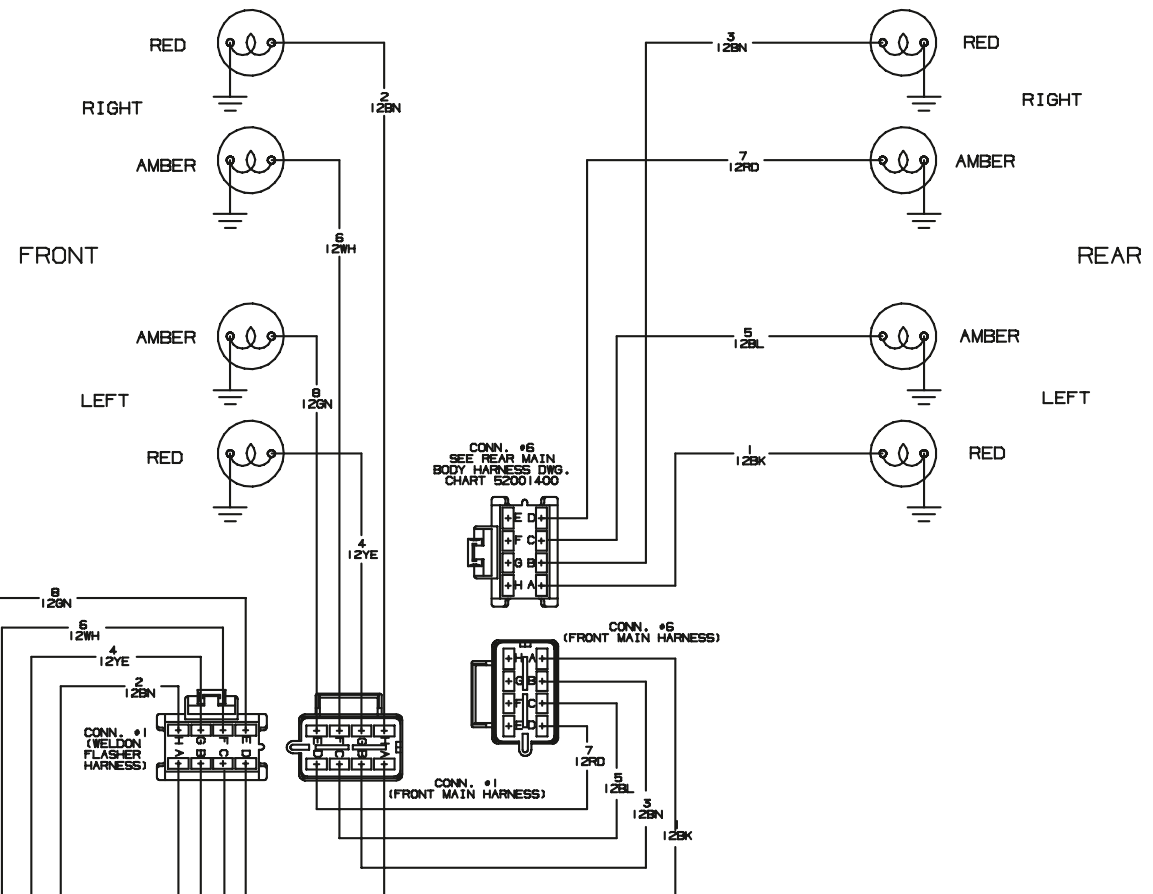

52002361 C

EIGHT LIGHT WARNING SYSTEM

Option B3580-04-000

SWITCH LAYOUT




PILOT
5200224 I




MASTER/
ACTIVATION
52002624 (B)

B3580-04-000
SYSTEM OPERATION

1. FOUR 7" AMBER LIGHTS AND FOUR 7" RED LIGHTS.
2. AMBER LIGHTS MANUALLY ENERGIZED BY ROCKER SWITCH LOCATED ON THE SWITCH PANEL.
3. RED LIGHTS AUTOMATICALLY ENERGIZED (WITH AMBER LIGHTS AUTOMATICALLY DE-ENERGIZED) WHEN BUS SERVICE DOOR IS OPENED.
4. RED LIGHTS AND STOP ARM ACTIVATED WHENEVER SERVICE DOOR IS OPENED (NONSEQUENTIAL).
5. MASTER SWITCH LOCATED IN SWITCH PANEL.
6. RED AND AMBER PILOT LIGHT IN SWITCH CABINET TO INDICATE SYSTEM OPERATION.
7. WELDON 7000 ELECTRONIC FLASHER.

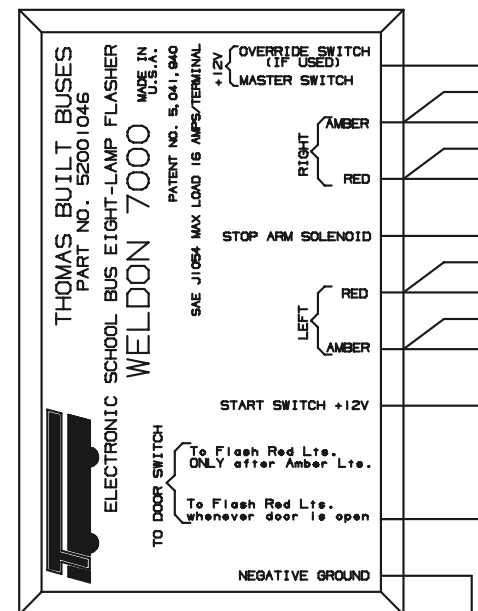


- NOTES:
1. USE PRESSURE SWITCH 22036377 WHEN AIR SERVICE DOORS ARE ORDERED.
 2. WIRING HARNESS 22054376 IS USED FOR WIRING INSIDE THE SWITCH CABINET.

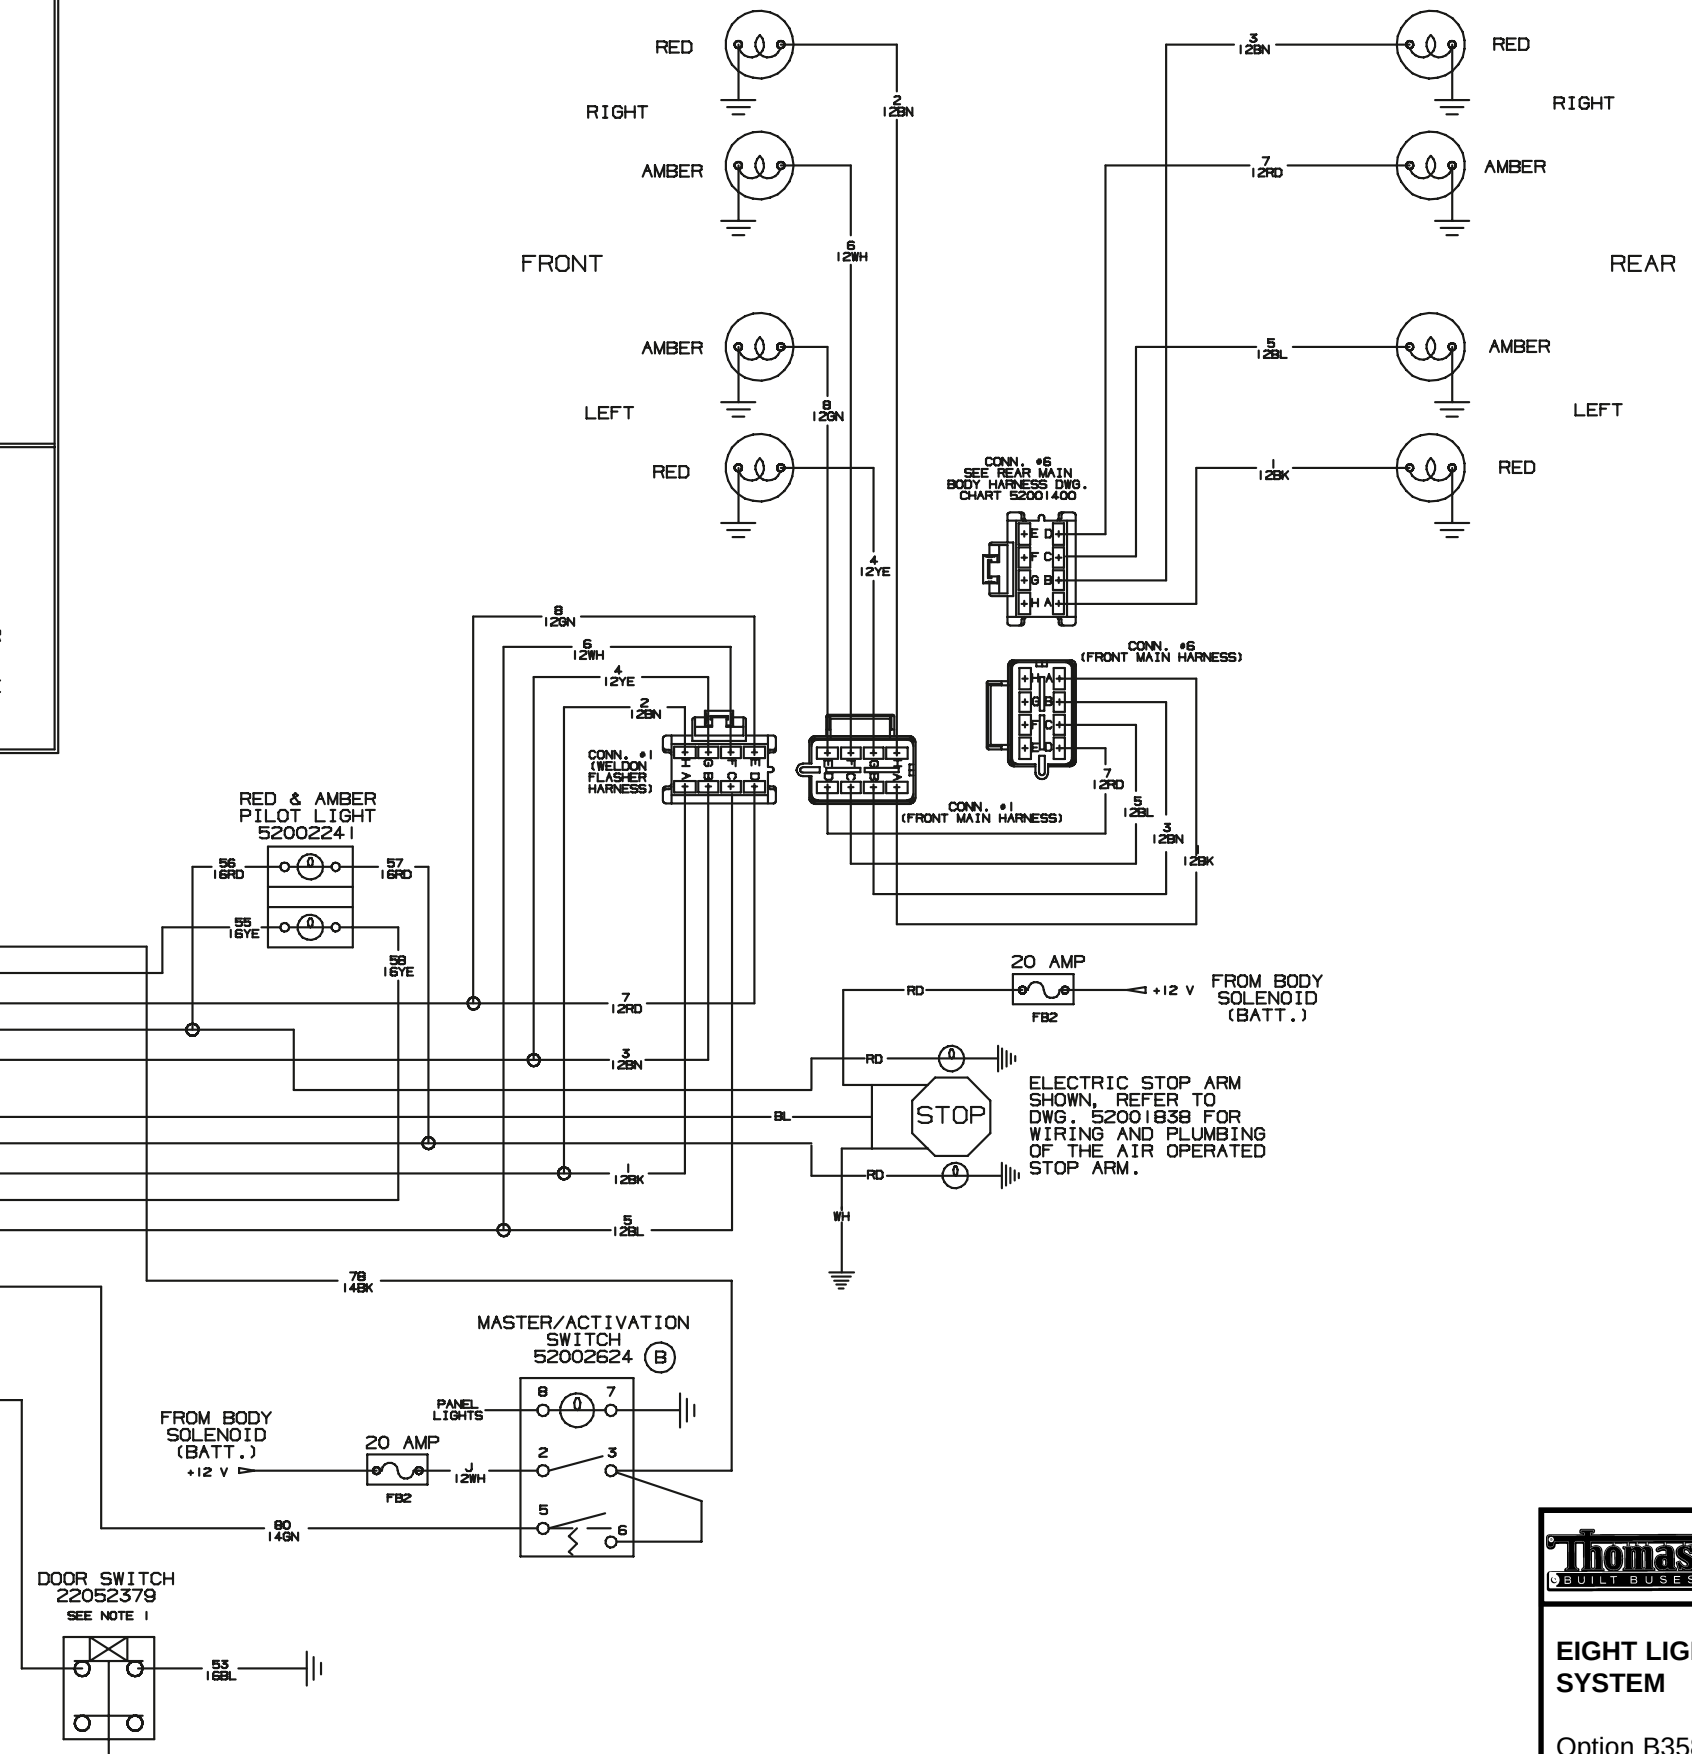


	52002362 B
EIGHT LIGHT WARNING SYSTEM	
Option B3580-06-000	

SWITCH LAYOUT

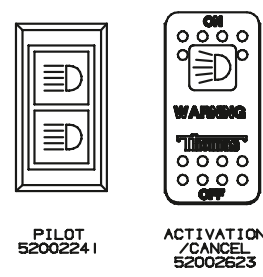


B3580-08-000
SYSTEM OPERATION

1. FOUR 7" AMBER LIGHTS AND FOUR 7" RED LIGHTS.
2. AMBER LIGHTS MANUALLY ENERGIZED BY ROCKER SWITCH LOCATED ON THE SWITCH PANEL.
3. RED LIGHTS AUTOMATICALLY ENERGIZED (WITH AMBER LIGHTS AUTOMATICALLY DE-ENERGIZED) WHEN BUS SERVICE DOOR IS OPENED.
4. AMBER LIGHTS CAN ALSO BE DEACTIVATED BY ROCKER SWITCH LOCATED ON THE SWITCH PANEL.
5. RED LIGHTS AND STOP ARM ONLY ACTIVATED AFTER AMBER LIGHTS.
6. RED AND AMBER PILOT LIGHT IN SWITCH CABINET TO INDICATE SYSTEM OPERATION.
7. WELDON 7000 ELECTRONIC FLASHER.

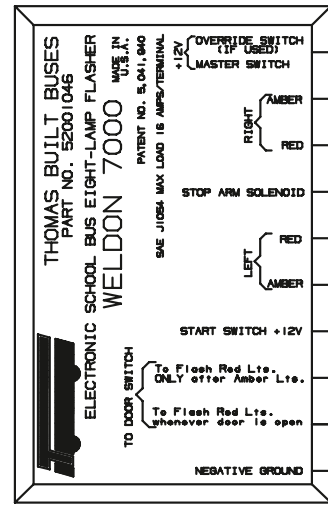


- NOTES:
1. USE PRESSURE SWITCH 22036377 WHEN AIR SERVICE DOORS ARE ORDERED.
 2. WIRING HARNESS 22054376 IS USED FOR WIRING INSIDE THE SWITCH CABINET.

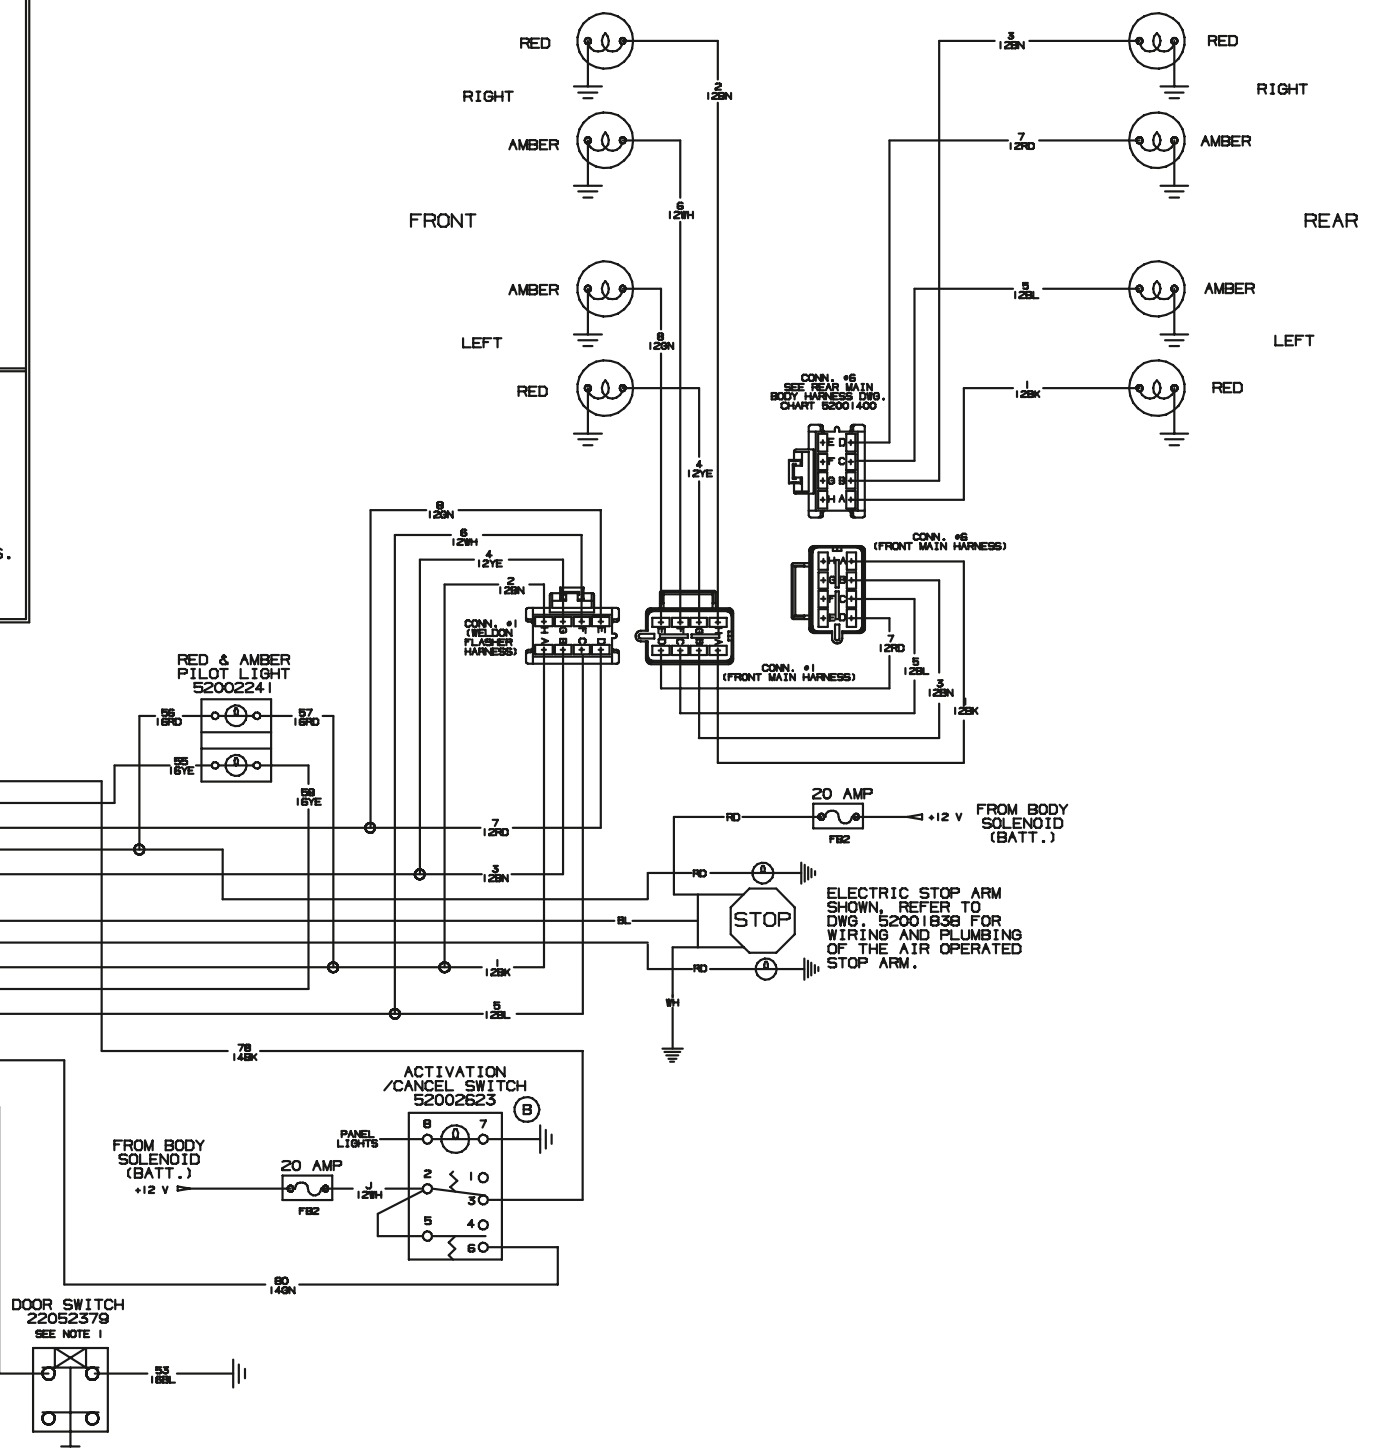

	52002365 B
EIGHT LIGHT WARNING SYSTEM	
Option B3580-08-000	

SWITCH LAYOUT

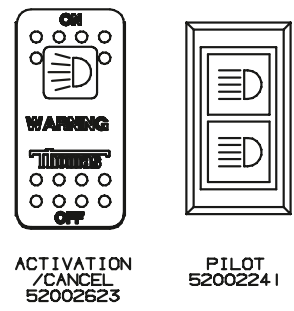


SWITCH BOX REQUIRED (CONV.)


	DOOR		
	MANUAL	AIR	ELECTRIC
CONV.	52002144	52002145	52002145
VISTA	SW. CABINET	SW. CABINET	SW. CABINET
PUSH		SW. CABINET	SW. CABINET
F.C.	SW. CABINET	SW. CABINET	SW. CABINET

B3580-11-000
SYSTEM OPERATION

- 1. FOUR 7" AMBER LIGHTS AND FOUR 7" RED LIGHTS.
- 2. AMBER LIGHTS MANUALLY ENERGIZED BY ROCKER SWITCH LOCATED ON THE SWITCH PANEL OR CONTROL BOX LEFT OF STEERING COLUMN.
- 3. RED LIGHTS AUTOMATICALLY ENERGIZED (WITH AMBER LIGHTS AUTOMATICALLY DE-ENERGIZED) WHEN BUS SERVICE DOOR IS OPENED.
- 4. AMBER LIGHTS CAN ALSO BE DEACTIVATED BY ROCKER SWITCH LOCATED ON THE SWITCH PANEL OR CONTROL BOX.
- 5. RED LIGHTS AND STOP ARM ONLY ACTIVATED AFTER AMBER LIGHTS.
- 6. RED AND AMBER PILOT LIGHT IN SWITCH CABINET OR CONTROL BOX TO INDICATE SYSTEM OPERATION.
- 7. WELDON 7000 ELECTRONIC FLASHER.

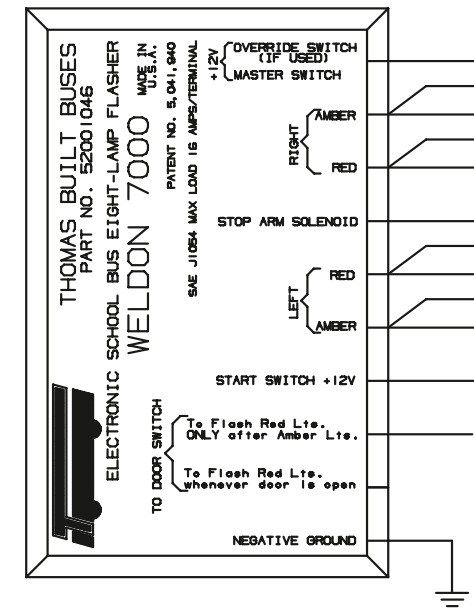

- NOTES:
- 1. USE PRESSURE SWITCH 22036377 WHEN AIR SERVICE DOORS ARE ORDERED.
 - 2. WIRING HARNESS 22054376 IS USED FOR WIRING INSIDE THE SWITCH CABINET ON THE VISTA, ER, AND FC.
 - 3. WIRING HARNESS 52000176 IS USED FOR WIRING THE SWITCH BOX ON THE CONV..

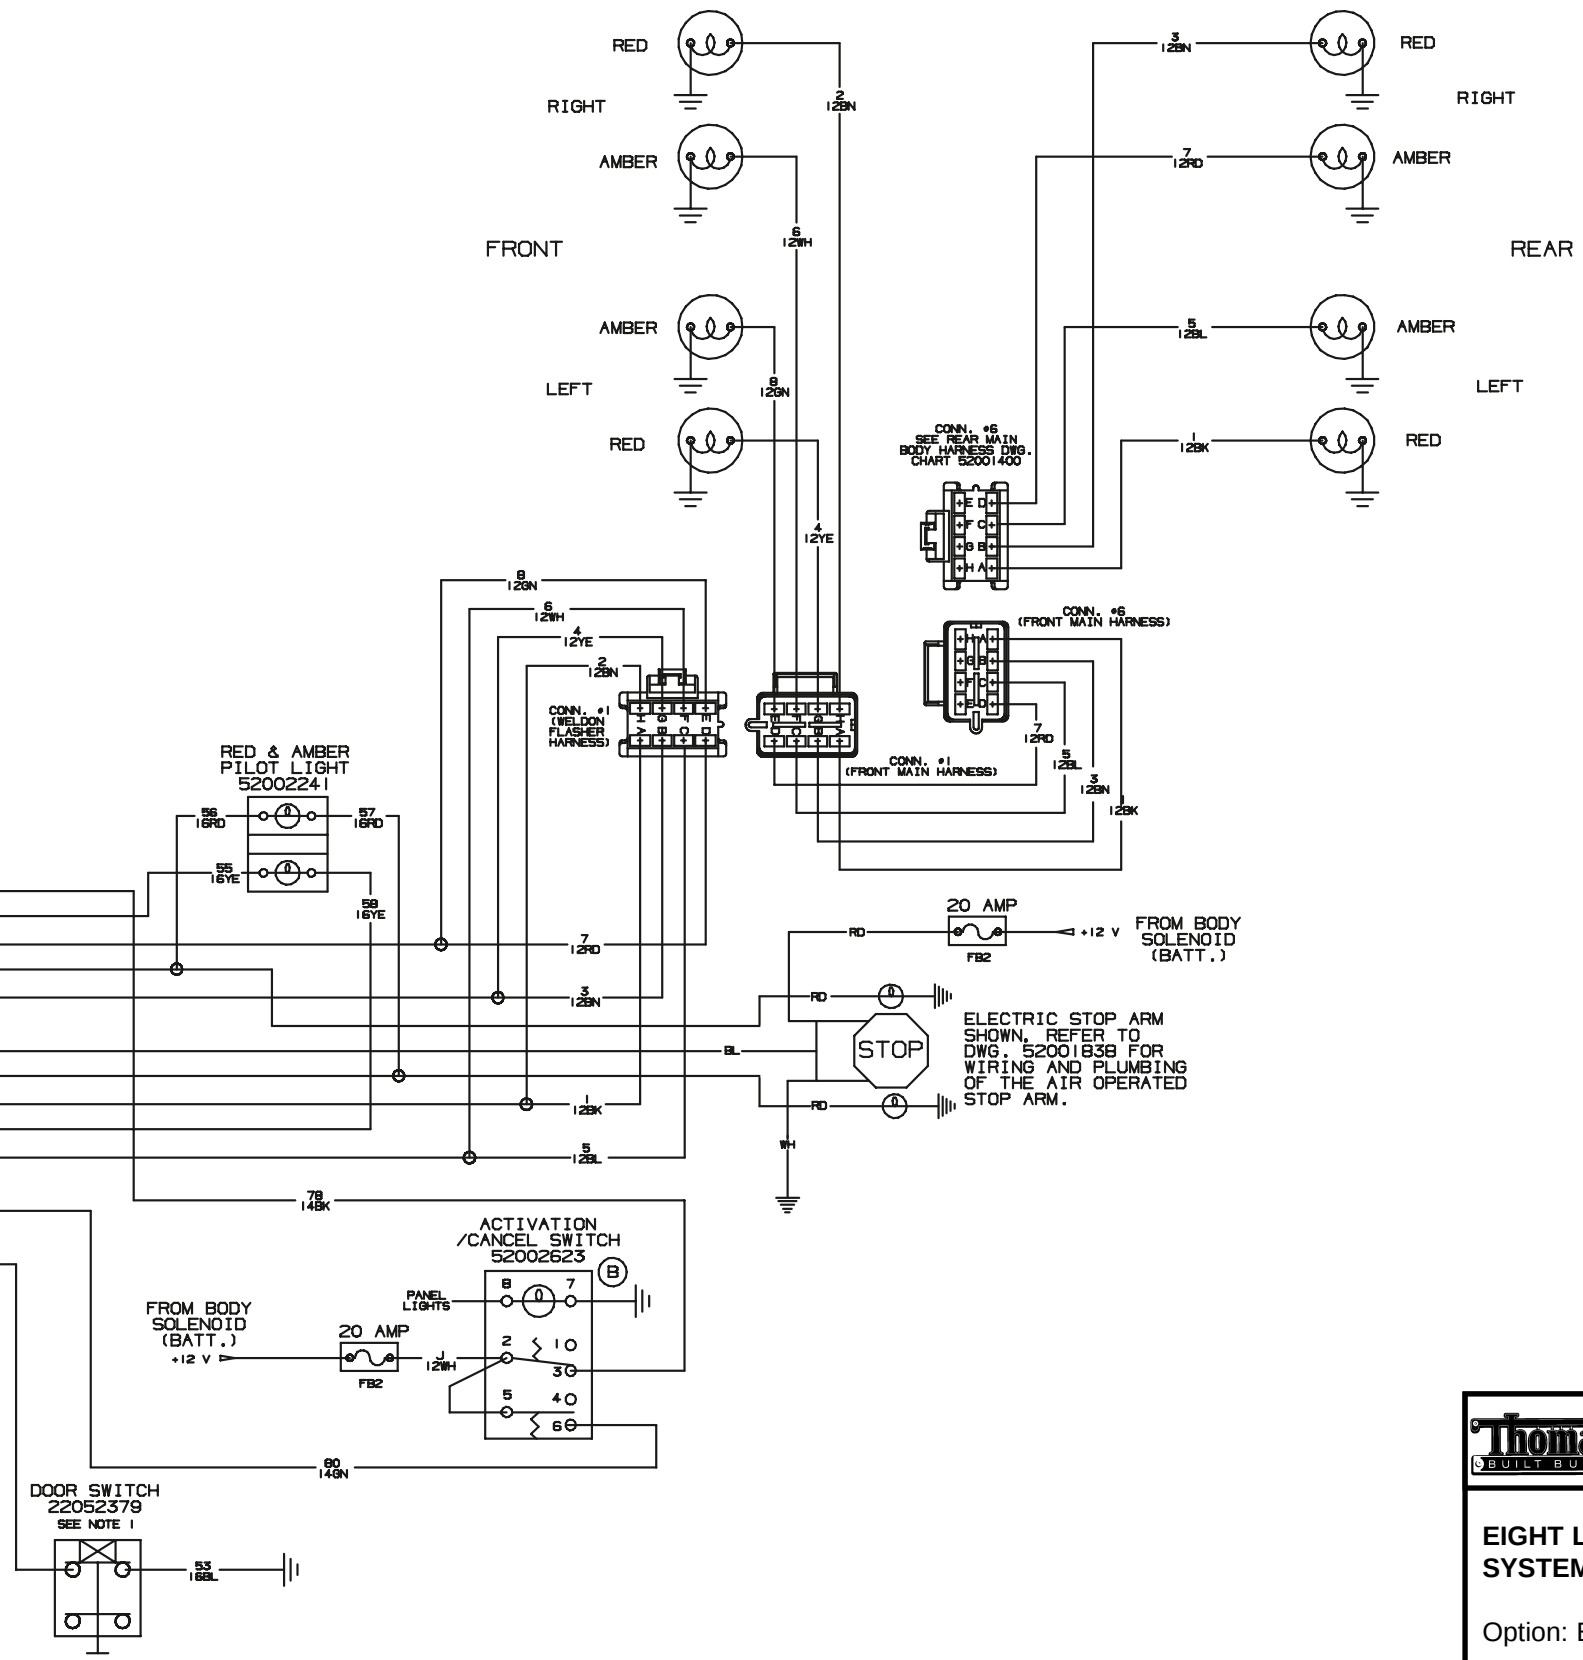




52002498 C

EIGHT LIGHT WARNING SYSTEM


Option: B3580-11-000

The image shows three control panels, each with a central display and surrounding buttons. The first panel, labeled 'OVERDRIVE 52003024', has a 'ON' button at the top, a central display showing a speedometer-like needle, a 'WARNING' label, a 'Throttle' label, and an 'OFF' button at the bottom. The second panel, labeled 'PILOT 52002241', is a simple rectangular frame with two horizontal slots. The third panel, labeled 'MASTER/ACTIVATION 52003015', has an 'ARMED' button at the top, a central display showing a speedometer-like needle, a 'WARNING (ON)' label, a 'Throttle' label, and an 'OFF' button at the bottom.


1. FOUR 7" AMBER LIGHTS AND FOUR 7" RED LIGHTS.
2. AMBER LIGHTS MANUALLY ENERGIZED BY ROCKER SWITCH LOCATED ON THE SWITCH PANEL.
3. RED LIGHTS AUTOMATICALLY ENERGIZED (WITH AMBER LIGHTS AUTOMATICALLY DE-ENERGIZED) WHEN BUS SERVICE DOOR IS OPENED.
4. RED LIGHTS AND STOP ARM ACTIVATED WHENEVER SERVICE DOOR IS OPENED (NONSEQUENTIAL).
5. MASTER SWITCH LOCATED IN SWITCH PANEL.
6. OVERRIDE SWITCH IN SWITCH PANEL TO FLASH RED LIGHTS AND EXTEND STOP ARM.
7. RED AND AMBER PILOT LIGHT IN SWITCH CABINET TO INDICATE SYSTEM OPERATION.
8. WELDON 7000 ELECTRONIC FLASHER.

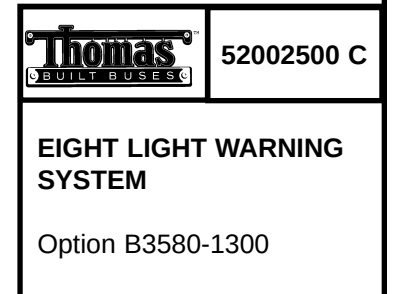

 1. FOUR 7" AMBER LIGHTS AND FOUR 7" RED LIGHTS.
2. AMBER LIGHTS MANUALLY ENERGIZED BY ROCKER SWITCH LOCATED ON THE SWITCH PANEL.
3. RED LIGHTS AUTOMATICALLY ENERGIZED (WITH AMBER LIGHTS AUTOMATICALLY DE-ENERGIZED) WHEN BUS SERVICE DOOR IS OPENED.
4. RED LIGHTS AND STOP ARM ACTIVATED WHENEVER SERVICE DOOR IS OPENED (NONSEQUENTIAL).
5. MASTER SWITCH LOCATED IN SWITCH PANEL.
6. OVERRIDE SWITCH IN SWITCH PANEL TO FLASH RED LIGHTS AND EXTEND STOP ARM.
7. RED AND AMBER PILOT LIGHT IN SWITCH CABINET TO INDICATE SYSTEM OPERATION.
8. WELDON 7000 ELECTRONIC FLASHER.



SWITCH LAYOUT

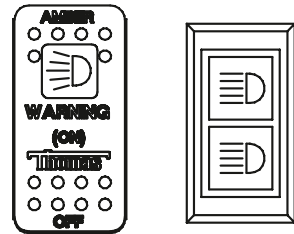


MASTER/ACTIVATION 52003015
PILOT 52002241

SWITCH BOX REQUIRED


	MANUAL DOOR	AIR DOOR	ELECTRIC DOOR
CONV.	52002144	52002145	52002145
VISTA	52002218	52002437	52002437
PUSH		DASH	DASH
F.C.	52002218	52002225	52002225

B3580-17-000
SYSTEM OPERATION

1. FOUR 7" AMBER LIGHTS AND FOUR 7" RED LIGHTS.
2. AMBER LIGHTS MANUALLY ENERGIZED BY ROCKER SWITCH LOCATED ON THE DASH PANEL (ER) OR IN A SWITCH BOX RIGHT OF STEERING COLUMN.
3. RED LIGHTS AUTOMATICALLY ENERGIZED (WITH AMBER LIGHTS AUTOMATICALLY DE-ENERGIZED) WHEN BUS SERVICE DOOR IS OPENED.
4. RED LIGHTS AND STOP ARM ACTIVATED WHENEVER SERVICE DOOR IS OPENED (NONSEQUENTIAL).
5. MASTER SWITCH LOCATED ON DASH PANEL (ER) OR IN SWITCH BOX RIGHT OF STEERING COLUMN.
6. RED AND AMBER PILOT LIGHT ON DASH PANEL (ER) OR SWITCH BOX RIGHT OF STEERING COLUMN TO INDICATE SYSTEM OPERATION.
7. WELDON 7000 ELECTRONIC FLASHER.

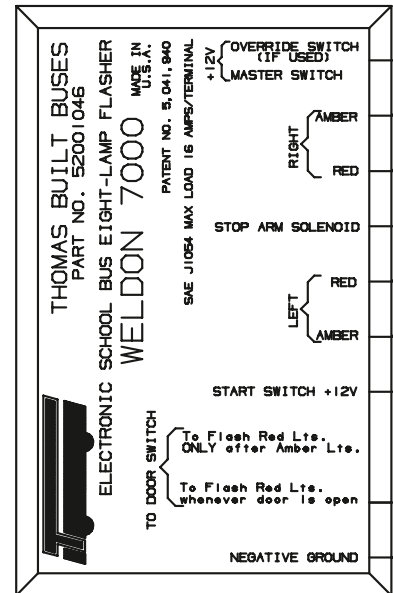

- NOTES:
1. USE PRESSURE SWITCH 22036377 WHEN AIR SERVICE DOORS ARE ORDERED.
 2. WIRING HARNESS 52000176 IS USED FOR WIRING TO THE SWITCH BOX.

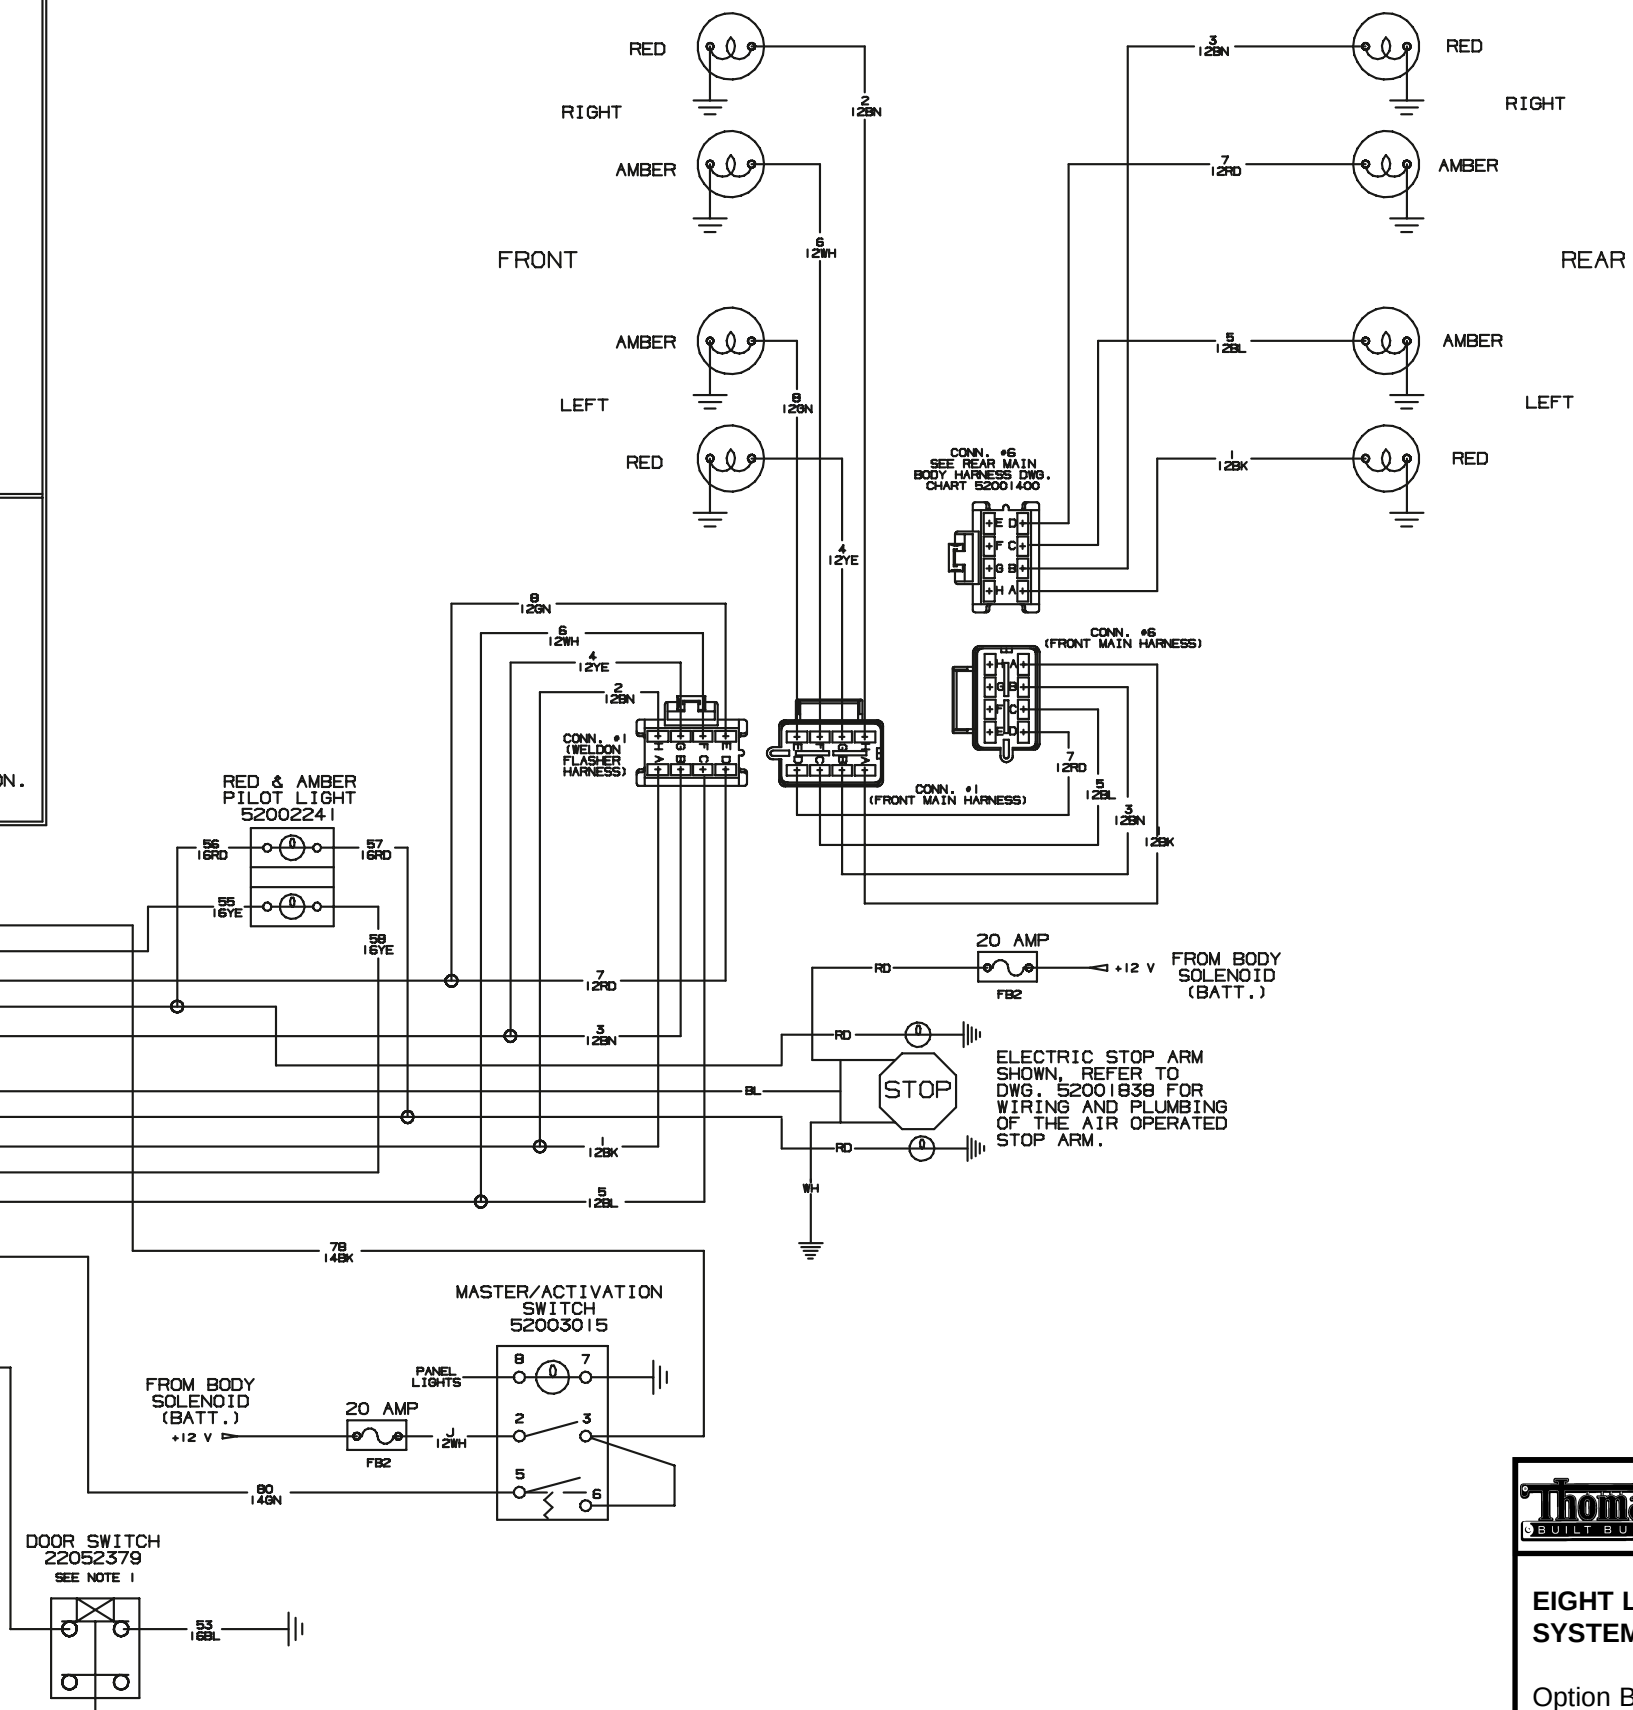


**52002519 C**

EIGHT LIGHT WARNING SYSTEM


Option B3580-17-000

SWITCH LAYOUT

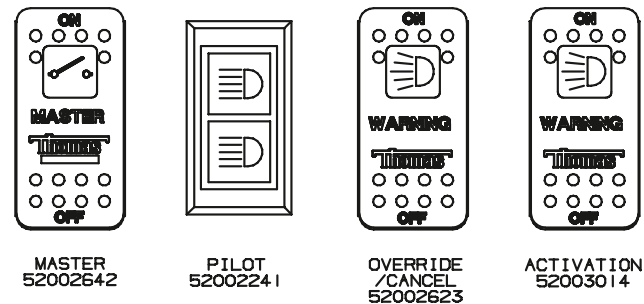


B3580-20-000 SYSTEM OPERATION

1. FOUR 7" AMBER LIGHTS AND FOUR 7" RED LIGHTS.
2. AMBER LIGHTS MANUALLY ENERGIZED BY ROCKER SWITCH LOCATED ON THE SWITCH PANEL.
3. RED LIGHTS AUTOMATICALLY ENERGIZED (WITH AMBER LIGHTS AUTOMATICALLY DE-ENERGIZED) WHEN BUS SERVICE DOOR IS OPENED.
4. AMBER LIGHTS CAN ALSO BE DEACTIVATED BY ROCKER SWITCH LOCATED ON THE SWITCH PANEL.
5. RED LIGHTS AND STOP ARM ONLY ACTIVATED AFTER AMBER LIGHTS.
6. MASTER SWITCH WITH PILOT LIGHT LOCATED IN SWITCH PANEL.
7. OVERRIDE SWITCH IN SWITCH PANEL TO FLASH RED LIGHTS AND EXTEND STOP ARM.
8. RED AND AMBER PILOT LIGHT IN SWITCH CABINET TO INDICATE SYSTEM OPERATION.
9. WELDON 7000 ELECTRONIC FLASHER.

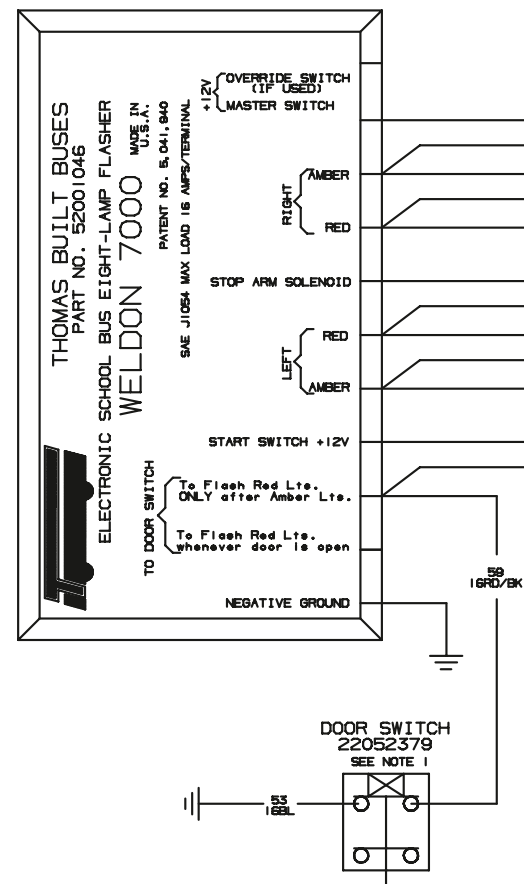


- NOTES:
1. USE PRESSURE SWITCH 22036377 WHEN AIR SERVICE DOORS ARE ORDERED.
 2. WIRING HARNESS 22054376 IS USED FOR WIRING INSIDE THE SWITCH CABINET.

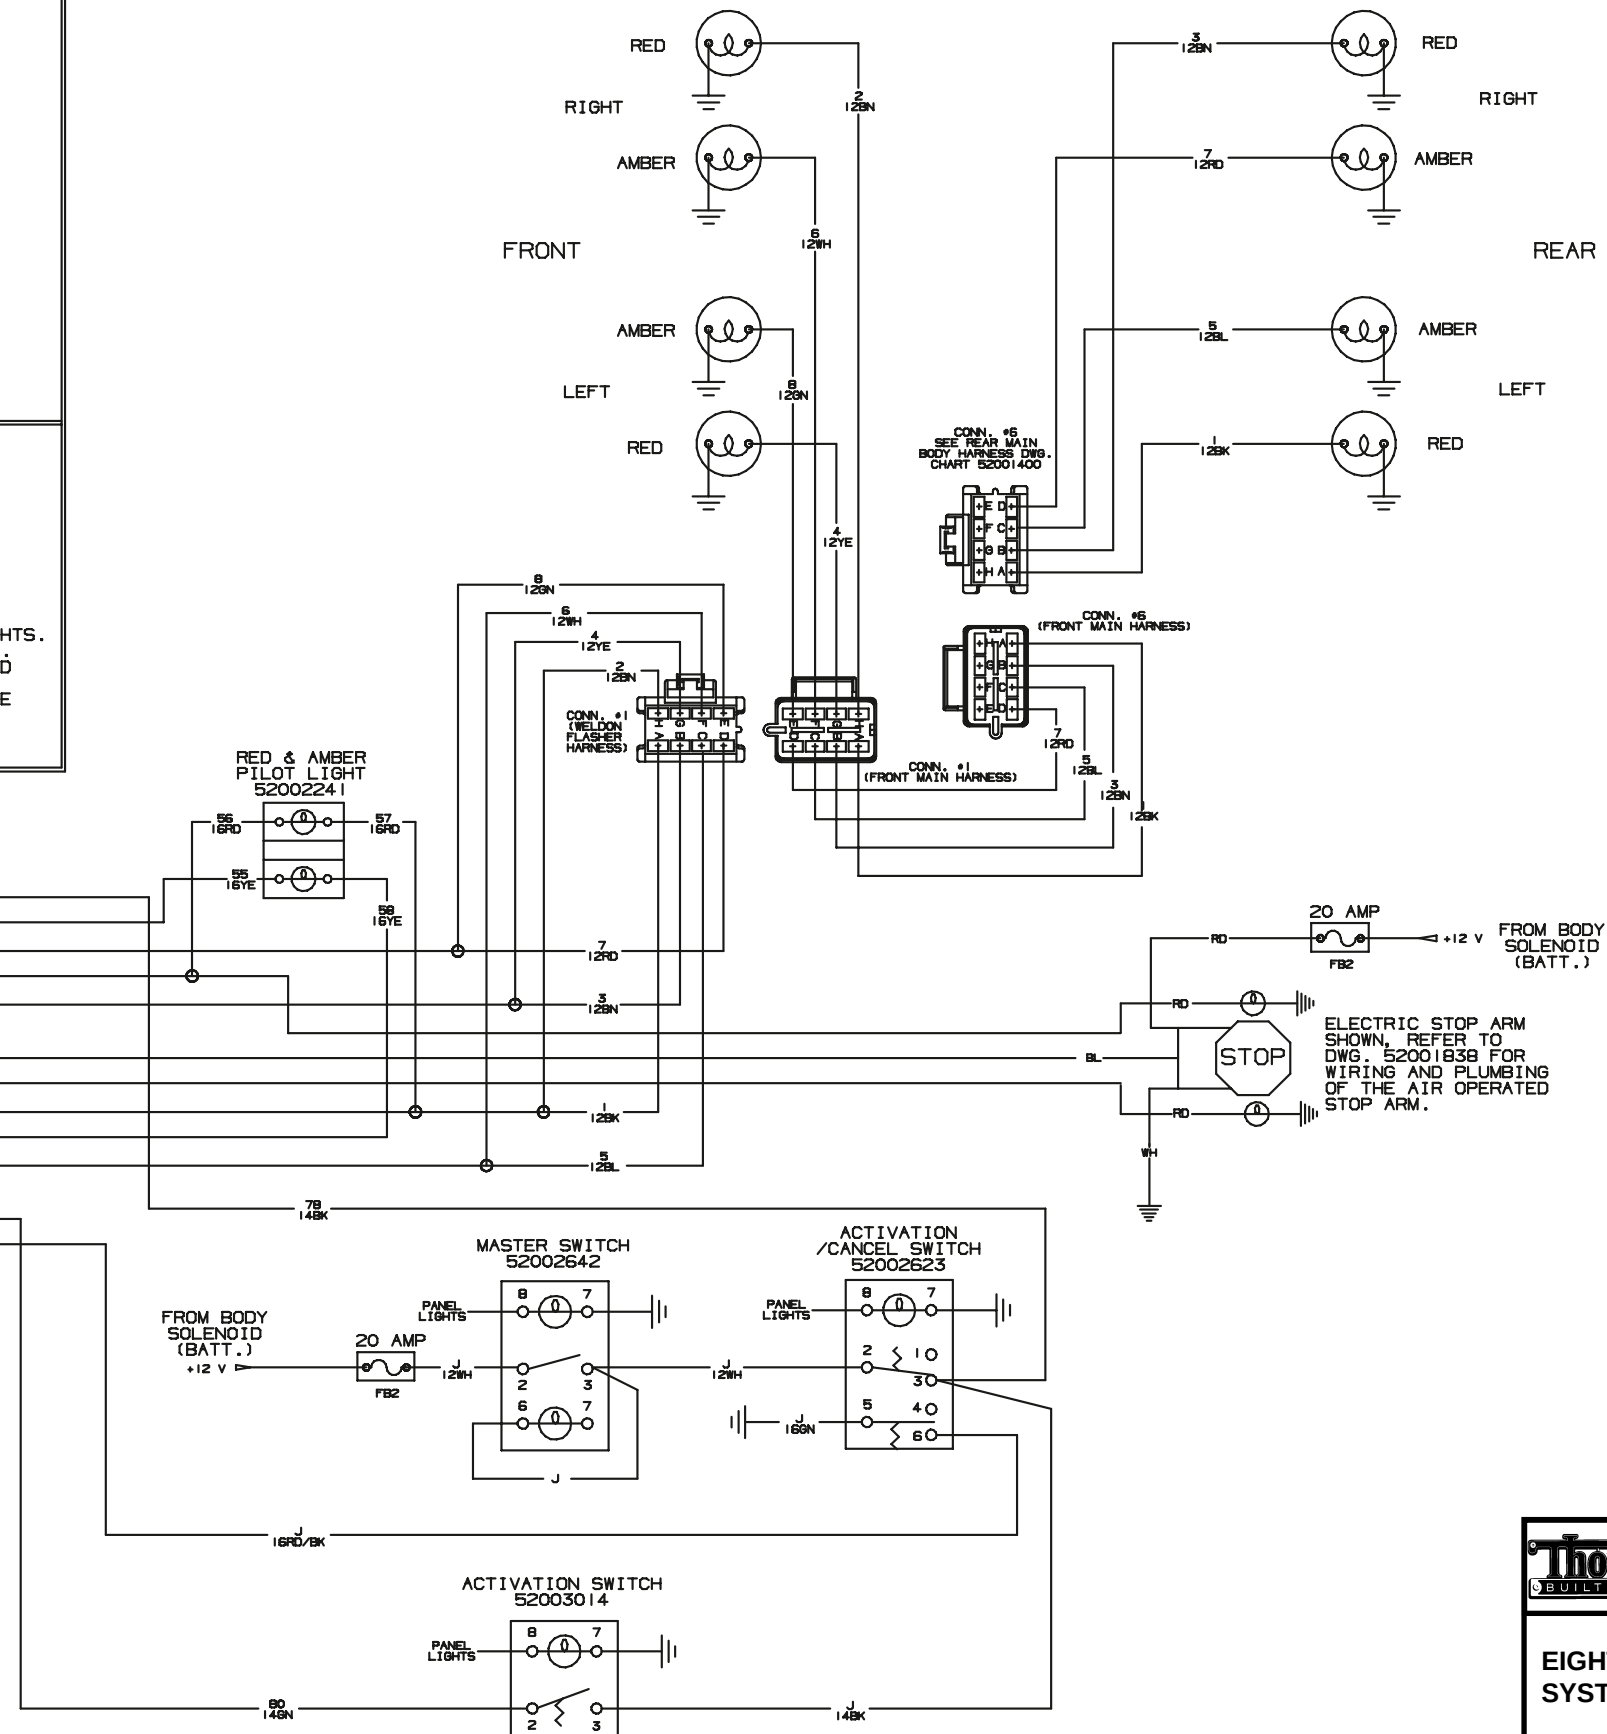

Thomas BUILT BUSES	52002568 C
EIGHT LIGHT WARNING SYSTEM	
Option B3580-20-000	

SWITCH LAYOUT

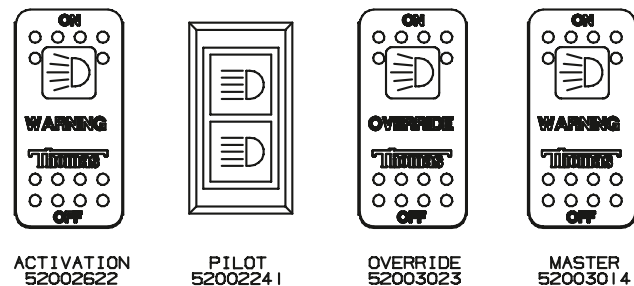


SWITCH BOX REQUIRED

	MANUAL DOOR	AIR DOOR	ELECTRIC DOOR
CONV.	52002144	52002145	52002145
VISTA	52002218	52002437	52002437
PUSH		DASH	DASH
F.C.	52002218	52002225	52002225

B3580-21-000 SYSTEM OPERATION

- FOUR 7" AMBER LIGHTS AND FOUR 7" RED LIGHTS.
- AMBER LIGHTS MANUALLY ENERGIZED BY ROCKER SWITCH LOCATED ON THE DASH PANEL (ER) OR IN A SWITCH BOX RIGHT OF STEERING COLUMN.
- RED LIGHTS AUTOMATICALLY ENERGIZED (WITH AMBER LIGHTS AUTOMATICALLY DE-ENERGIZED) WHEN BUS SERVICE DOOR IS OPENED.
- RED LIGHTS AND STOP ARM ACTIVATED WHENEVER SERVICE DOOR IS OPENED (NONSEQUENTIAL).
- MASTER SWITCH LOCATED ON THE DASH PANEL (ER) OR IN A SWITCH BOX RIGHT OF STEERING COLUMN.
- OVERRIDE SWITCH LOCATED ON DASH PANEL (ER) OR IN SWITCH BOX RIGHT OF STEERING COLUMN TO FLASH RED LIGHTS AND EXTEND STOP ARM.
- RED PILOT LIGHT ON DASH PANEL (ER) OR IN CONTROL BOX TO INDICATE SYSTEM OPERATION.
- WELDON 7000 ELECTRONIC FLASHER.

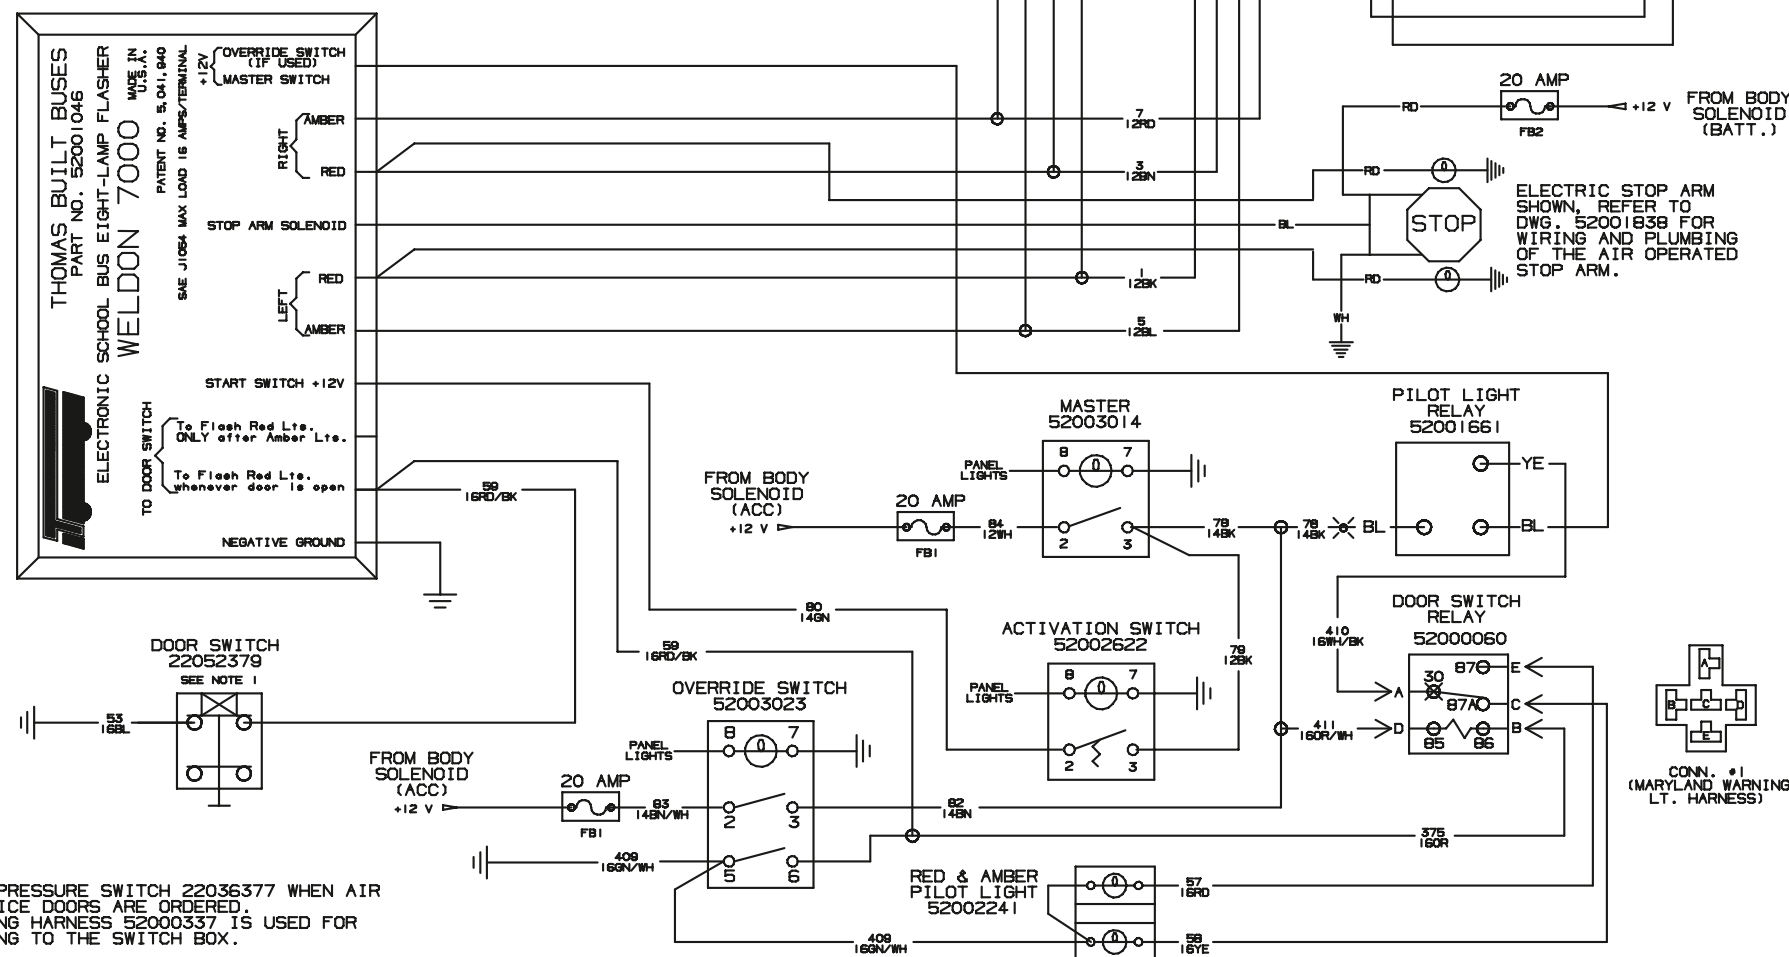

- NOTES:
- USE PRESSURE SWITCH 22036377 WHEN AIR SERVICE DOORS ARE ORDERED.
 - WIRING HARNESS 52000337 IS USED FOR WIRING TO THE SWITCH BOX.




52002526 C

EIGHT LIGHT WARNING
SYSTEM (MARYLAND)


Option B3580-21-000

MASTER/
ACTIVATION
52003015

1. FOUR 7" AMBER LIGHTS AND FOUR 7" RED LIGHTS.
2. AMBER LIGHTS MANUALLY ENERGIZED BY ROCKER SWITCH LOCATED ON THE SWITCH PANEL.
3. RED LIGHTS AUTOMATICALLY ENERGIZED (WITH AMBER LIGHTS AUTOMATICALLY DE-ENERGIZED) WHEN BUS SERVICE DOOR IS OPENED.
4. RED LIGHTS AND STOP ARM ONLY ACTIVATED AFTER AMBER LIGHTS.
5. MASTER SWITCH LOCATED IN SWITCH PANEL.
6. RED AND AMBER PILOT LIGHT IN SWITCH CABINET TO INDICATE SYSTEM OPERATION.
7. SEPARATE RELAY FOR WARNING LIGHT SYSTEM.
8. WELDON 7000 ELECTRONIC FLASHER.

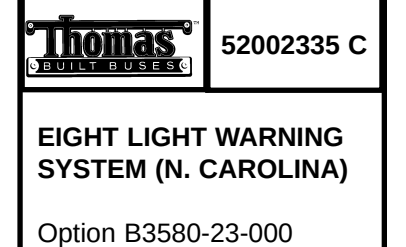


SWITCH LAYOUT

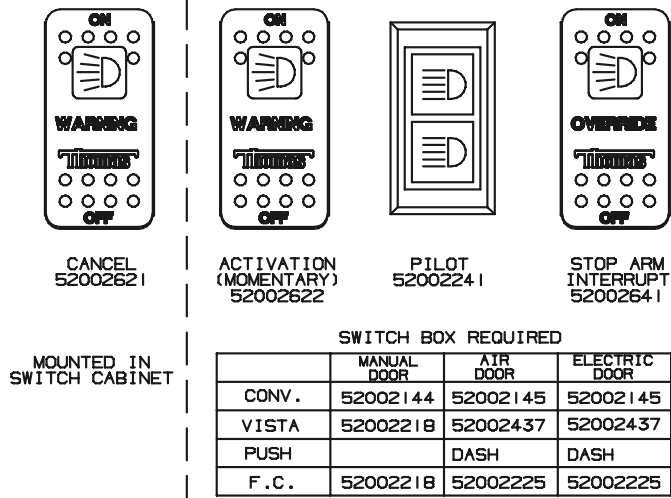

B3680-24-000
SYSTEM OPERATION

1. FOUR 7" AMBER LIGHTS AND FOUR 7" RED LIGHTS.
2. AMBER LIGHTS MANUALLY ENERGIZED BY ROCKER SWITCH LOCATED ON THE DASH PANEL (ER) OR IN A SWITCH BOX RIGHT OF STEERING COLUMN.
3. RED LIGHTS AUTOMATICALLY ENERGIZED (WITH AMBER LIGHTS AUTOMATICALLY DE-ENERGIZED) WHEN BUS SERVICE DOOR IS OPENED.
4. AMBER LIGHTS ALSO DEACTIVATED BY ROCKER SWITCH LOCATED IN SWITCH CABINET.
5. RED LIGHTS AND STOP ARM ONLY ACTIVATED AFTER AMBER LIGHTS.
6. STOP ARM AND CROSSING ARM INTERRUPT SWITCH LOCATED ON THE DASH PANEL (ER) OR IN A SWITCH BOX RIGHT OF STEERING COLUMN.
7. RED PILOT LIGHT IN CONTROL BOX TO INDICATE SYSTEM OPERATION.
8. WELDON 7000 ELECTRONIC FLASHER.

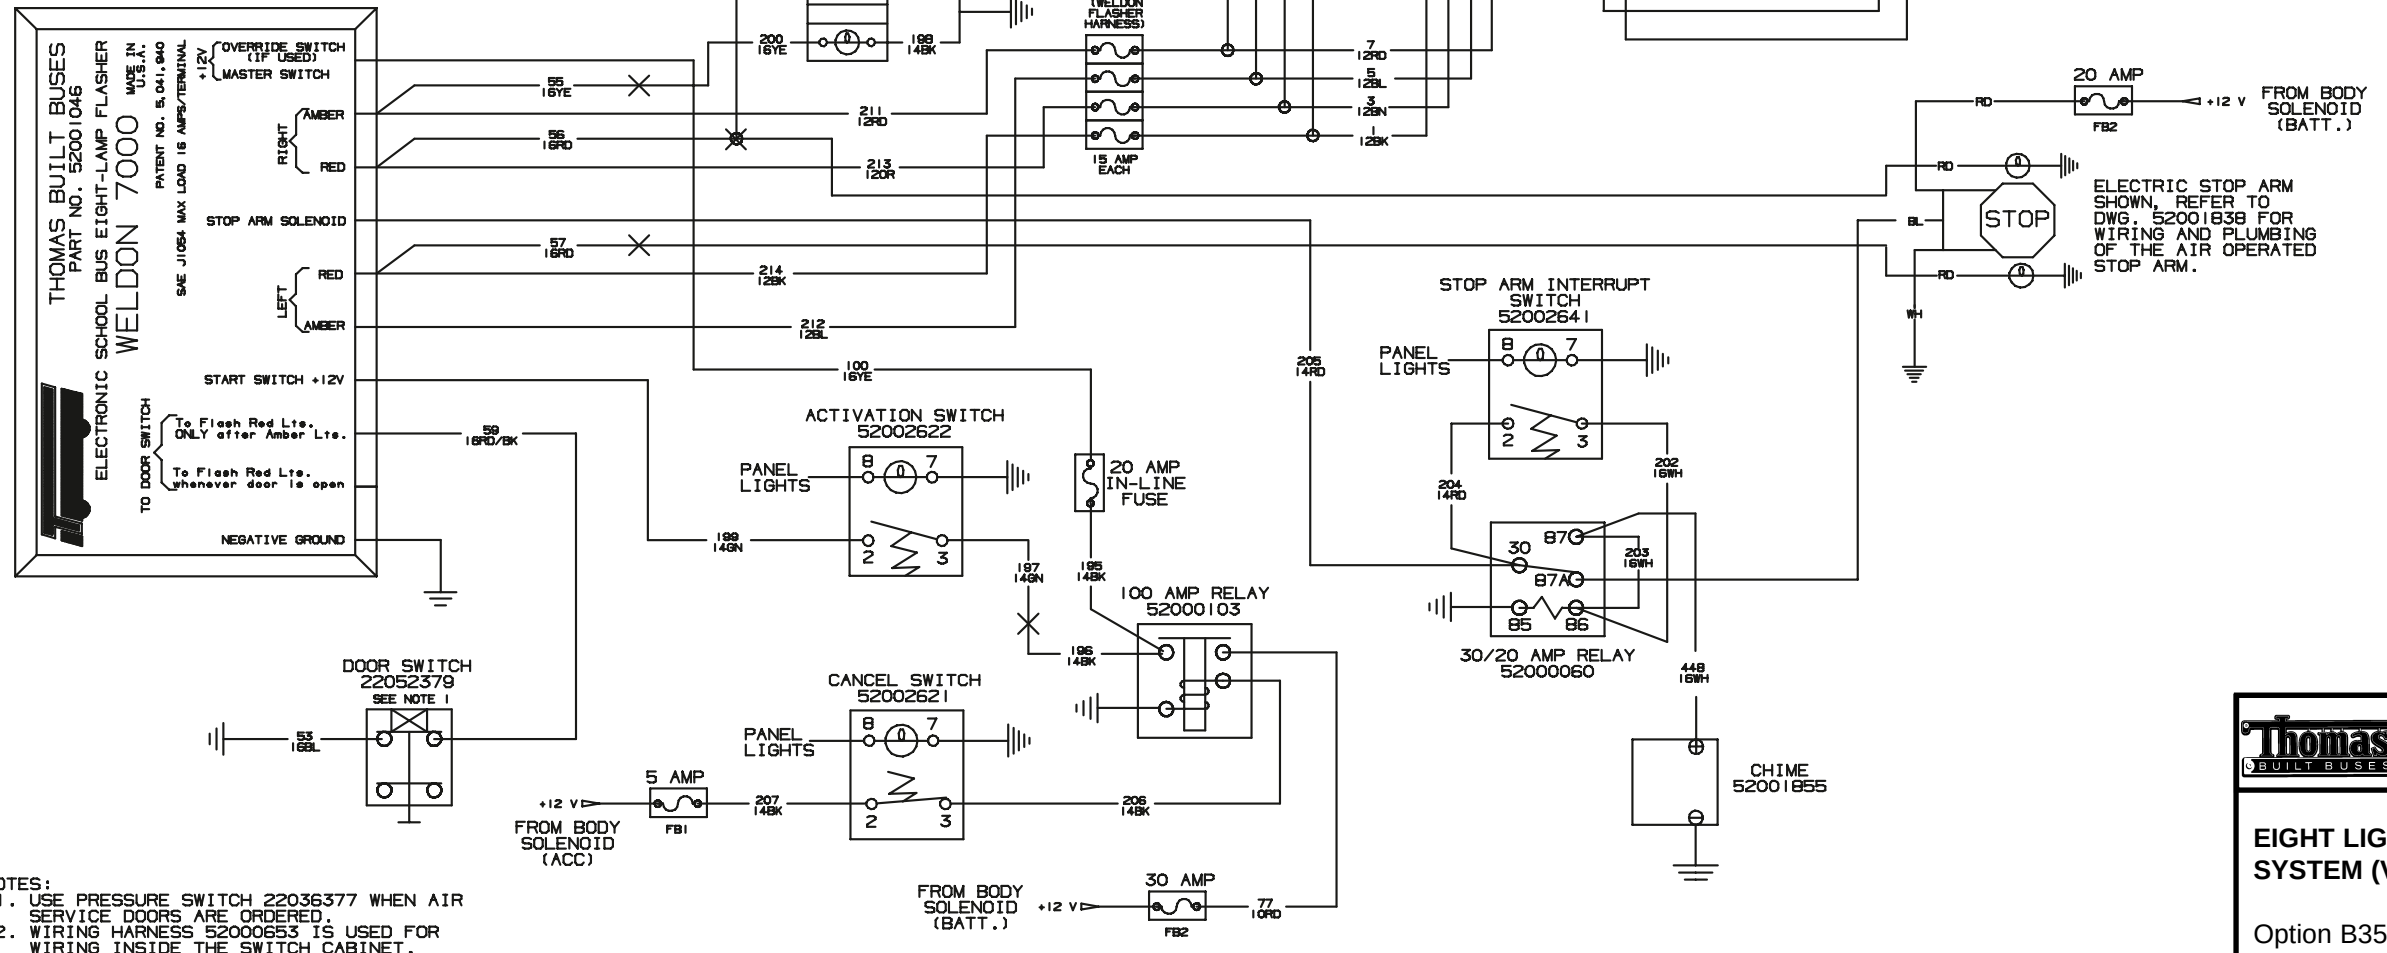


52002528 B

EIGHT LIGHT WARNING
SYSTEM (VIRGINIA)

Option B3580-24-000

SWITCH LAYOUT

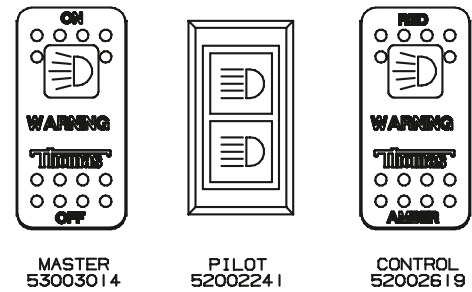


B3580-26-000
SYSTEM OPERATION

WITH MASTER SWITCH, CONTROL SWITCH, AND SERVICE DOOR IN THE FOLLOWING POSITIONS:

MASTER SWITCH POSITION (ON OR OFF)	CONTROL SWITCH POSITION (3 POSITION: OFF, AMBER, OR RED)	SERVICE DOOR POSITION	STOP ARMS, STOP ARM LIGHTS	AMBER WARNING AND PILOT LIGHTS	RED WARNING AND PILOT LIGHTS	AUDIBLE ALARM
1 ON	OFF	CLOSED	1 RETRACTED, OFF	OFF	OFF	OFF
2 ON	OFF	OPEN	2 RETRACTED, OFF	OFF	ON	ON
3 ON	AMBER	CLOSED	3 RETRACTED, OFF	ON	OFF	OFF
4 ON	AMBER	OPEN	4 RETRACTED, OFF	OFF	ON	ON
5 ON	RED	CLOSED	5 EXTENDED, ON	OFF	ON	OFF
6 ON	RED	OPEN	6 EXTENDED, ON	OFF	ON	OFF
7 OFF	ANY POS.	ANY POS.	7 RETRACTED, OFF	OFF	OFF	OFF


CONDITION OF STOP ARM(S), STOP ARM LIGHTS, AMBER WARNING LIGHTS AND RED WARNING LIGHTS MUST BE:

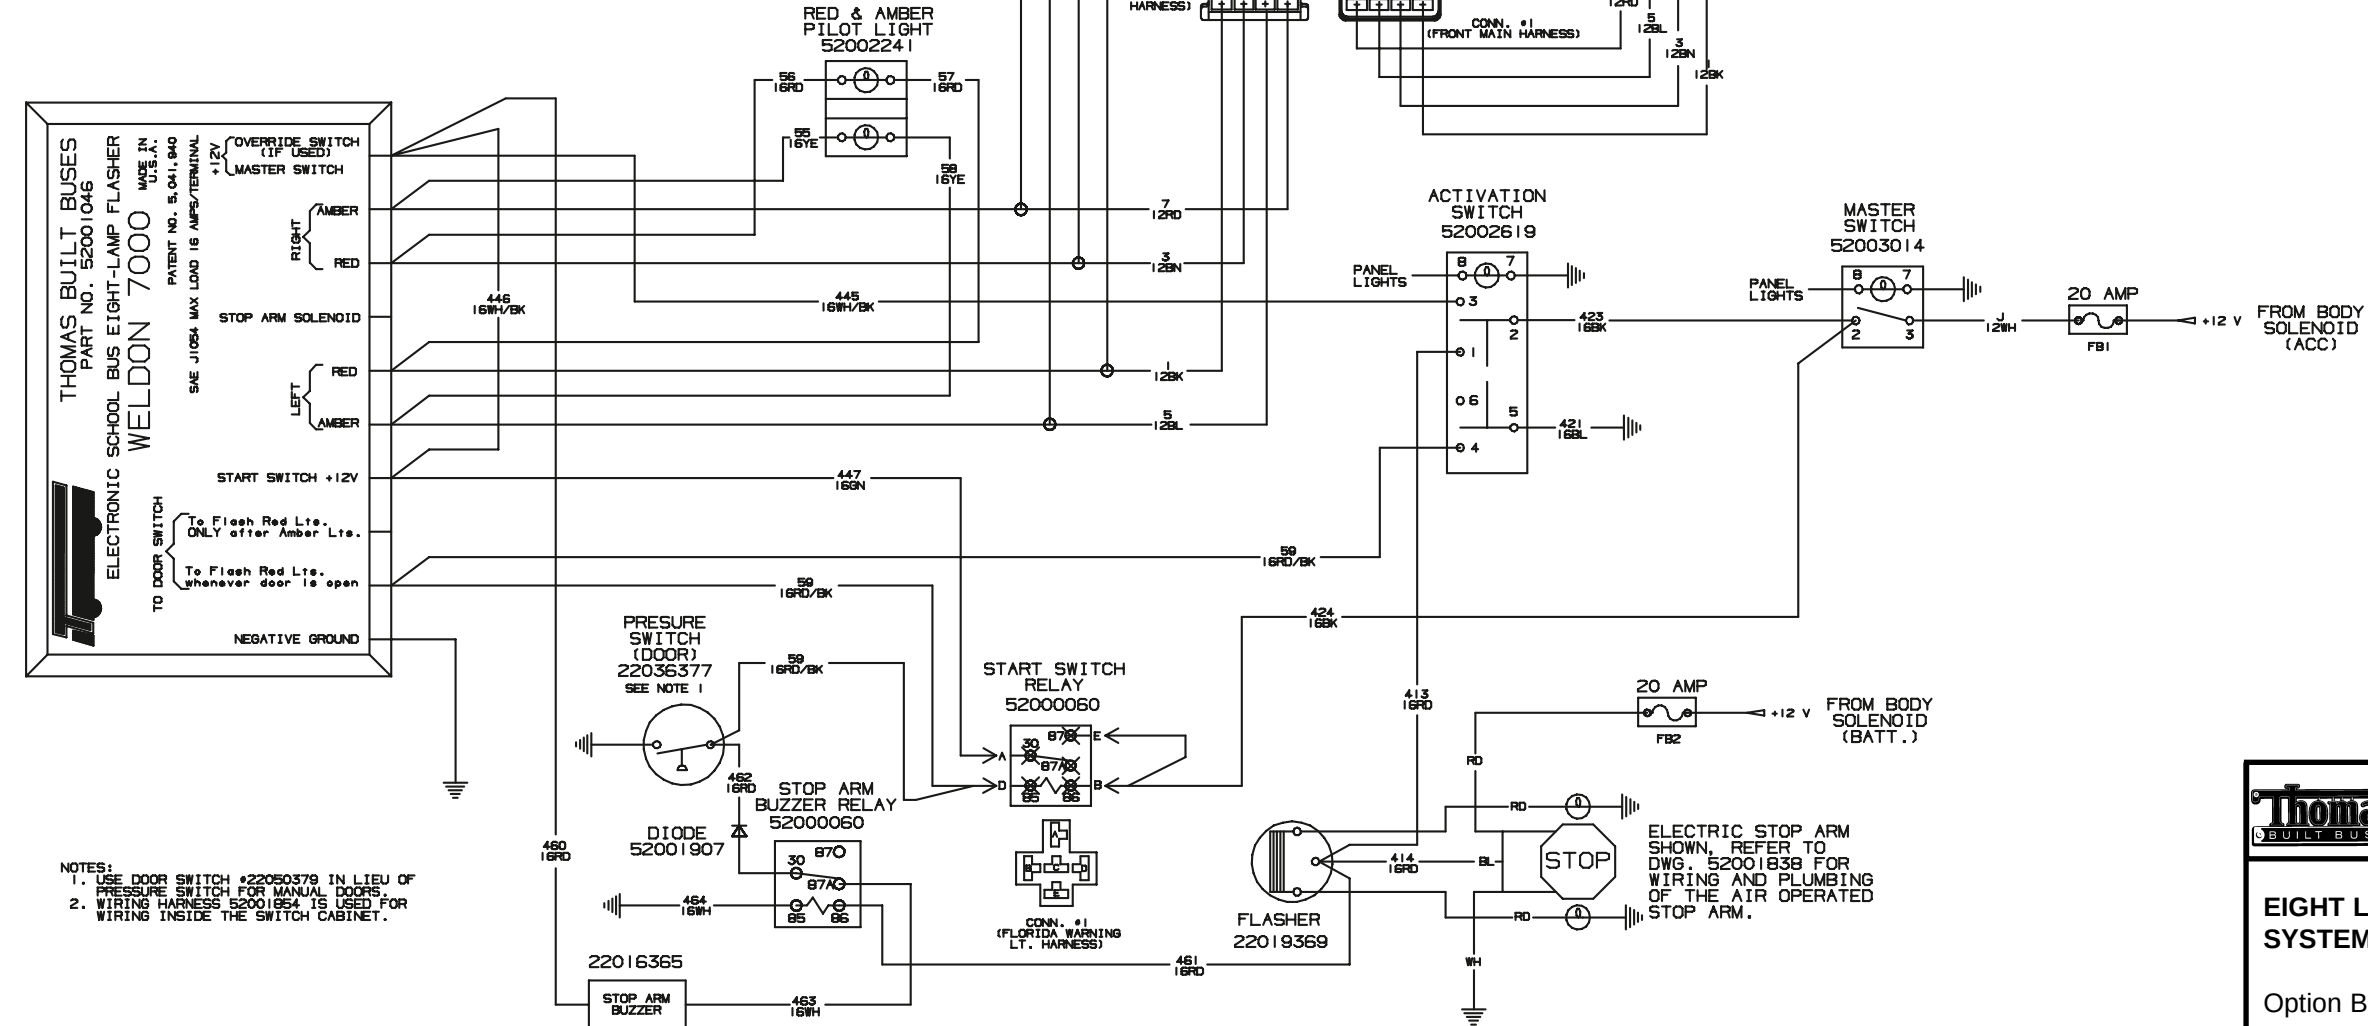

**52002327 C**

EIGHT LIGHT WARNING SYSTEM (FLORIDA)
Option B3580-26-000

SWITCH LAYOUT

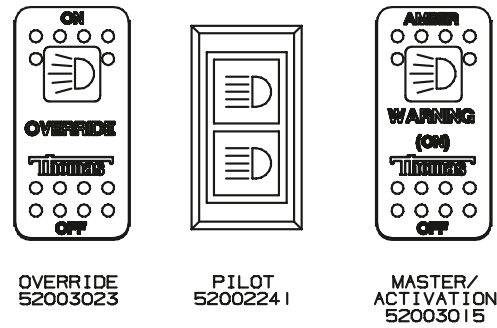


B3580-27-000
SYSTEM OPERATION

1. FOUR 7" AMBER LIGHTS AND FOUR 7" RED LIGHTS.
2. AMBER LIGHTS MANUALLY ENERGIZED BY ROCKER SWITCH LOCATED ON THE SWITCH PANEL.
3. RED LIGHTS AUTOMATICALLY ENERGIZED (WITH AMBER LIGHTS AUTOMATICALLY DE-ENERGIZED) WHEN BUS SERVICE DOOR IS OPENED.
4. RED LIGHTS AND STOP ARM ACTIVATED WHENEVER SERVICE DOOR IS OPENED (NONSEQUENTIAL).
5. MASTER SWITCH LOCATED IN SWITCH PANEL.
6. OVERRIDE SWITCH IN SWITCH PANEL TO FLASH RED LIGHTS AND EXTEND STOP ARM.
7. RED AND AMBER PILOT LIGHT IN SWITCH CABINET TO INDICATE SYSTEM OPERATION.
8. WELDON 7000 ELECTRONIC FLASHER.


COLOR & SYMBOLS LEGEND

RD-RED
BR-BROWN
GN-GREEN
YE-YELLOW
LT-LIGHT
WH-WHITE
BL-BLUE
BK-BLACK
OR-ORANGE
PU-PURPLE
DK-DARK
J-JUMPER

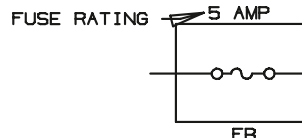

FUSE/
CIRCUIT BREAKER
BLOCK NUMBER

CURCUIT
NUMBER

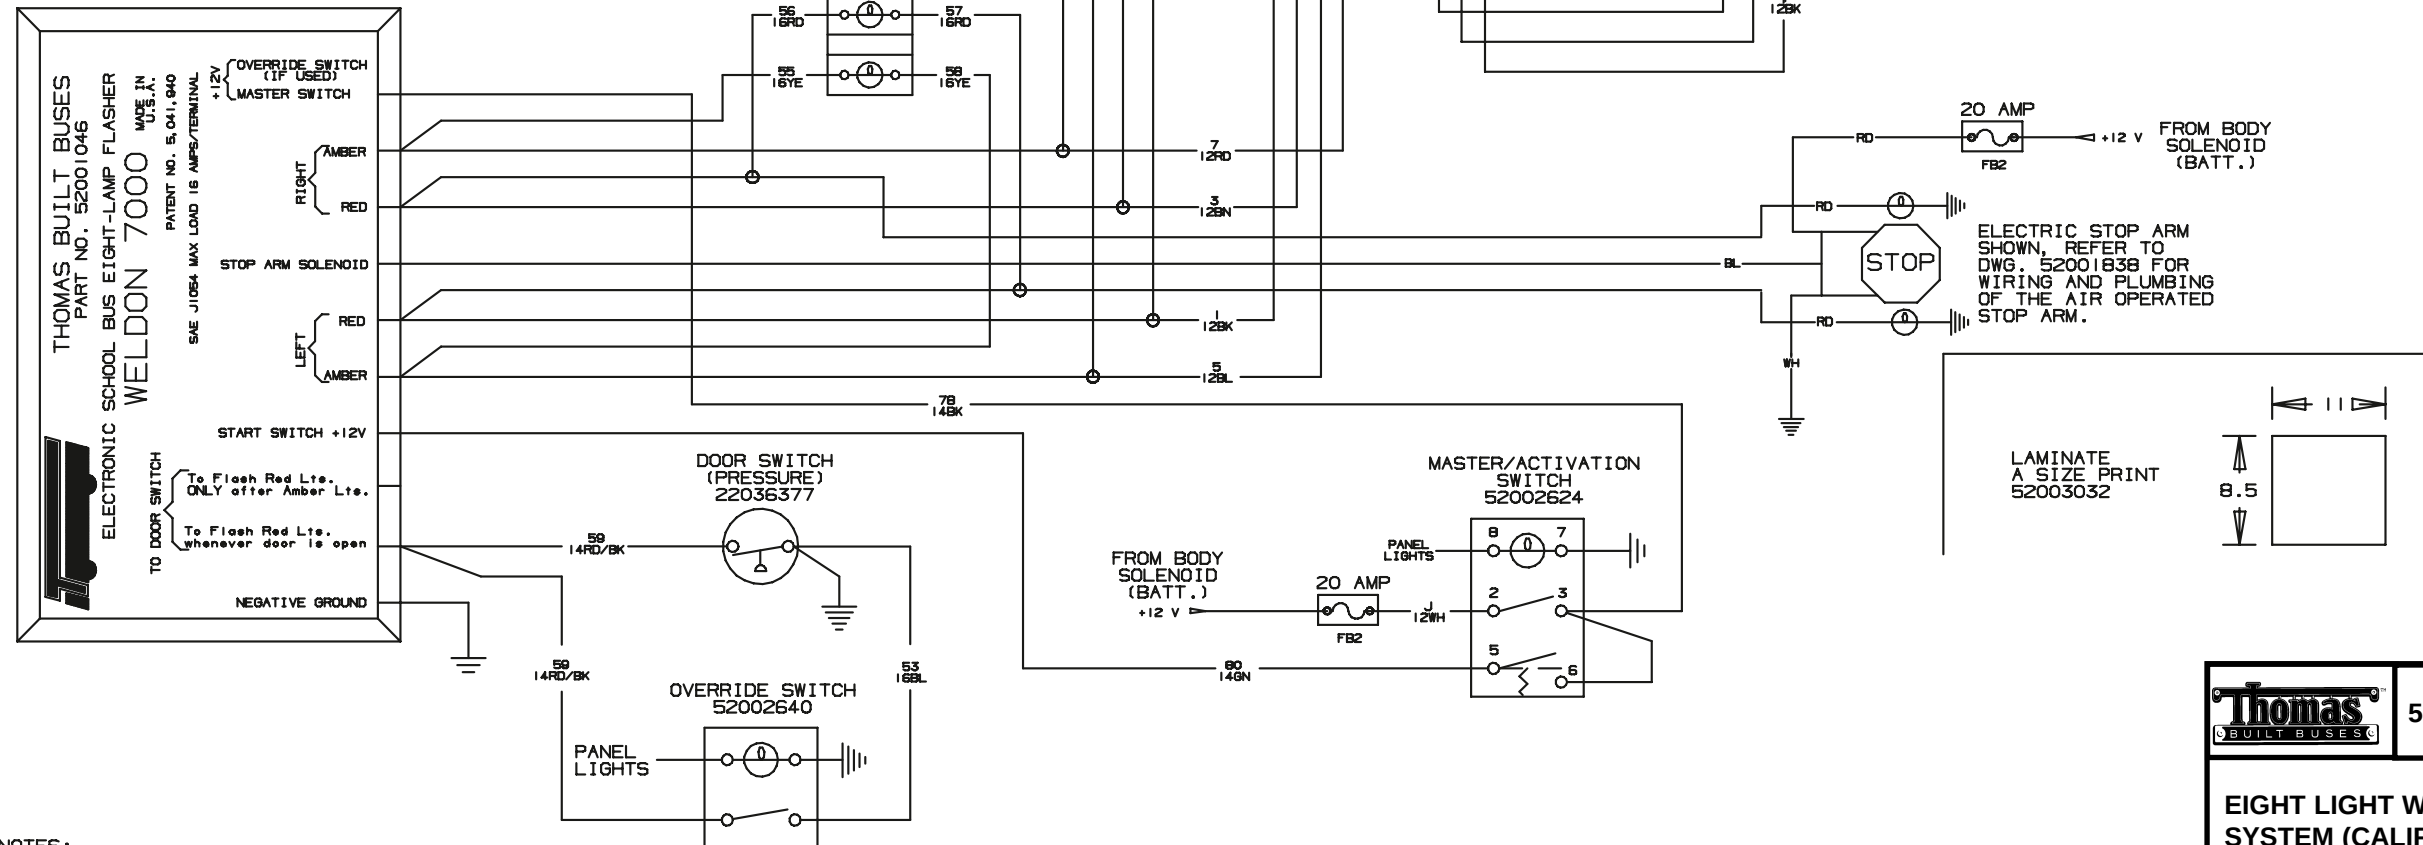


- NOTES:
1. USE PUSH BUTTON SWITCH 22052379 WHEN MANUAL SERVICE DOORS ARE ORDERED.
 2. WIRING HARNESS 52001870 IS USED FOR WIRING INSIDE THE SWITCH CABINET.



52002554 D

EIGHT LIGHT WARNING
SYSTEM (CALIFORNIA)

Option B3580-27-000

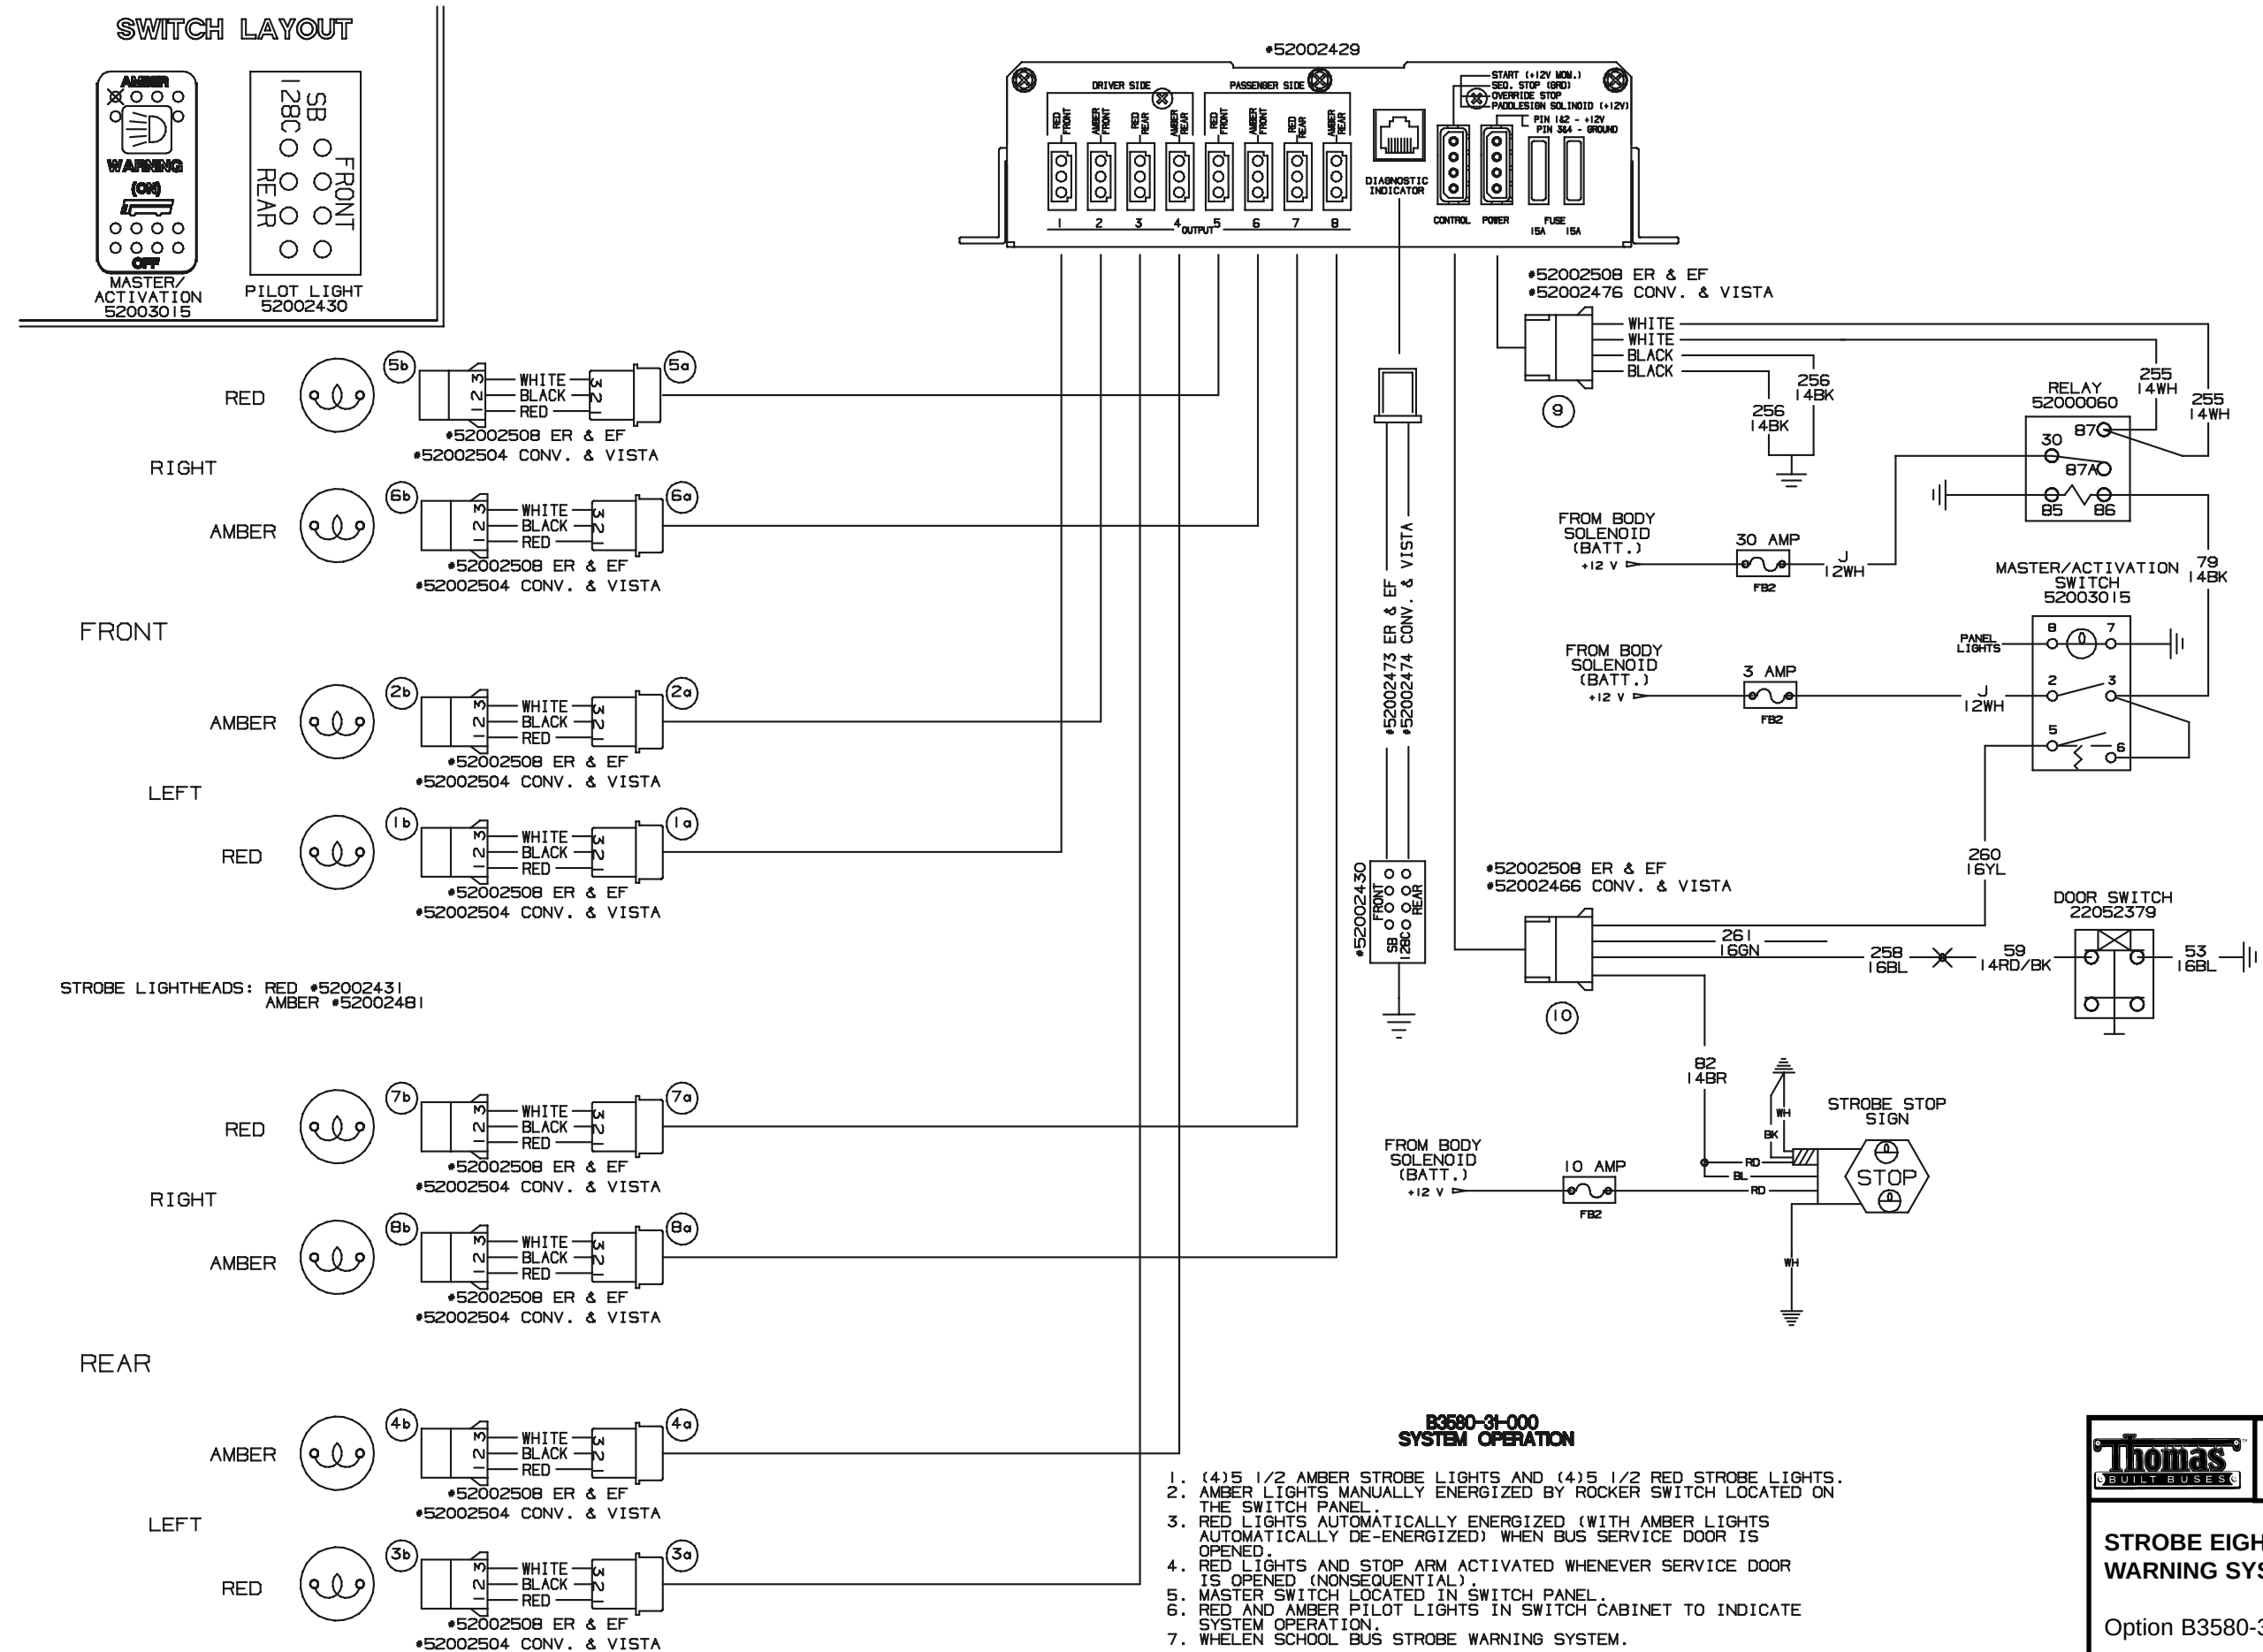

Thomas BUILT BUSES	52002583 C
STROBE EIGHT LIGHT WARNING SYSTEM	
Option B3580-31-000	

PUSH BUTTON
52002965

PILOT
52002241


DOOR/WARNING SYS.
PADDLE SWITCH
52003066

1. FOUR 7" AMBER LIGHTS AND FOUR 7" RED LIGHTS.
2. WELDON 7000 ELECTRONIC FLASHER.
3. STOP SIGN EXTENDS WHEN RED LIGHTS ARE ENERGIZED.
4. AMBER LIGHTS MANUALLY ENERGIZED BY PUSH BUTTON SWITCH LOCATED ON THE SWITCH PANEL.
5. DOOR AND LIGHTS CONTROLLED BY A THREE WAY SWITCH:
POSITION 1: DOOR CLOSED, AMBER LIGHTS ON IF ACTIVATED
POSITION 2: DOOR REMAINS CLOSED, RED LIGHTS OPERATE ONLY IF AMBER LIGHTS HAVE BEEN ACTIVATED.
POSITION 3: DOOR OPENS, RED LIGHTS OPERATE ONLY IF AMBER LIGHTS HAVE BEEN ACTIVATED.
POSITION 2: DOOR CLOSES, RED LIGHTS OPERATE ONLY IF AMBER LIGHTS HAVE BEEN ACTIVATED.
POSITION 1: DOOR CLOSED, RED LIGHTS OFF.




NOTES:



**MVP-ER
STOP SIGNS &
CROSSING GATES
SCHEMATICS**

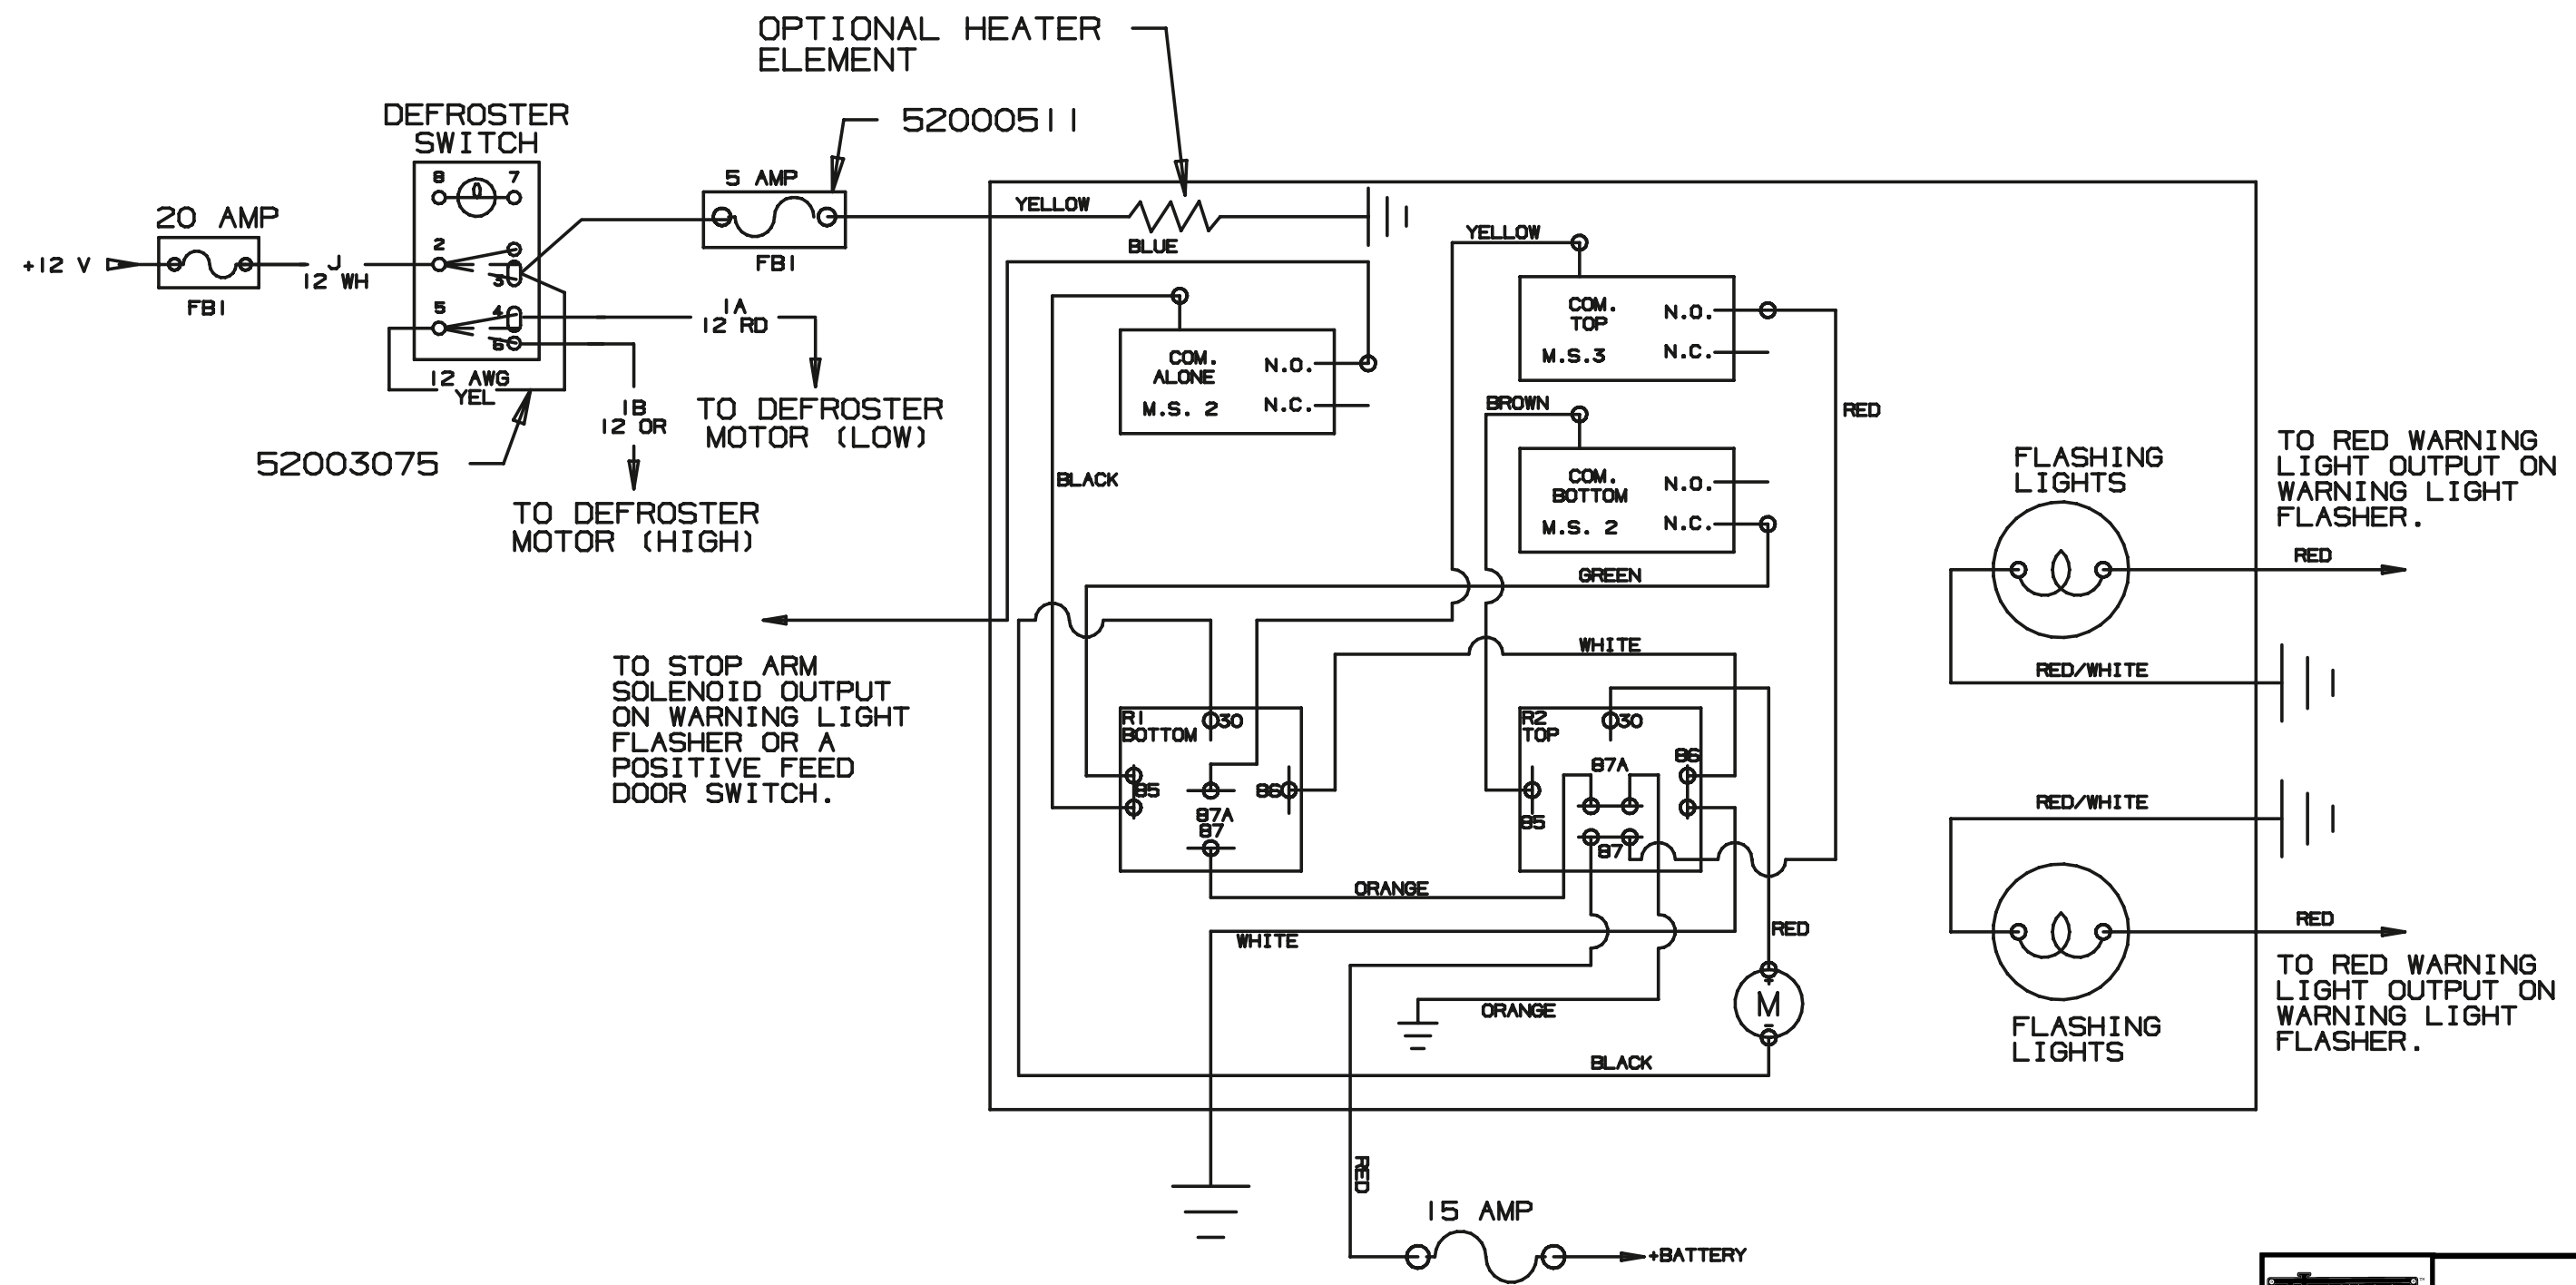


	52001839 D
ELECTRIC STOP SIGN, SPECIALTY 5000 SERIES	

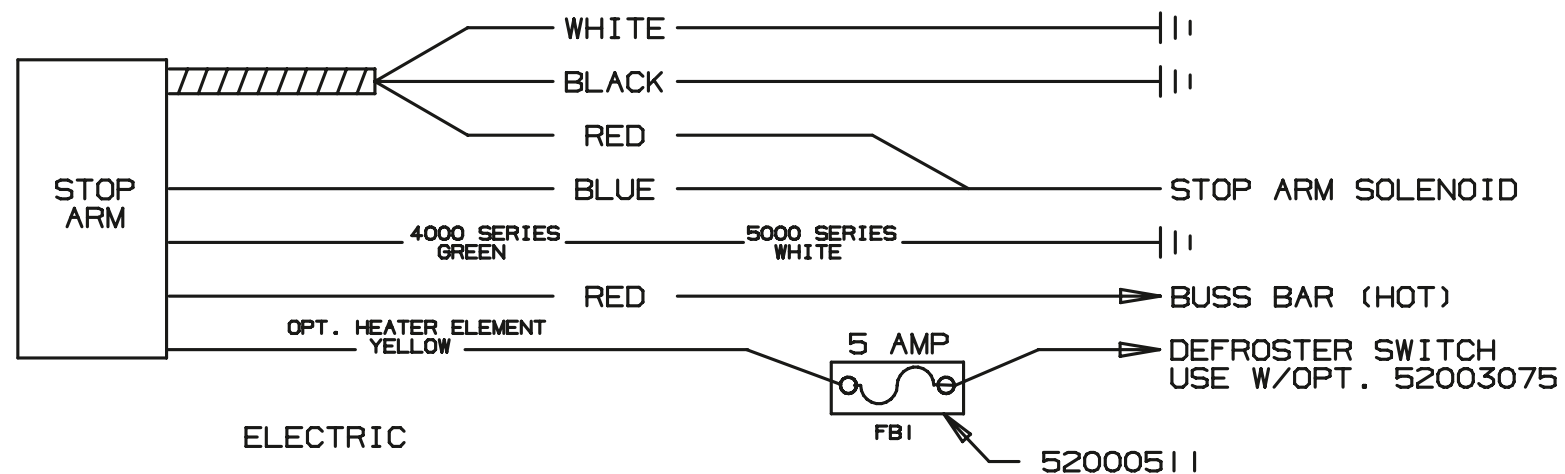

SINGLE STROBE
LIGHT OPERATION

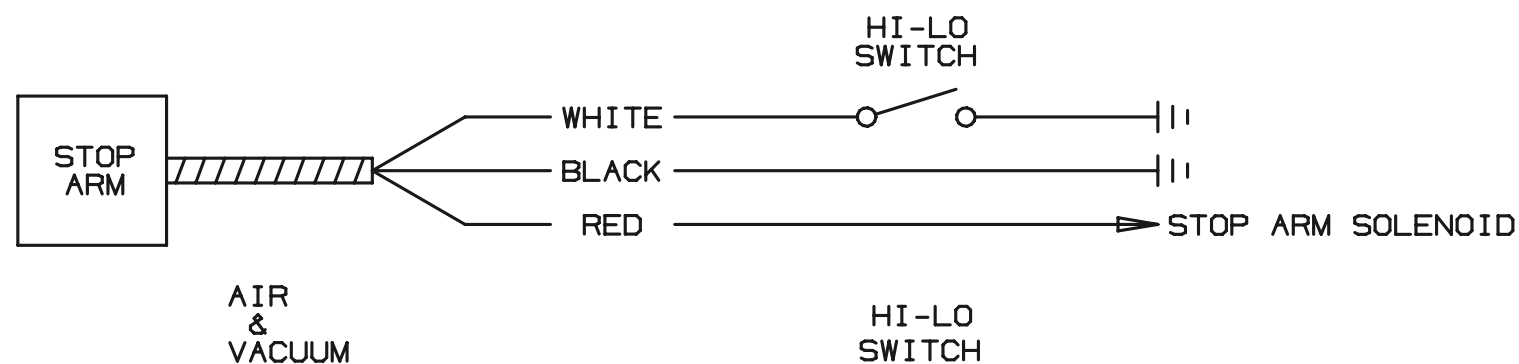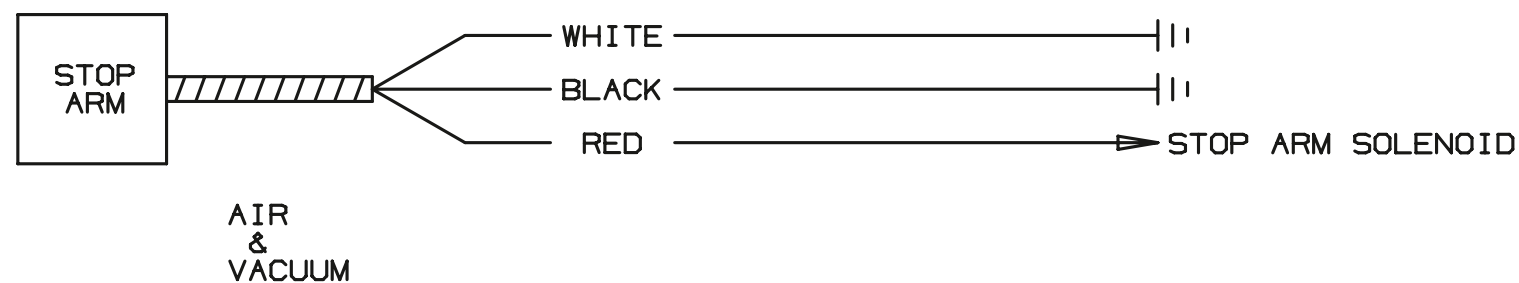


HI-LOW STROBE
LIGHT OPERATION

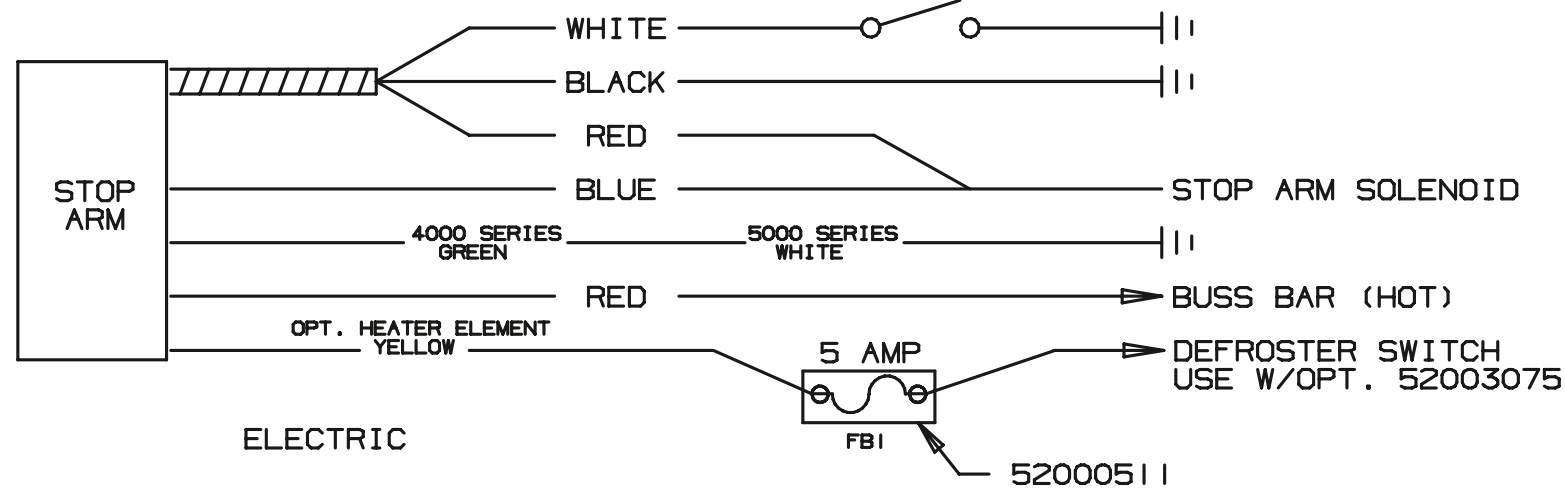

CIRCUIT OPERATION
OPEN-LOW INTENSITY
CLOSED-HIGH INTENSITY

	52001536 D
STOP ARM STROBE LIGHT, SINGLE AND H/L OPERATION, ELECTRIC, AIR & VACUUM	

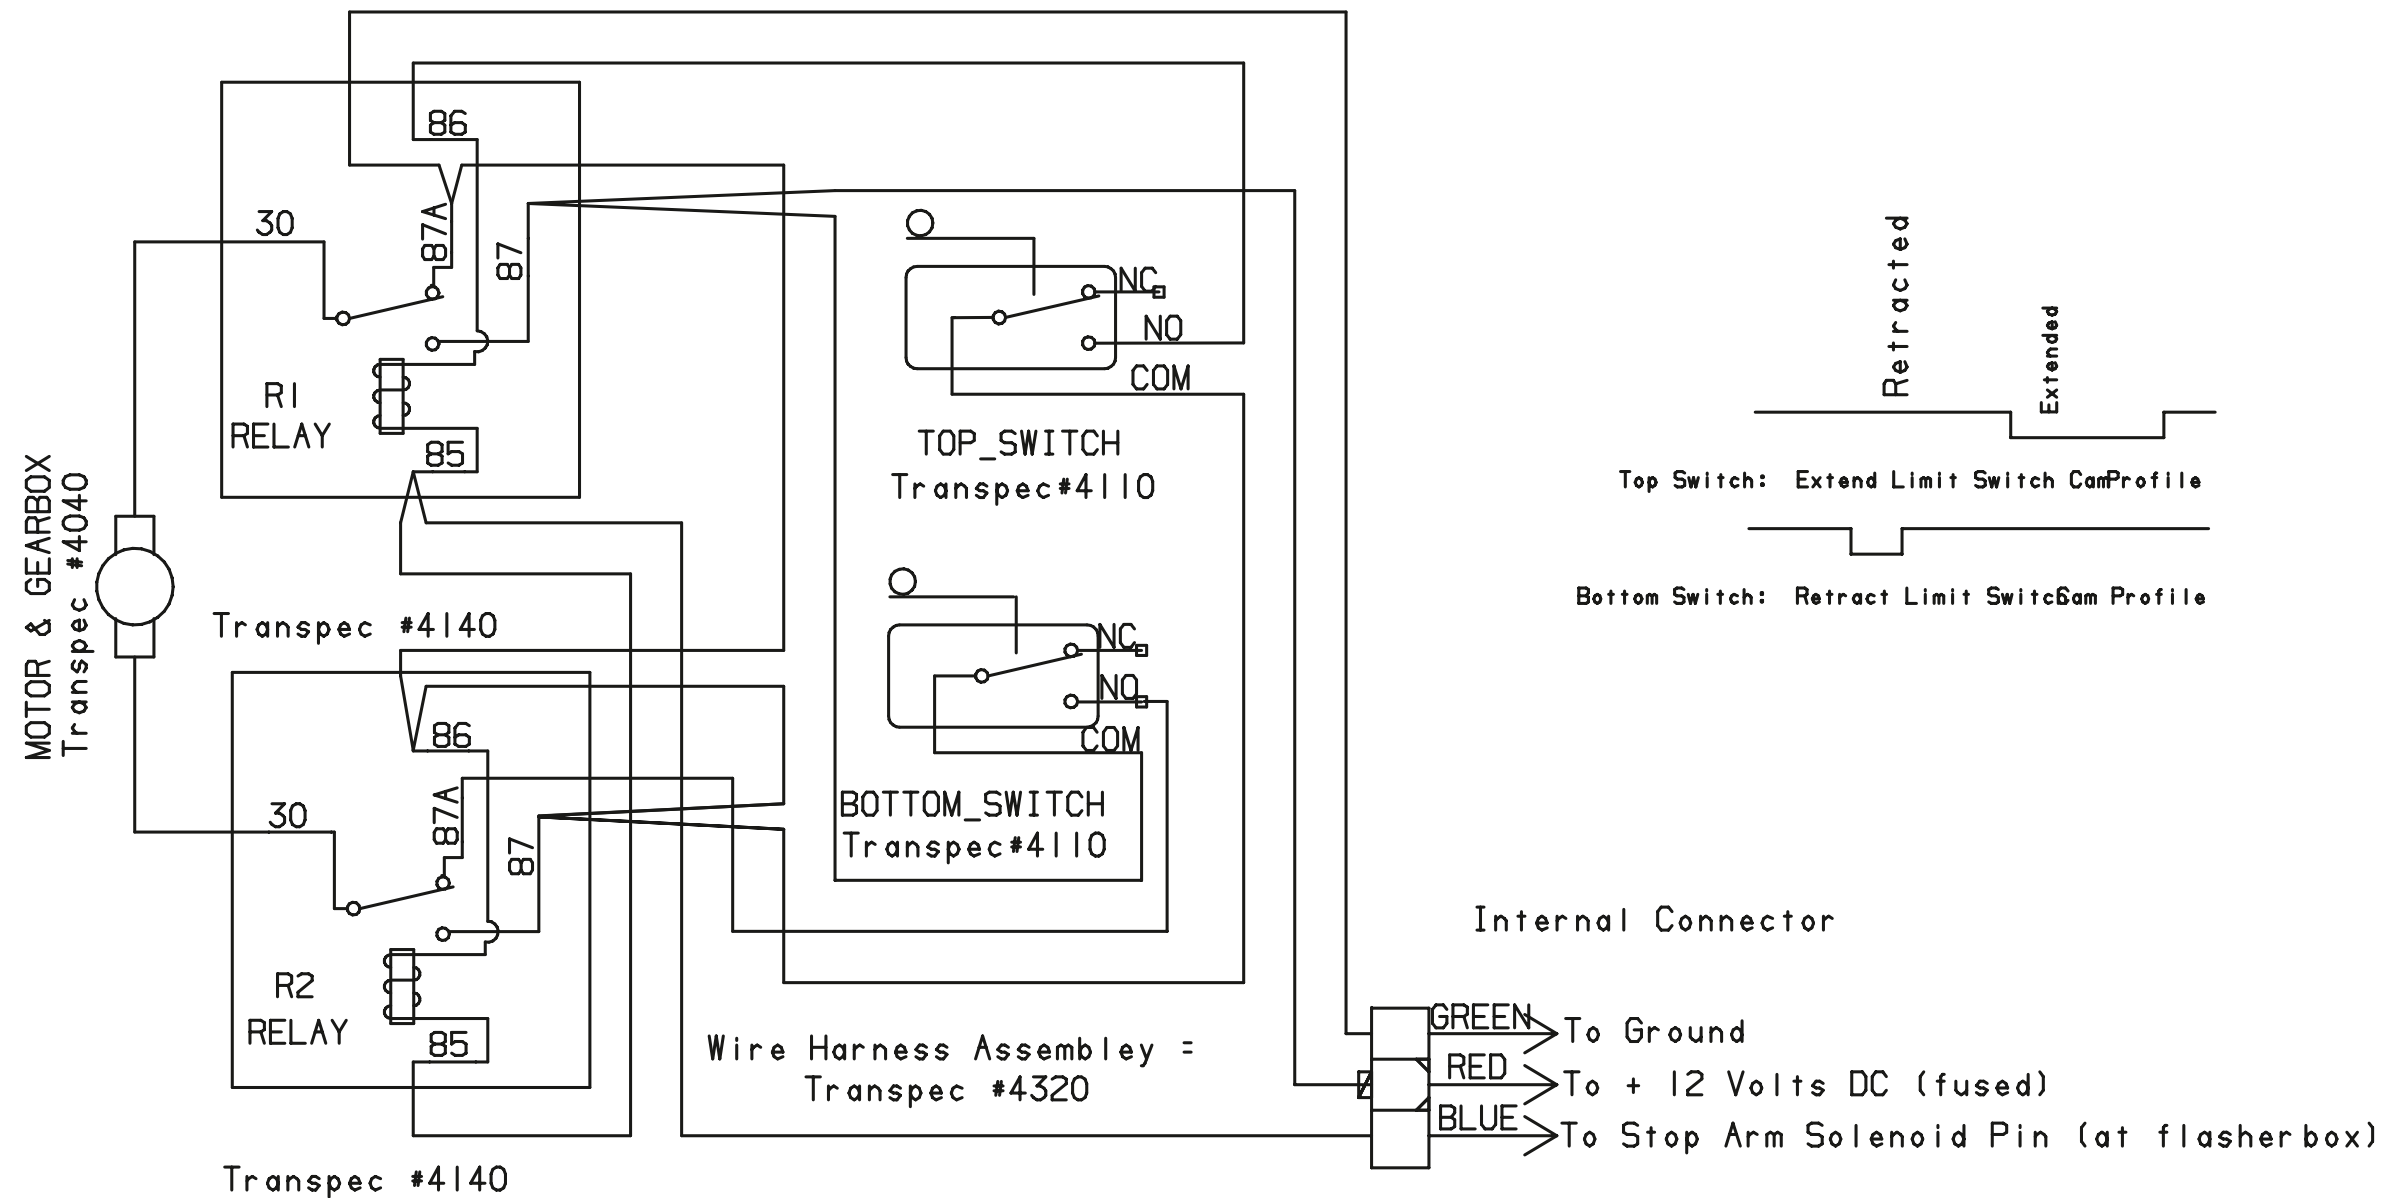

TRANSPEC SAFTY STOP WIREING CONNECTIONS For [3] Wire harnesses

MOTOR WIRE HARNESS

blue wire to activation or stop arm solenoid pin at flasher box
red wire to +12VDC fused or master pin at flasher box
green wire to ground

LIGHT WIRE HARNESS

one white wire to right +12 VDC flasher or right red pin at flasher box
one white wire to left +12 VDC flasher or left red pin at flasher box
[with tracer]
one black wire to ground

NOTE:

This is a running change that will supersede the [4] wire harness and should be fully instituted by 1/1/97

Thomas BUILT BUSES	52002690 A
ELECTRICAL STOP ARM TRANSPEC w/LED'S, 3 WIRE HARNESS	


TRANSPEC SAFTY STOP
WIRING CONNECTIONS
For [4] Wire Harnesses
MOTOR WIRE HARNESS

blue wire to activation or stop arm solenoid pin at flasher box
red wire to +12 VDC fused or master switch pin at flasher box
green wire to ground
white wire to ground

Note: be sure NOT to use one of the two white wries from
the light wire harness [wrapped together with tape]

LIGHT WIRE HARNESS

two white wires one to right +12 VDC flasher or right red pin at flasher box
one to left +12 VDC flasher or left red pin at flasher box
two black wires to ground

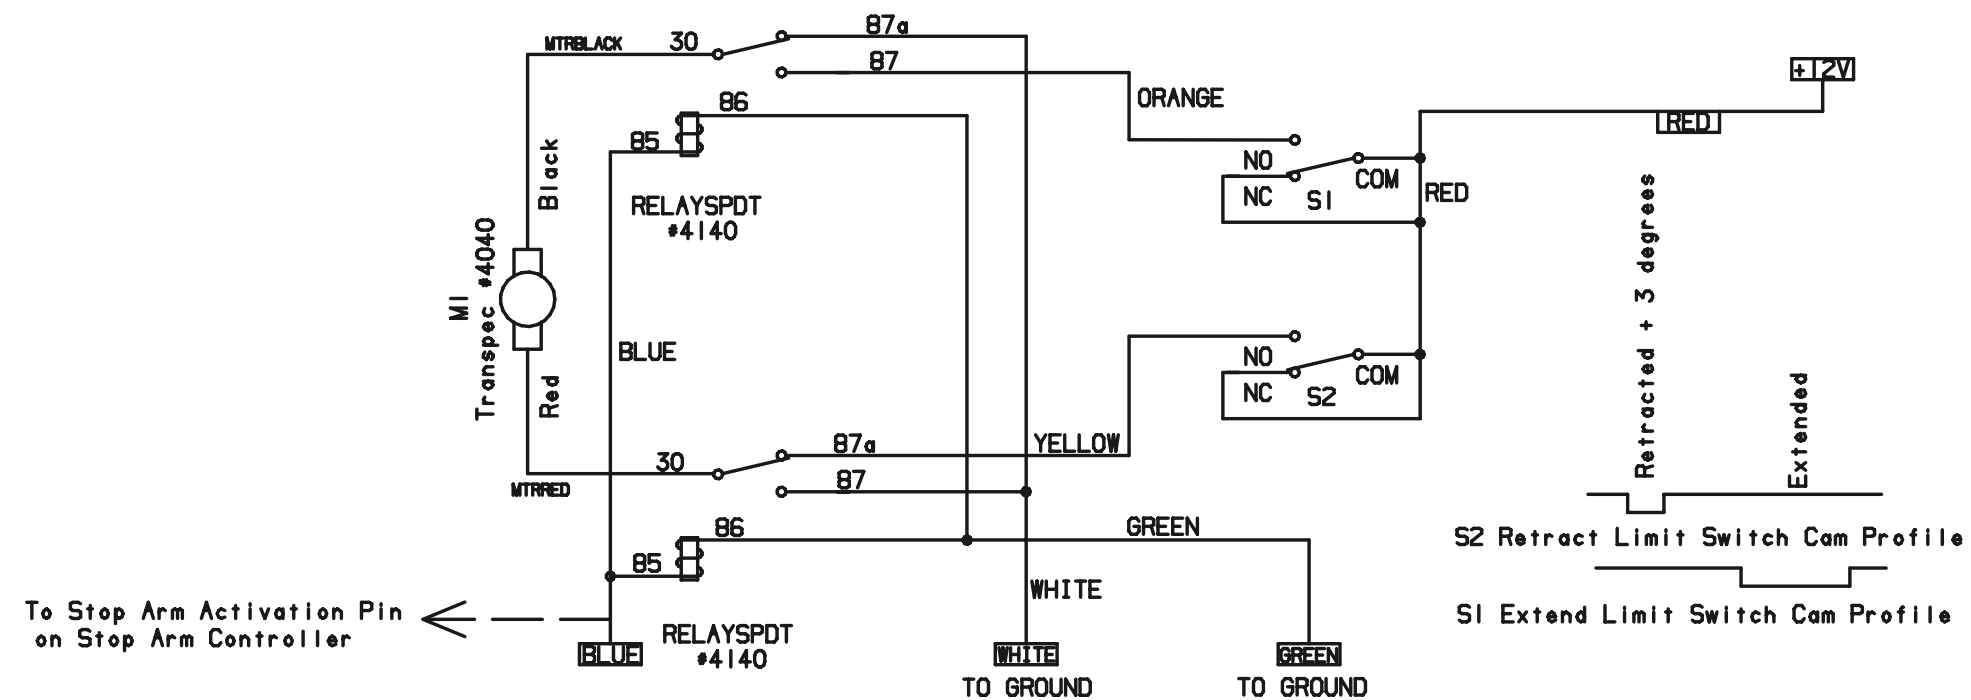

All wiring to be at least 18 AWG or larger
except wires for relay coils which must be
16 AWG or larger per Weldon controller
requirements

SCALE 1/1

	52002689 A
ELECTRICAL STOP ARM TRANSPEC w/LED'S, 4 WIRE HARNESS	

TO STOP ARM
SOLENOID OUTPUT
ON WARNING LIGHT
FLASHER OR A POSITIVE
FEED DOOR SWITCH.

YELLOW

12V
COLD
IGN.

15 AMP

RED

FLASHING
LIGHTS

BLACK/WHITE

BLACK

TO RED WARNING
LIGHT OUTPUT ON
WARNING LIGHT
FLASHER.

BLACK/WHITE

BLACK

TO RED WARNING
LIGHT OUTPUT ON
WARNING LIGHT
FLASHER.


FLASHING
LIGHTS

GREEN

Thomas
BUILT BUSES

52001930 A


ELECTRIC STOP SIGN,
BMR 6000 SERIES

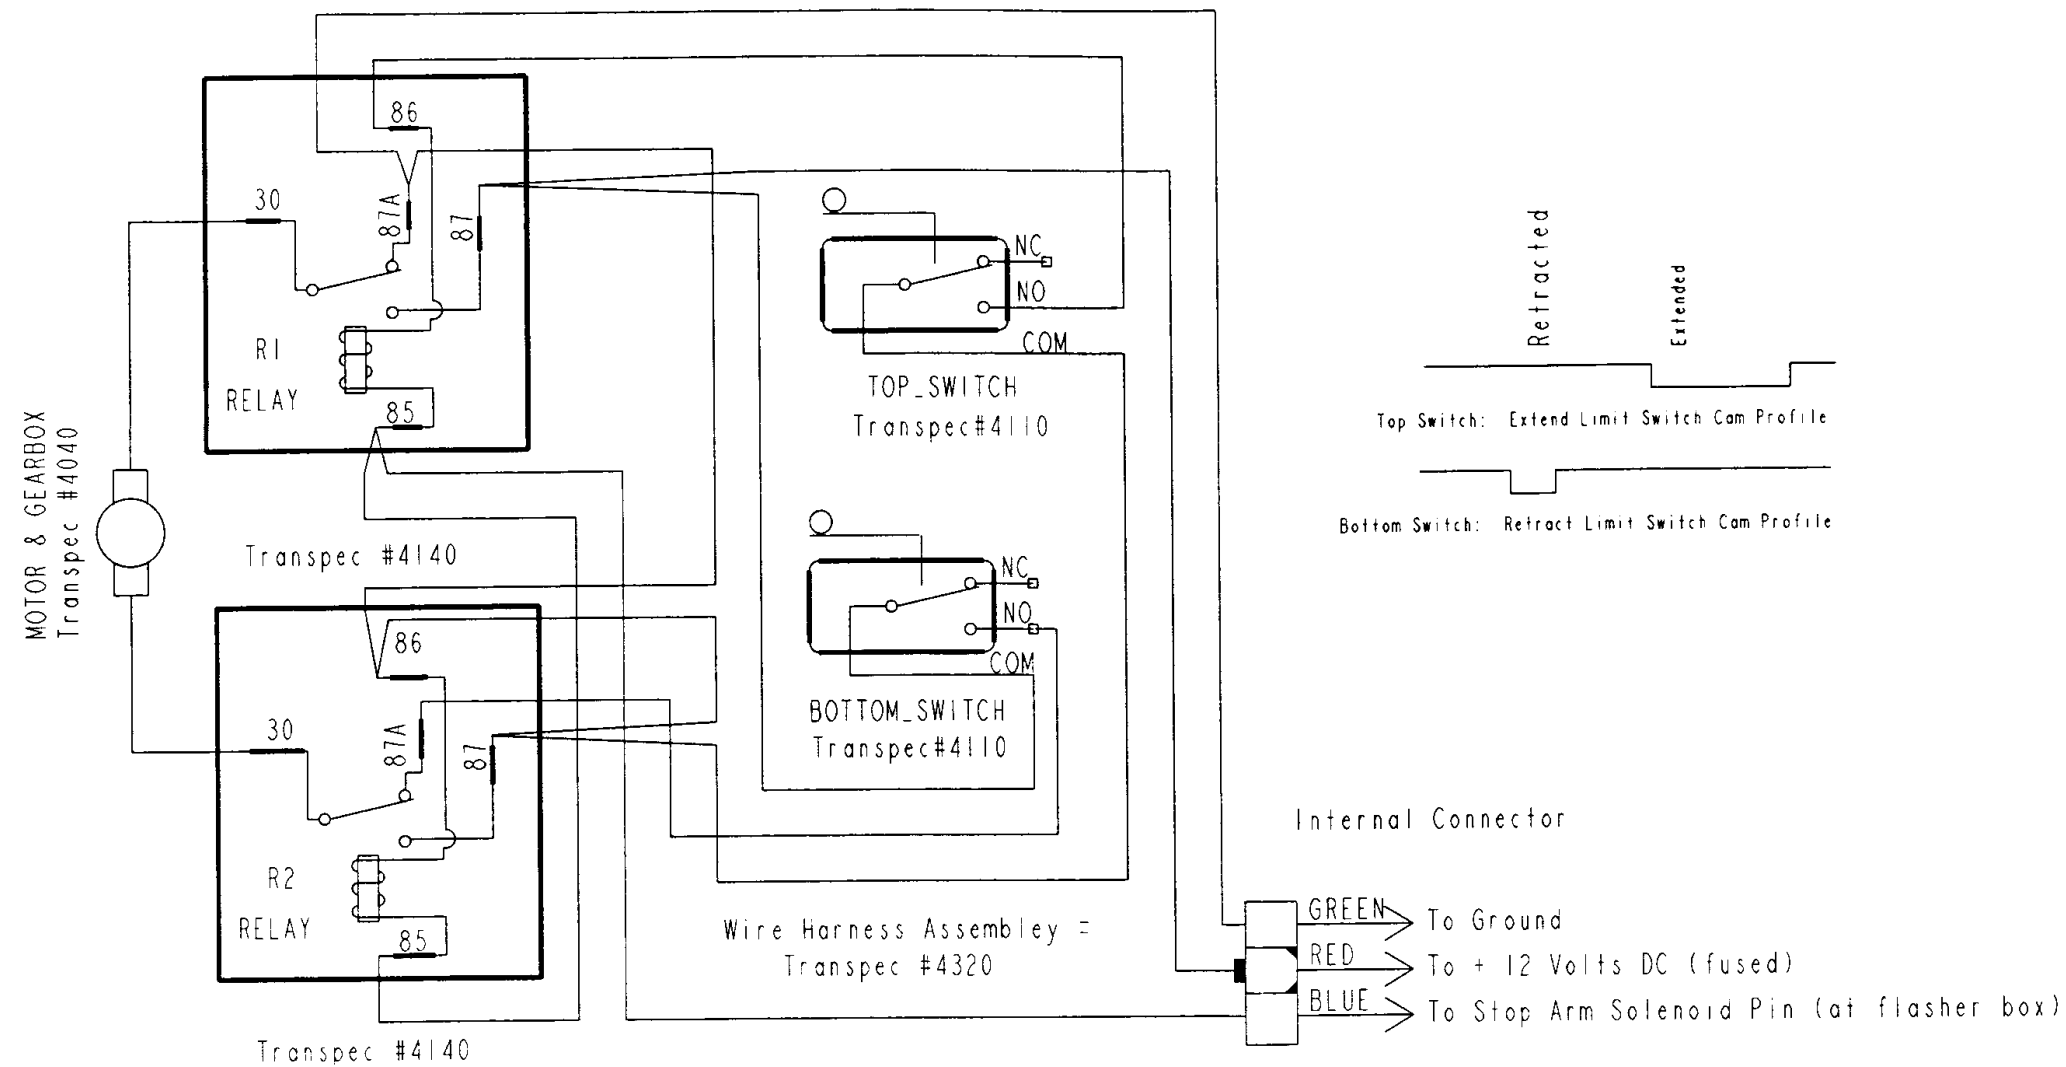

NOTES:

- 1) MATERIAL: VENDOR PART# STOP AND CROSSING ARM CIRCUIT
- 2) BLANK SIZE: N/A
- 3) CALCULATED WEIGHT: N/A
- 4) BURR REQUIREMENT: N/A
- 5) FINISH: N/A
- 6) COLOR: N/A
- 7) TENSILE AND/OR IMPACT STRENGTH: N/A
- 8) HIGH/LOW TEMPERATURE PERFORMANCE: N/A
- 9) SURFACE GRAIN TEXTURE: NA/




Thomas BUILT TO SPEC	52002845 A
STOP AND CROSSING ARM	

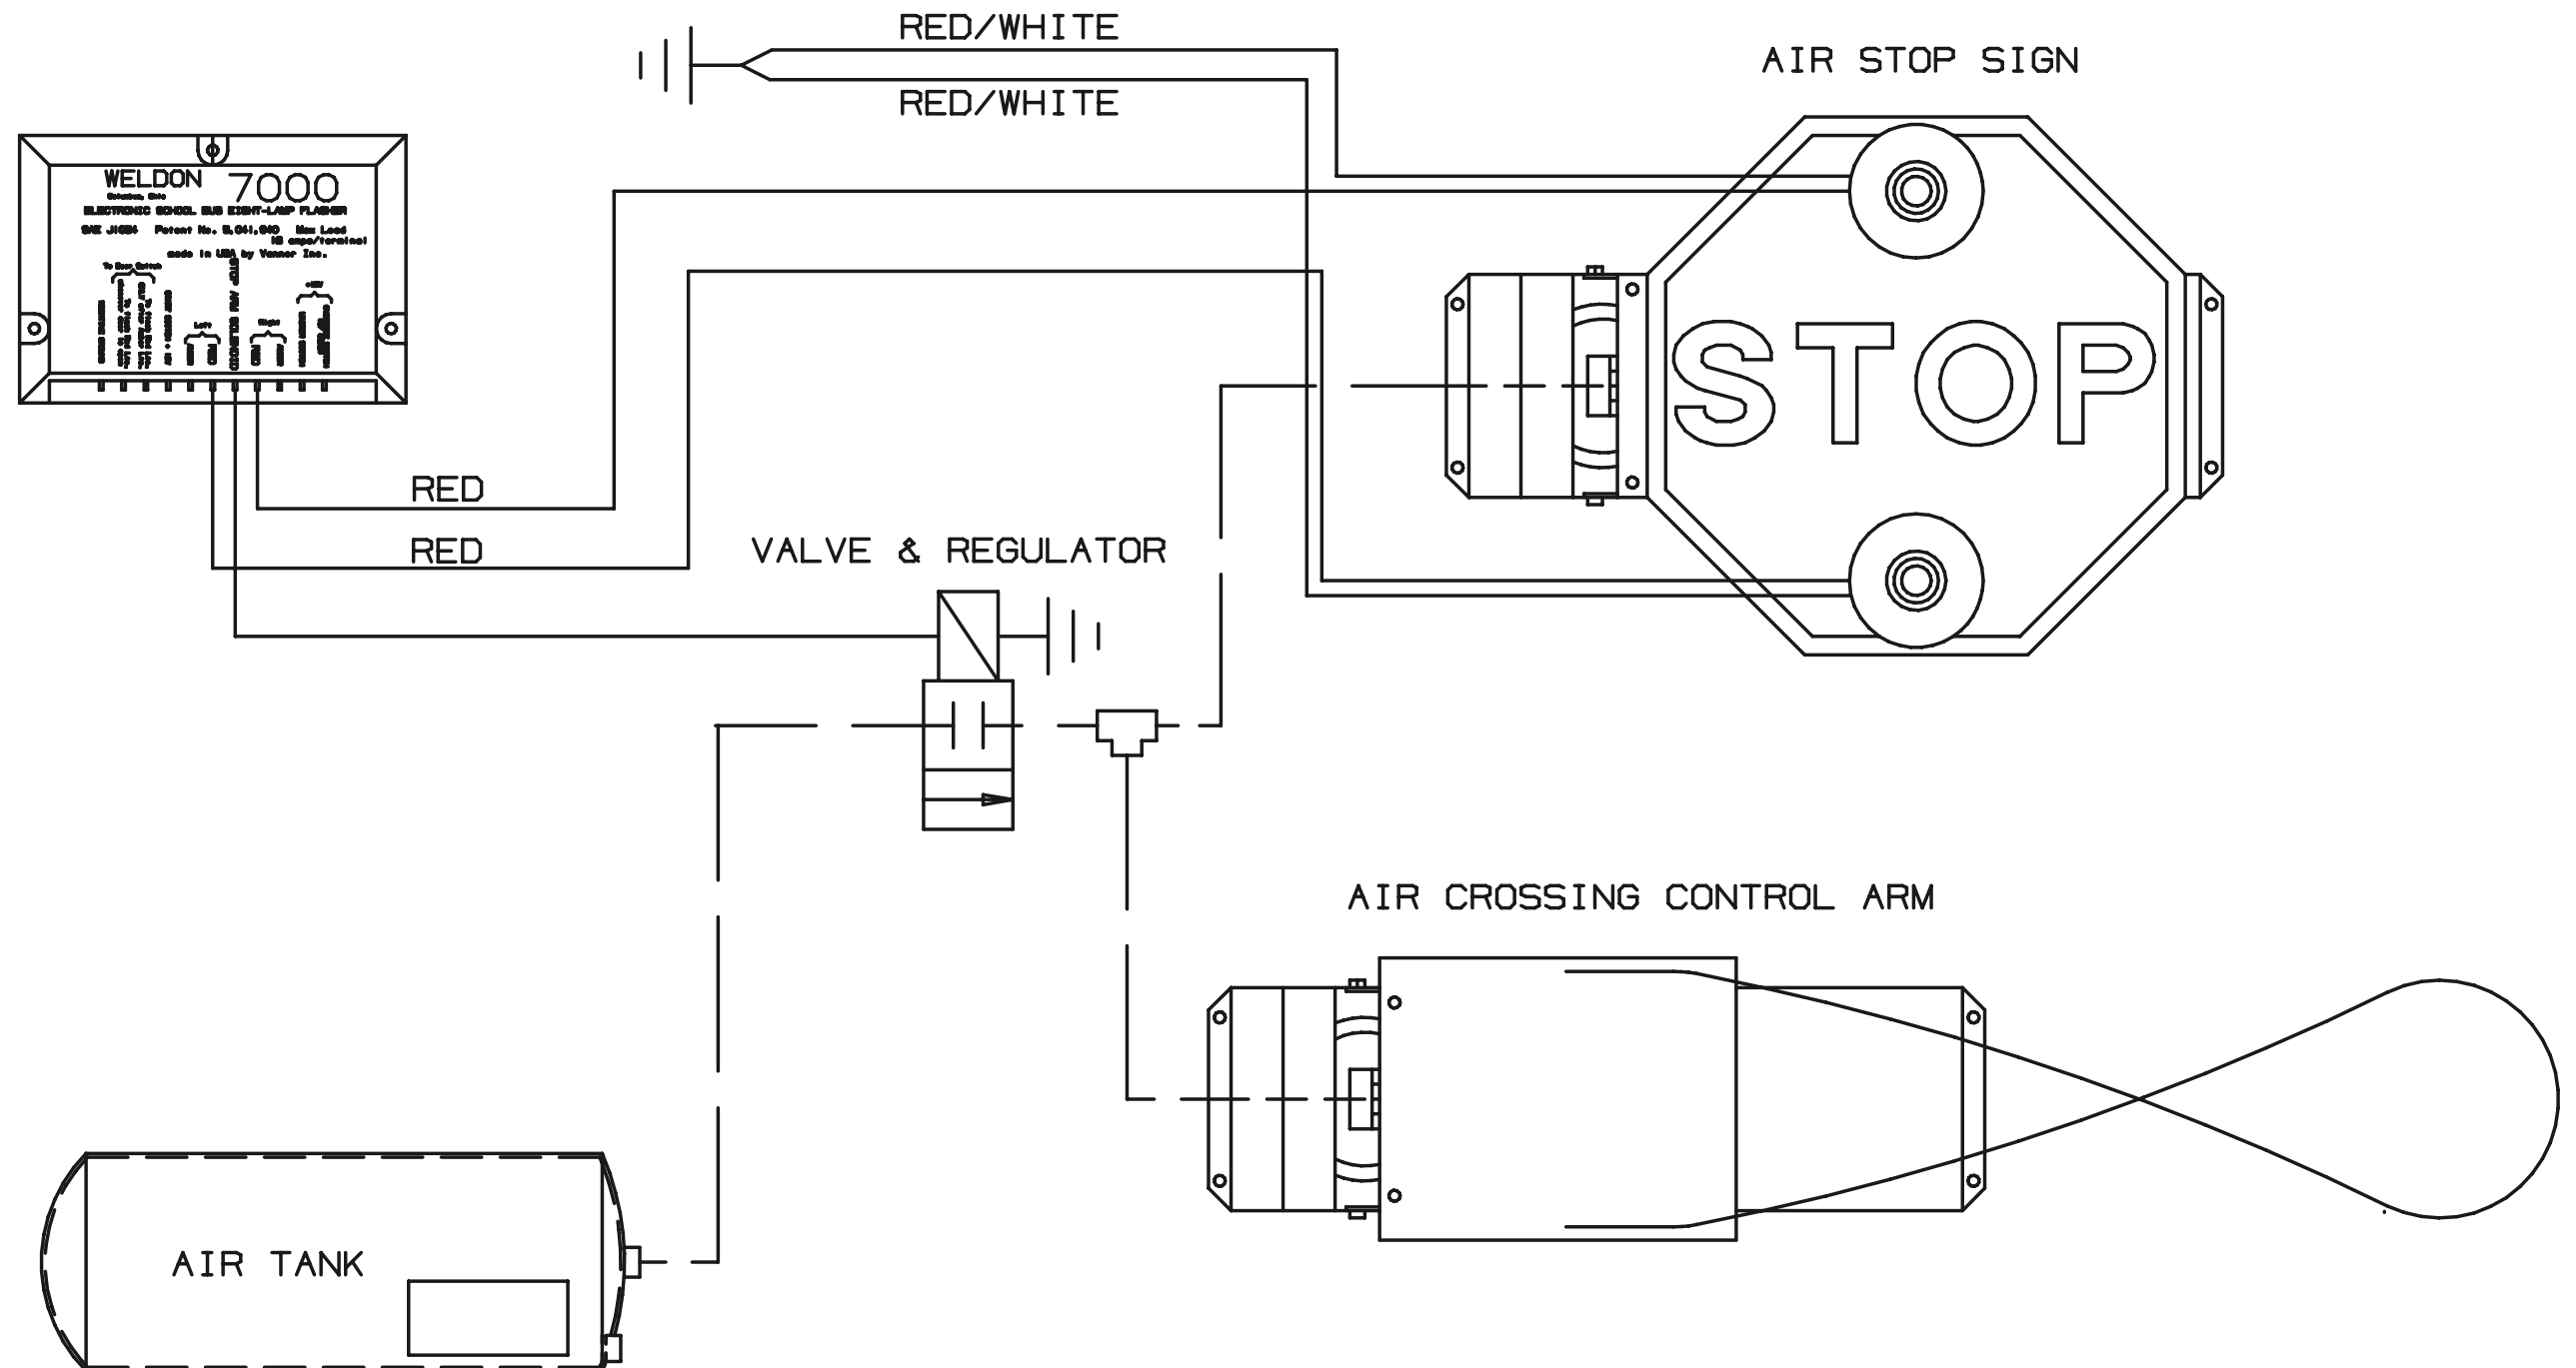

ELECTRICAL WIRING _____

AIR LINE _____

	52001838 A
AIR STOP SIGN & AIR CROSSING CONTROL ARM	

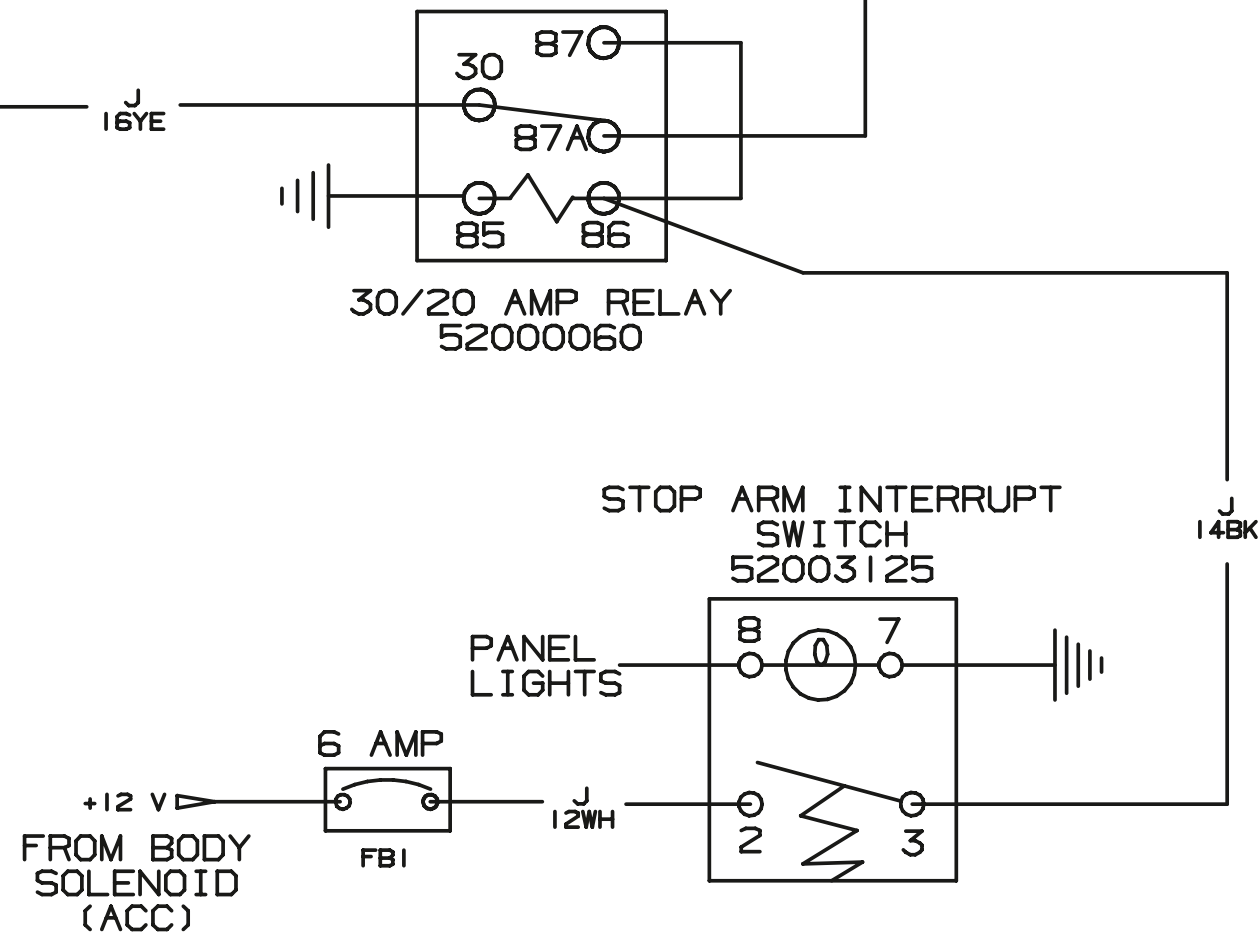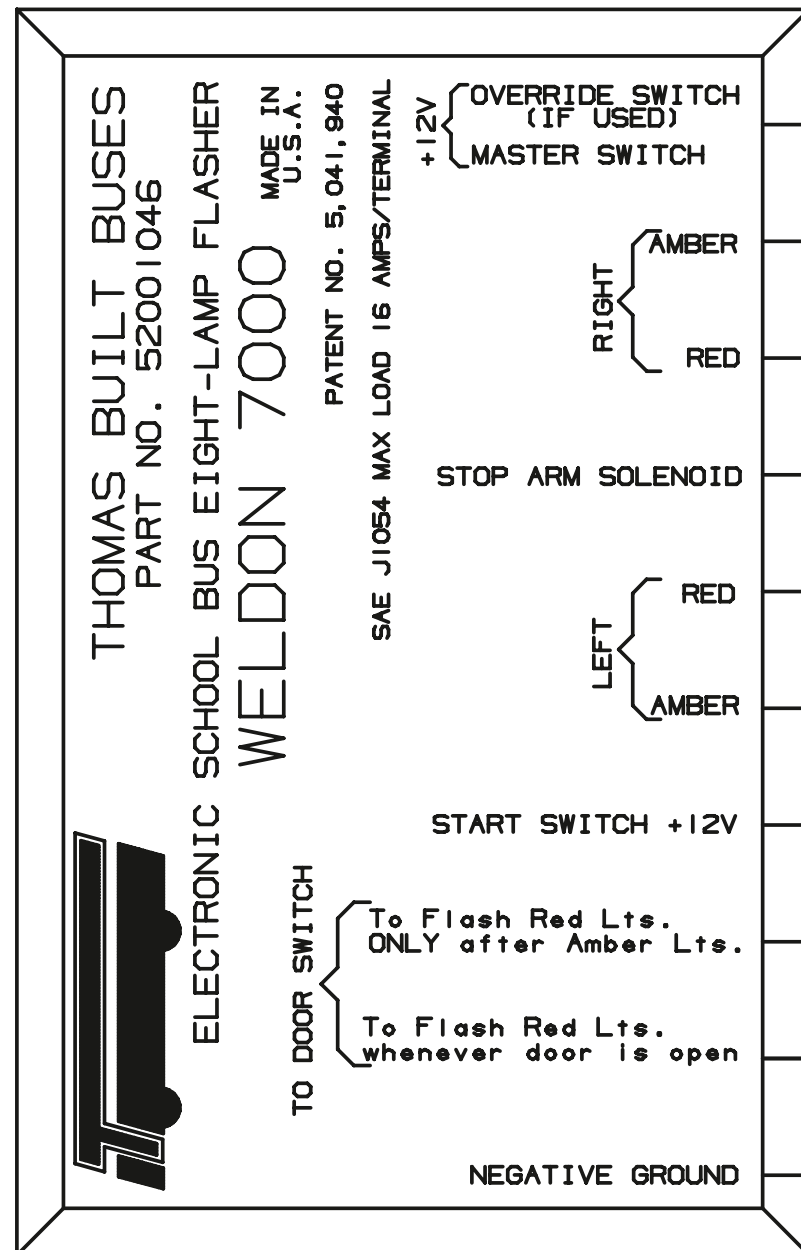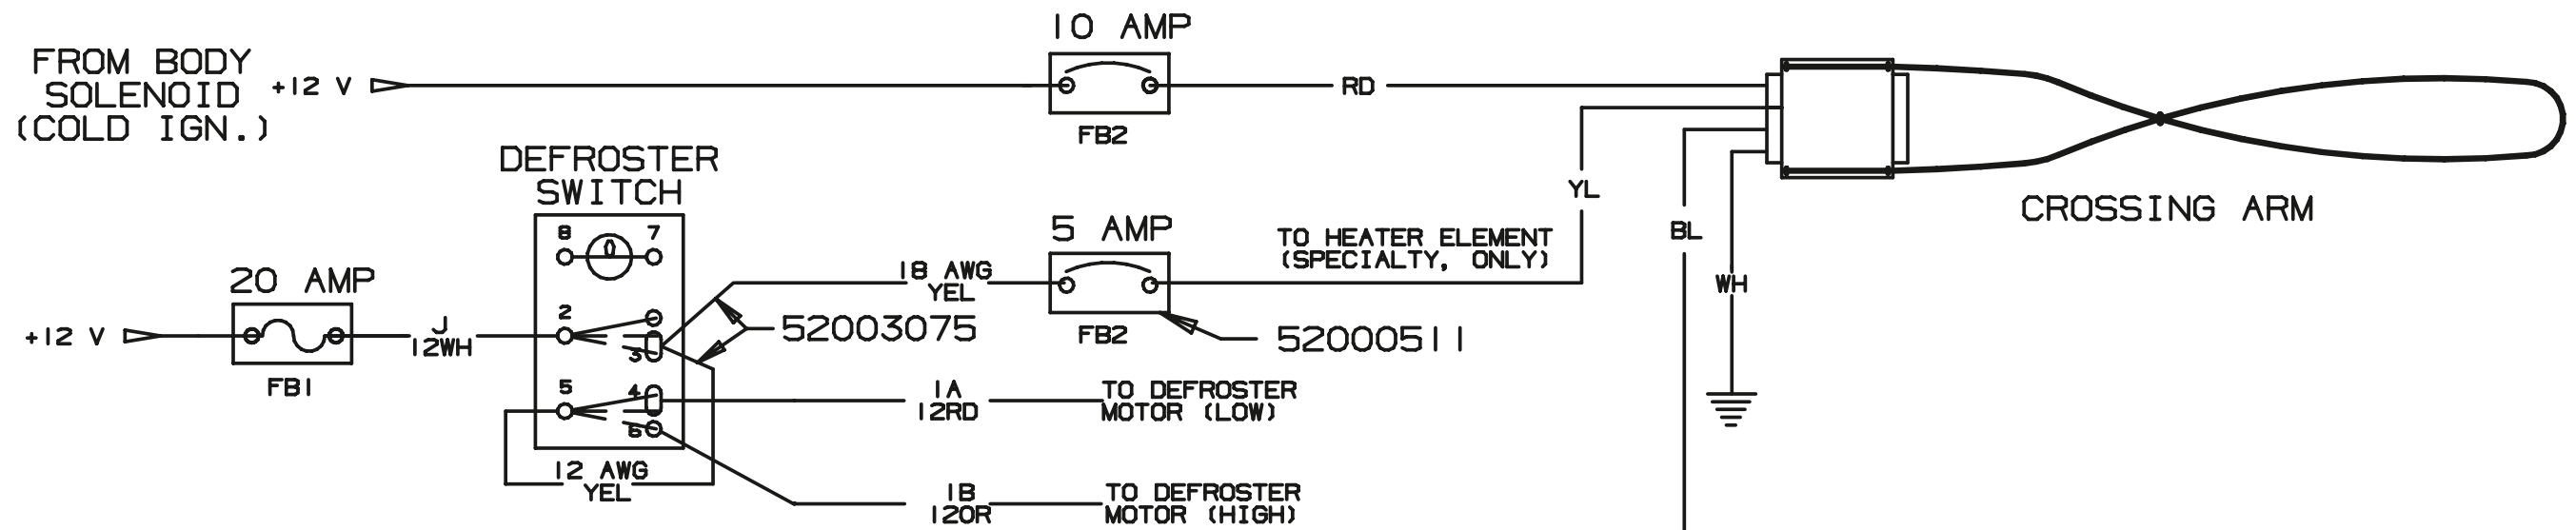


Thomas
BUILT BUSES



52002769 C

CROSSING ARM
DEACTIVATING SWITCH



**MVP-ER
HEATER
SCHEMATICS**

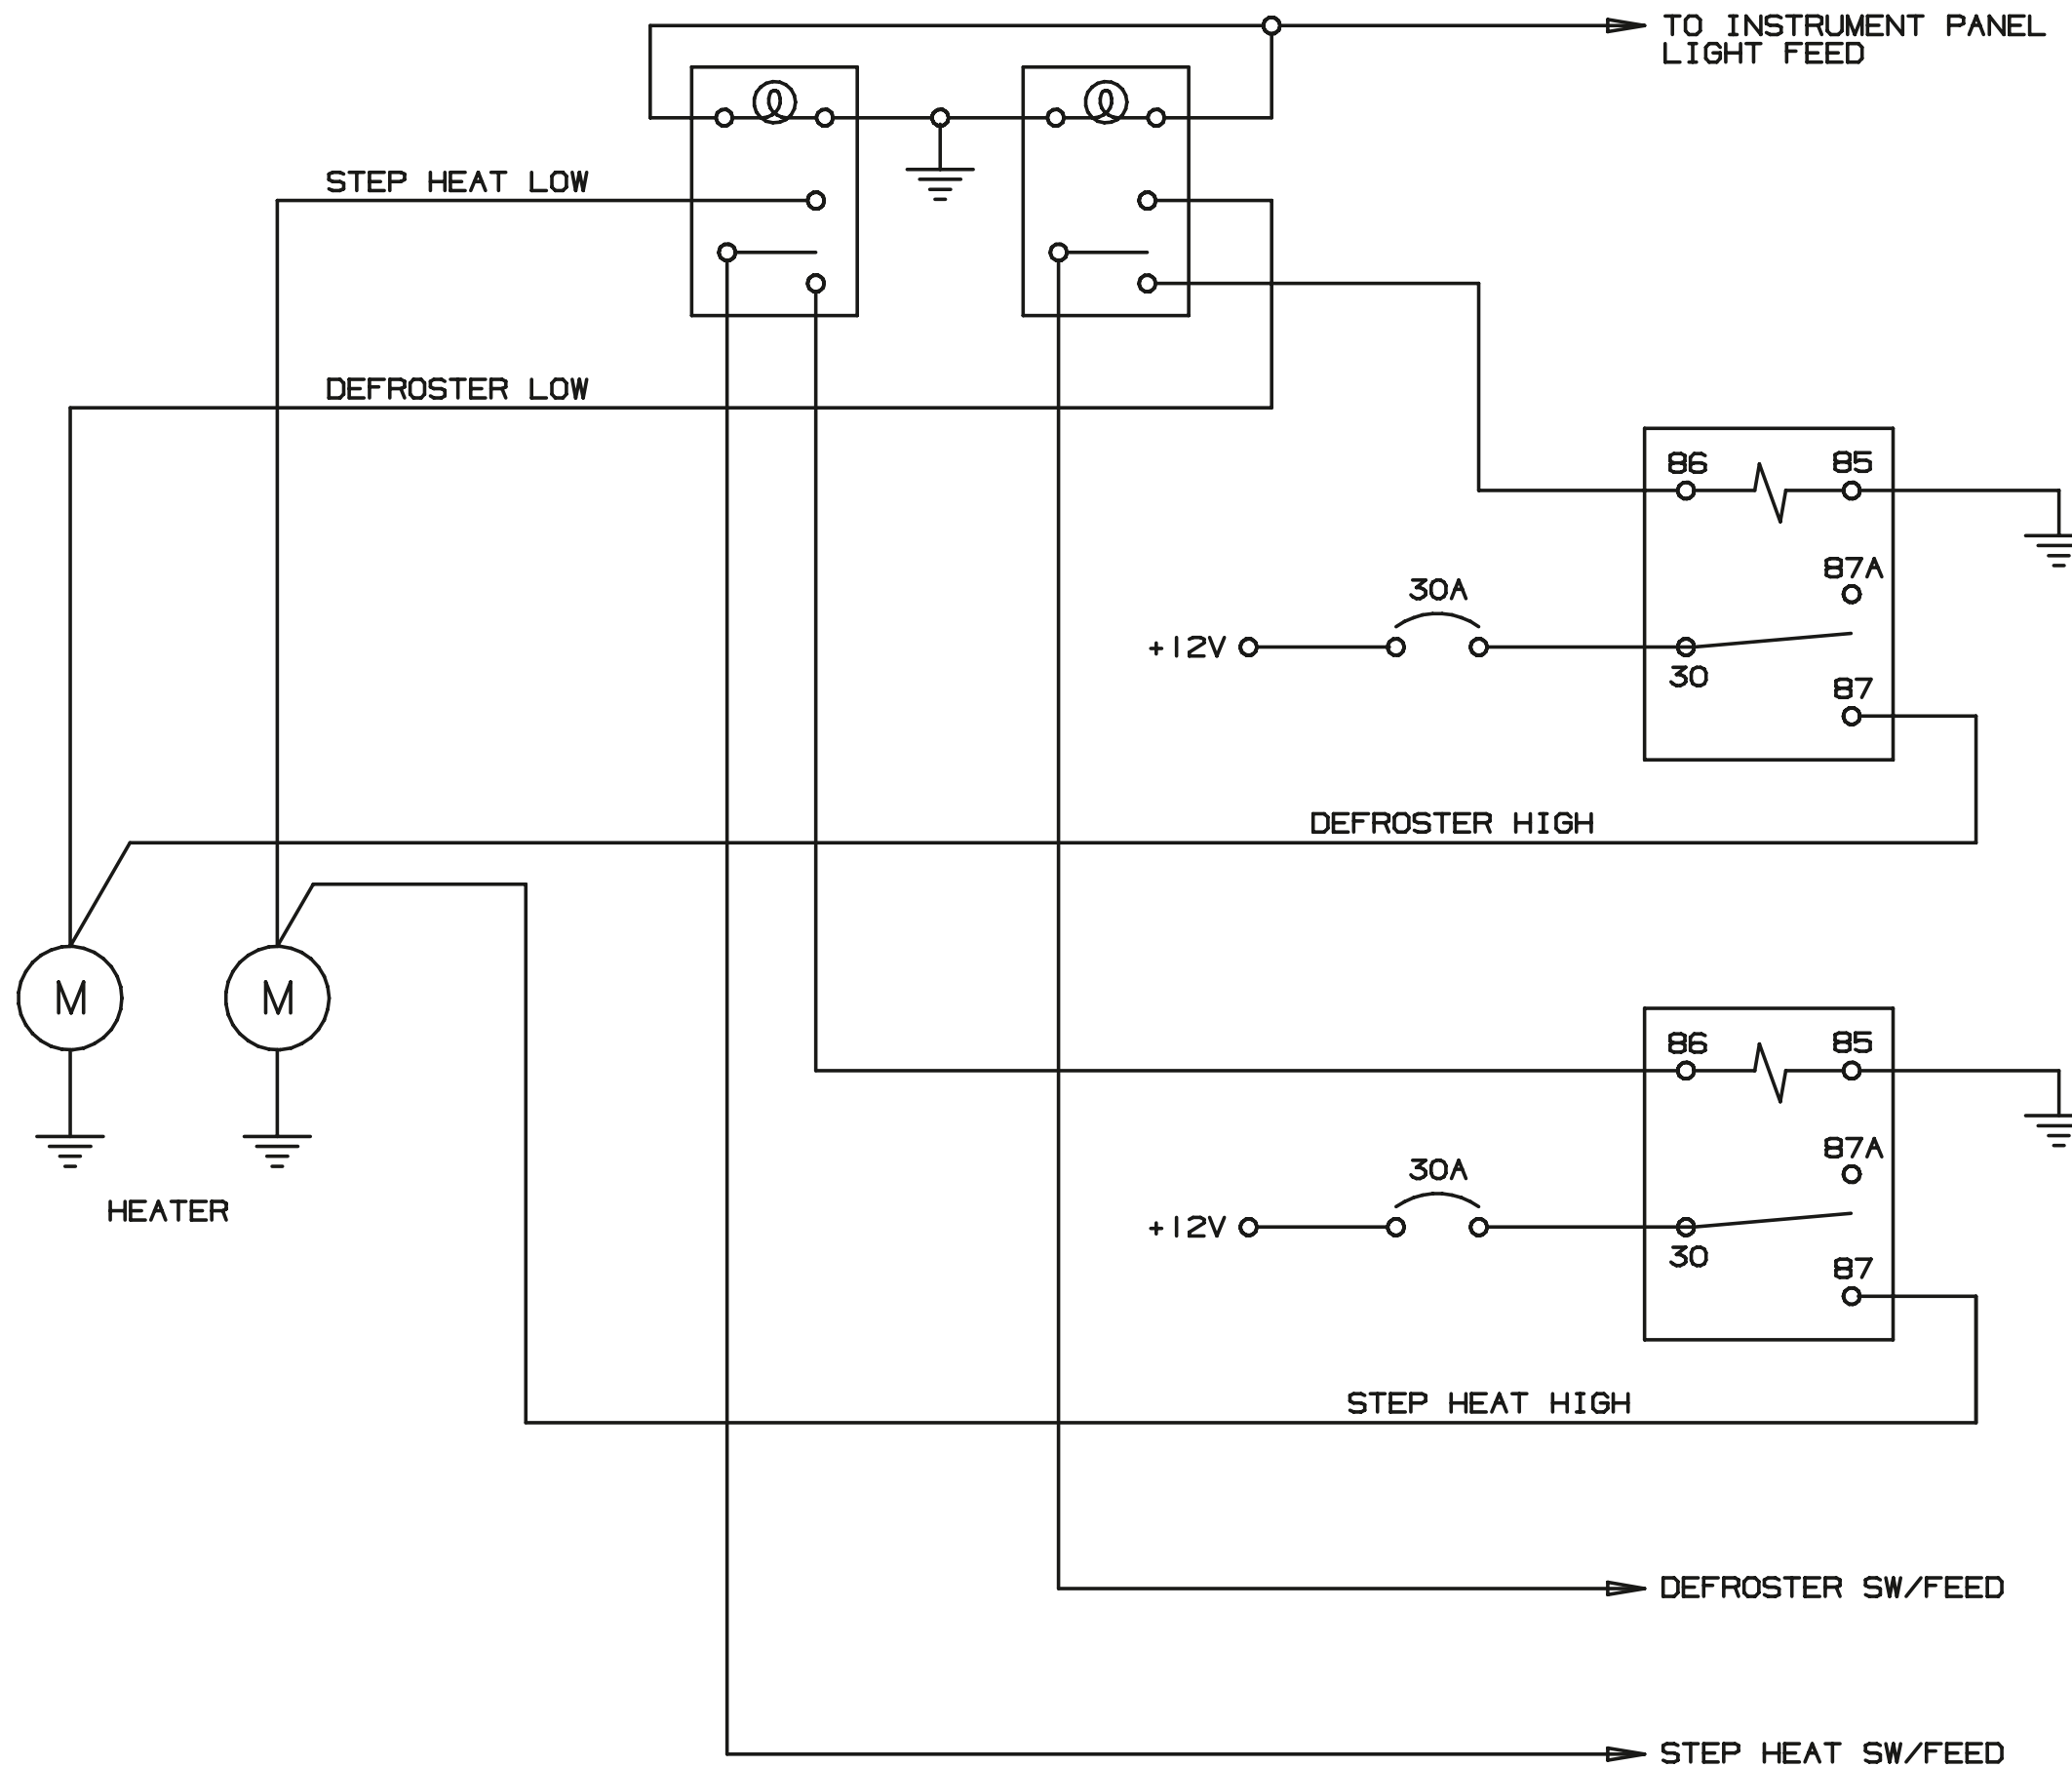

	52002133 A
FRONT HEATER	

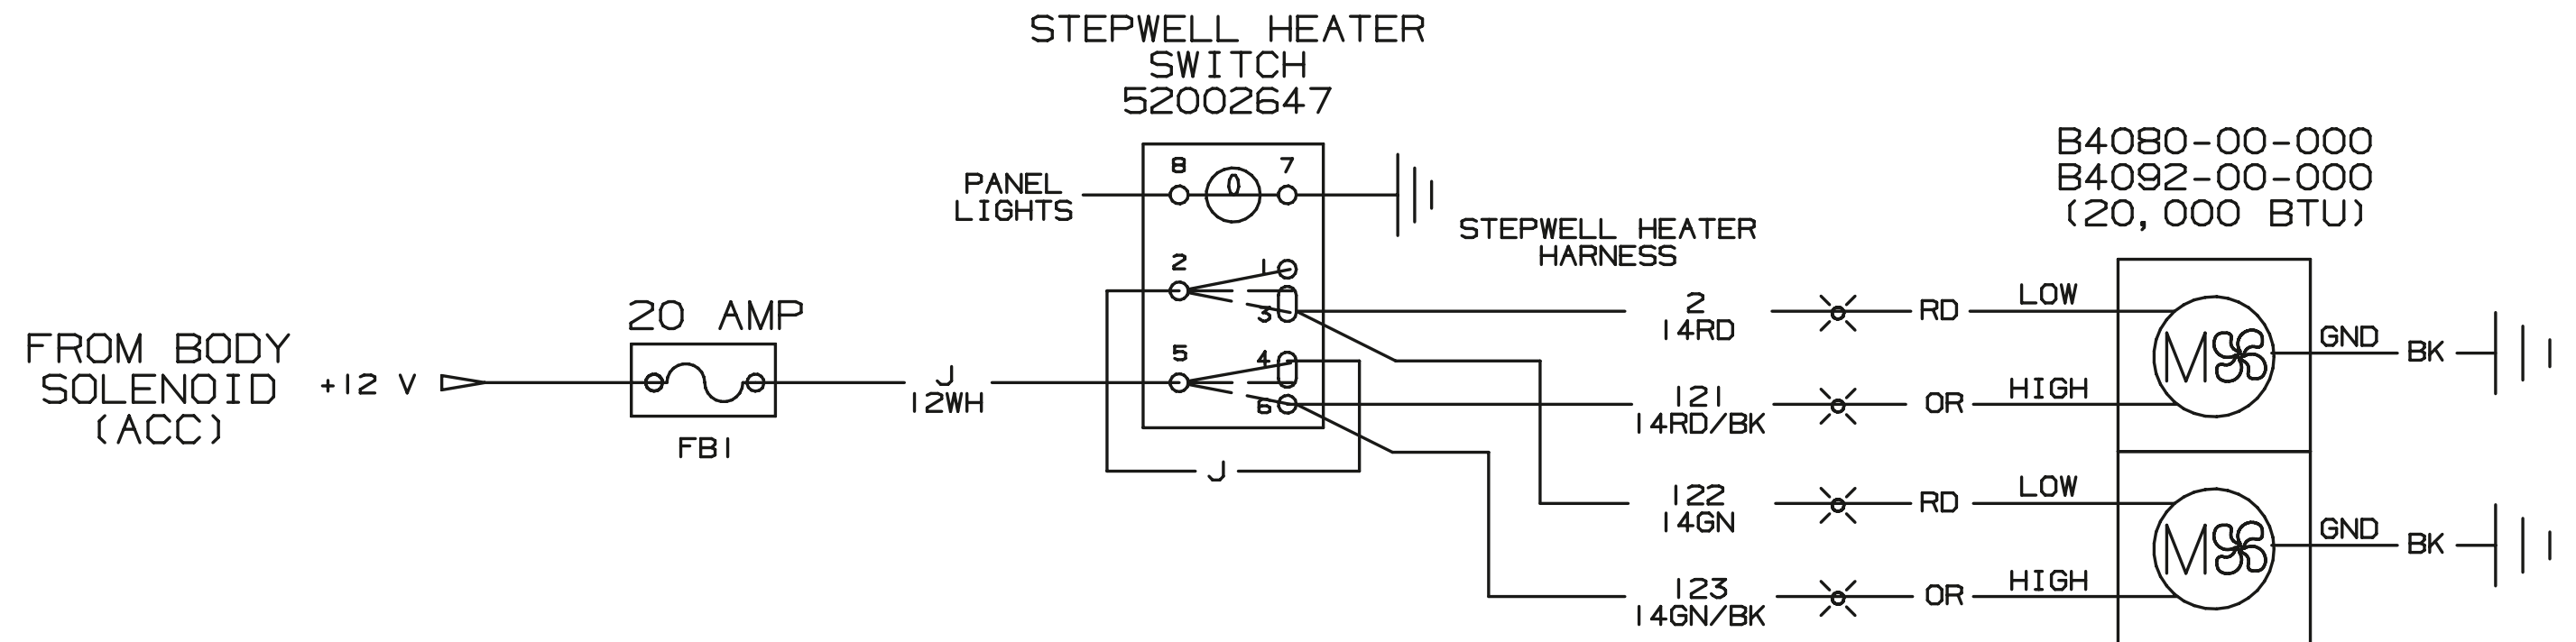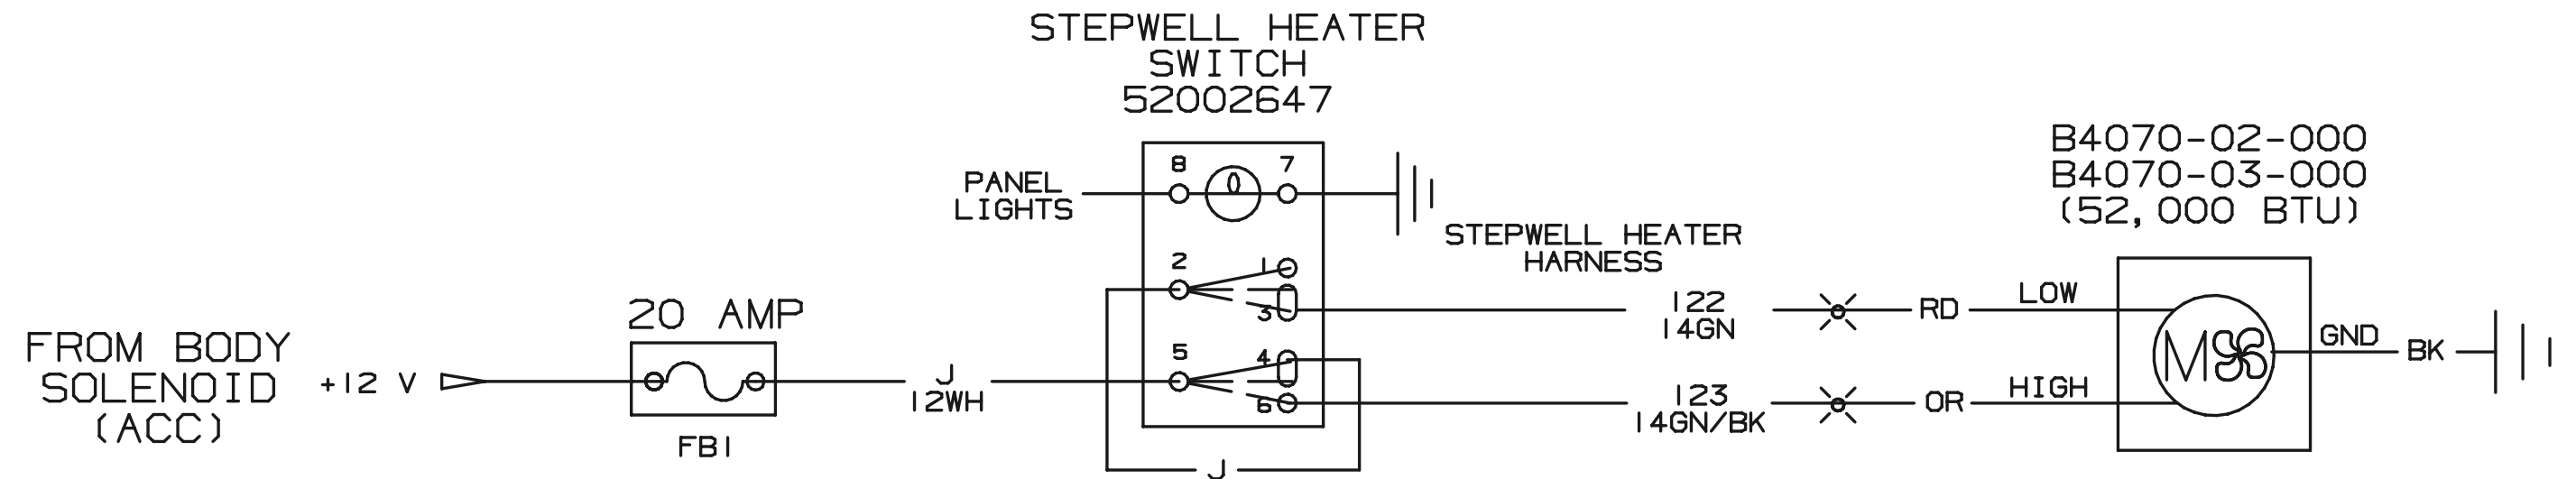

	62202663 A
STEPWELL HEATER	

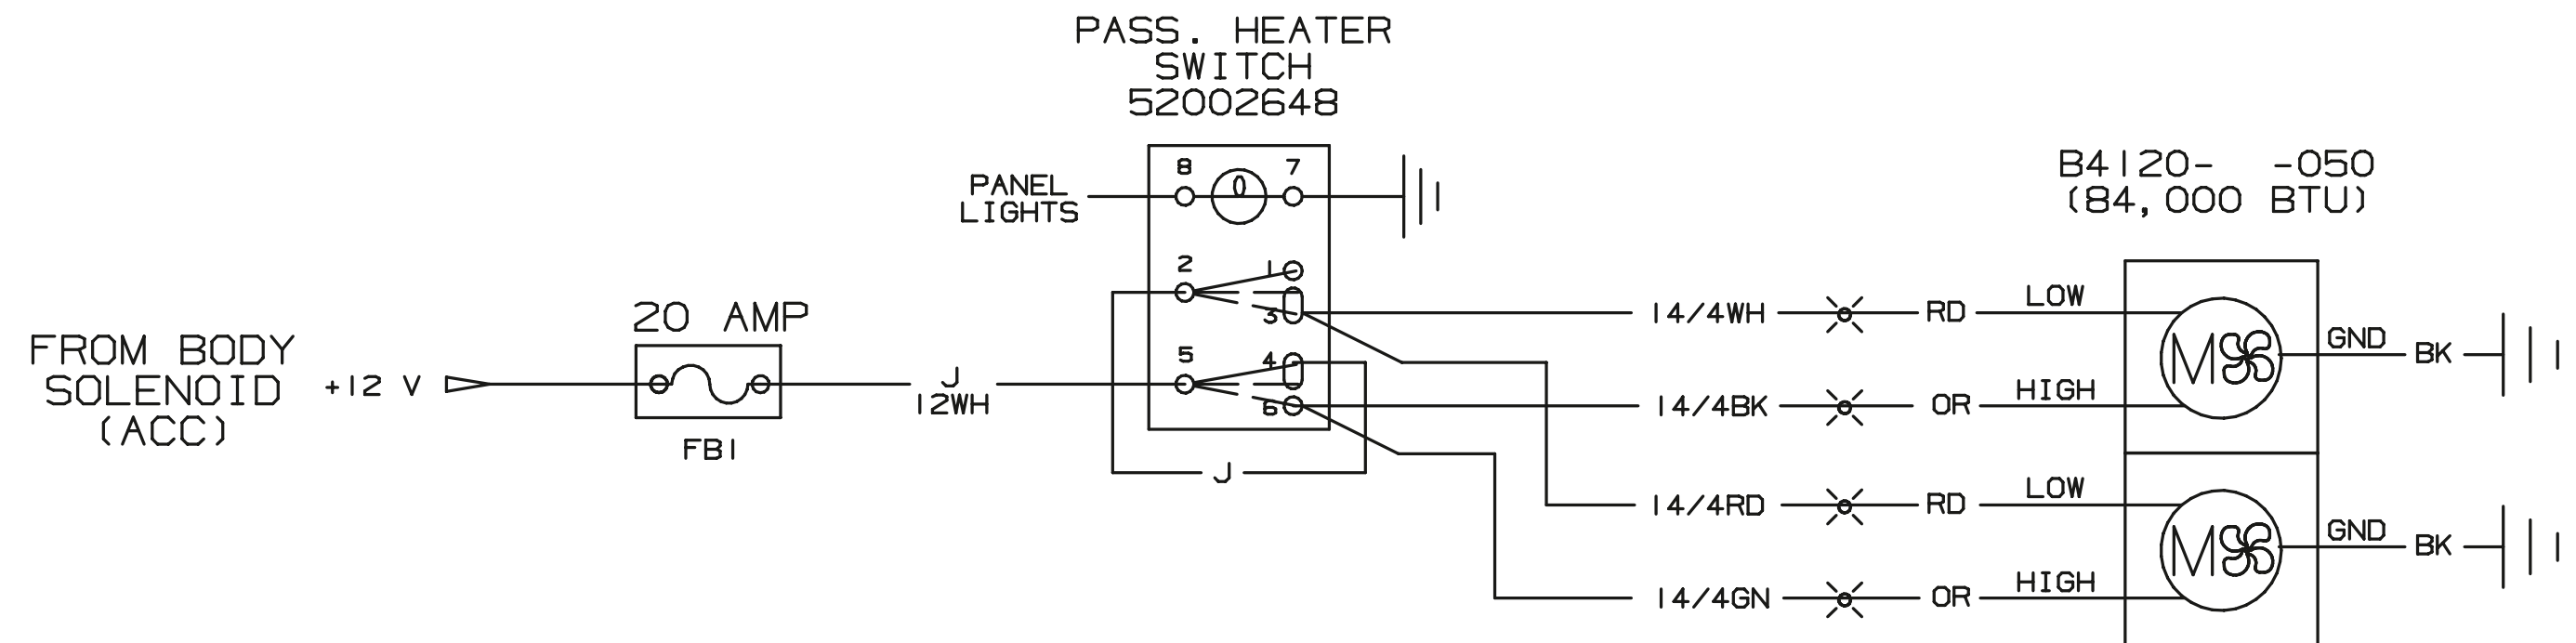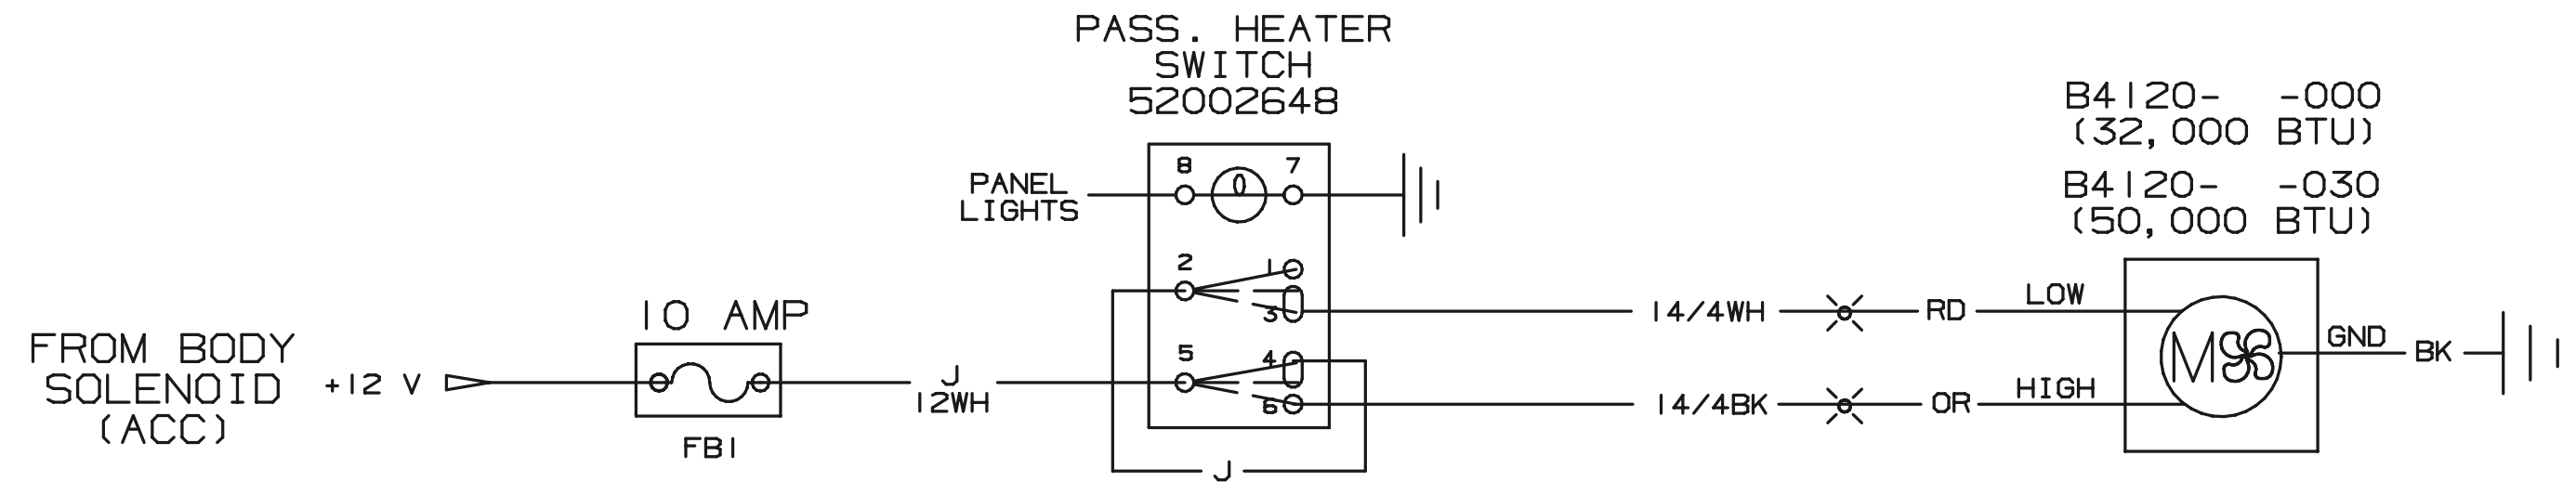


Thomas BUILT BUSES	52002662 A
UNDERSEAT HEATERS	

**MVP-ER
AIR CONDITIONING
SCHEMATICS**


CIRCUIT BREAKER COLOR CODE
 20 AMP - YELLOW DOT
 30 AMP - GREEN DOT
 40 AMP - RED DOT

CIRCUIT BREAKER IDENTIFICATION

-  TYPE III MANUAL RESET-RESETS WHEN EXTERNAL BUTTON IS PUSHED.
-  TYPE II - RESETS WHEN OVERCURRENT IS CORRECTED OR REMOVED.

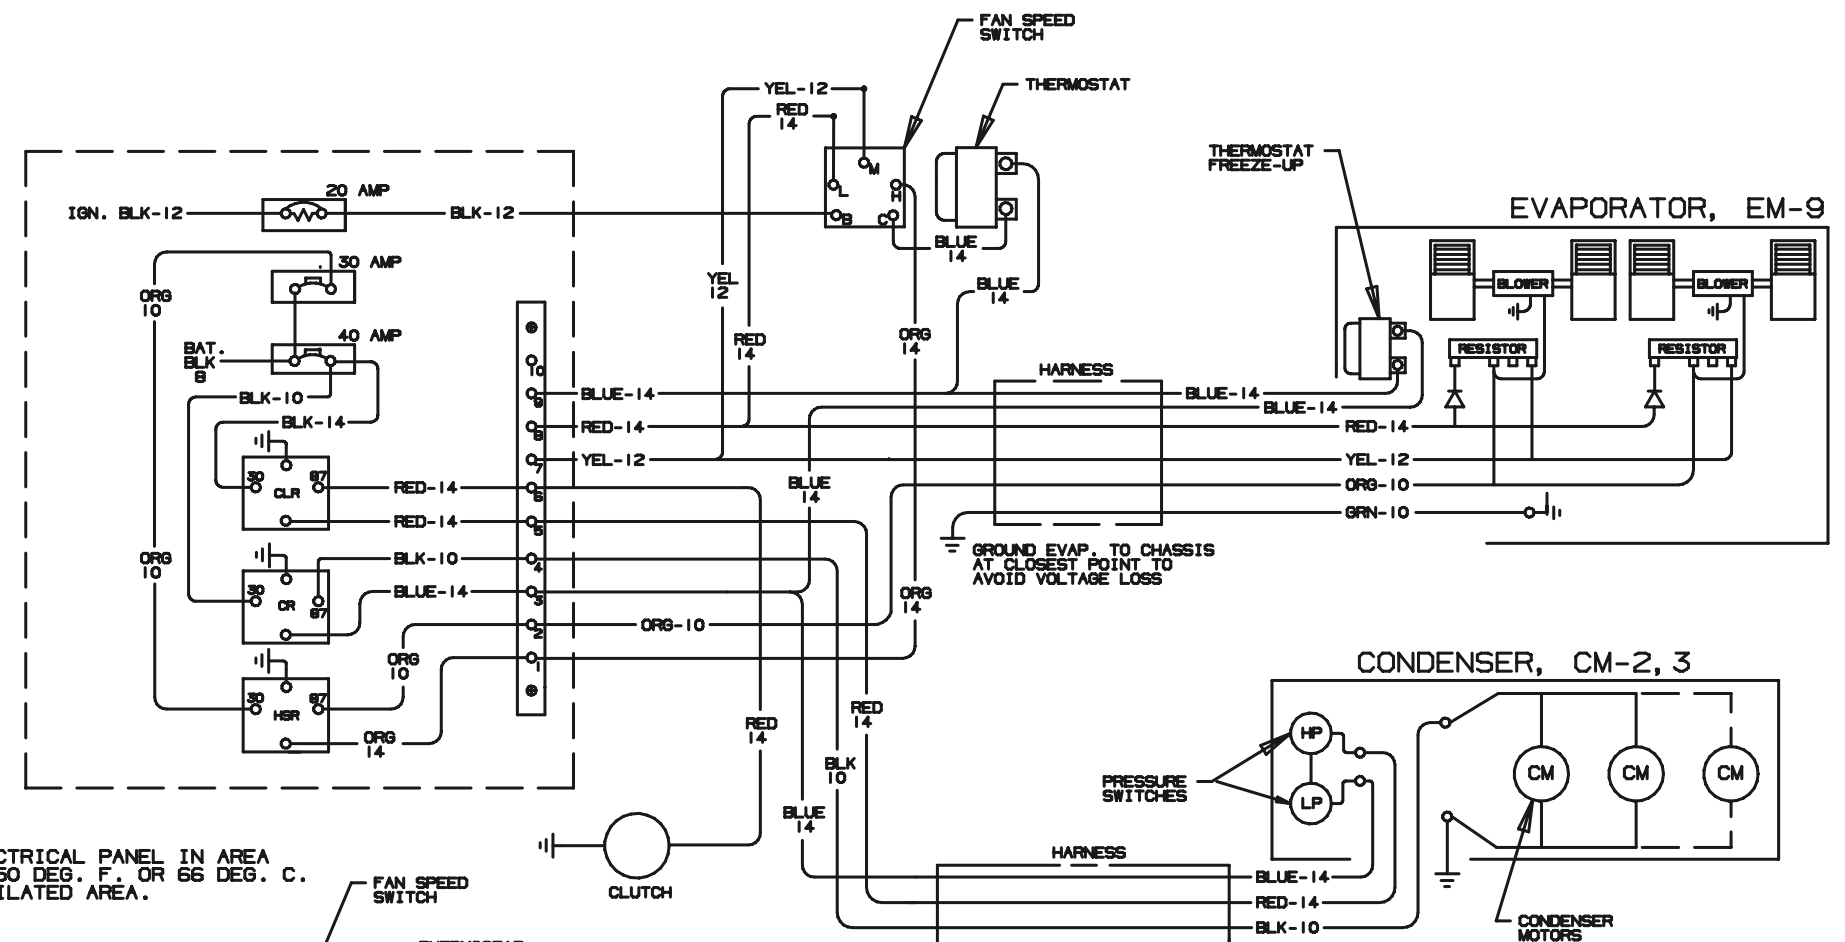

NOTE: DO NOT INSTALL ELECTRICAL PANEL IN AREA THAT WILL EXCEED 150 DEG. F. OR 66 DEG. C. LOCATE IN DRY VENTILATED AREA.

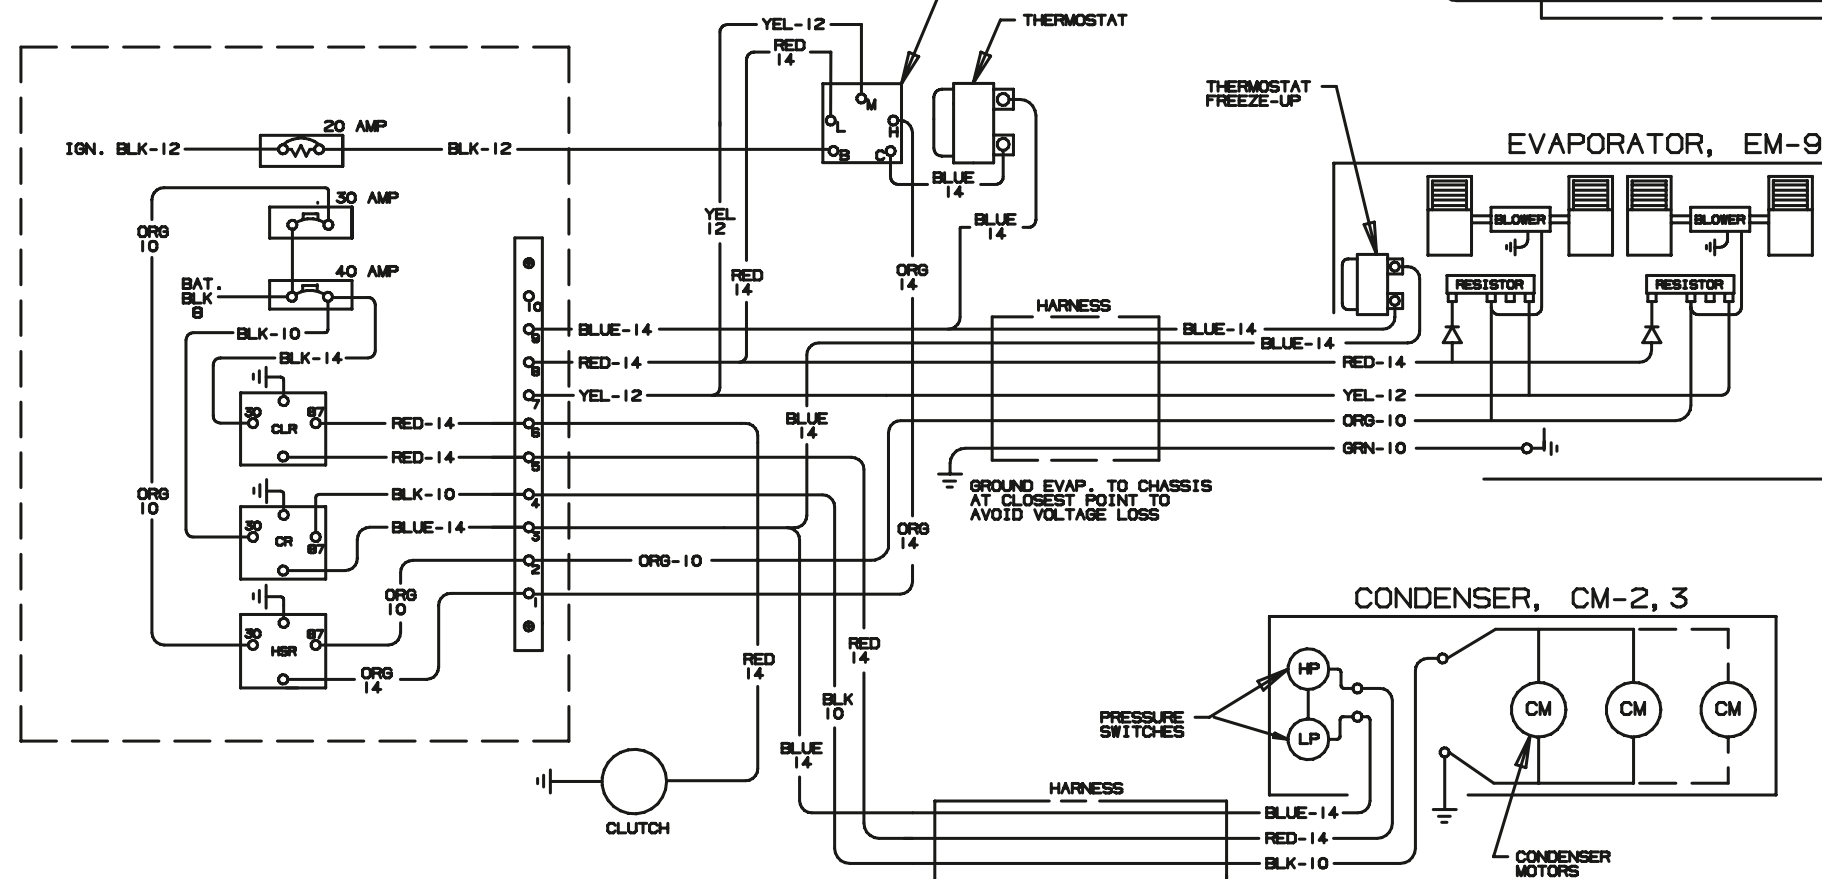


52002138 B

AIR CONDITIONING
 DC-1052, 1053

NOTE: DO NOT INSTALL ELECTRICAL PANEL IN AREA THAT WILL EXCEED 150 DEG. F OR 66 DEG. C. LOCATE IN A DRY VENTILATED AREA.

NOTE: DISCONNECT OEM DASH AIR CLUTCH WIRE WHEN WIRING A/C SYSTEM (UNLESS WIRING MAX SYSTEM)

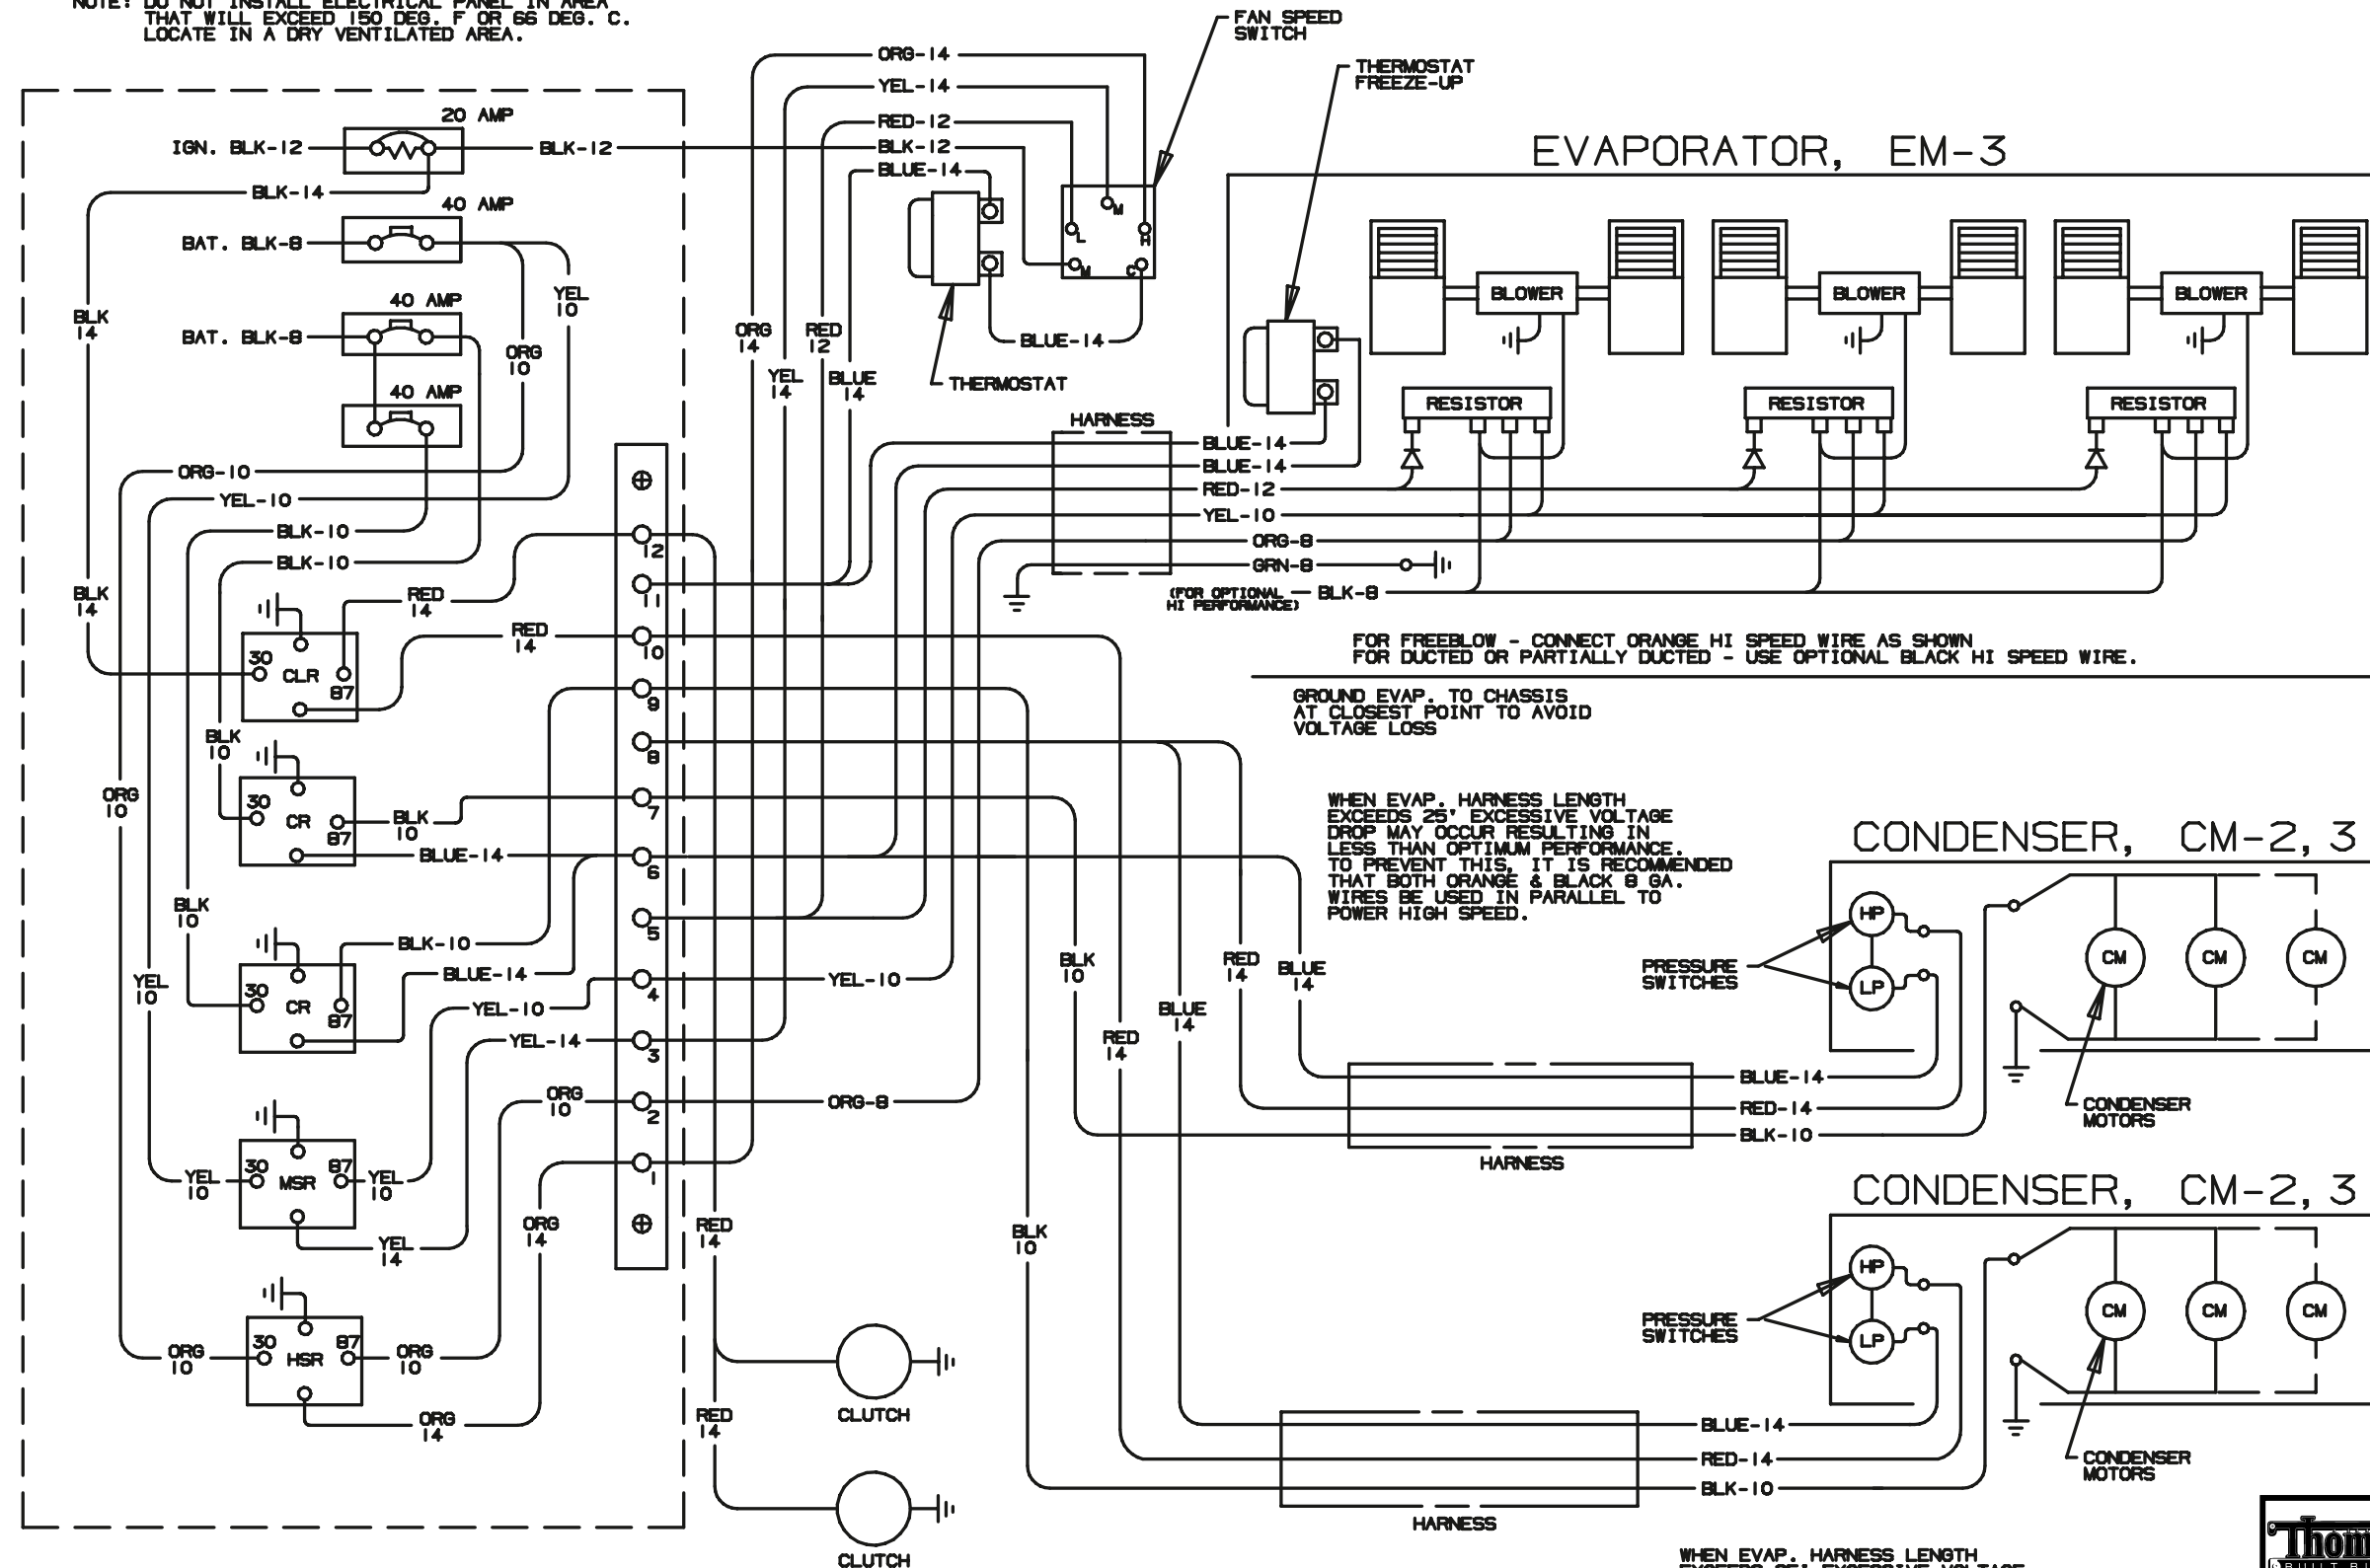

FOR FREEBLOW - CONNECT ORANGE HI SPEED WIRE AS SHOWN
FOR DUCTED OR PARTIALLY DUCTED - USE OPTIONAL BLACK HI SPEED WIRE.

GROUND EVAP. TO CHASSIS AT CLOSEST POINT TO AVOID VOLTAGE LOSS

WHEN EVAP. HARNESS LENGTH EXCEEDS 25' EXCESSIVE VOLTAGE DROP MAY OCCUR RESULTING IN LESS THAN OPTIMUM PERFORMANCE. TO PREVENT THIS, IT IS RECOMMENDED THAT BOTH ORANGE & BLACK 8 GA. WIRES BE USED IN PARALLEL TO POWER HIGH SPEED.

PRESSURE SWITCHES

CONDENSER, CM-2, 3

CONDENSER MOTORS

CONDENSER, CM-2, 3

CONDENSER MOTORS

CIRCUIT BREAKER COLOR CODE
20 AMP - YELLOW DOT
30 AMP - GREEN DOT
40 AMP - RED DOT

CIRCUIT BREAKER IDENTIFICATION



WHEN EVAP. HARNESS LENGTH EXCEEDS 25' EXCESSIVE VOLTAGE DROP MAY OCCUR RESULTING IN LESS THAN OPTIMUM PERFORMANCE. TO PREVENT THIS, IT IS RECOMMENDED THAT BOTH ORANGE & BLACK 8 GA. WIRES BE USED IN PARALLEL TO POWER HIGH SPEED.




52002135 B

AIR CONDITIONING
DC-1052, 1053


NOTES:

**MVP-ER
DOOR
SCHEMATICS**

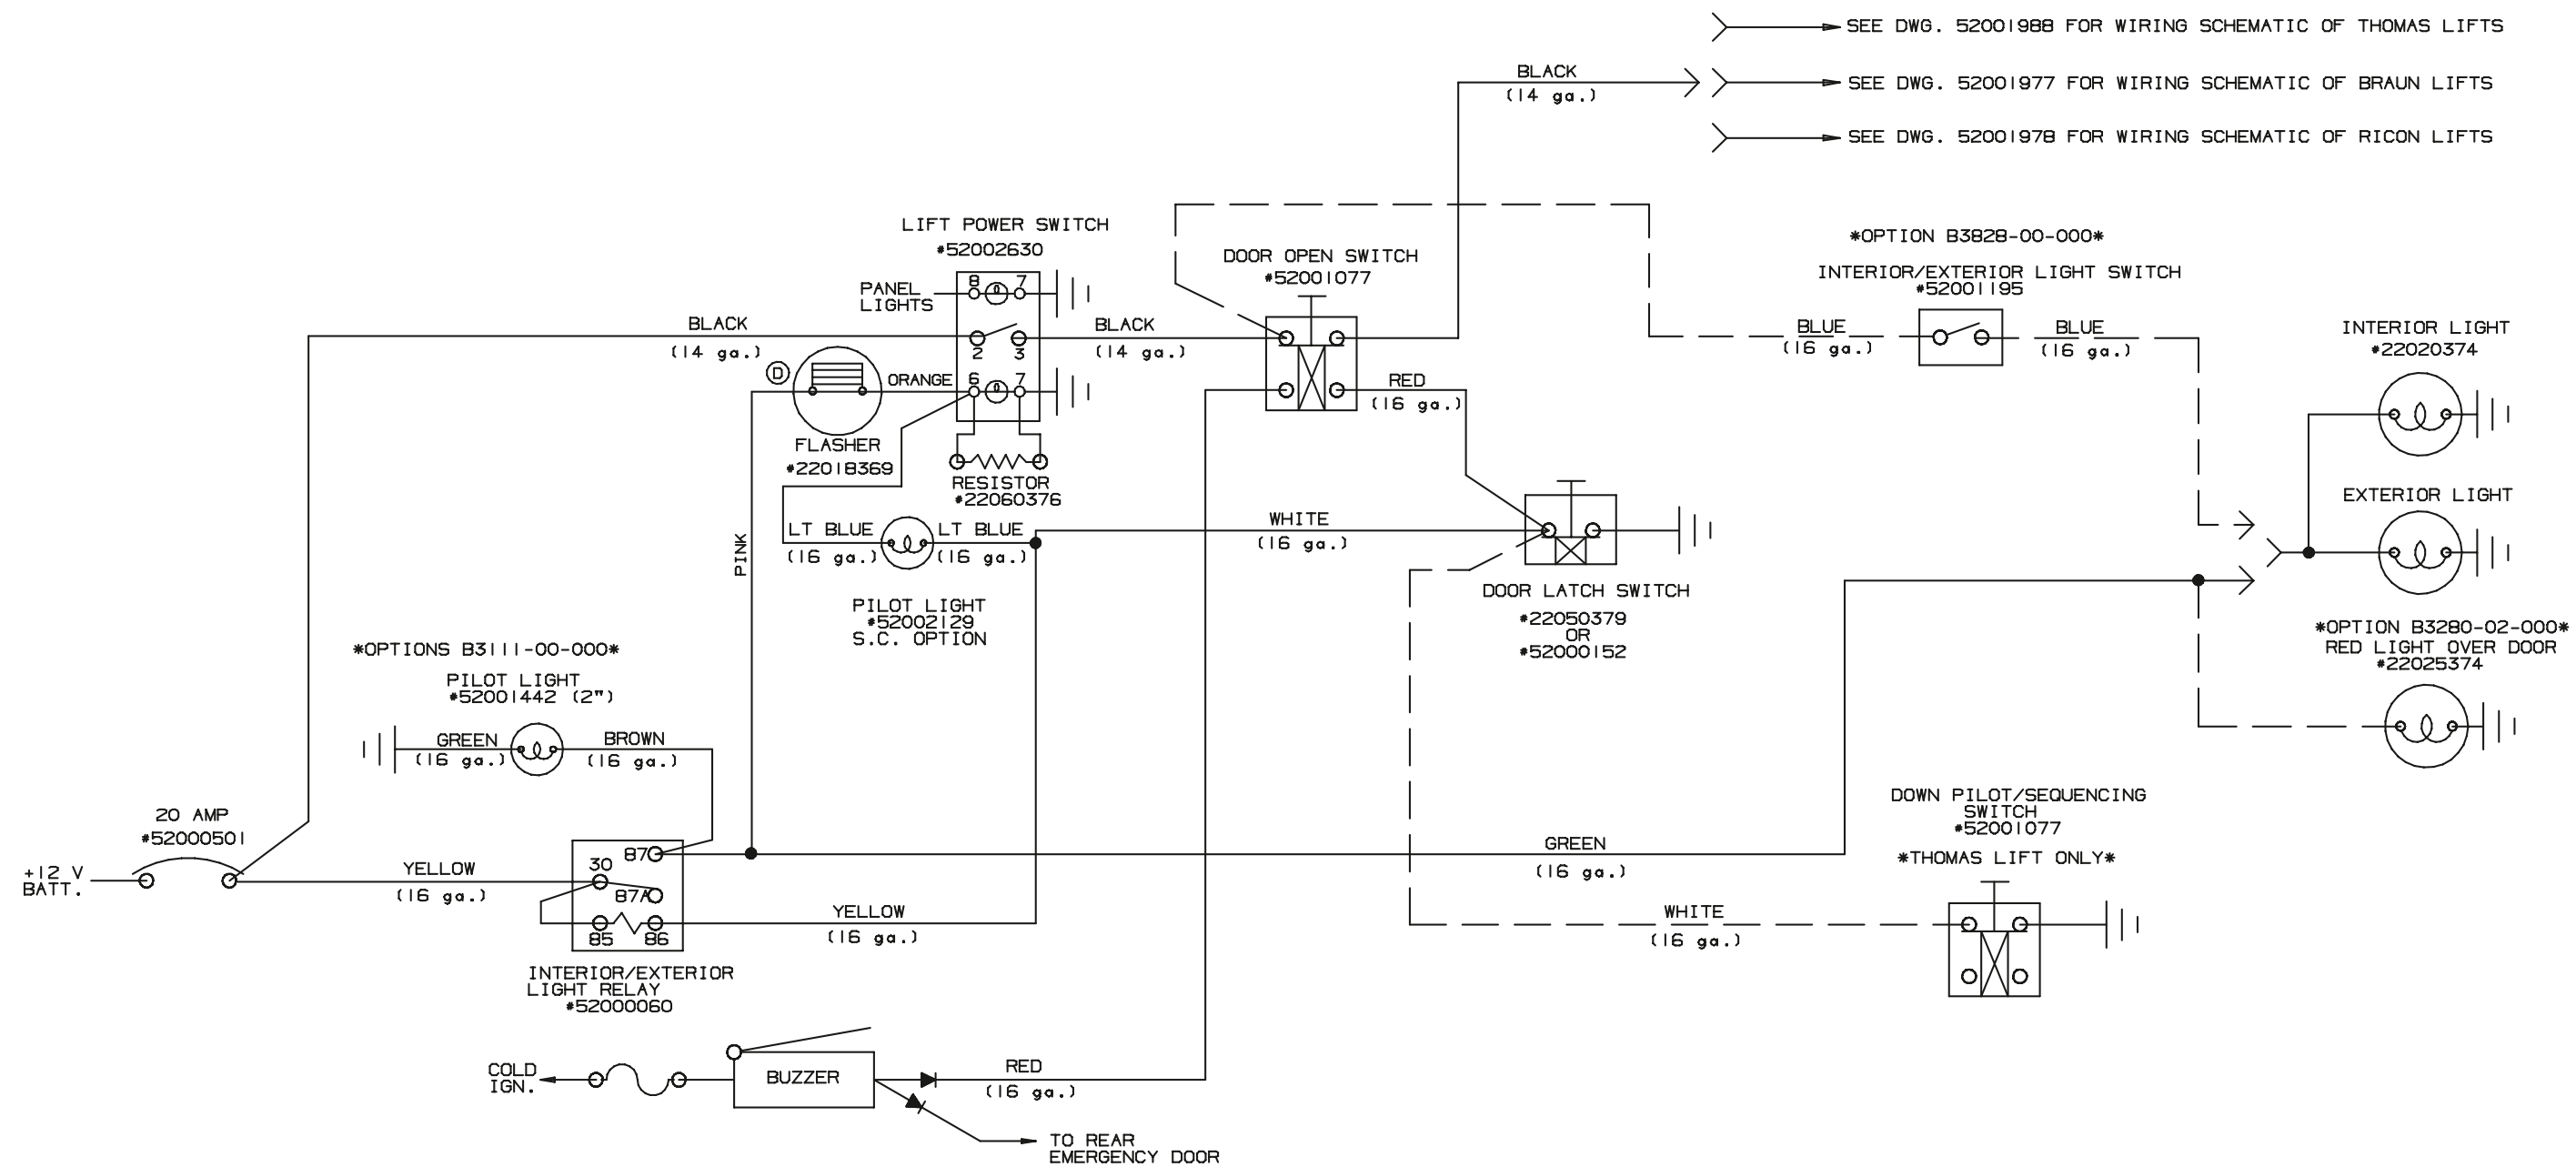


NOTES:
 1.) SCHEMATIC INCLUDES OPTIONS:
 B382B-00-000 INTERIOR/EXTERIOR LIGHT SWITCH
 B3280-02-000 RED LIGHT OVER DOOR
 B3111-00-000 LIFT DOOR PILOT LIGHT (2")

	52001989 E
LIFT DOOR	

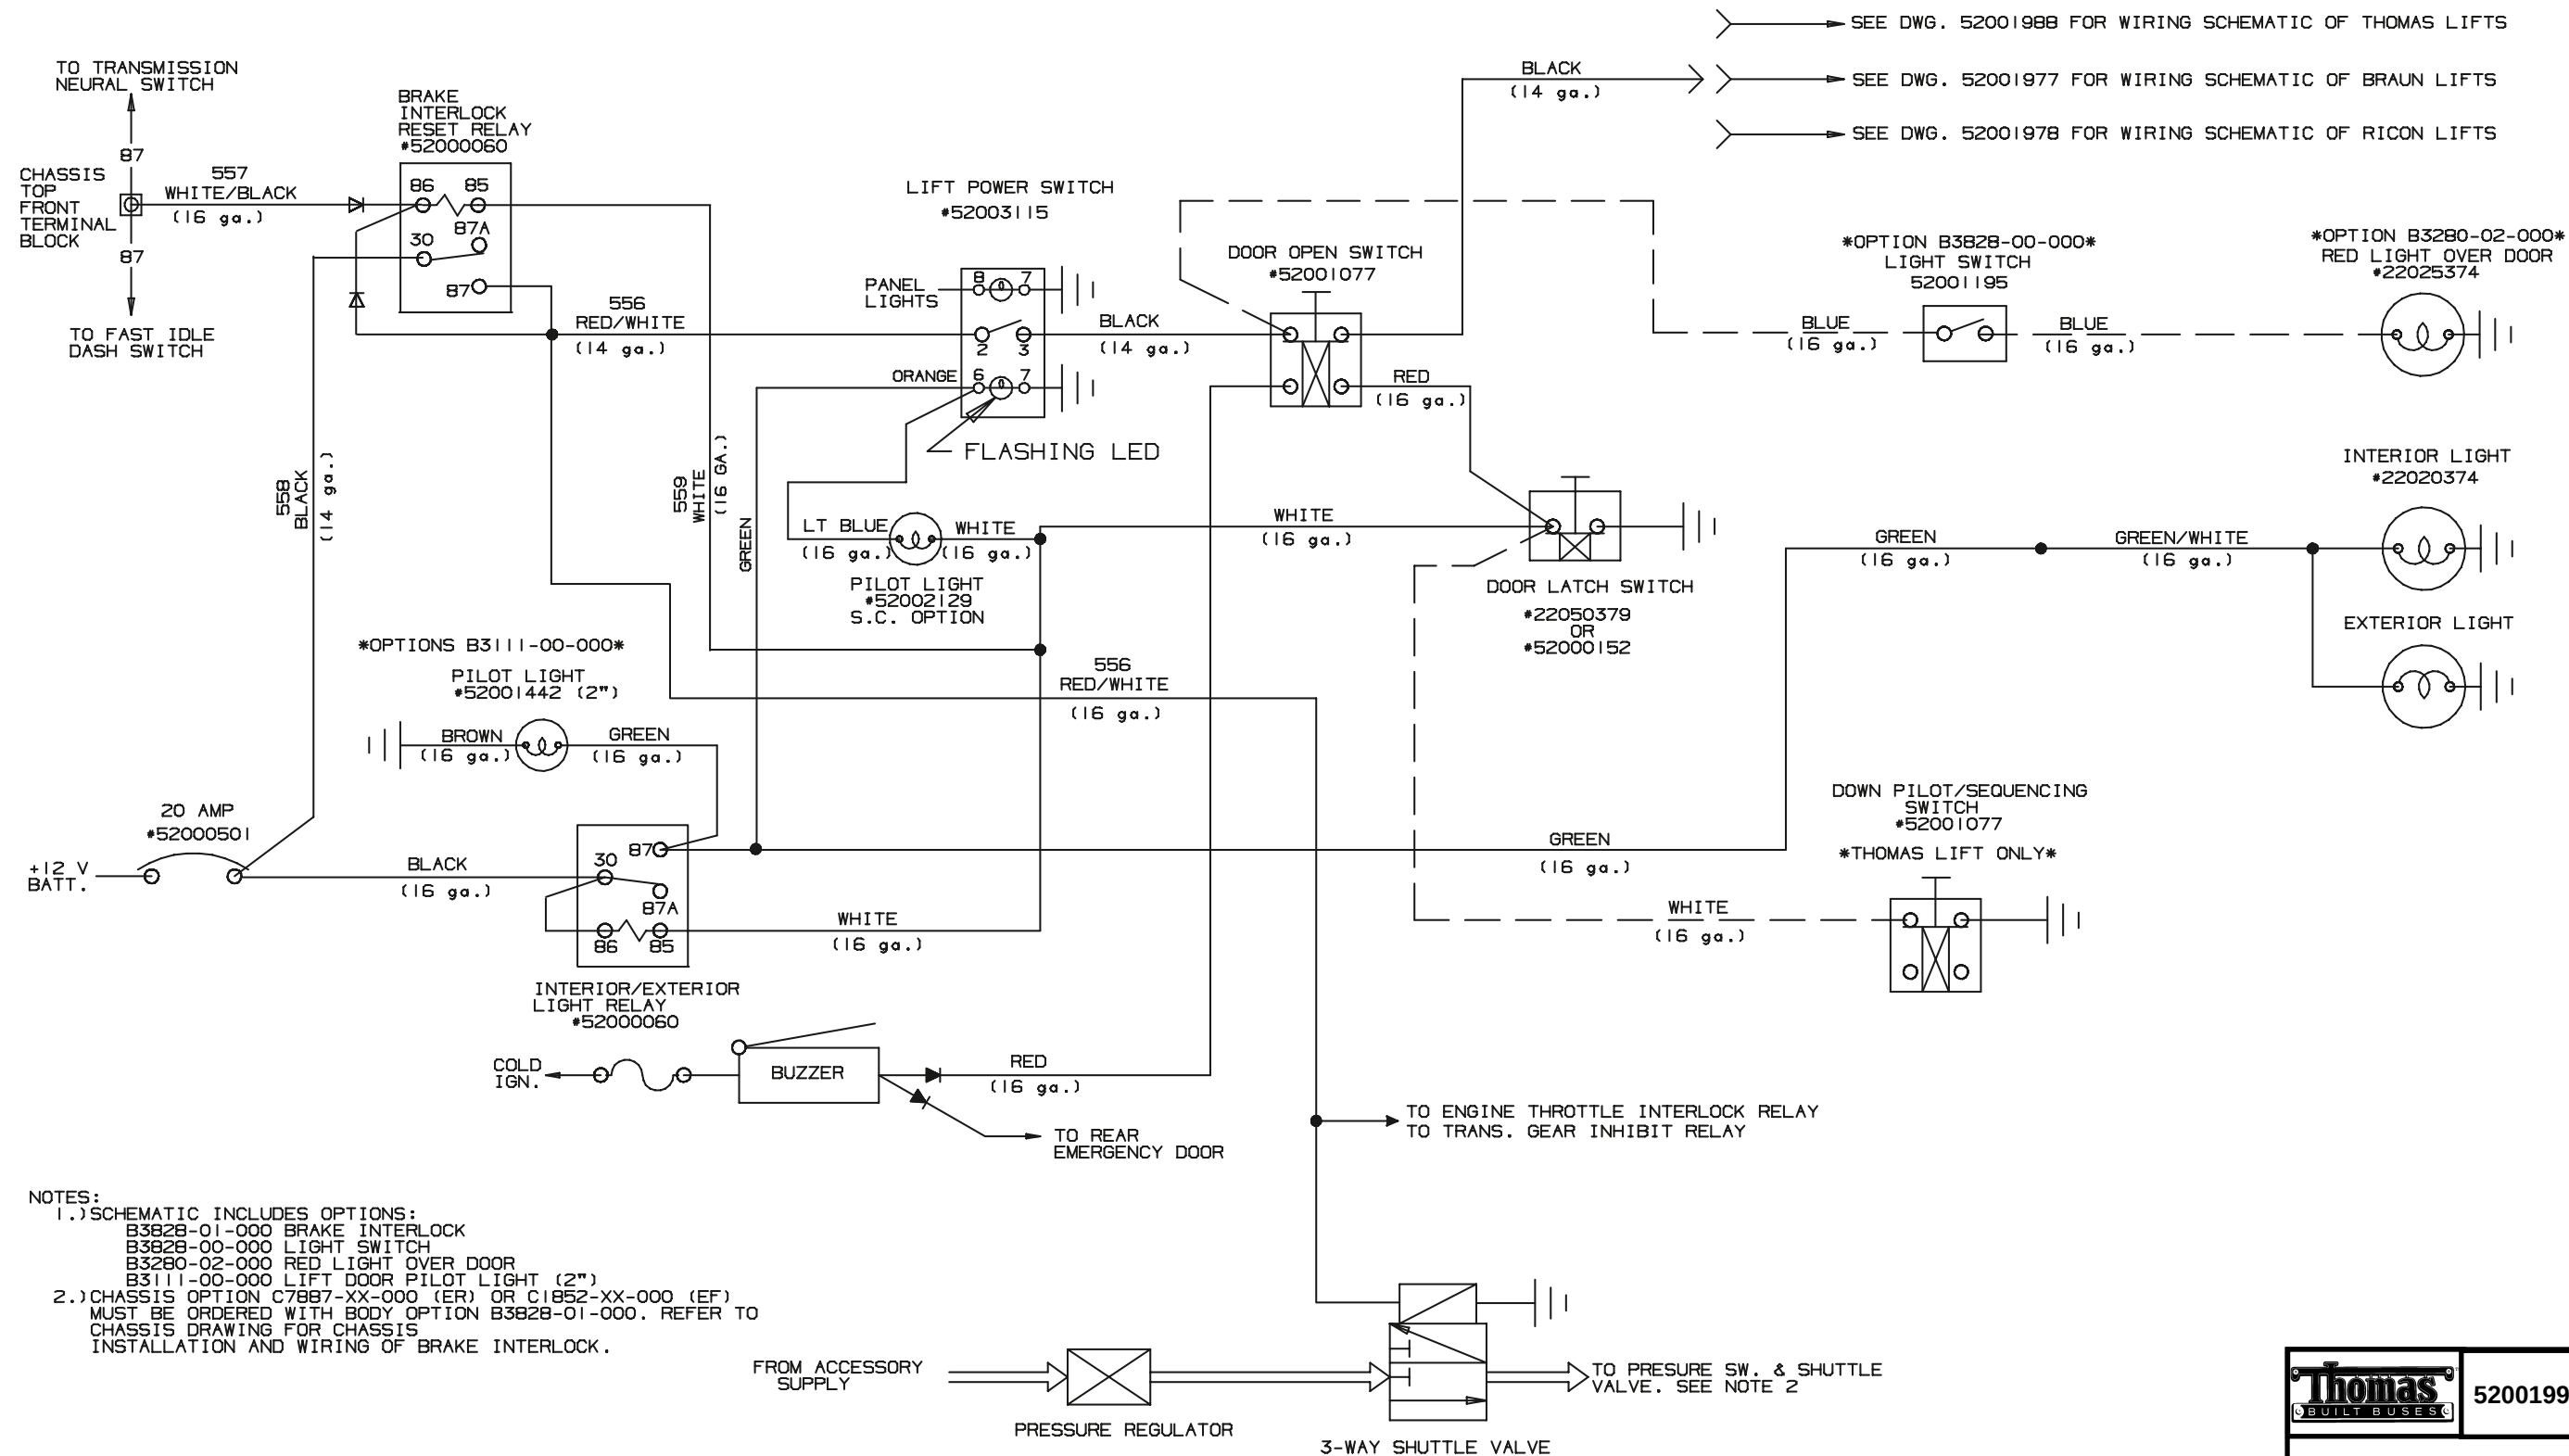


- NOTES:
- 1.) SCHEMATIC INCLUDES OPTIONS:
 B3828-01-000 BRAKE INTERLOCK
 B3828-00-000 LIGHT SWITCH
 B3280-02-000 RED LIGHT OVER DOOR
 B3111-00-000 LIFT DOOR PILOT LIGHT (2")
 - 2.) CHASSIS OPTION C7887-XX-000 (ER) OR C1852-XX-000 (EF) MUST BE ORDERED WITH BODY OPTION B3828-01-000. REFER TO CHASSIS DRAWING FOR CHASSIS INSTALLATION AND WIRING OF BRAKE INTERLOCK.

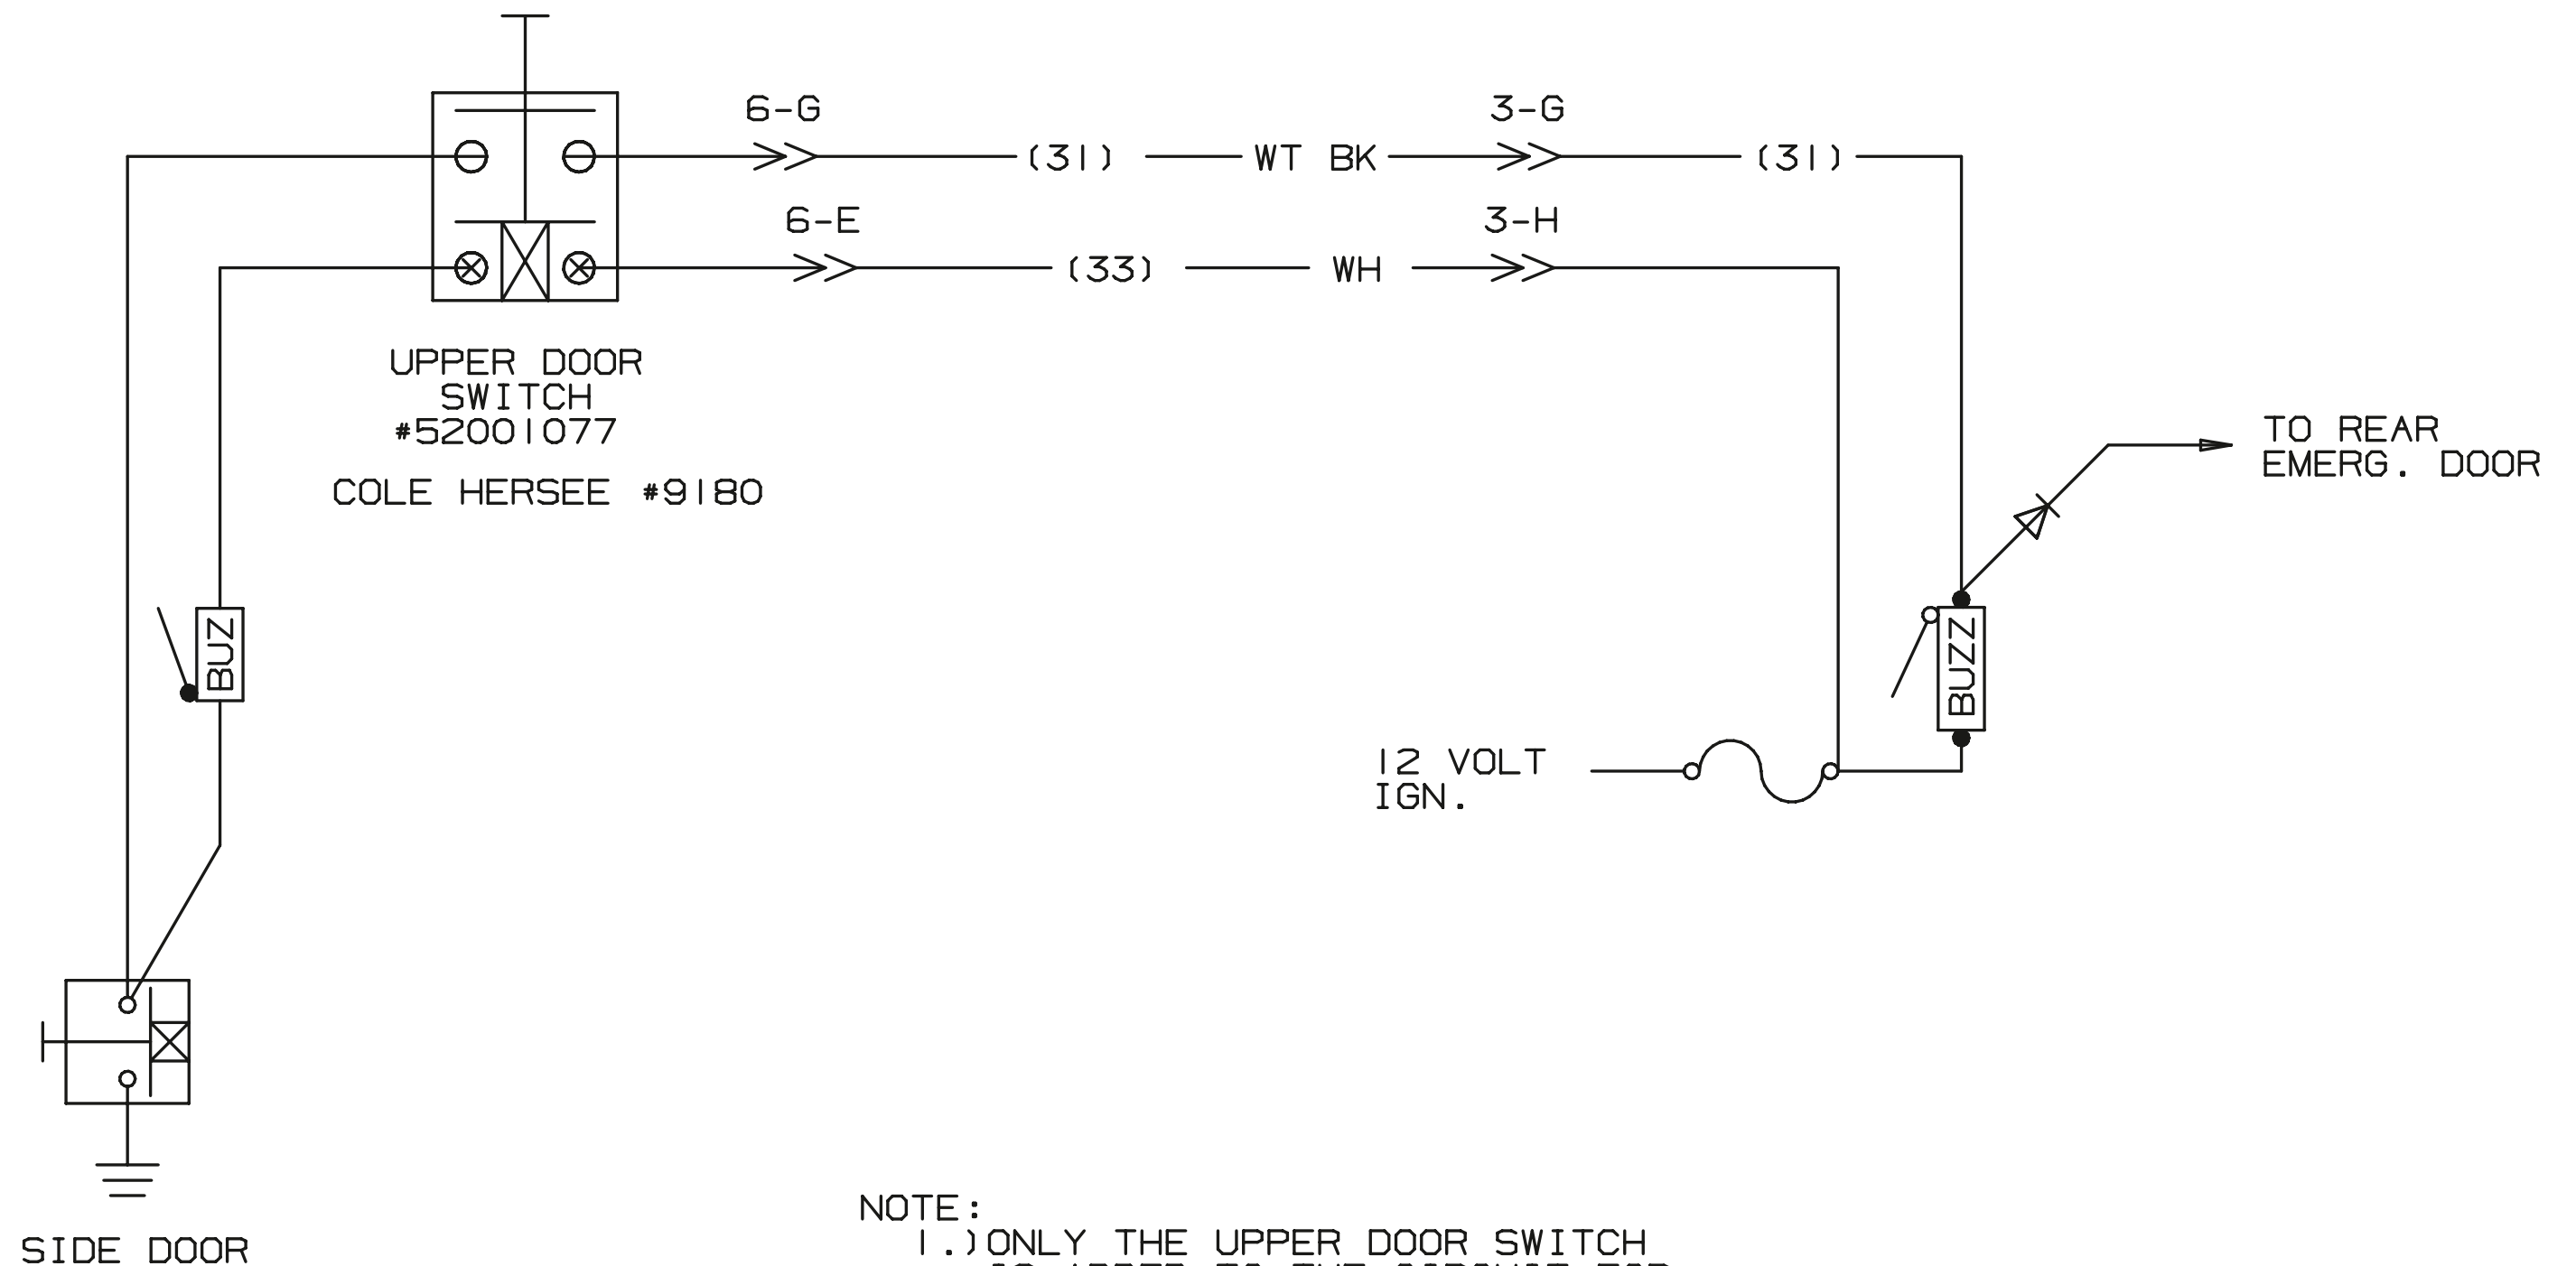


NOTE:
1.) ONLY THE UPPER DOOR SWITCH
IS ADDED TO THE CIRCUIT FOR
THIS OPTION.

Thomas BUILT BUSES	52002025 B
LOADING DOOR BUZZER SHUT-OFF SWITCH	
Option B3110-01-000	

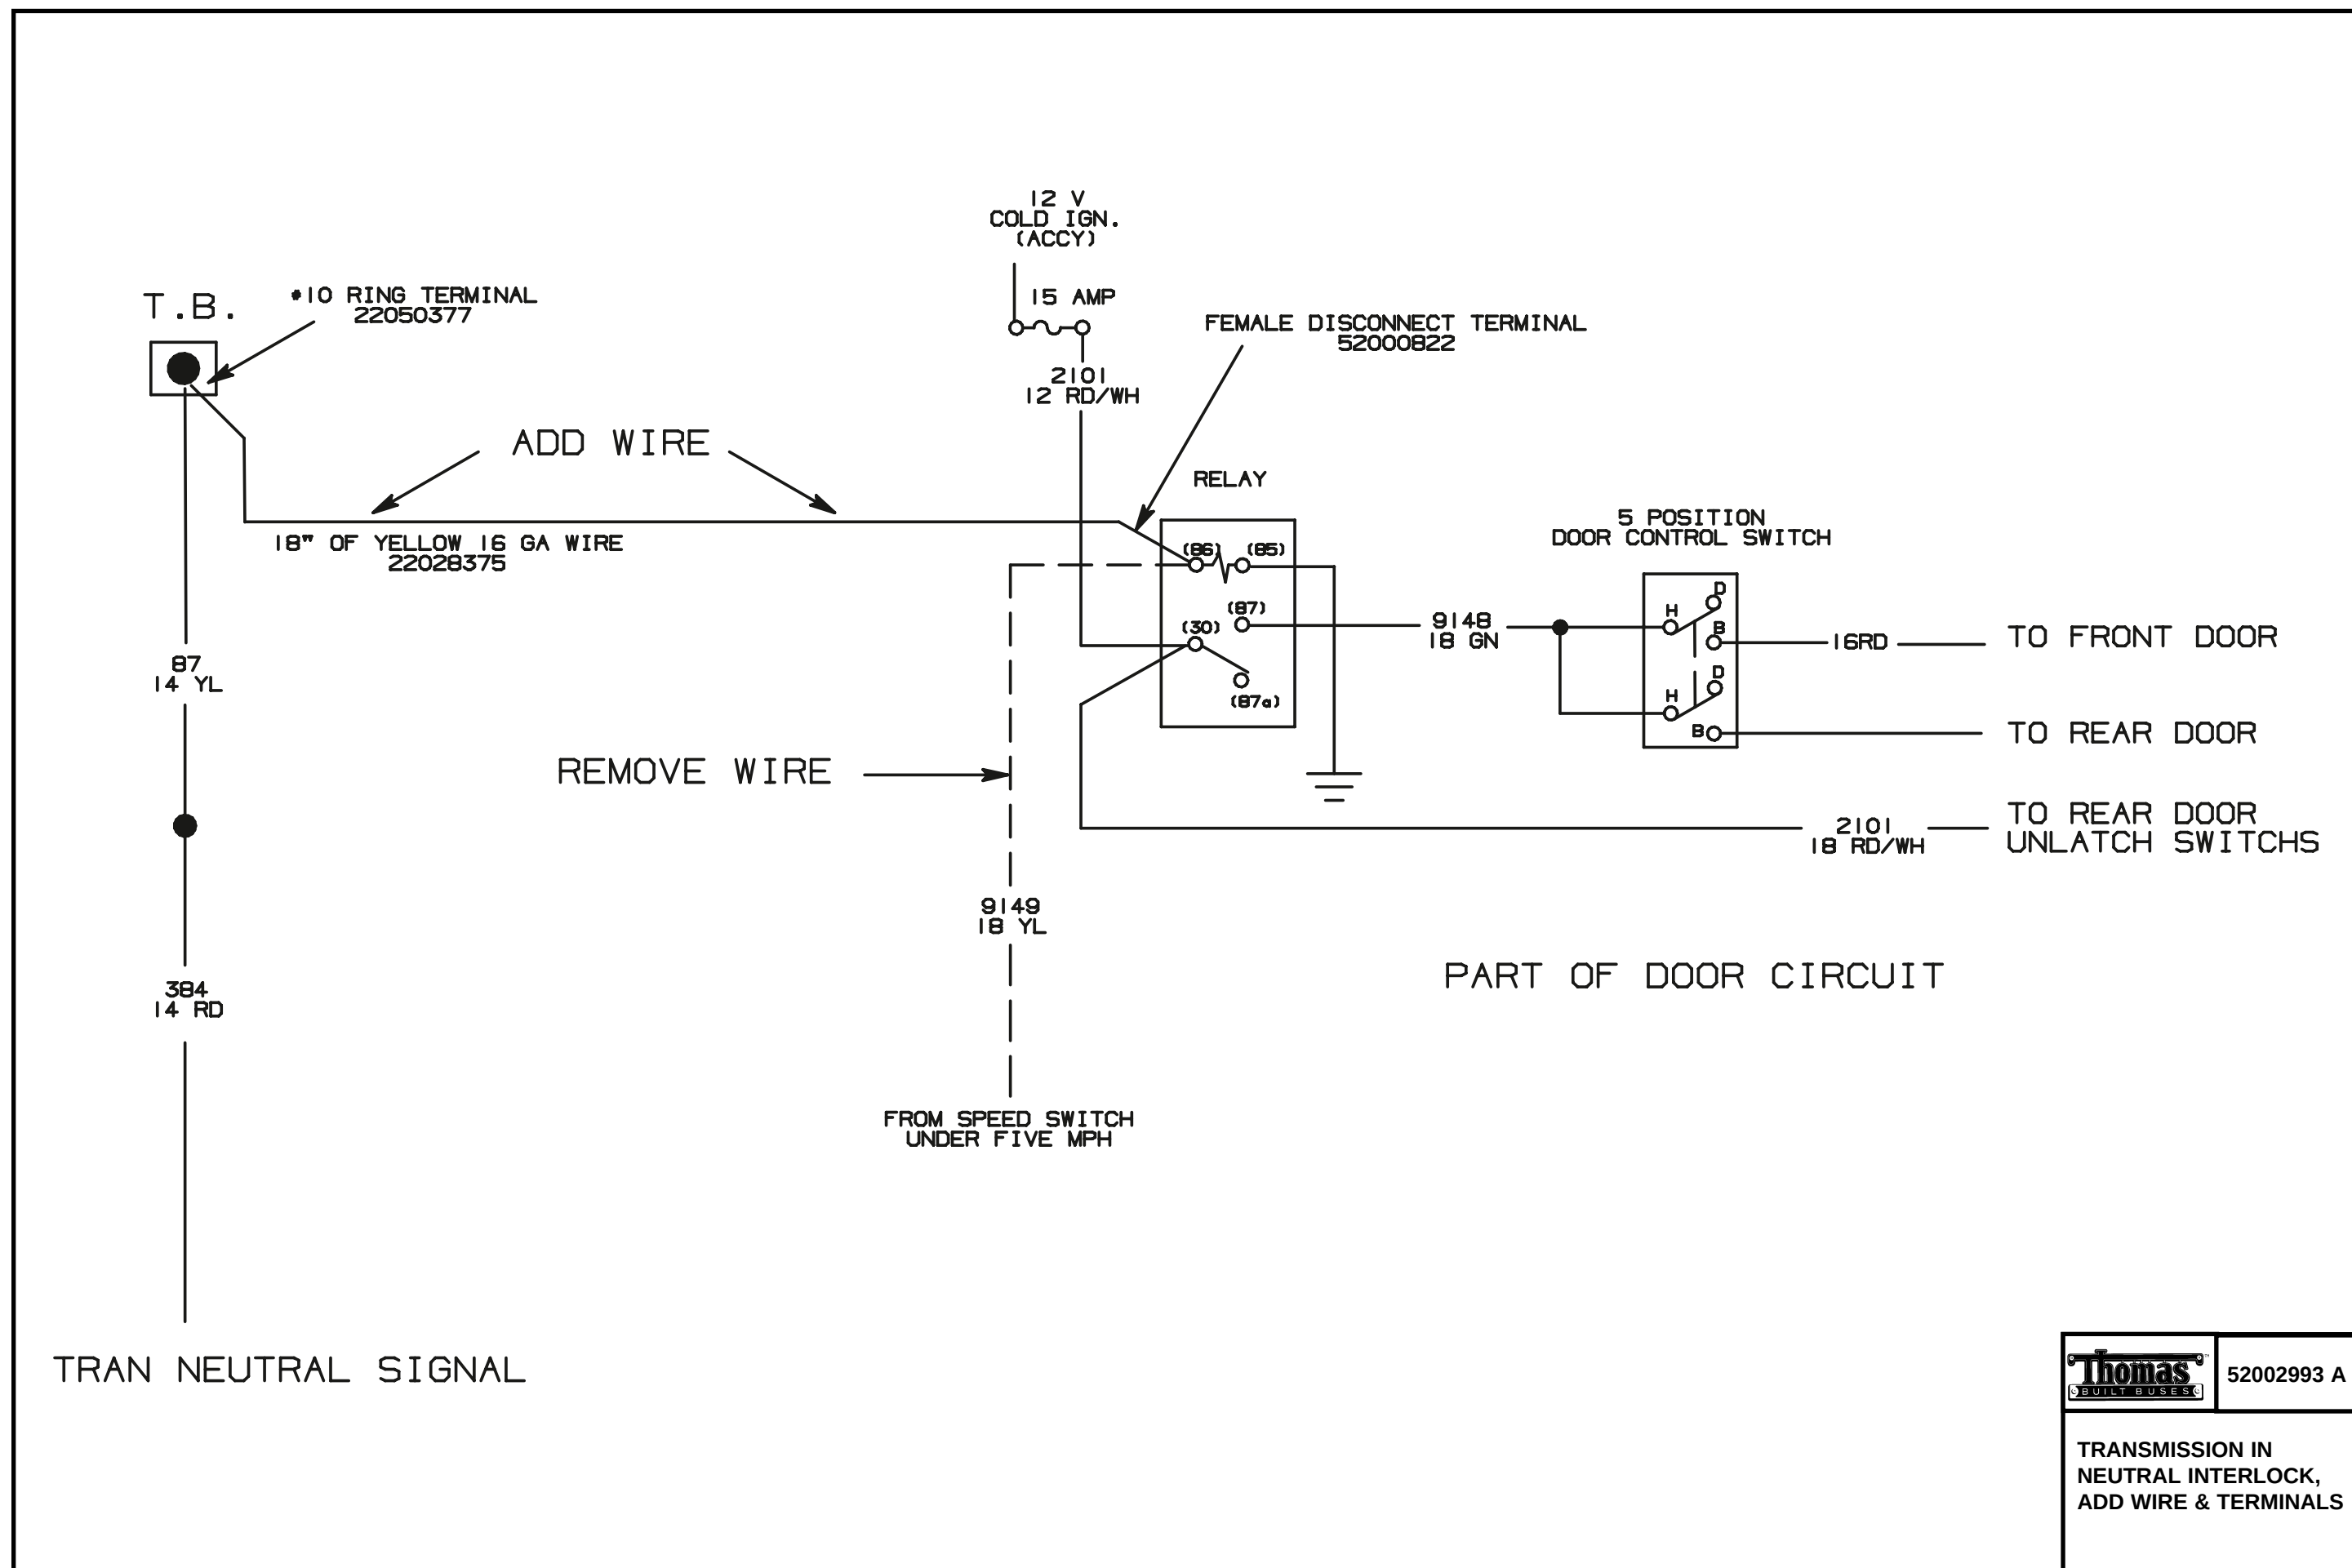


Thomas BUILT BUSES	52002993 A
TRANSMISSION IN NEUTRAL INTERLOCK, ADD WIRE & TERMINALS	

DOOR SWITCH WIRING

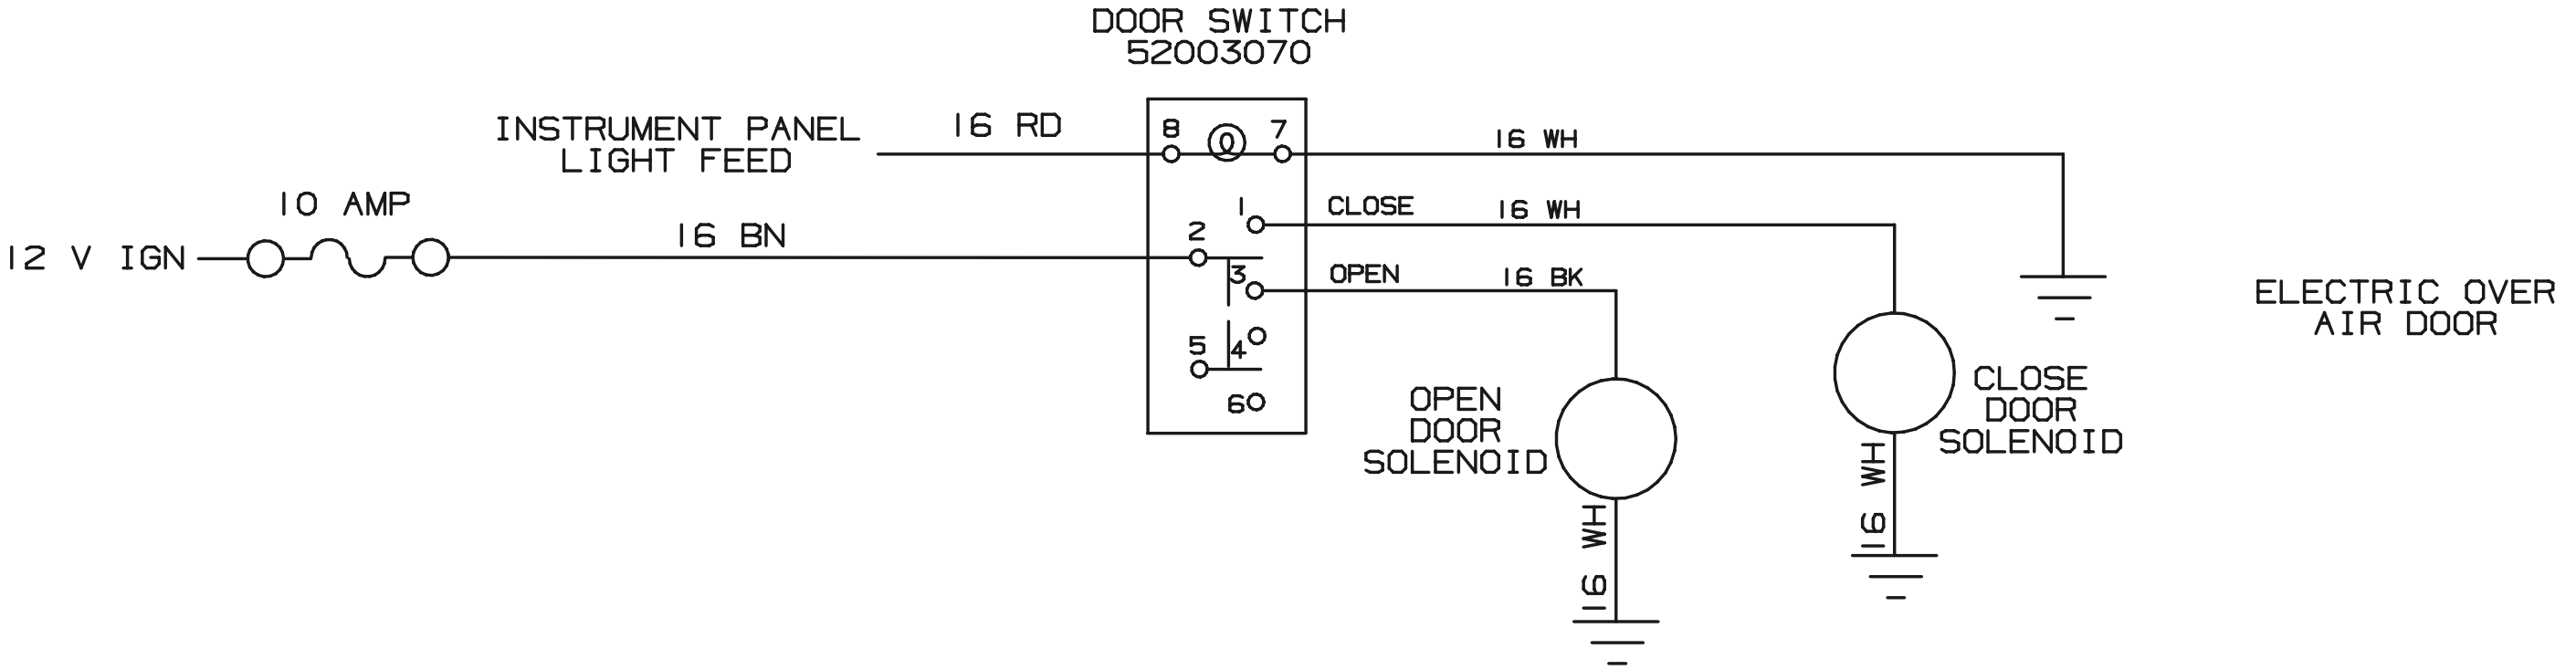


Thomas BUILT BUSES	52003095 B
DOOR CONTROL 2 POSITION, NO INTER- LOCK	
Option: B5016-22-000	

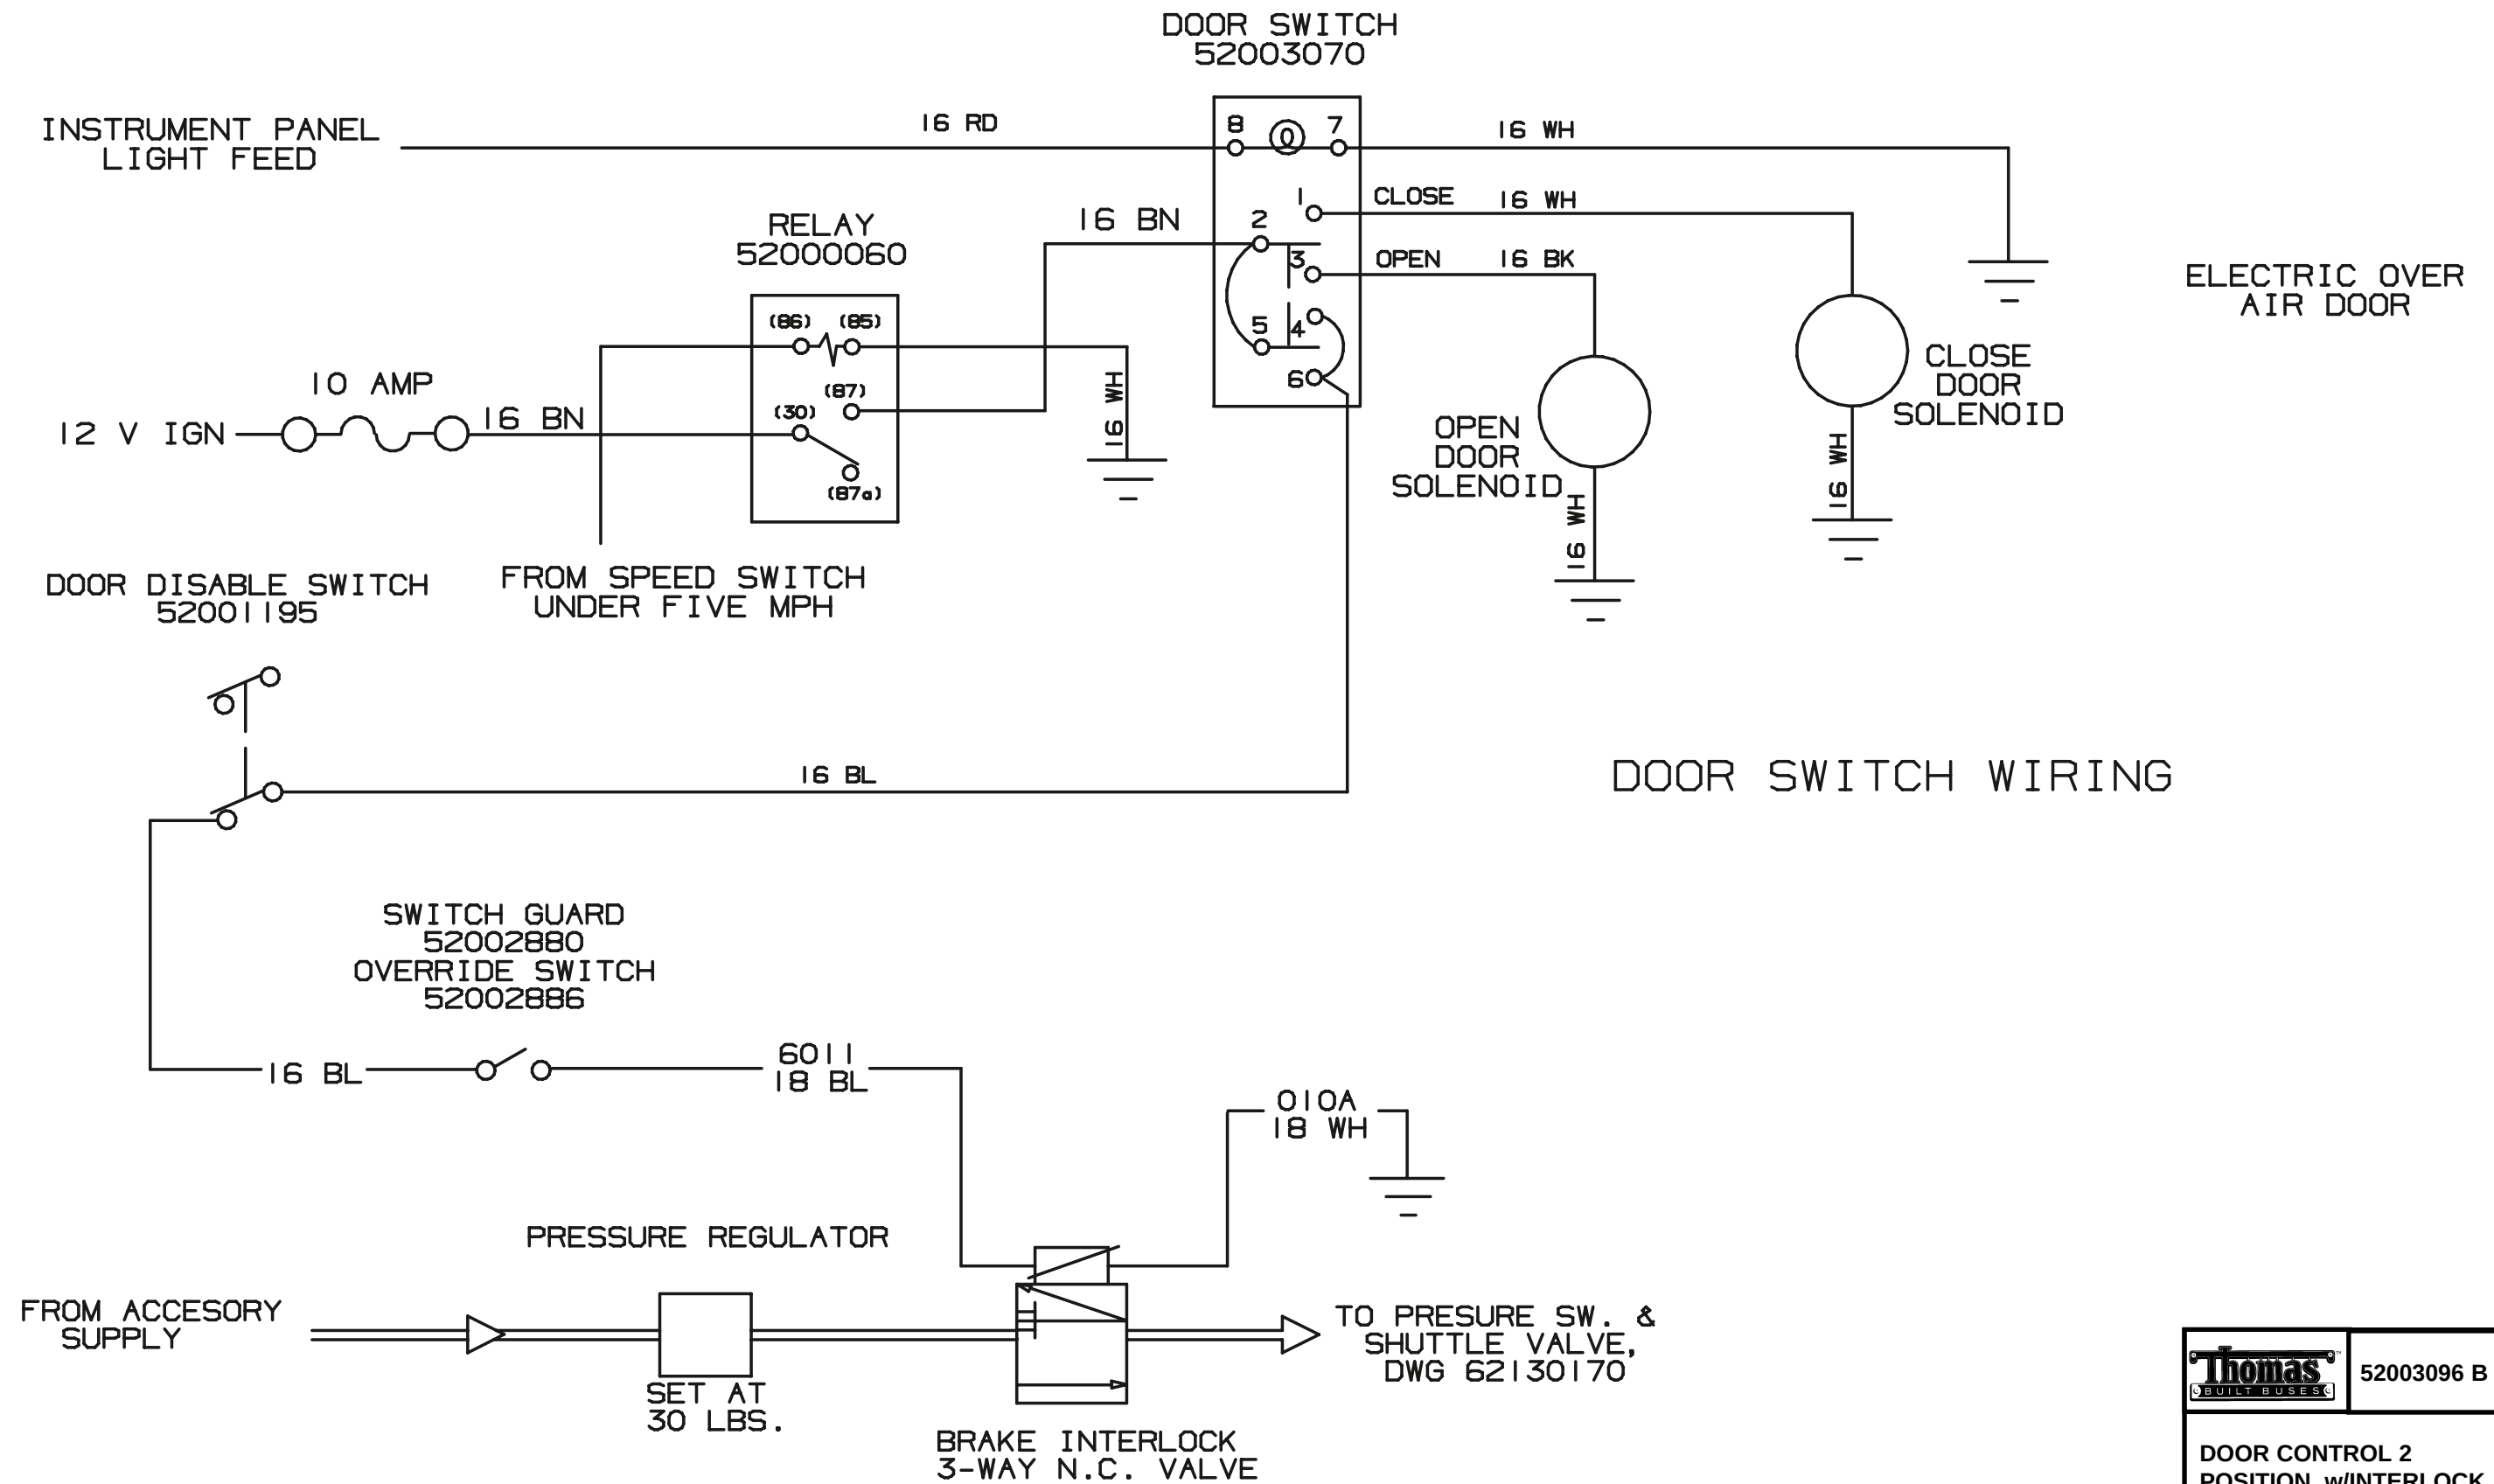


DOOR SWITCH WIRING

5 POSITION SWITCH

5 POSITION SWITCH OUTPUT		
	FRONT	REAR
OFF CENTER POS.		
REAR DOOR ONLY (1ST REAR POS.)		
BOTH FRONT & REAR DOOR (2ND REAR POS.)		
FRONT DOOR ONLY (1ST LFT POS.)		
BOTH FRONT & REAR DOOR (2ND LFT POS.)		

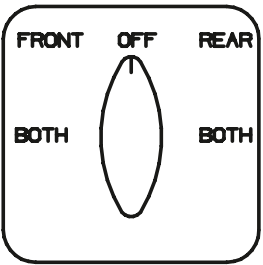


INTERNAL WIRING

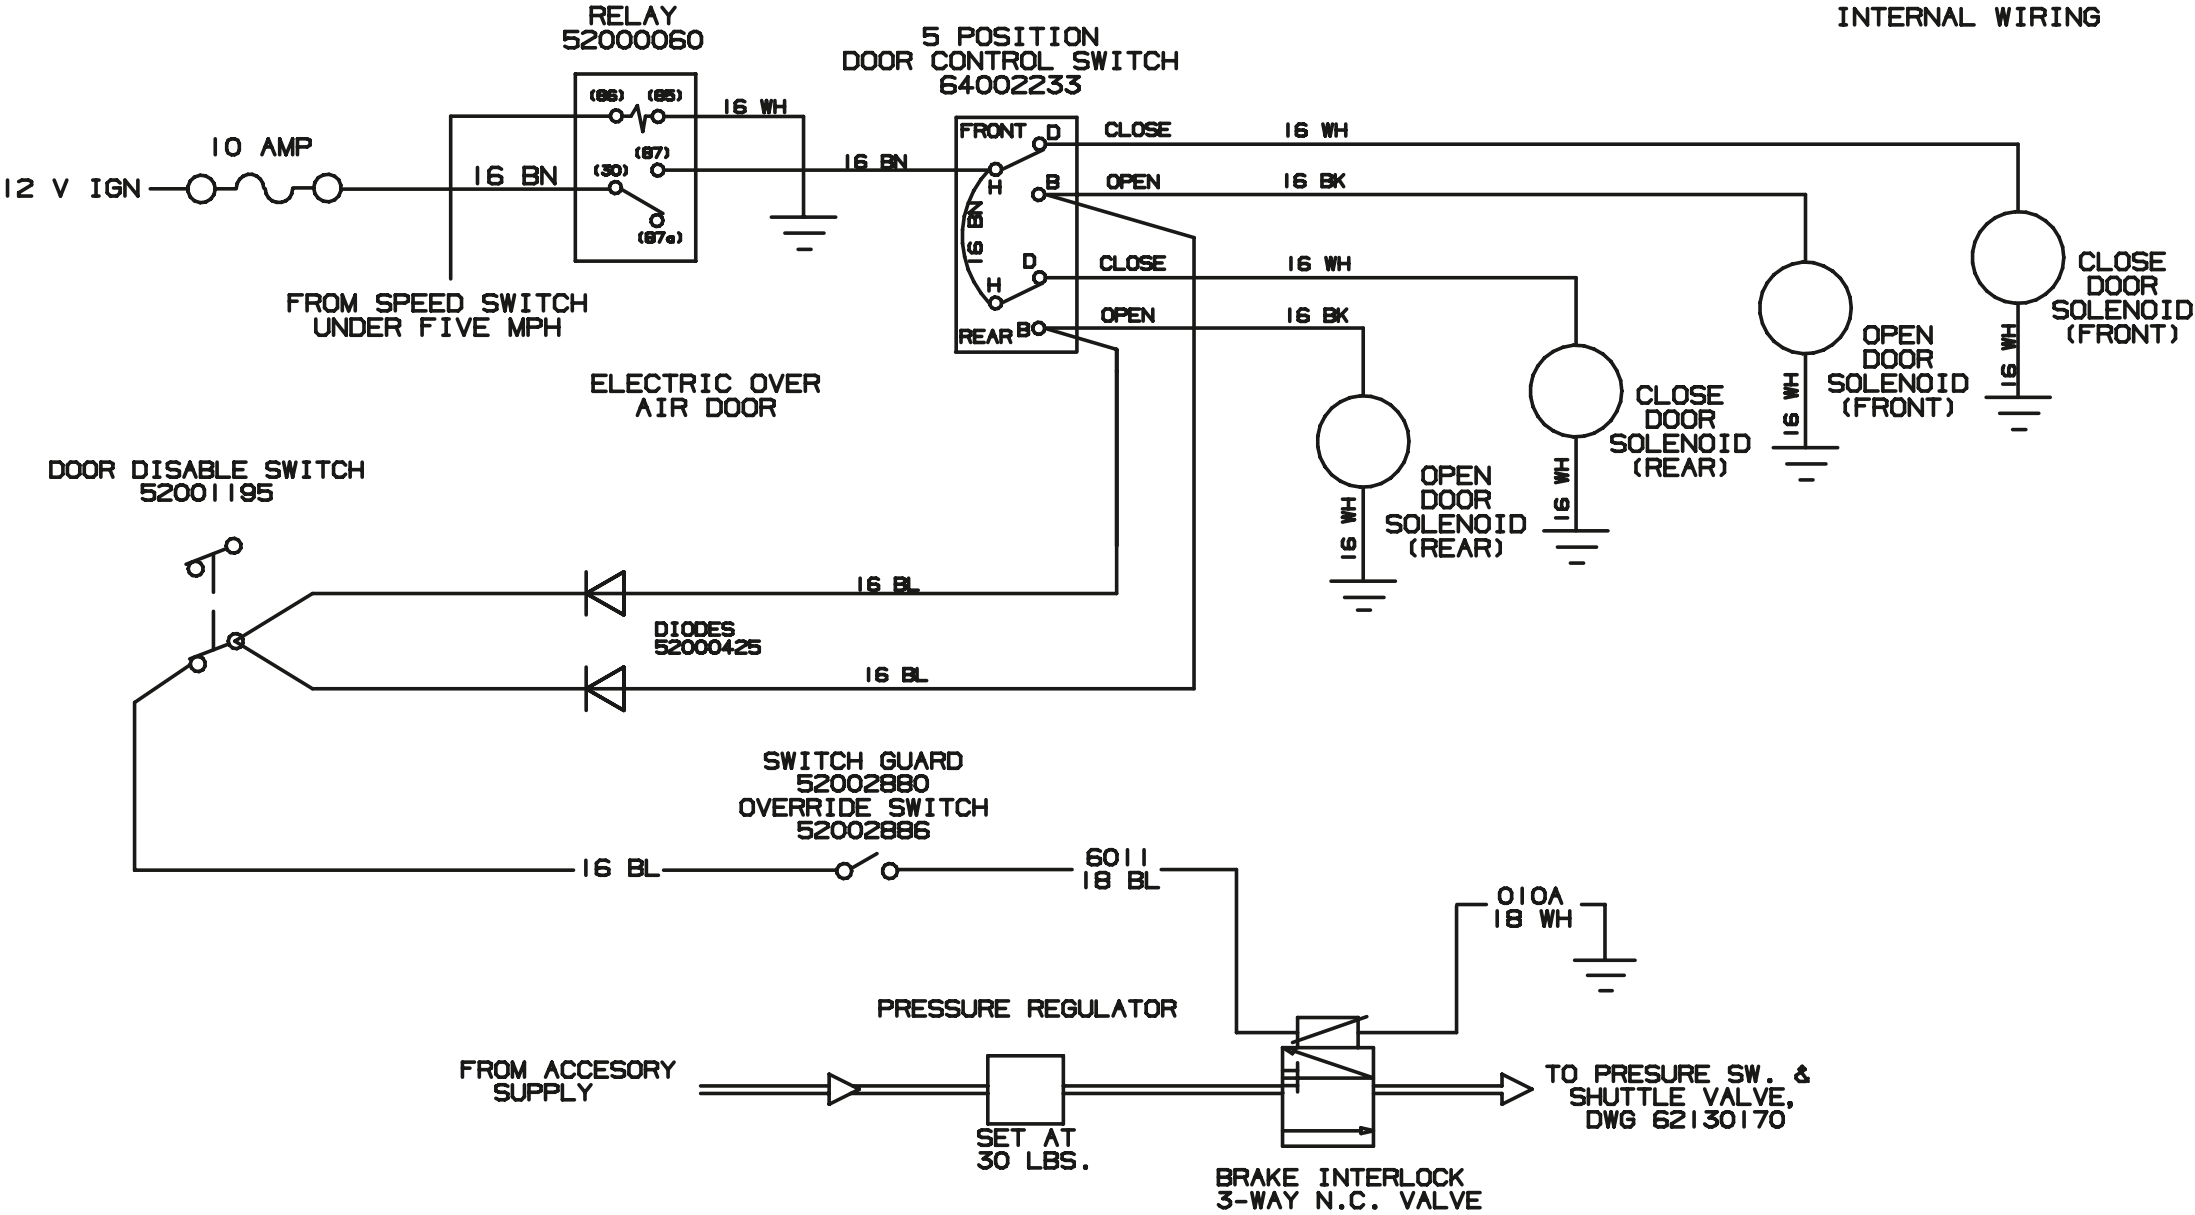

 52003098 A


DOOR CONTROL 5
POSITION, w/INTERLOCK


Option: B5016-16-000

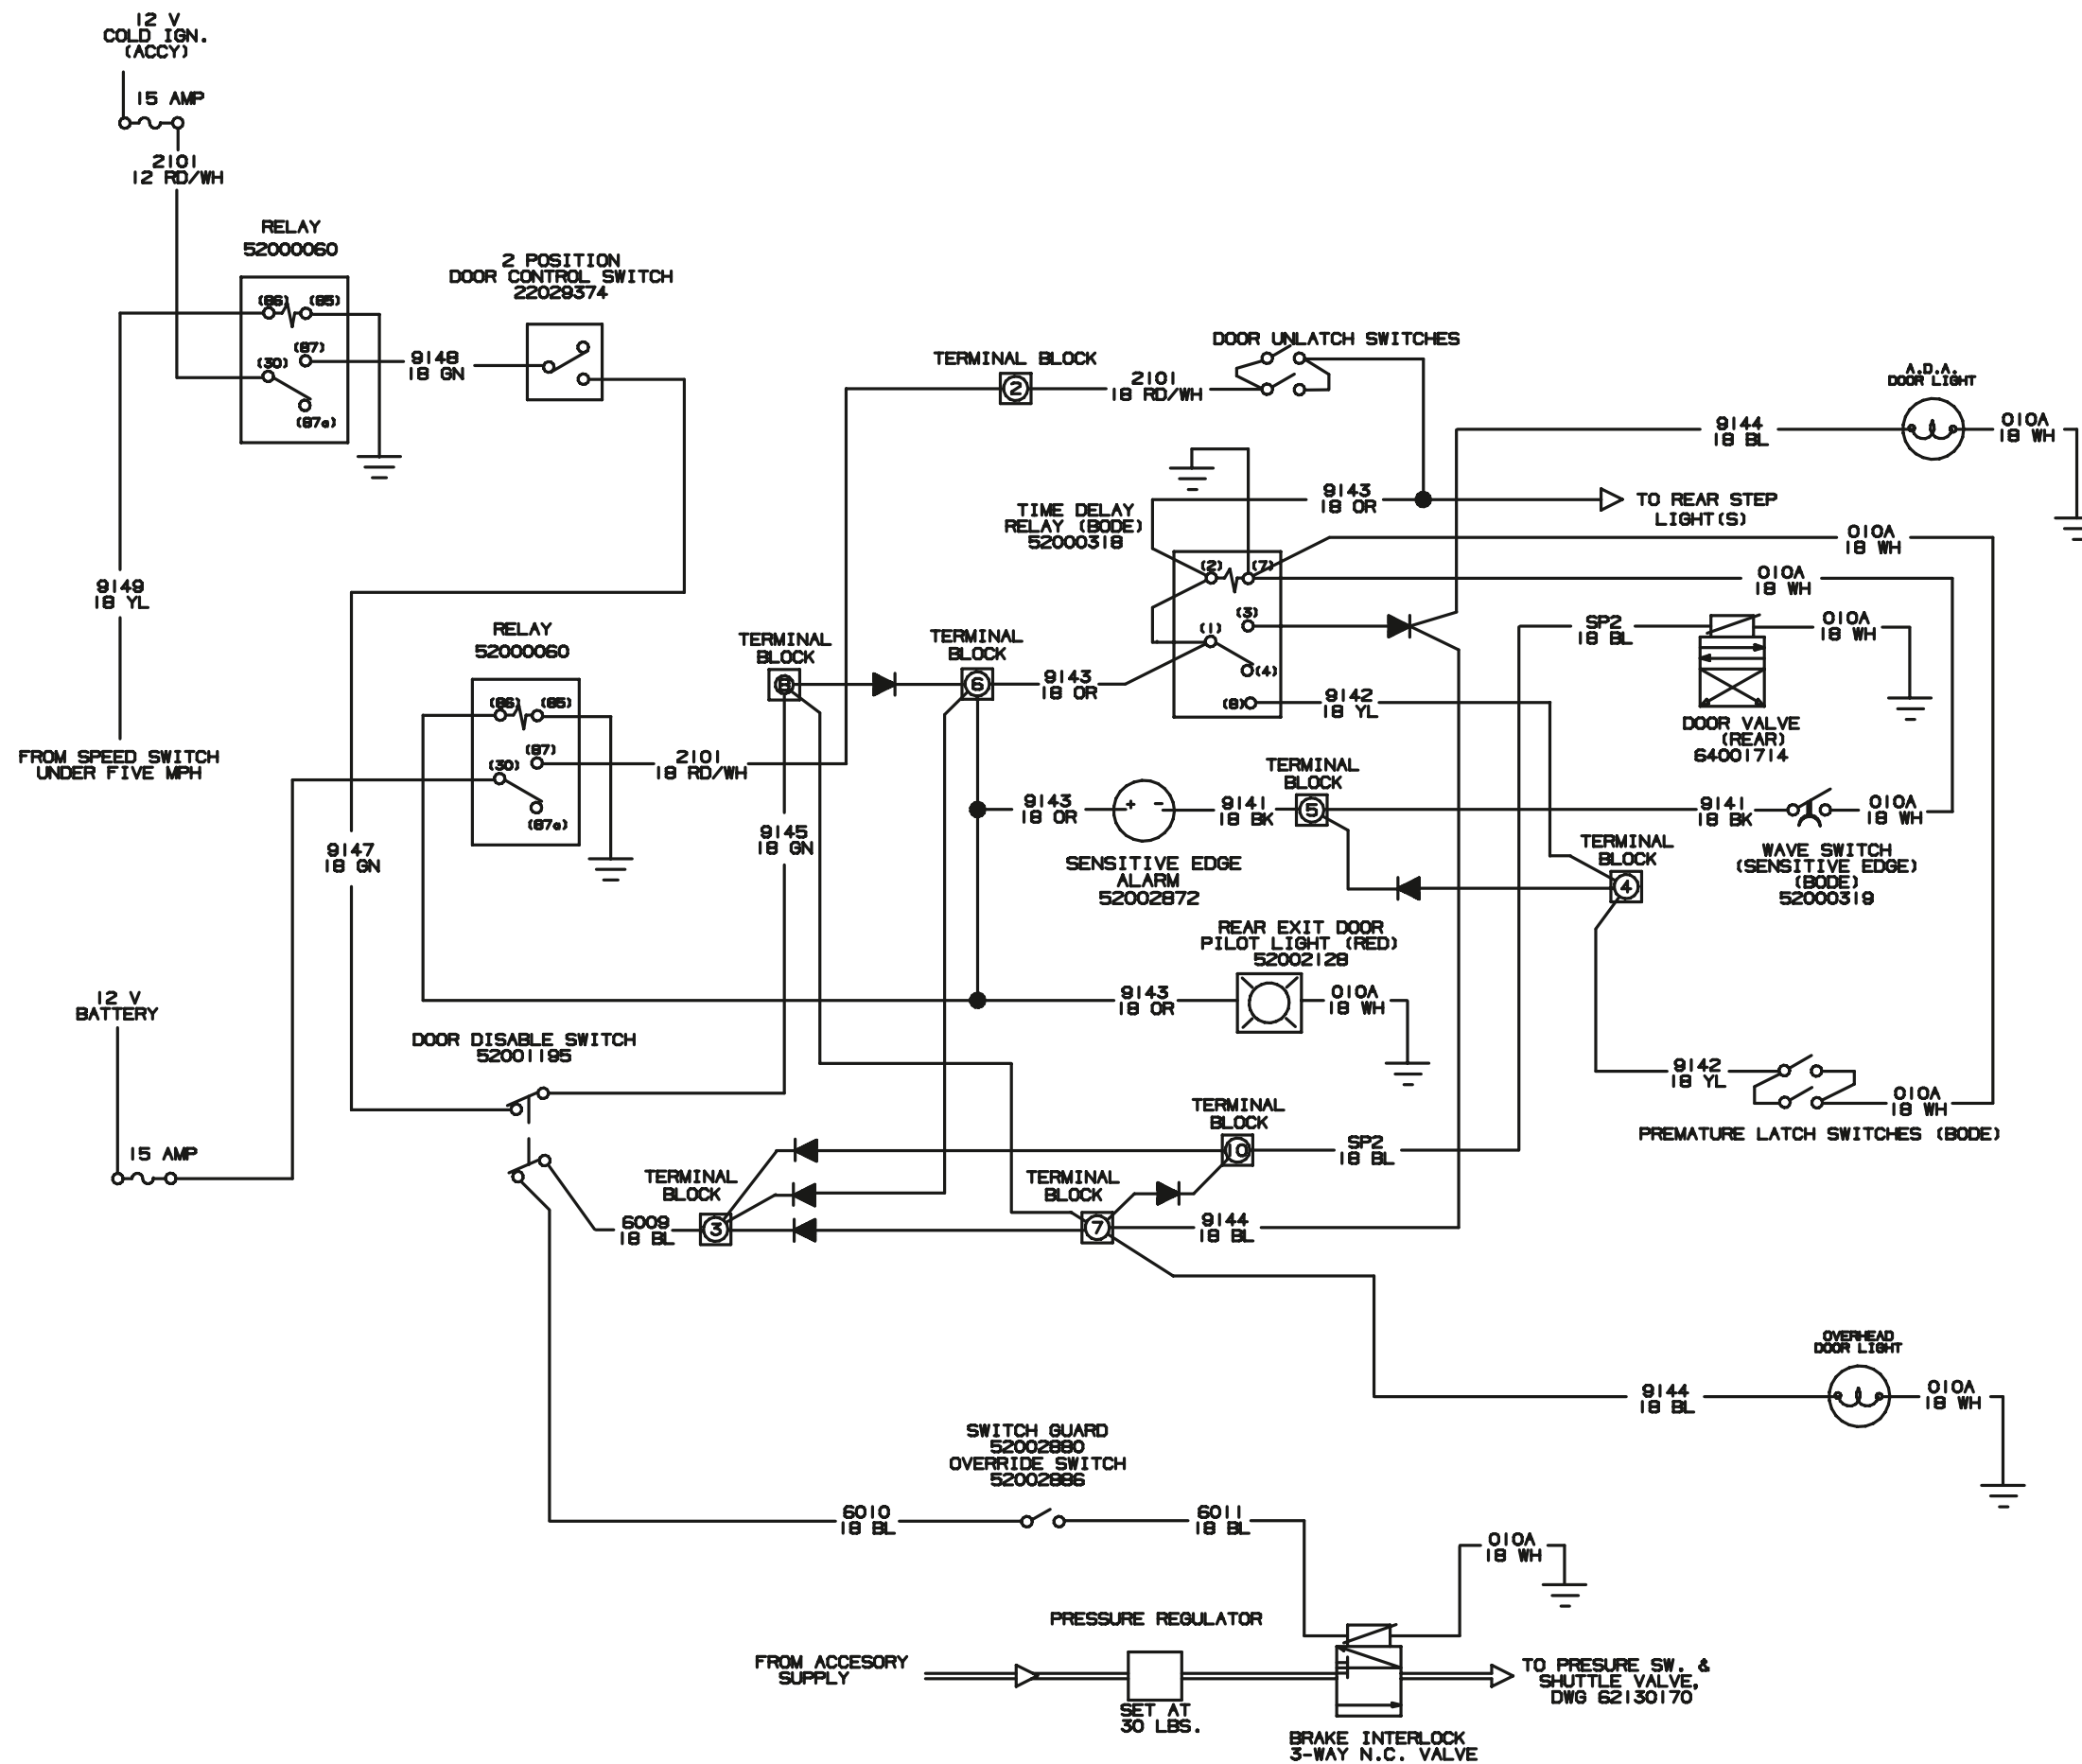

(2) POSITION
DOOR CONTROL
B5016-12-000

	52002892 C
REAR EXIT, 2 POSITION DOOR CONTROL, w/BRAKE INTERLOCK (BODE)	

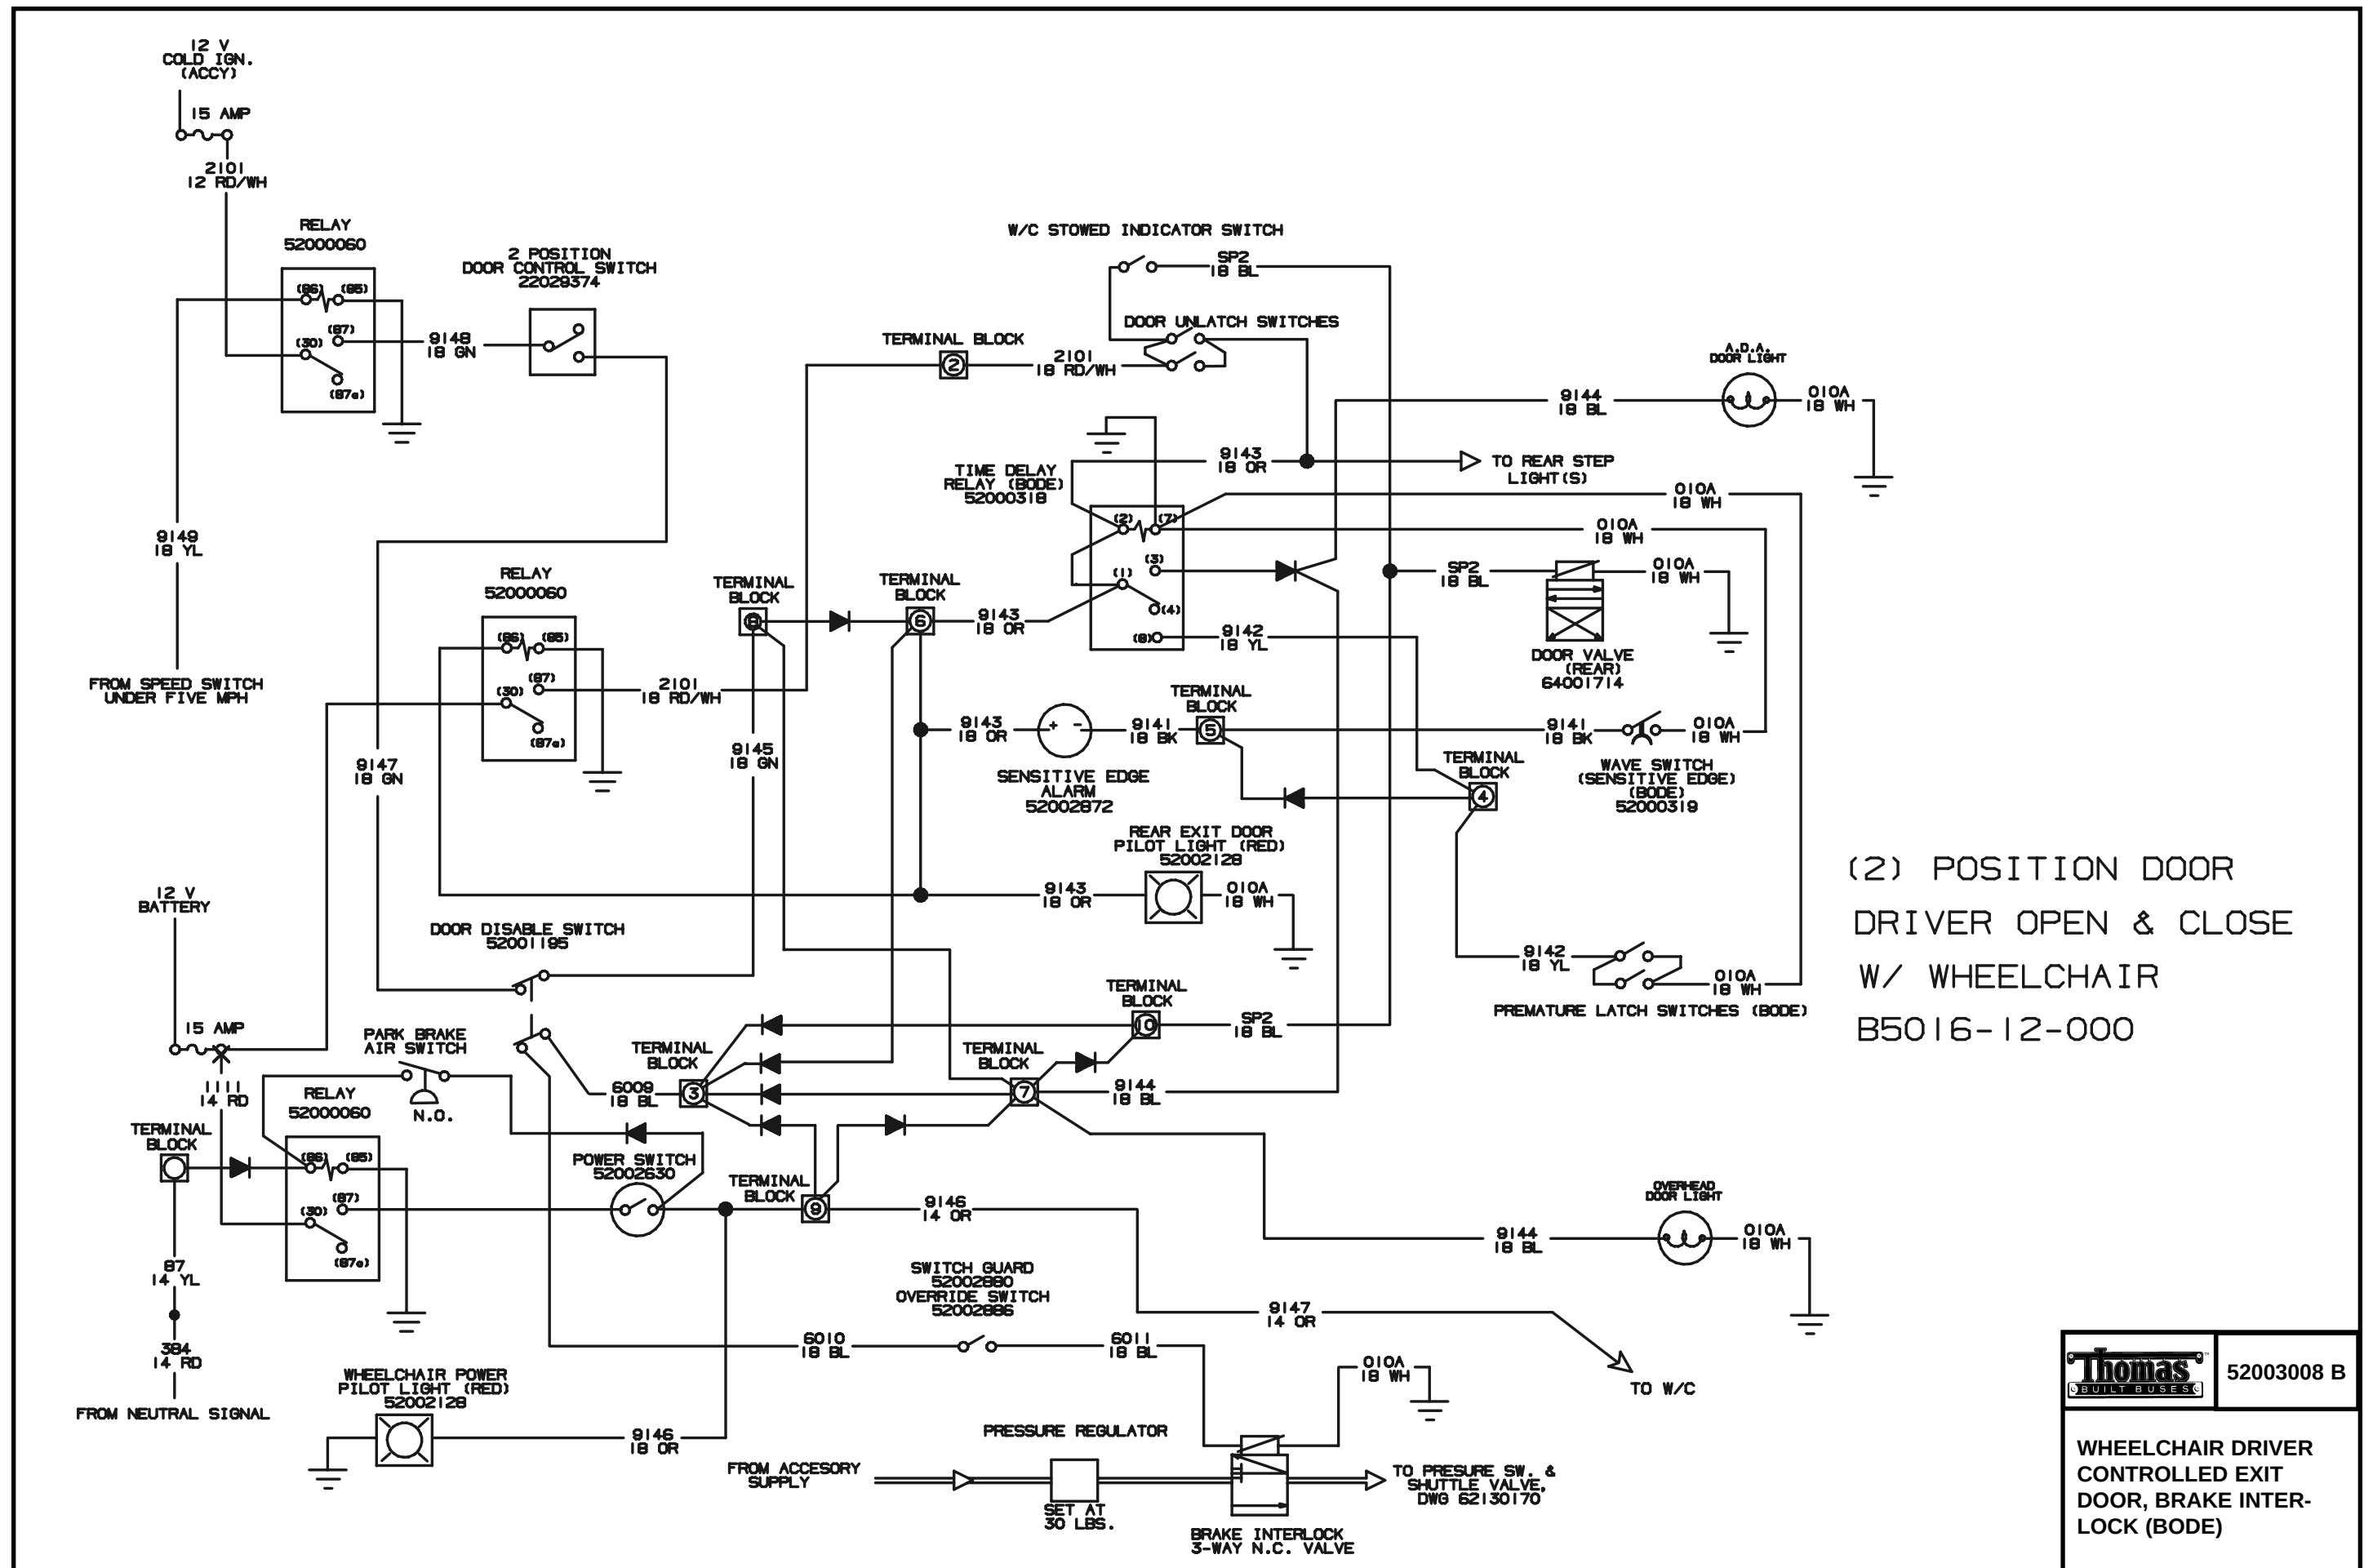

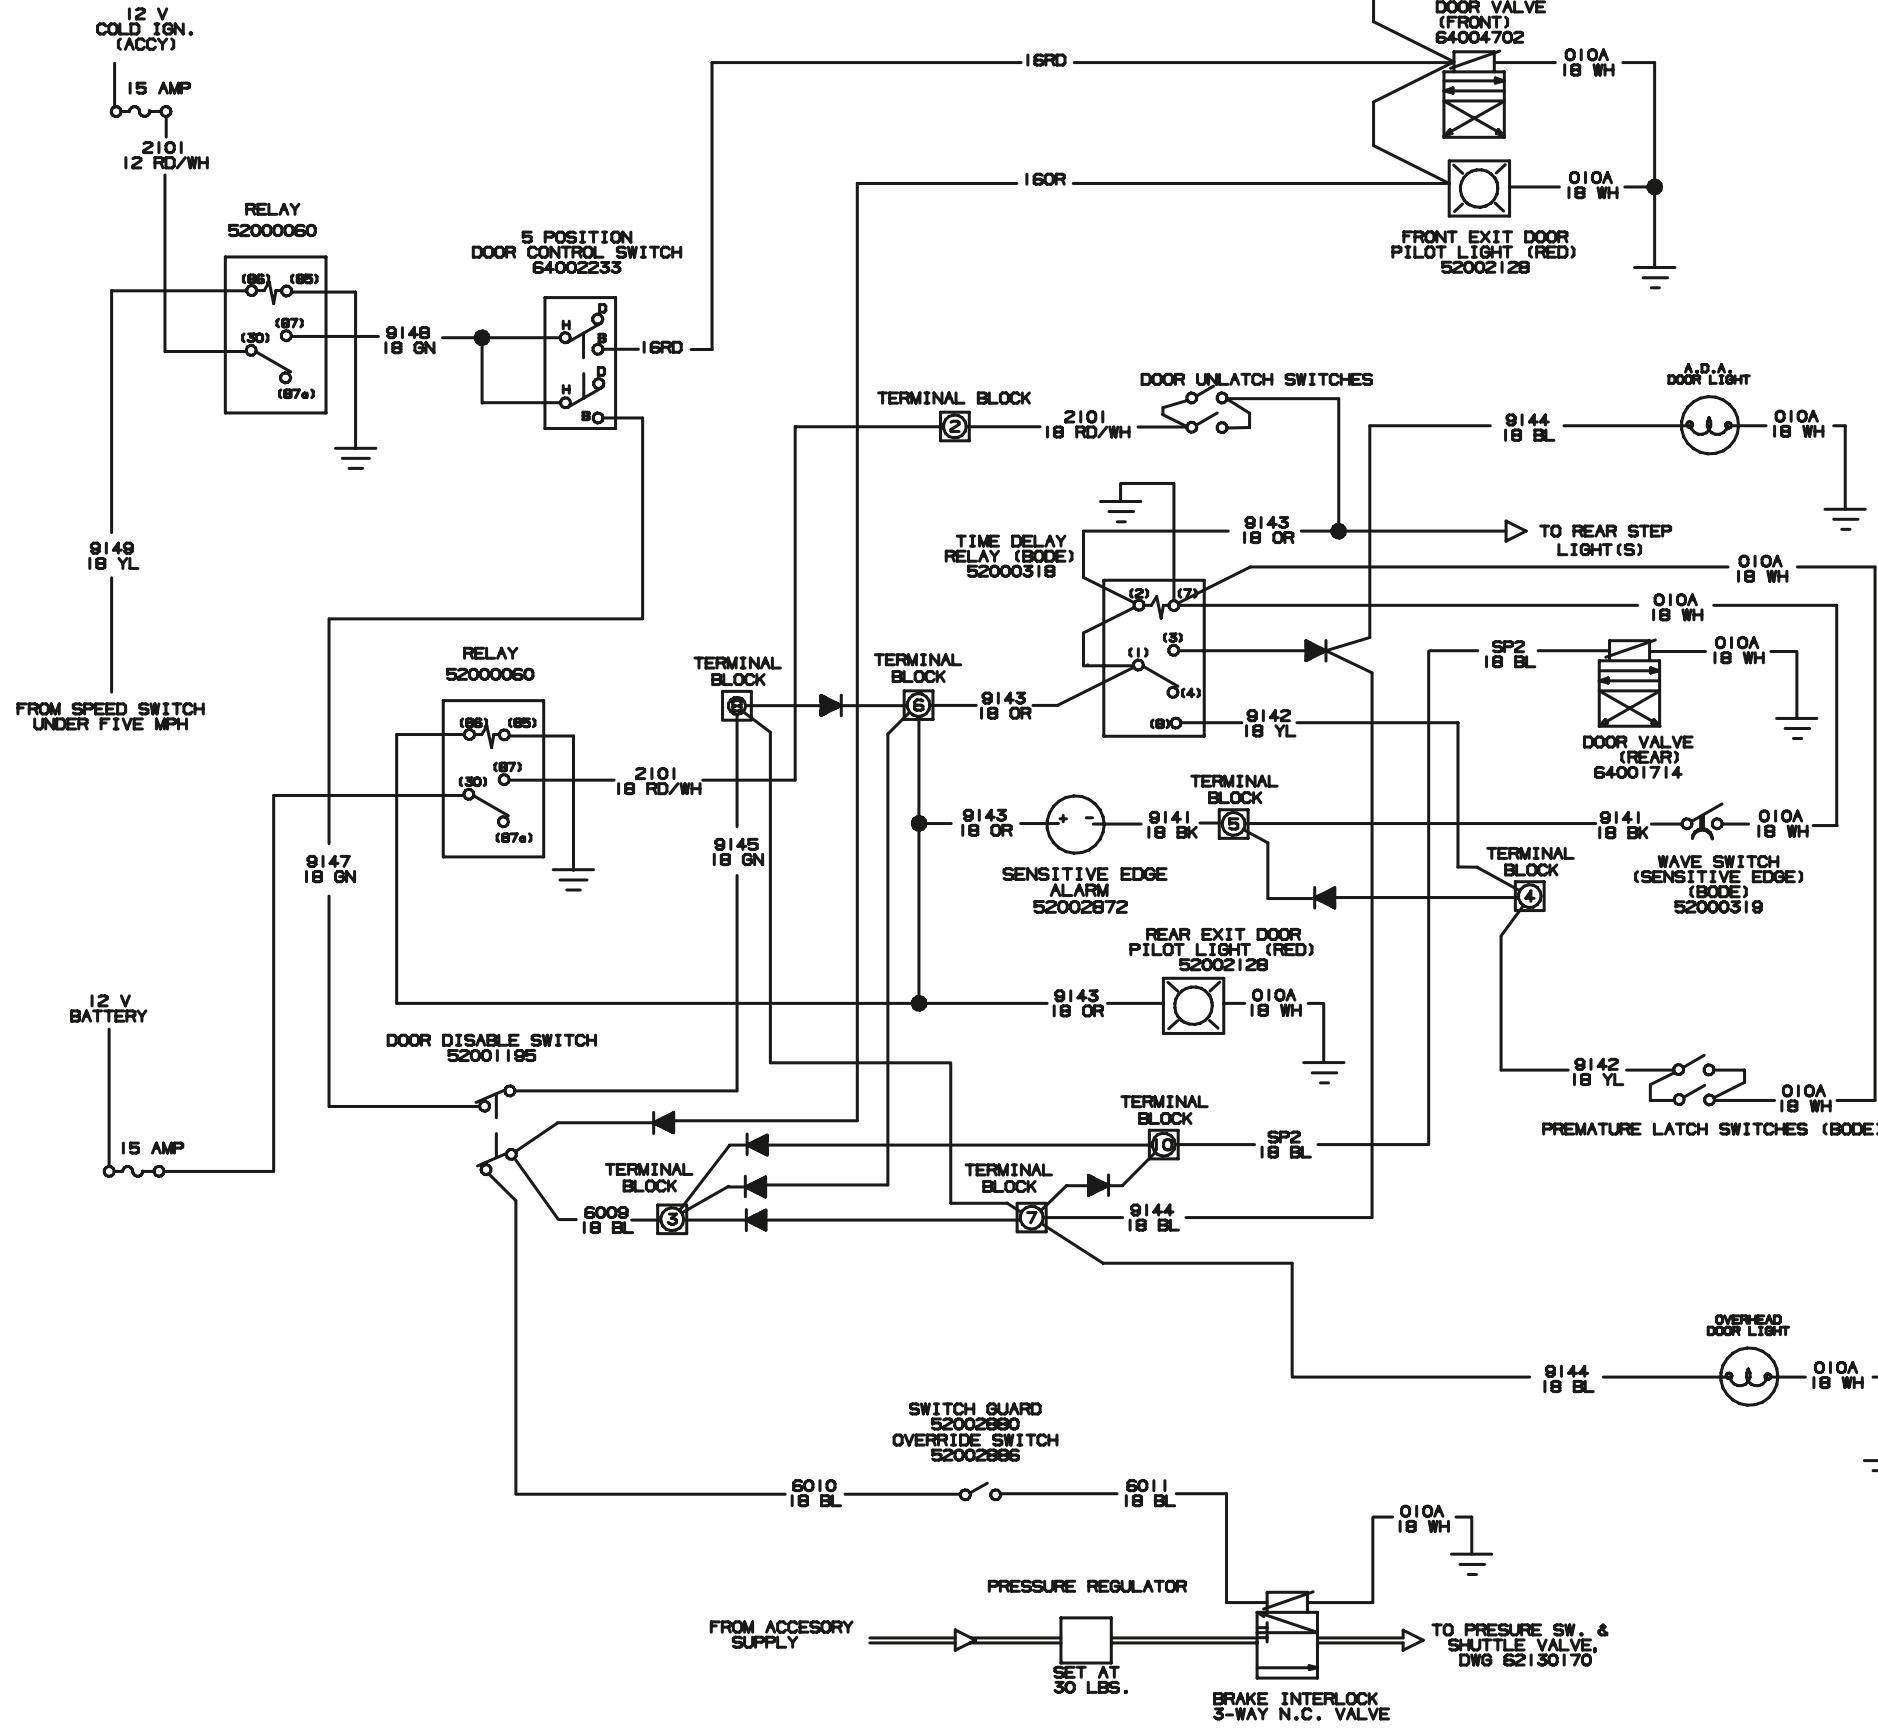


5 POSITION DOOR CONTROL		
	FRONT	REAR
OFF CENTER POS.		
REAR DOOR ONLY (1ST RIGHT POS.)		
BOTH FRONT & REAR DOOR (2ND RIGHT POS.)		
FRONT DOOR ONLY (1ST LEFT POS.)		
BOTH FRONT & REAR DOOR (2ND LEFT POS.)		


(5) POSITION
DOOR CONTROL
B5016-13-000




52002893 C

REAR DOOR w/FRONT
DOOR, 5 POSITION DOOR
CONTROL, w/BRAKE
INTERLOCK (BODE)

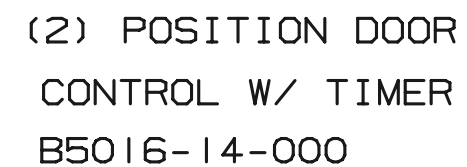

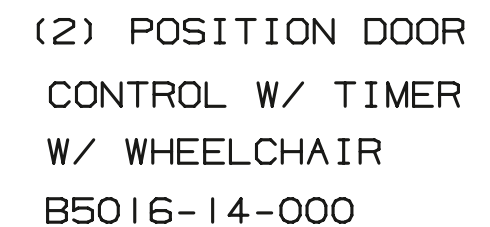

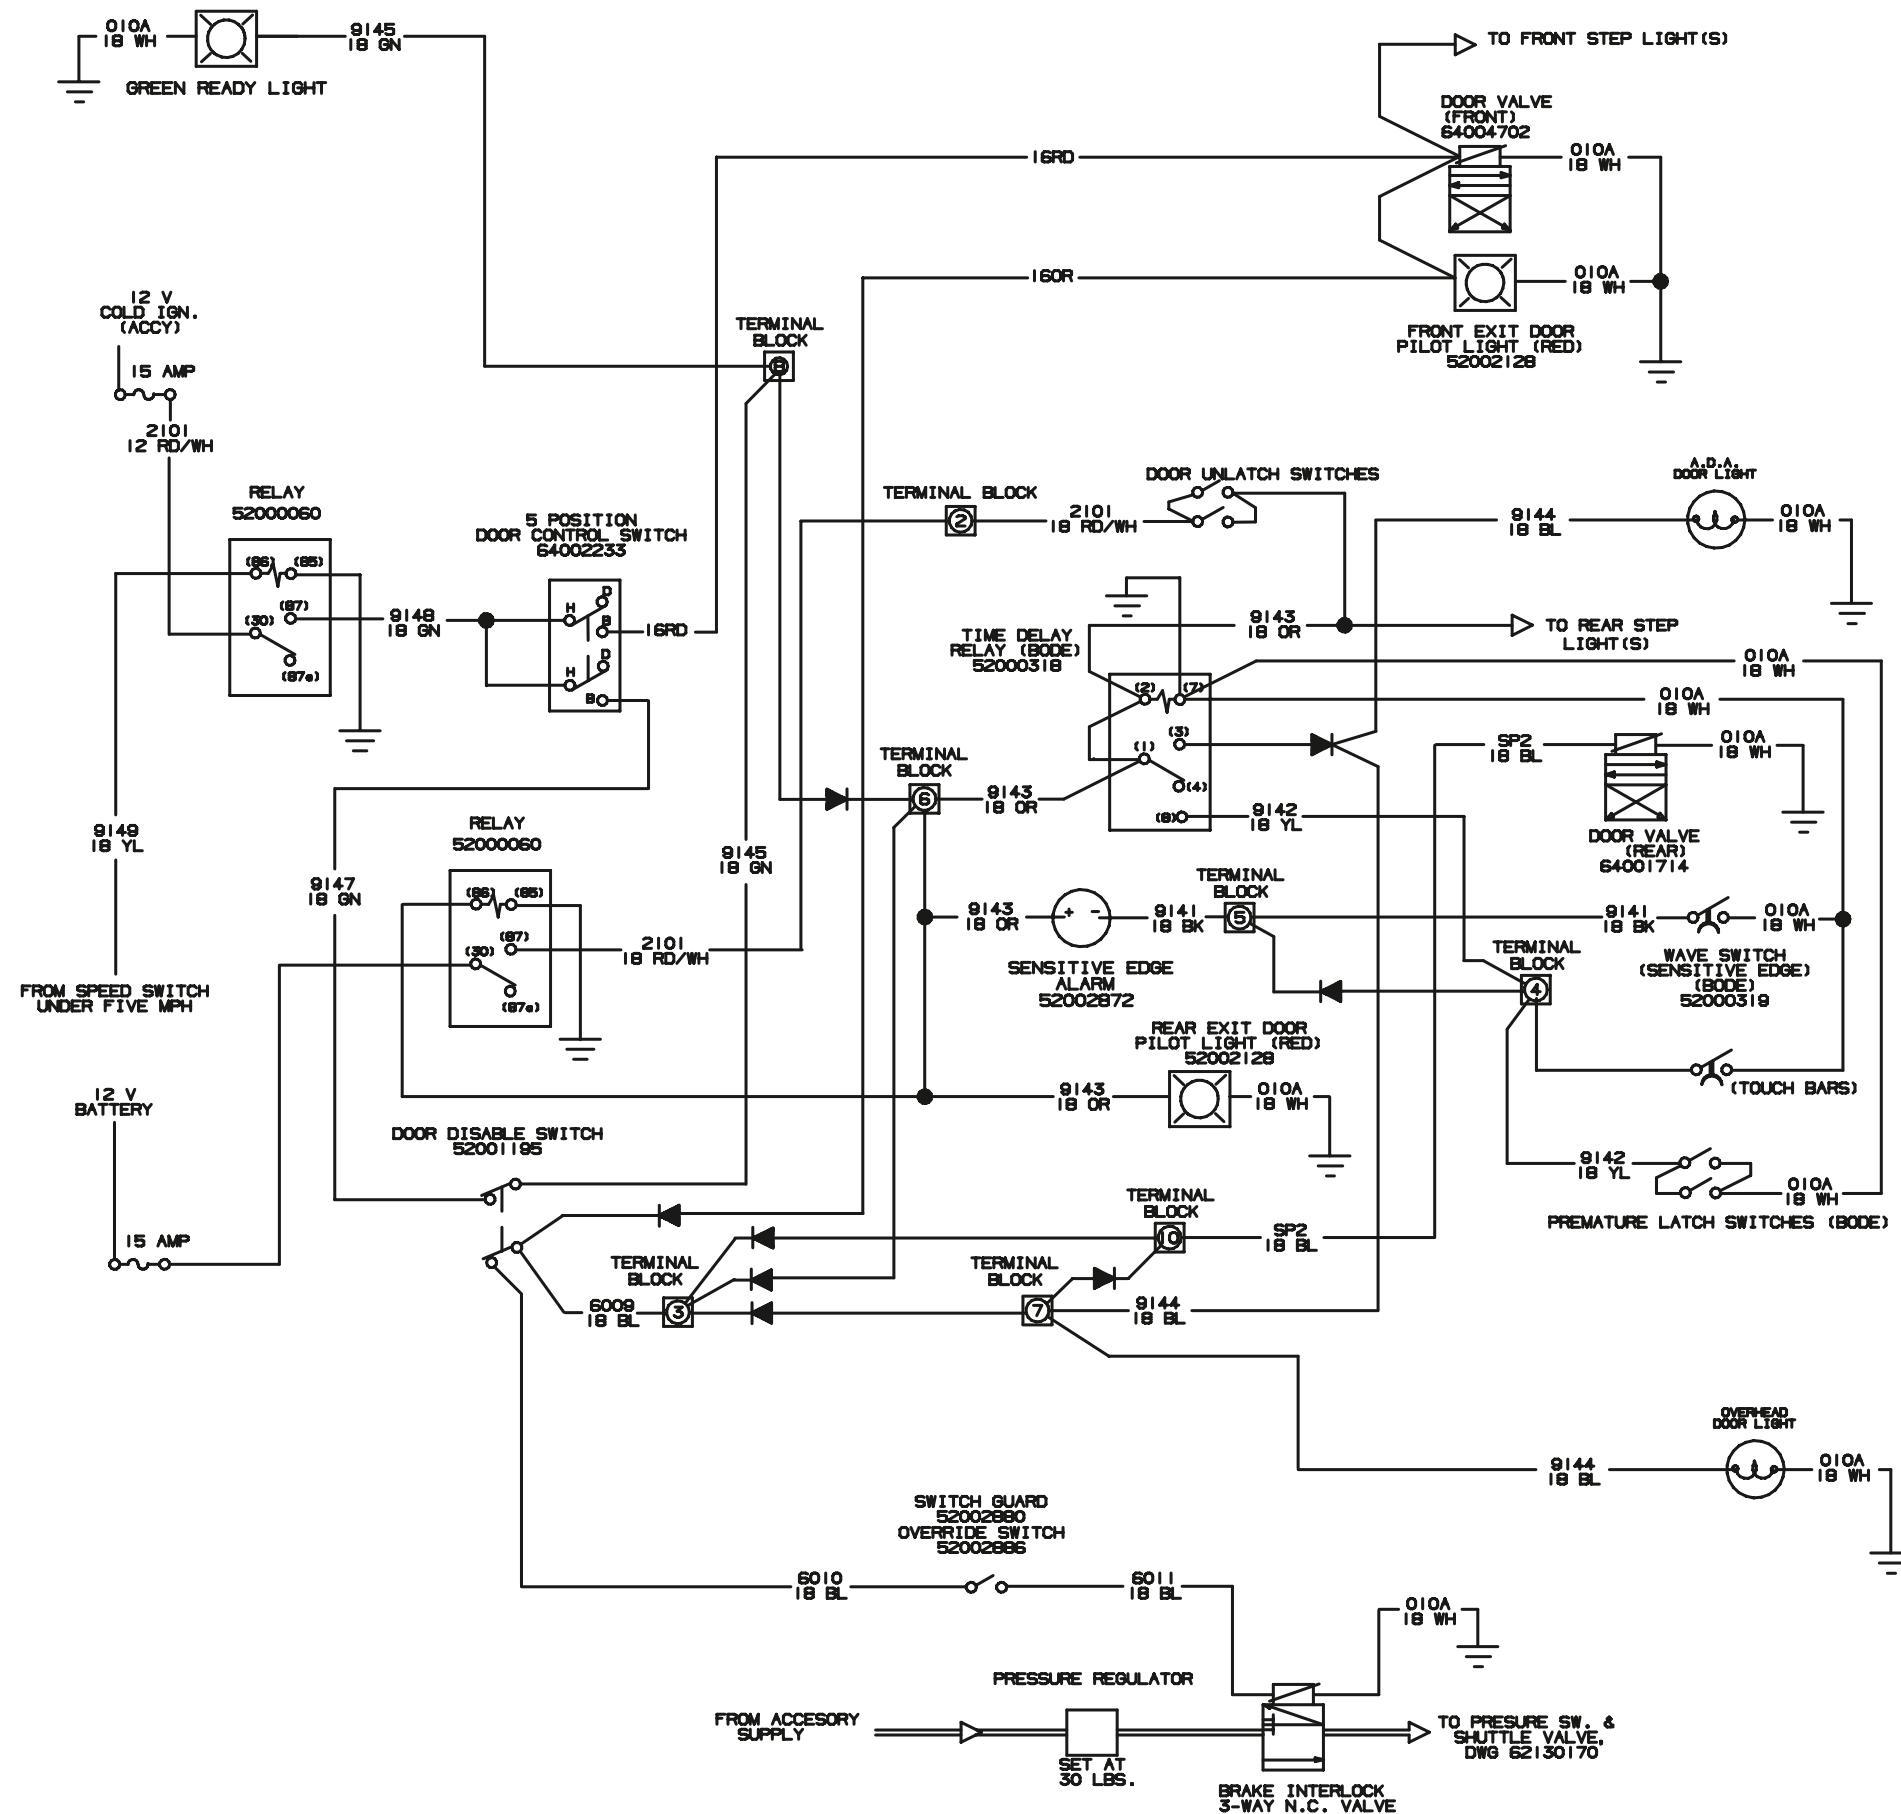


5 POSITION DOOR CONTROL		
	FRONT	REAR
OFF CENTER POS.		
REAR DOOR ONLY (1ST RIGHT POS.)		
BOTH FRONT & REAR DOOR (2ND RST POS.)		
FRONT DOOR ONLY (1ST LFT POS.)		
BOTH FRONT & REAR DOOR (2ND LFT POS.)		

(5) POSITION DOOR
CONTROL W/ TIMER
B5016-15-000

52002895 C

REAR DOOR w/Front
DOOR, 5 POSITION DOOR
CONTROL, w/BRAKE
INTERLOCK (BODE)

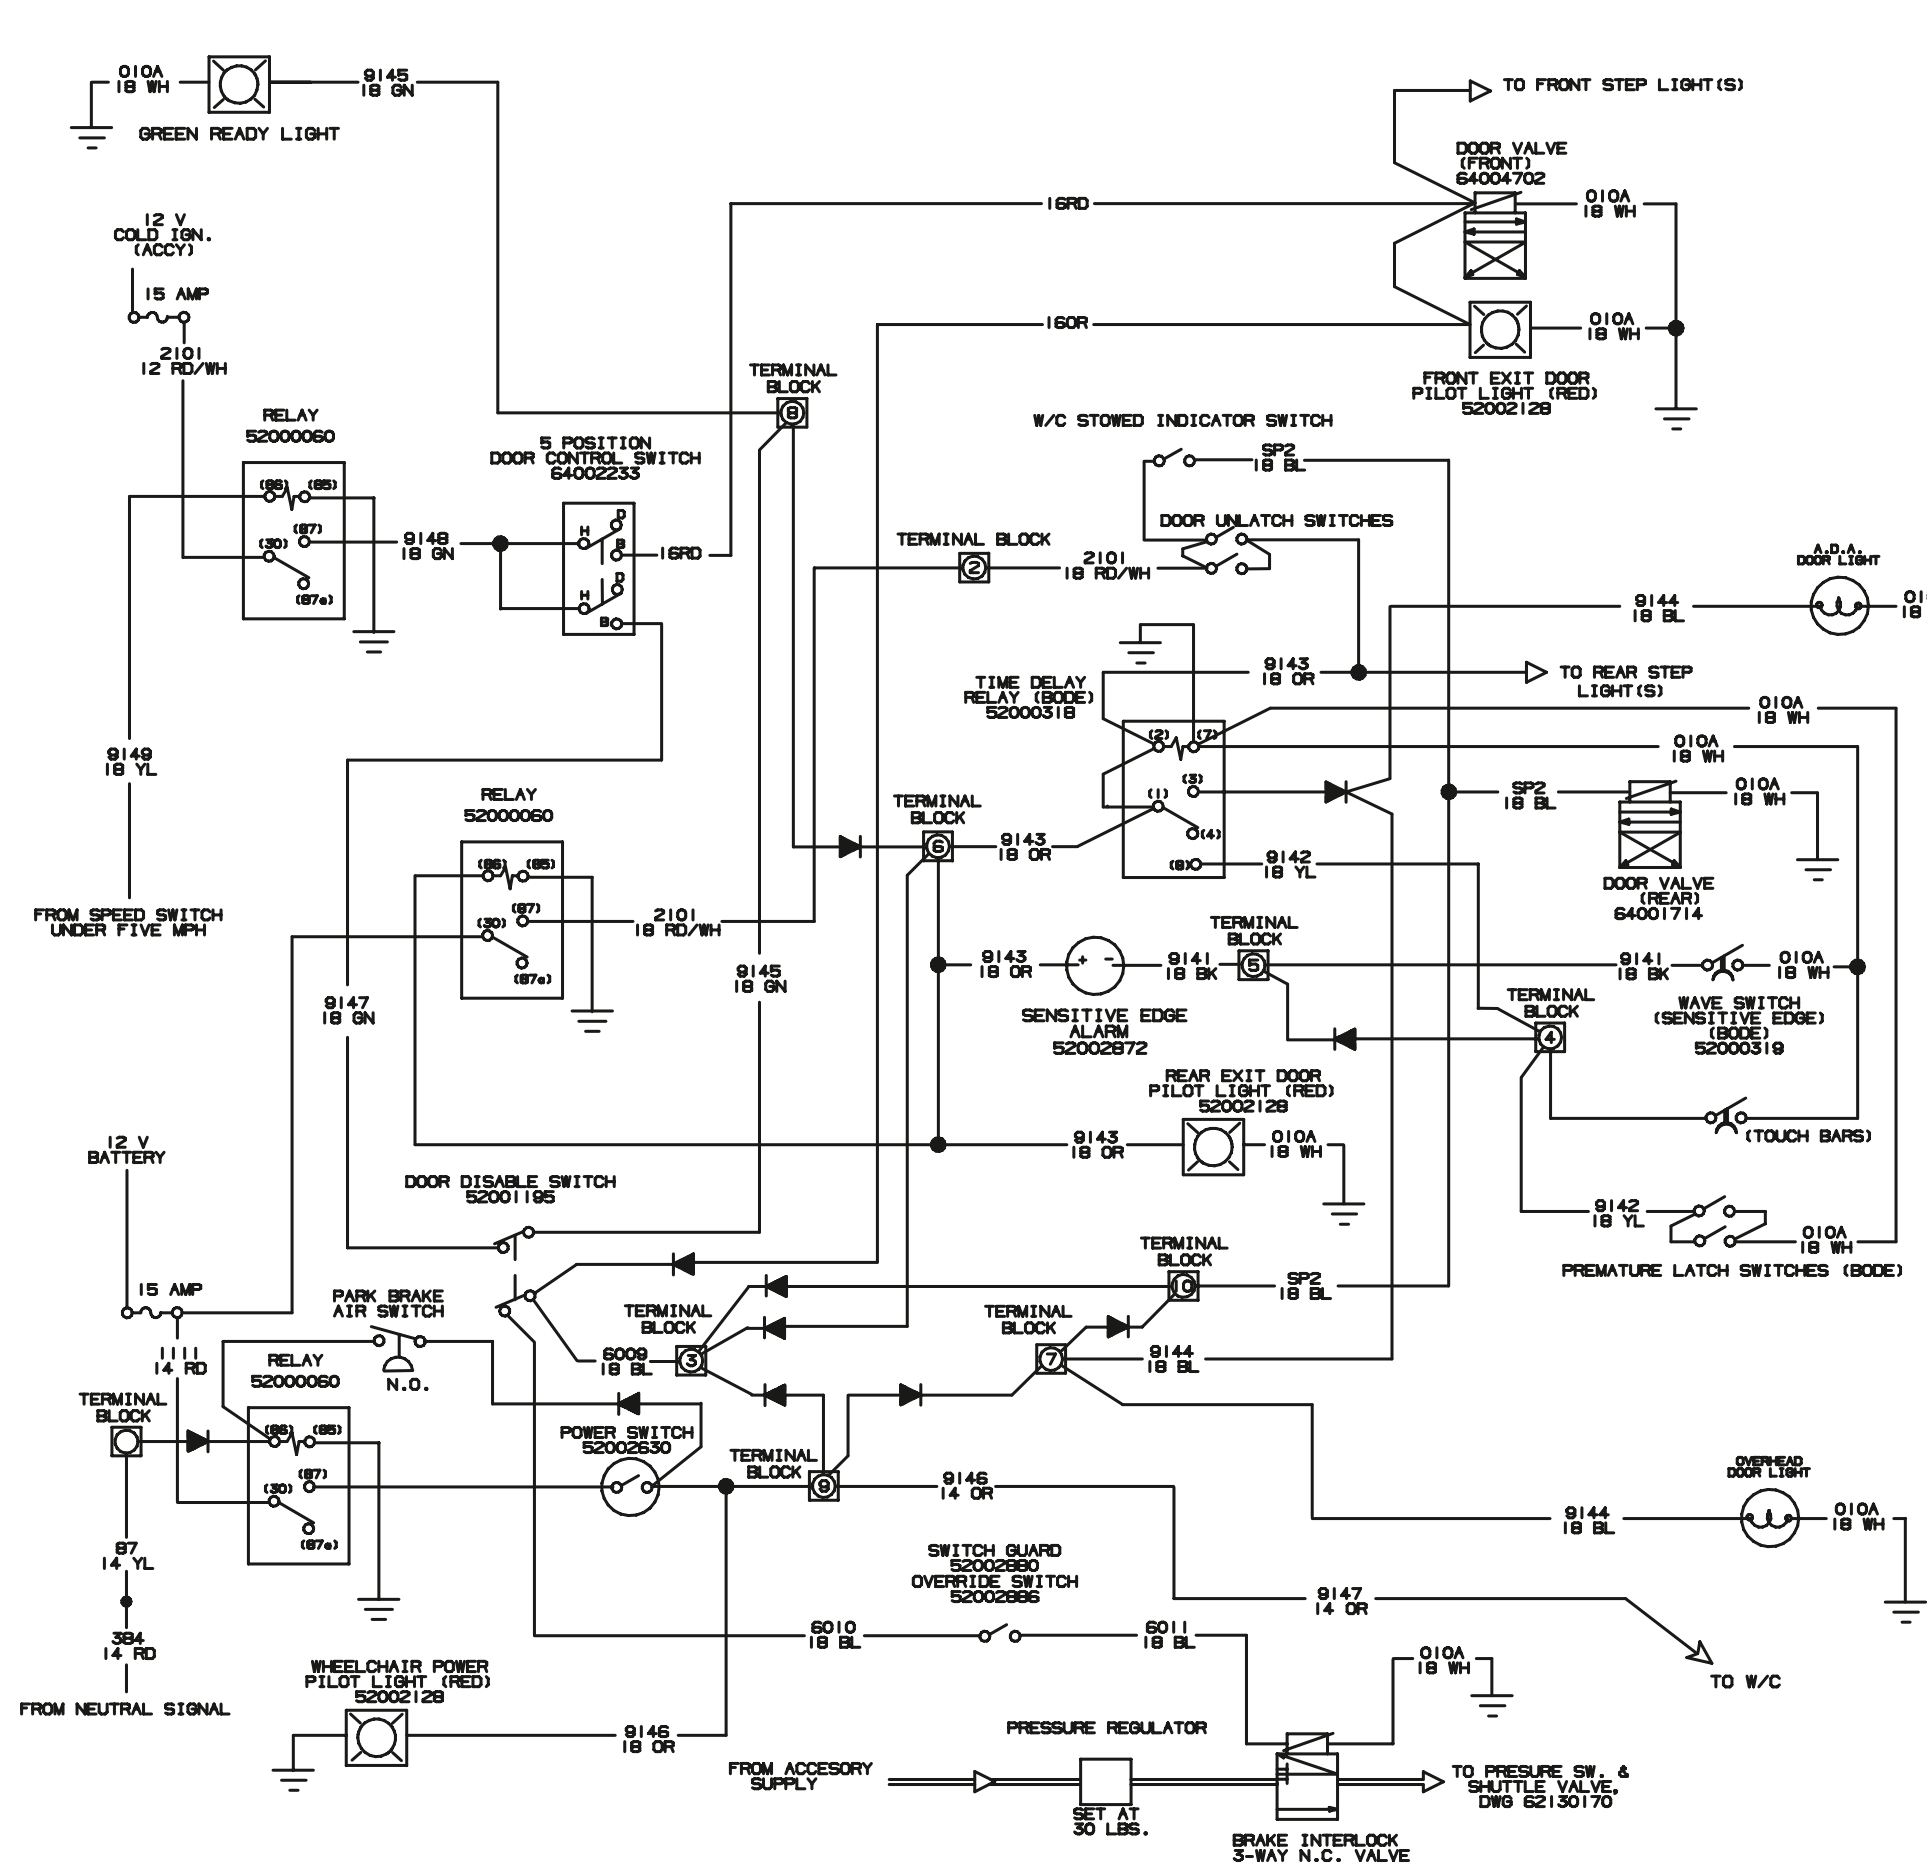



5 POSITION DOOR CONTROL		
	FRONT	REAR
OFF CENTER POS.		
REAR DOOR ONLY (1ST REAR POS.)		
BOTH FRONT & REAR DOOR (2ND REAR POS.)		
FRONT DOOR ONLY (1ST LFT POS.)		
BOTH FRONT & REAR DOOR (2ND LFT POS.)		

(5) POSITION DOOR
CONTROL W/ TIMER
WITH WHEELCHAIR
B5016-15-000

52002992 B


WHEELCHAIR EXIT
w/TOUCH BAR AND TIME
DELAY, AND BRAKE
INTERLOCK (BODE)

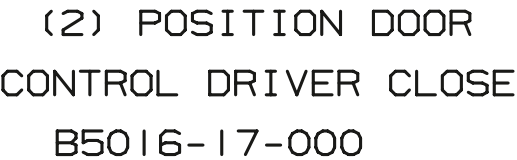

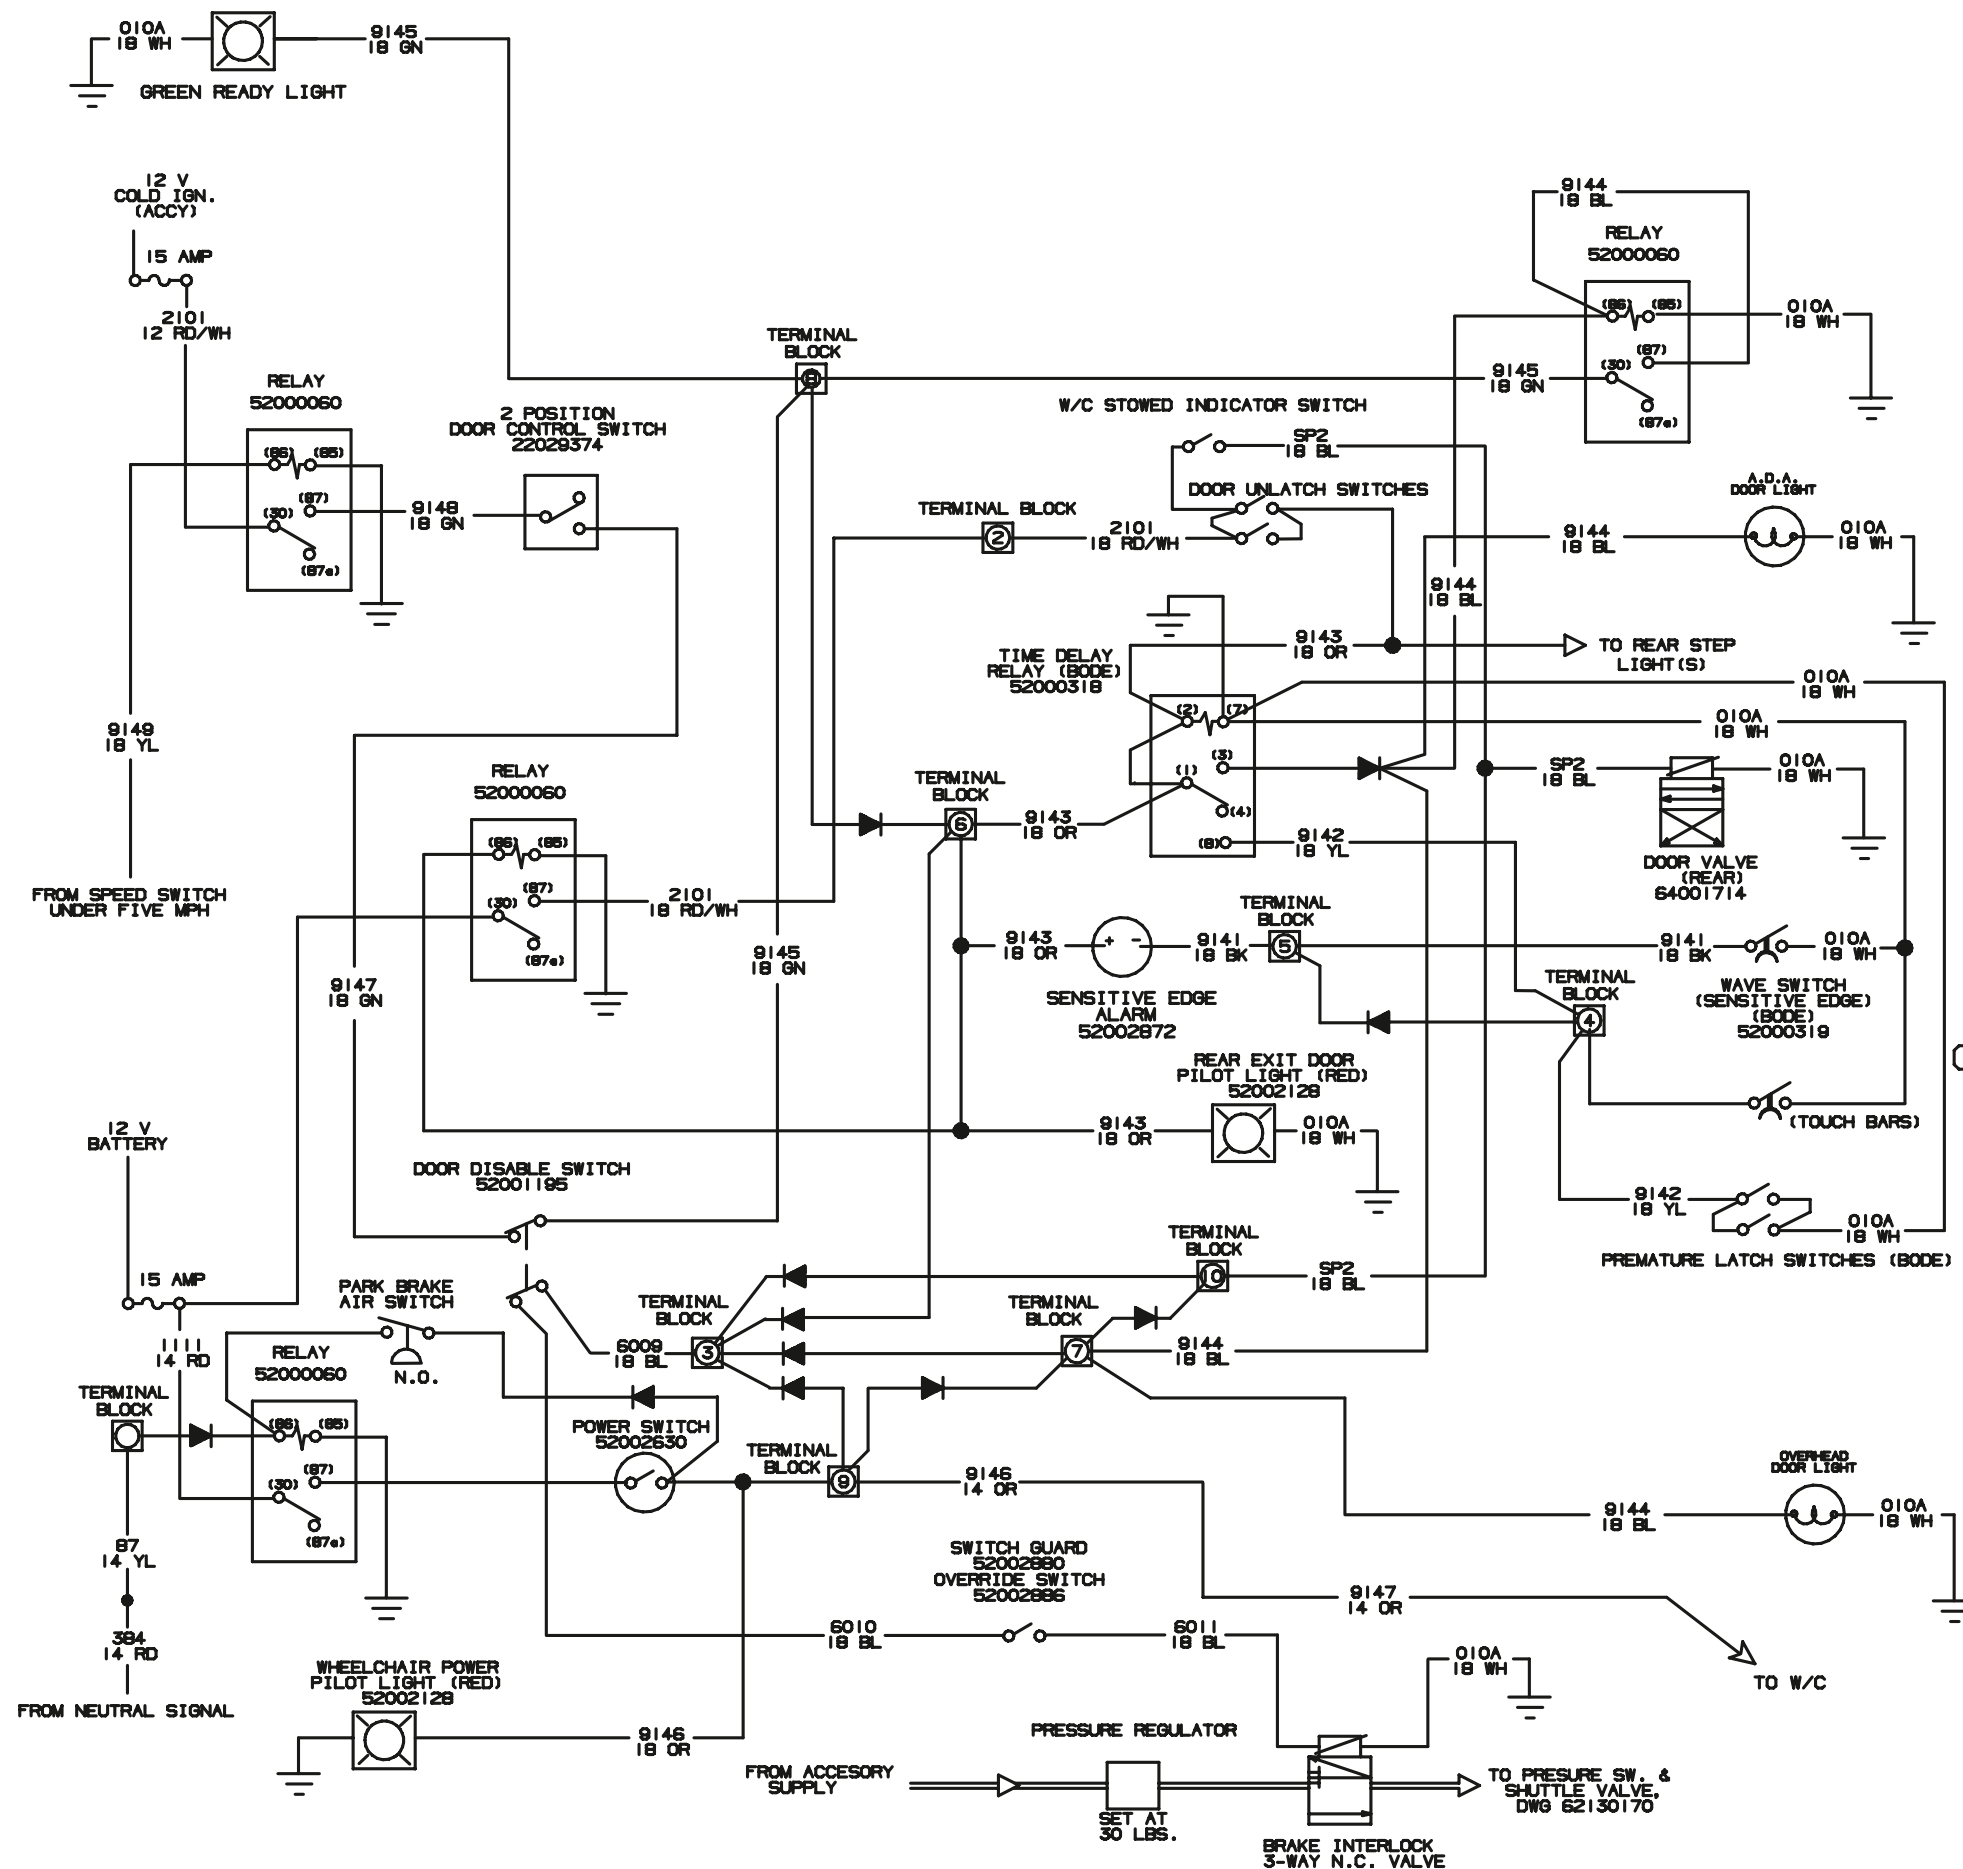

(2) POSITION DOOR
CONTROL DRIVER CLOSE
W/ WHEELCHAIR
B5016-17-000

	52003010 B
WHEELCHAIR REAR EXIT, 2 POSITION DOOR CONTROL, w/BRAKE INTER- LOCK (BODE)	

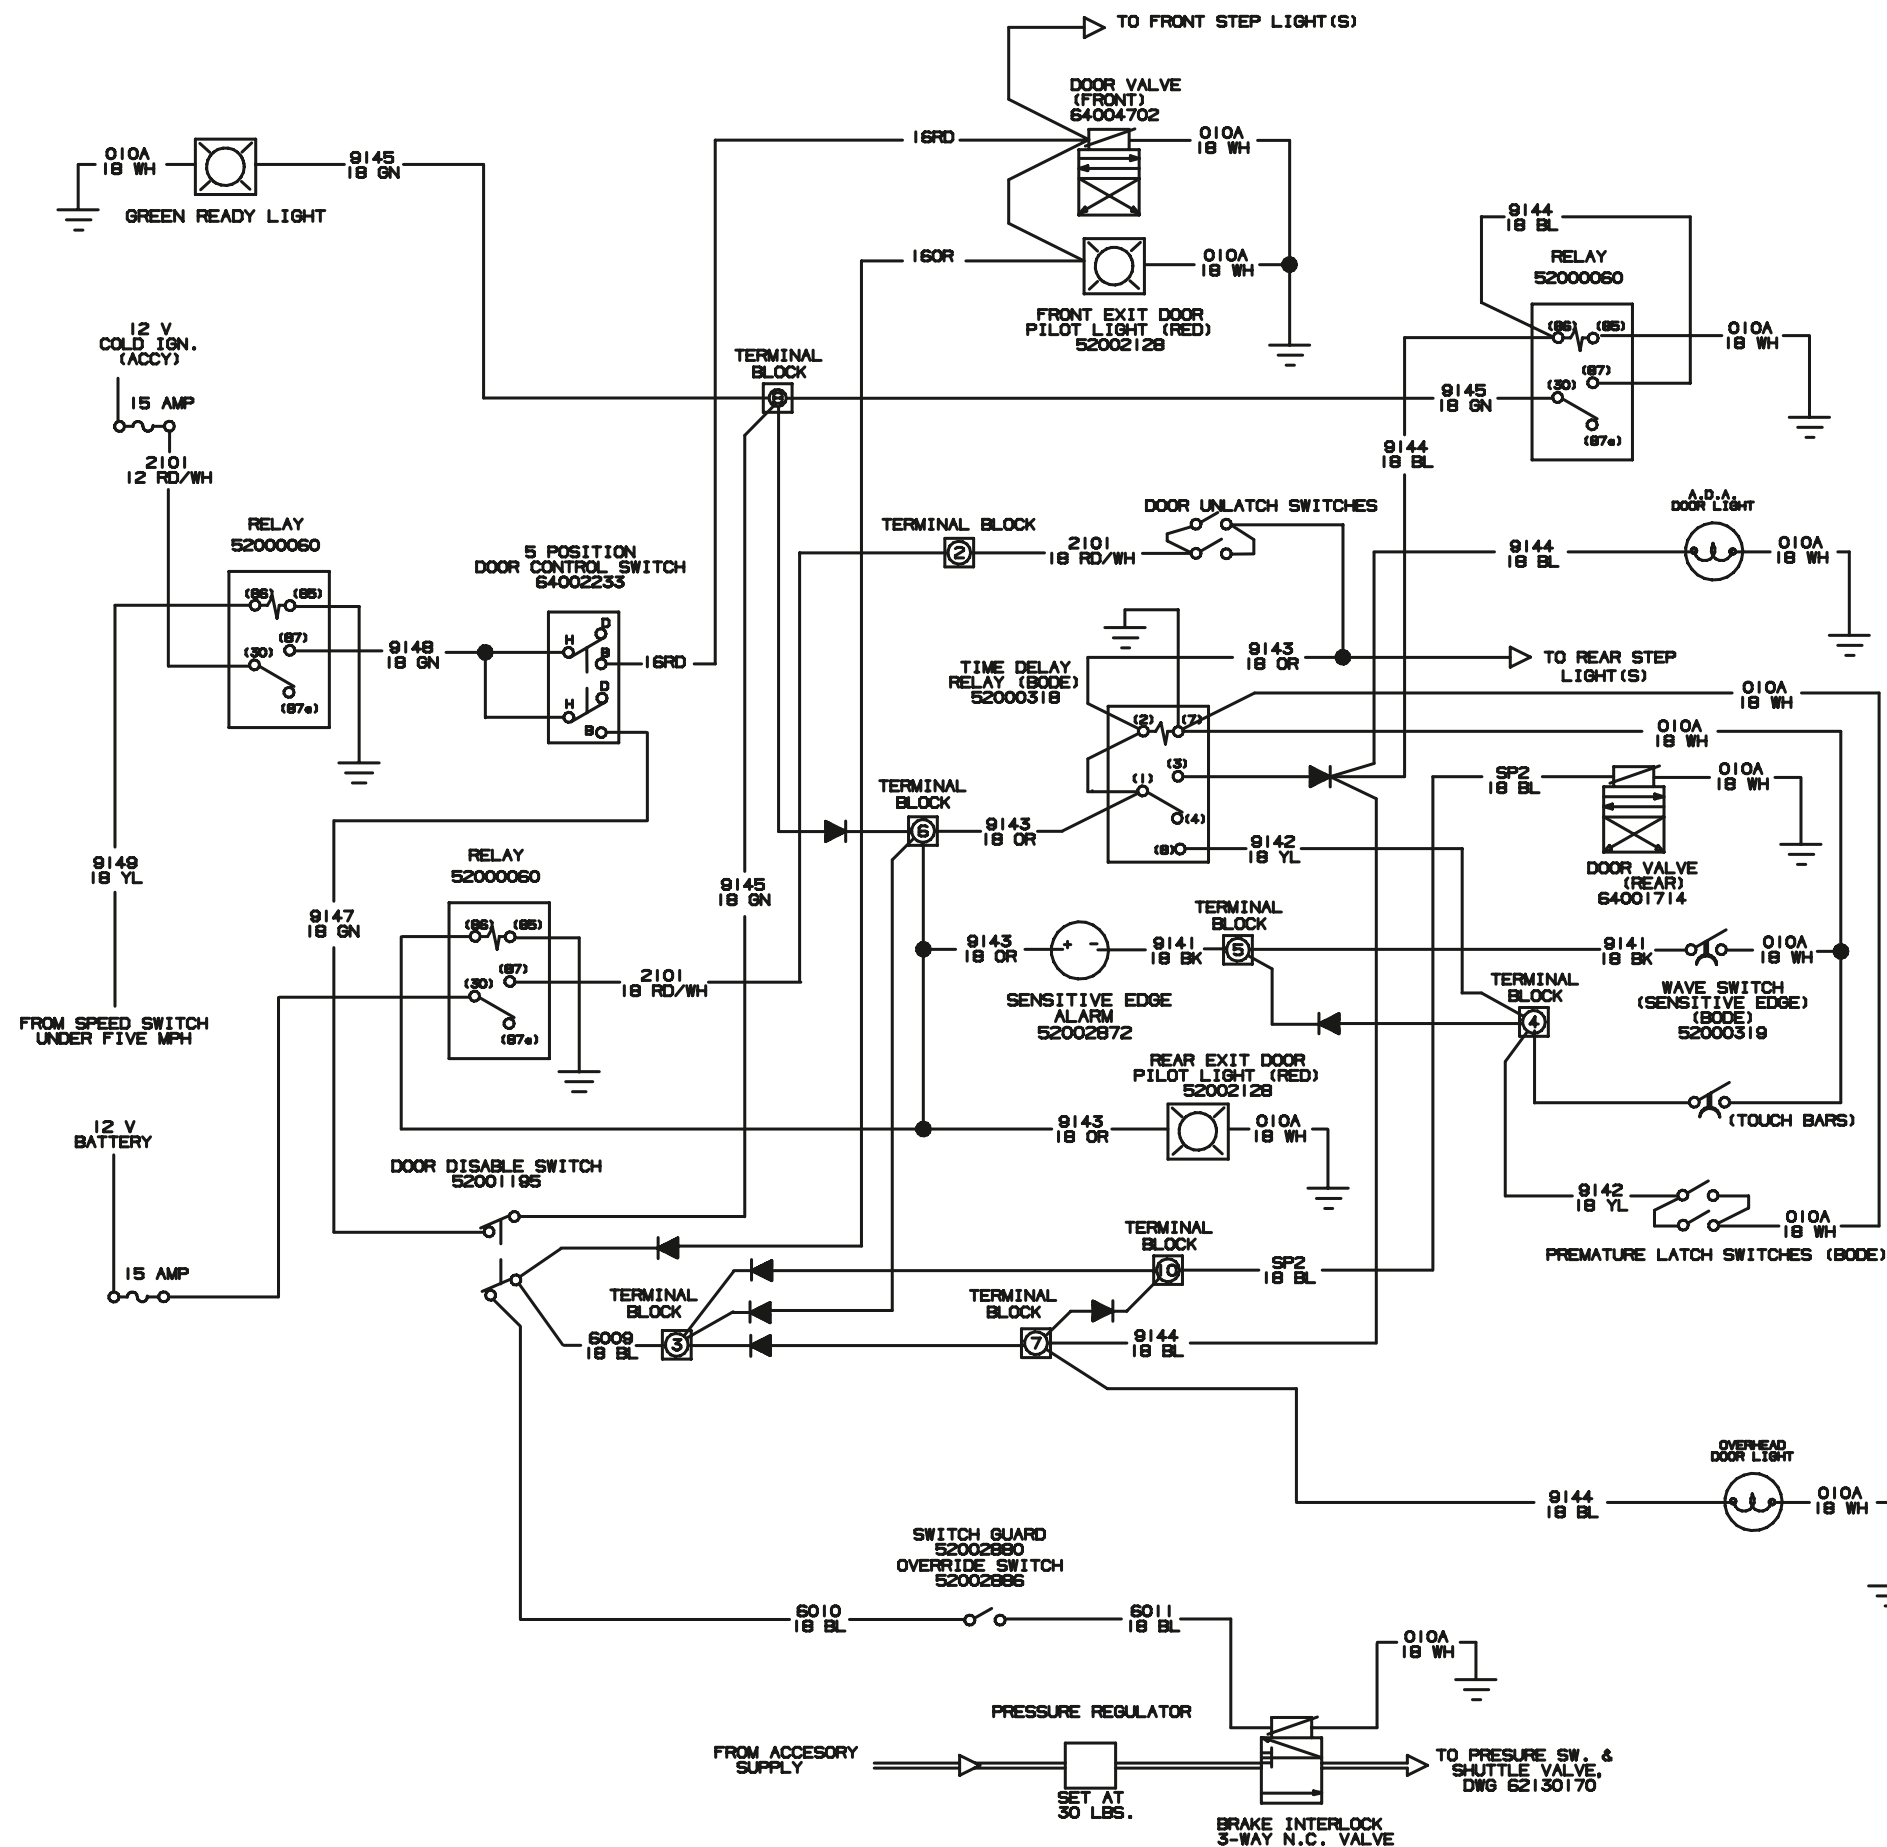


5 POSITION DOOR CONTROL		
	FRONT	REAR
OFF CENTER POS.		
REAR DOOR ONLY (1ST REAR POS.)		
BOTH FRONT & REAR DOOR (2ND REAR POS.)		
FRONT DOOR ONLY (1ST LFT POS.)		
BOTH FRONT & REAR DOOR (2ND LFT POS.)		

(5) POSITION DOOR
CONTROL DRIVER CLOSE
B5016-18-000

52002897 C

REAR DOOR w/Front
DOOR, 5 POSITION DOOR
CONTROL, w/BRAKE
INTERLOCK (BODE)

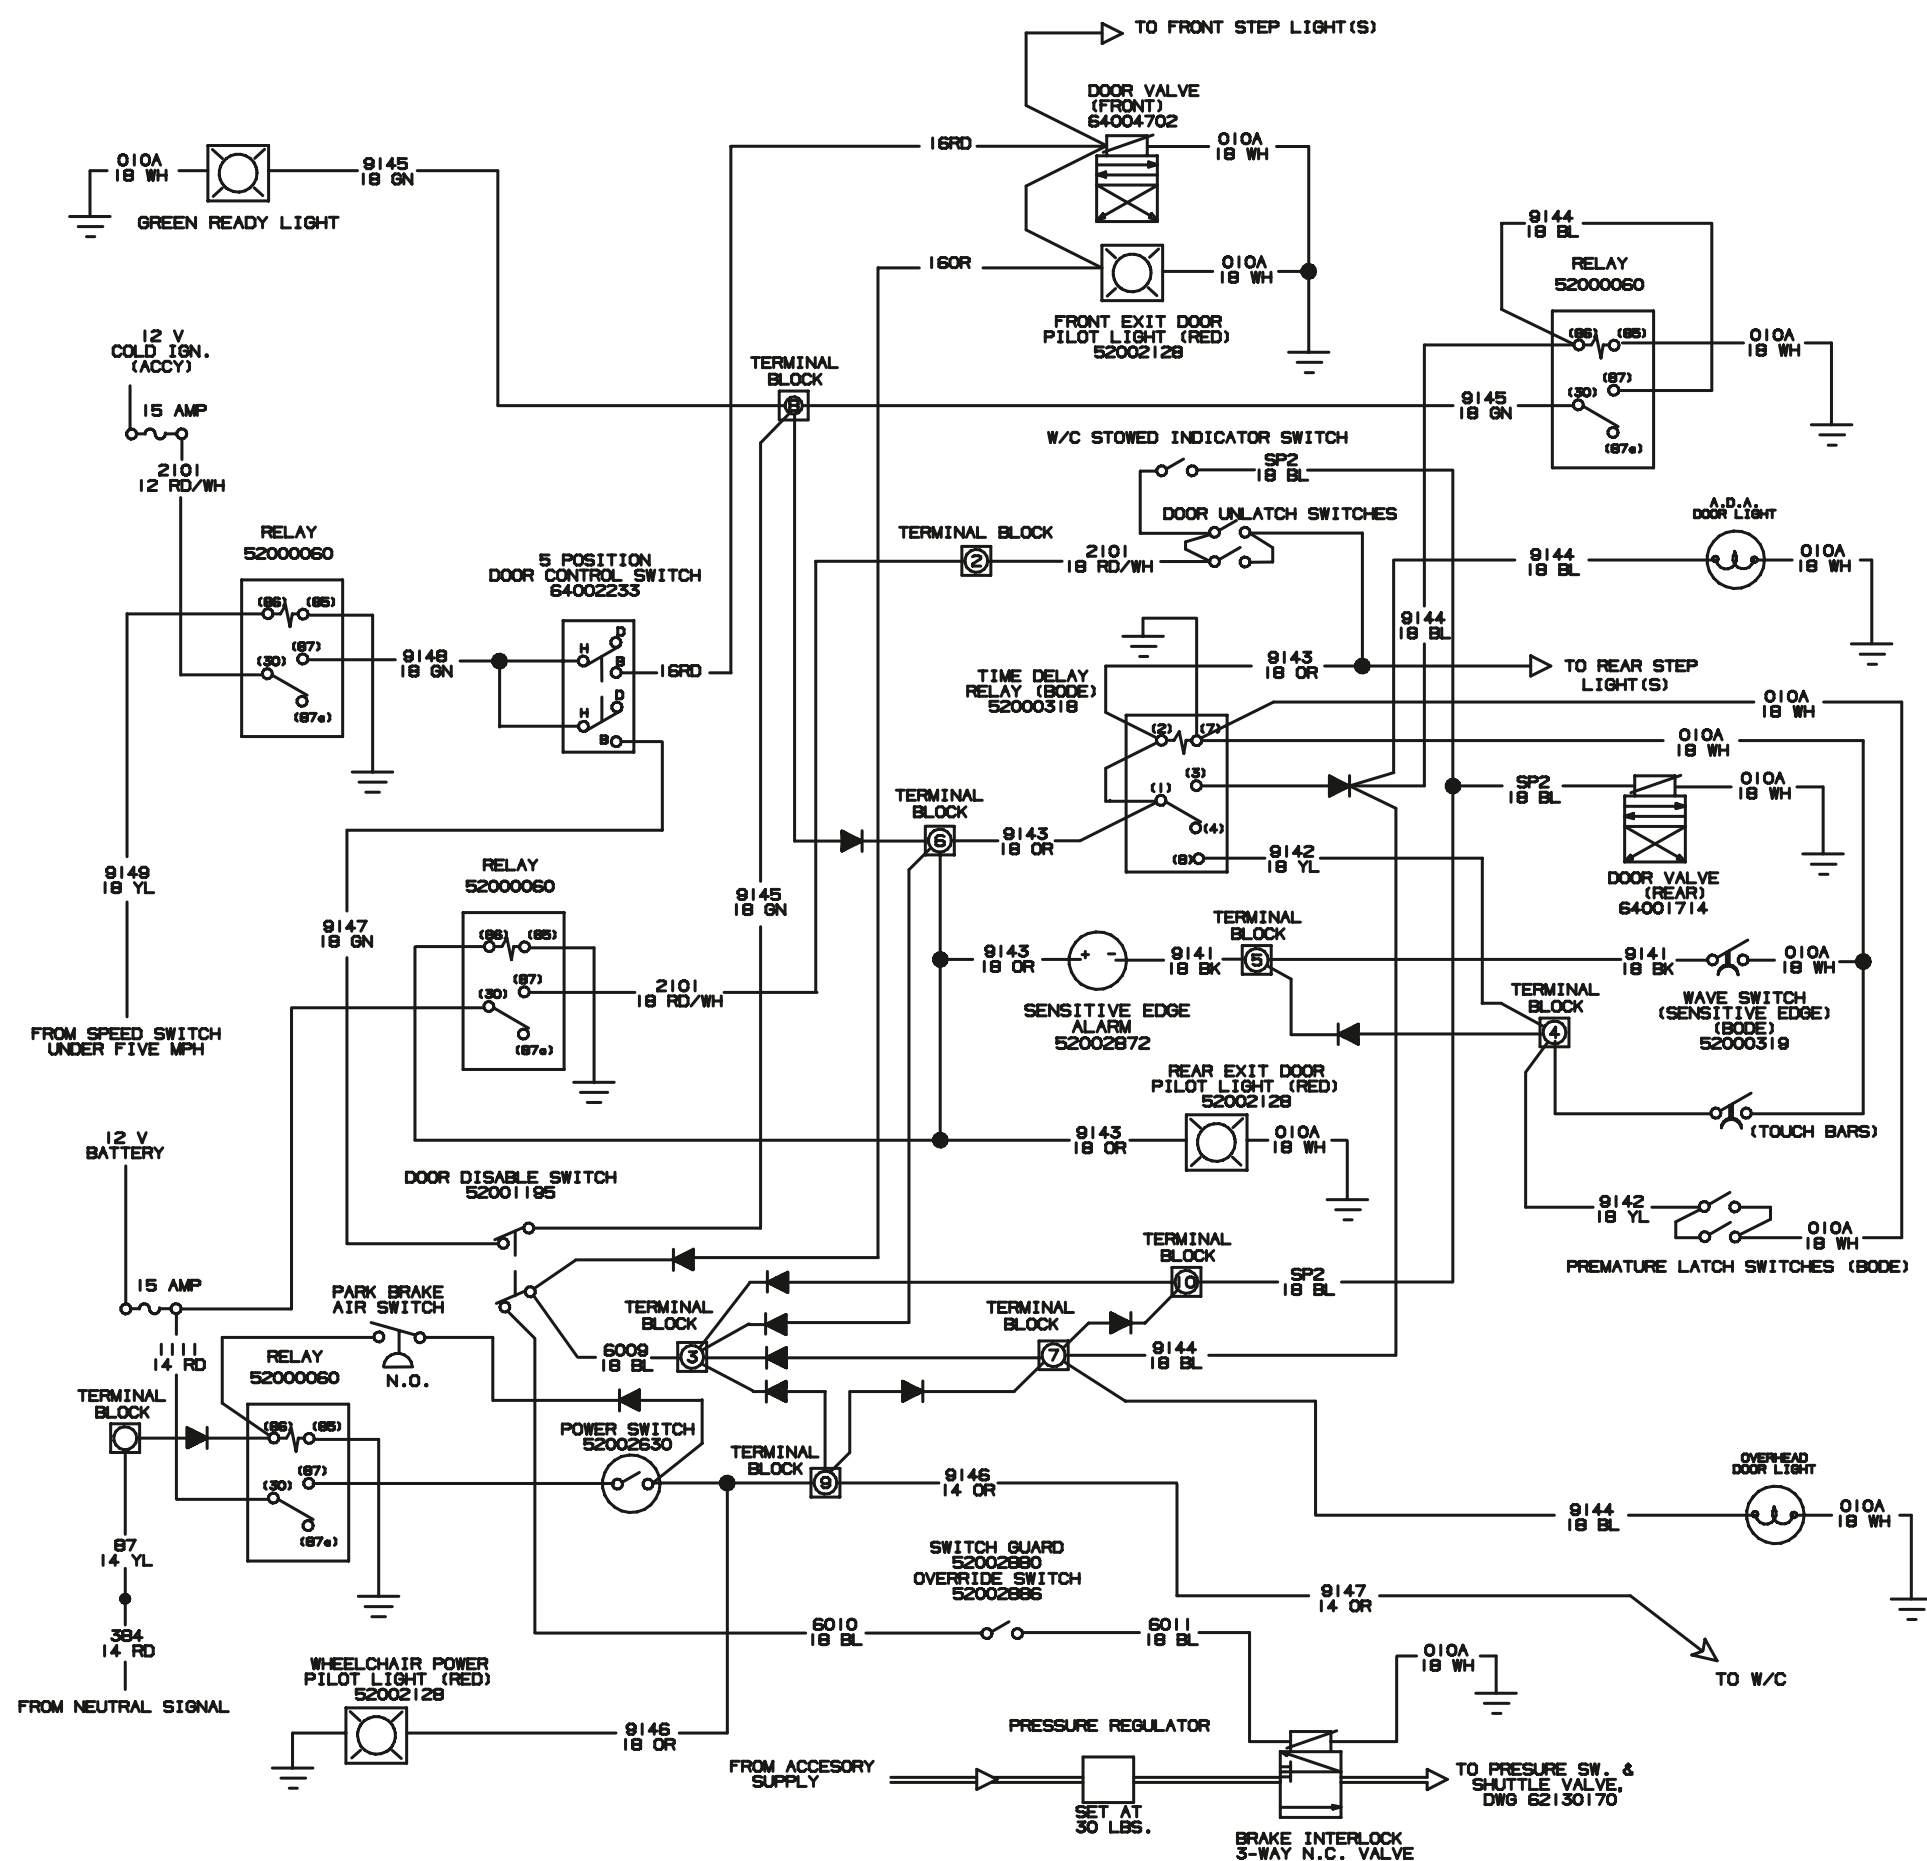


5 POSITION DOOR CONTROL		
	FRONT	REAR
OFF CENTER POS.		
REAR DOOR ONLY (1ST RIGHT POS.)		
BOTH FRONT & REAR DOOR (2ND RIGHT POS.)		
FRONT DOOR ONLY (1ST LEFT POS.)		
BOTH FRONT & REAR DOOR (2ND LEFT POS.)		

(5) POSITION DOOR
CONTROL DRIVER CLOSE
W/ WHEELCHAIR
B5016-18-000




52003007 B


WHEELCHAIR EXIT
w/TOUCH BAR, DRIVER
CLOSE, w/BRAKE INTER-
LOCK (BODE)

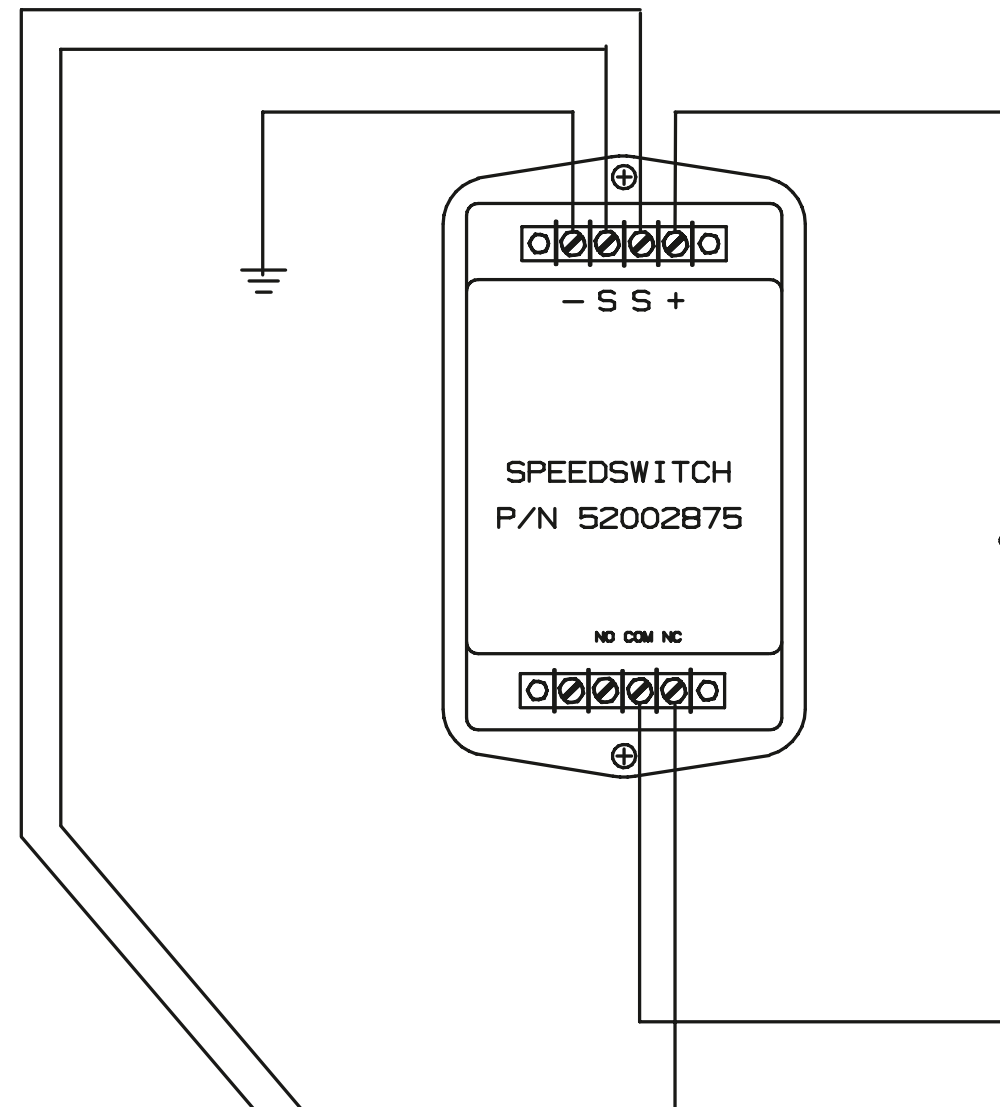

SPEEDOMETER
CABLE

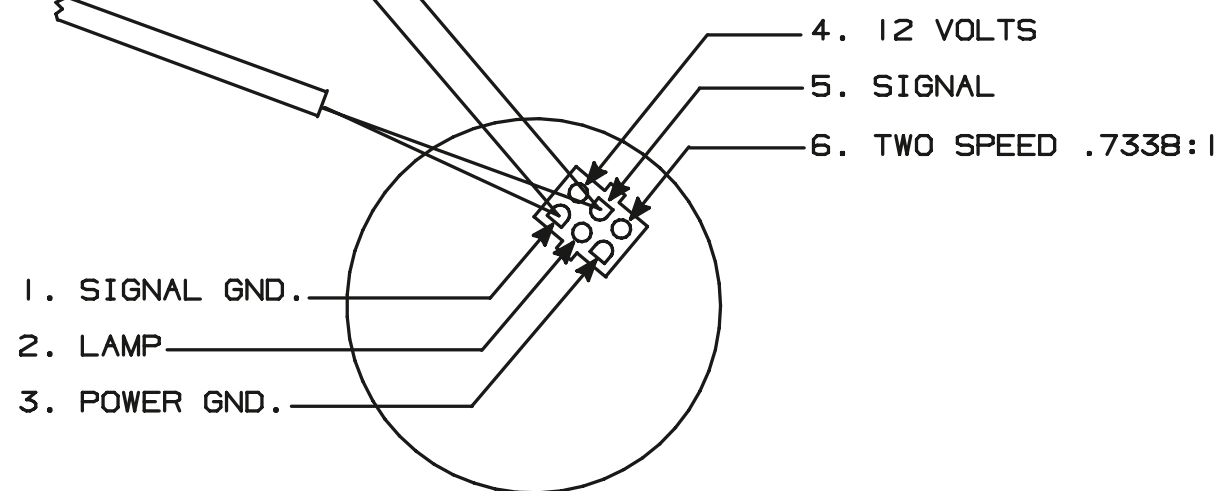


SPEEDOMETER

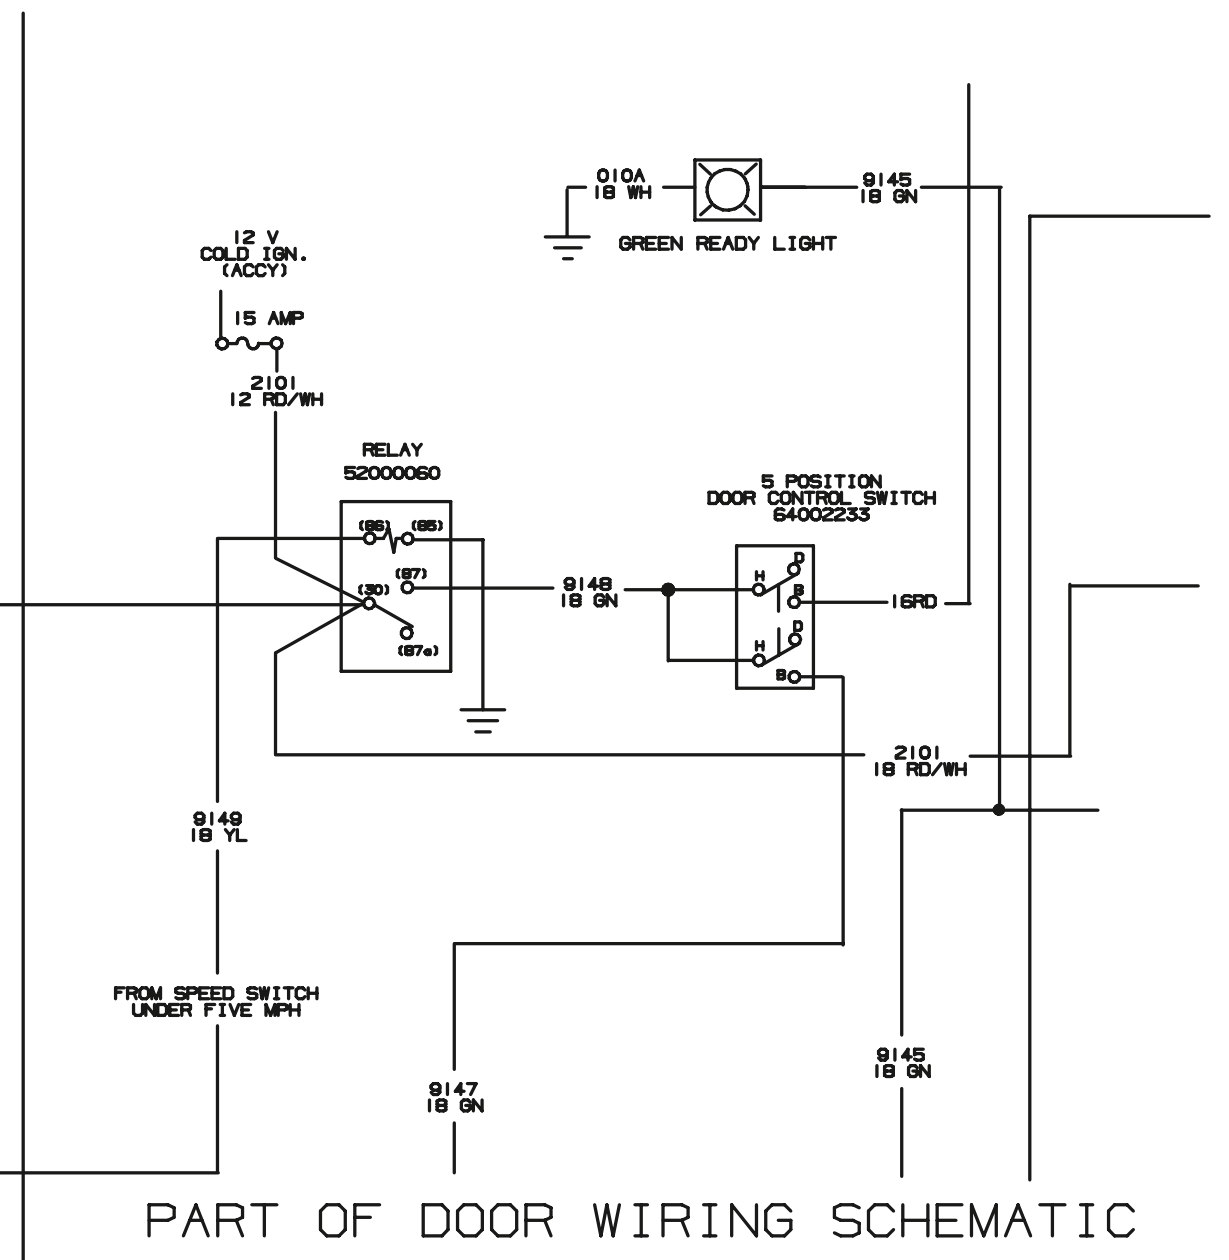

	52002876 A
SPEEDSWITCH	

NOTES:

**MVP-ER
VANDALOCK
SCHEMATICS**

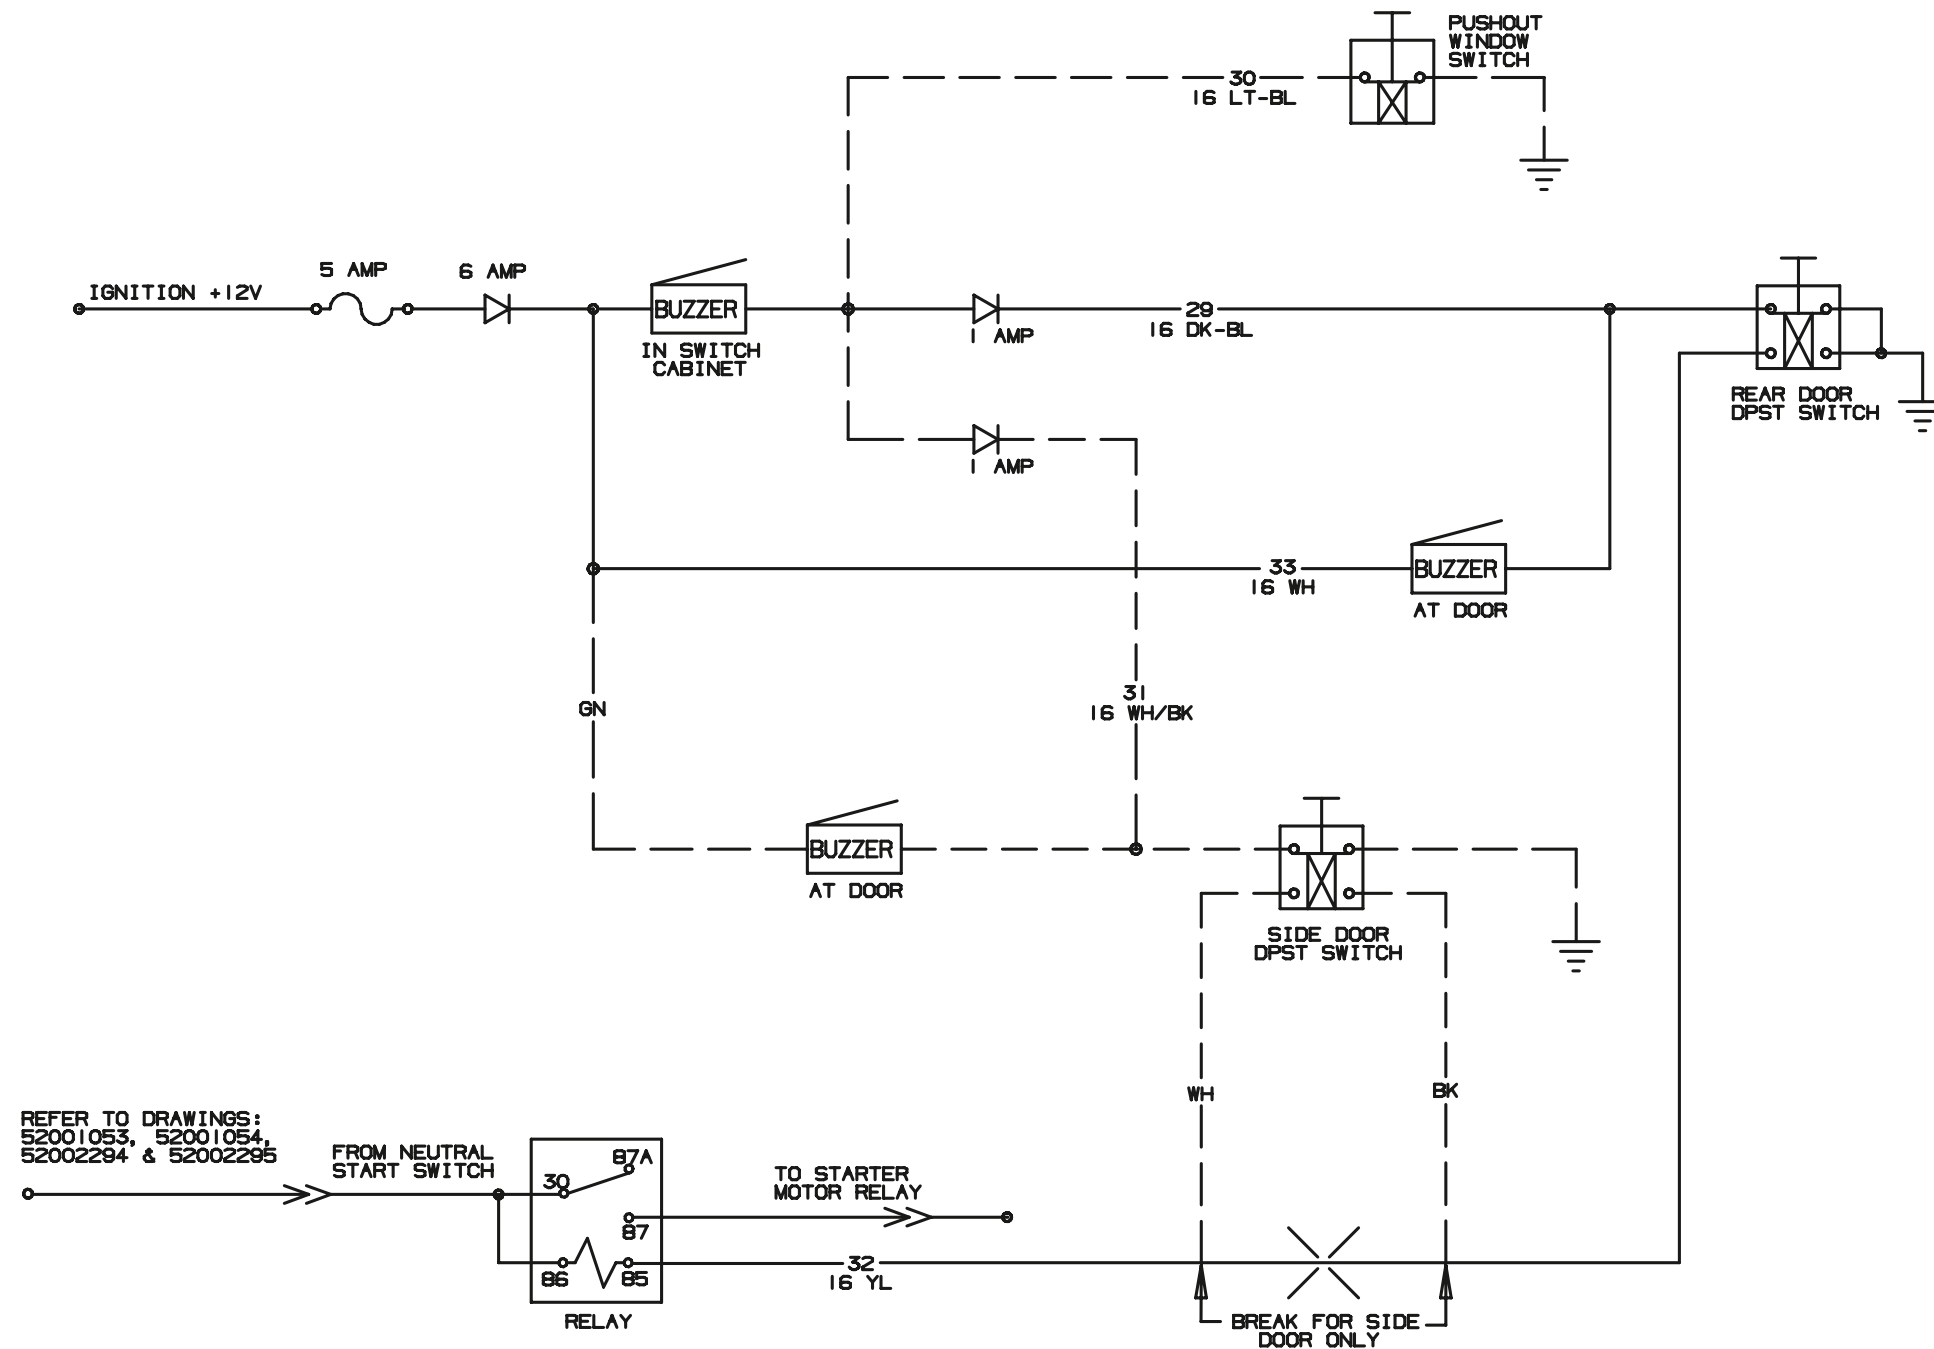

NOTE :

DASHED LINES DENOTE OPTIONAL EQUIPMENT.


DECAL PART NUMBER: 52002537


OVERALL DECAL SIZE: 5" x 7.5"

ON EF AND ER MODELS, CONNECT HARNESS 52001882 TO CONNECTOR ON 4B WIRE IN SIDE PANEL. MOUNT RELAY ON BODY ELECTRICAL PANEL.


	52002064 D
WIRING SCHEMATIC (VANDALOCK)	

**MVP-ER
RADIO & SPEAKERS
SCHEMATICS**

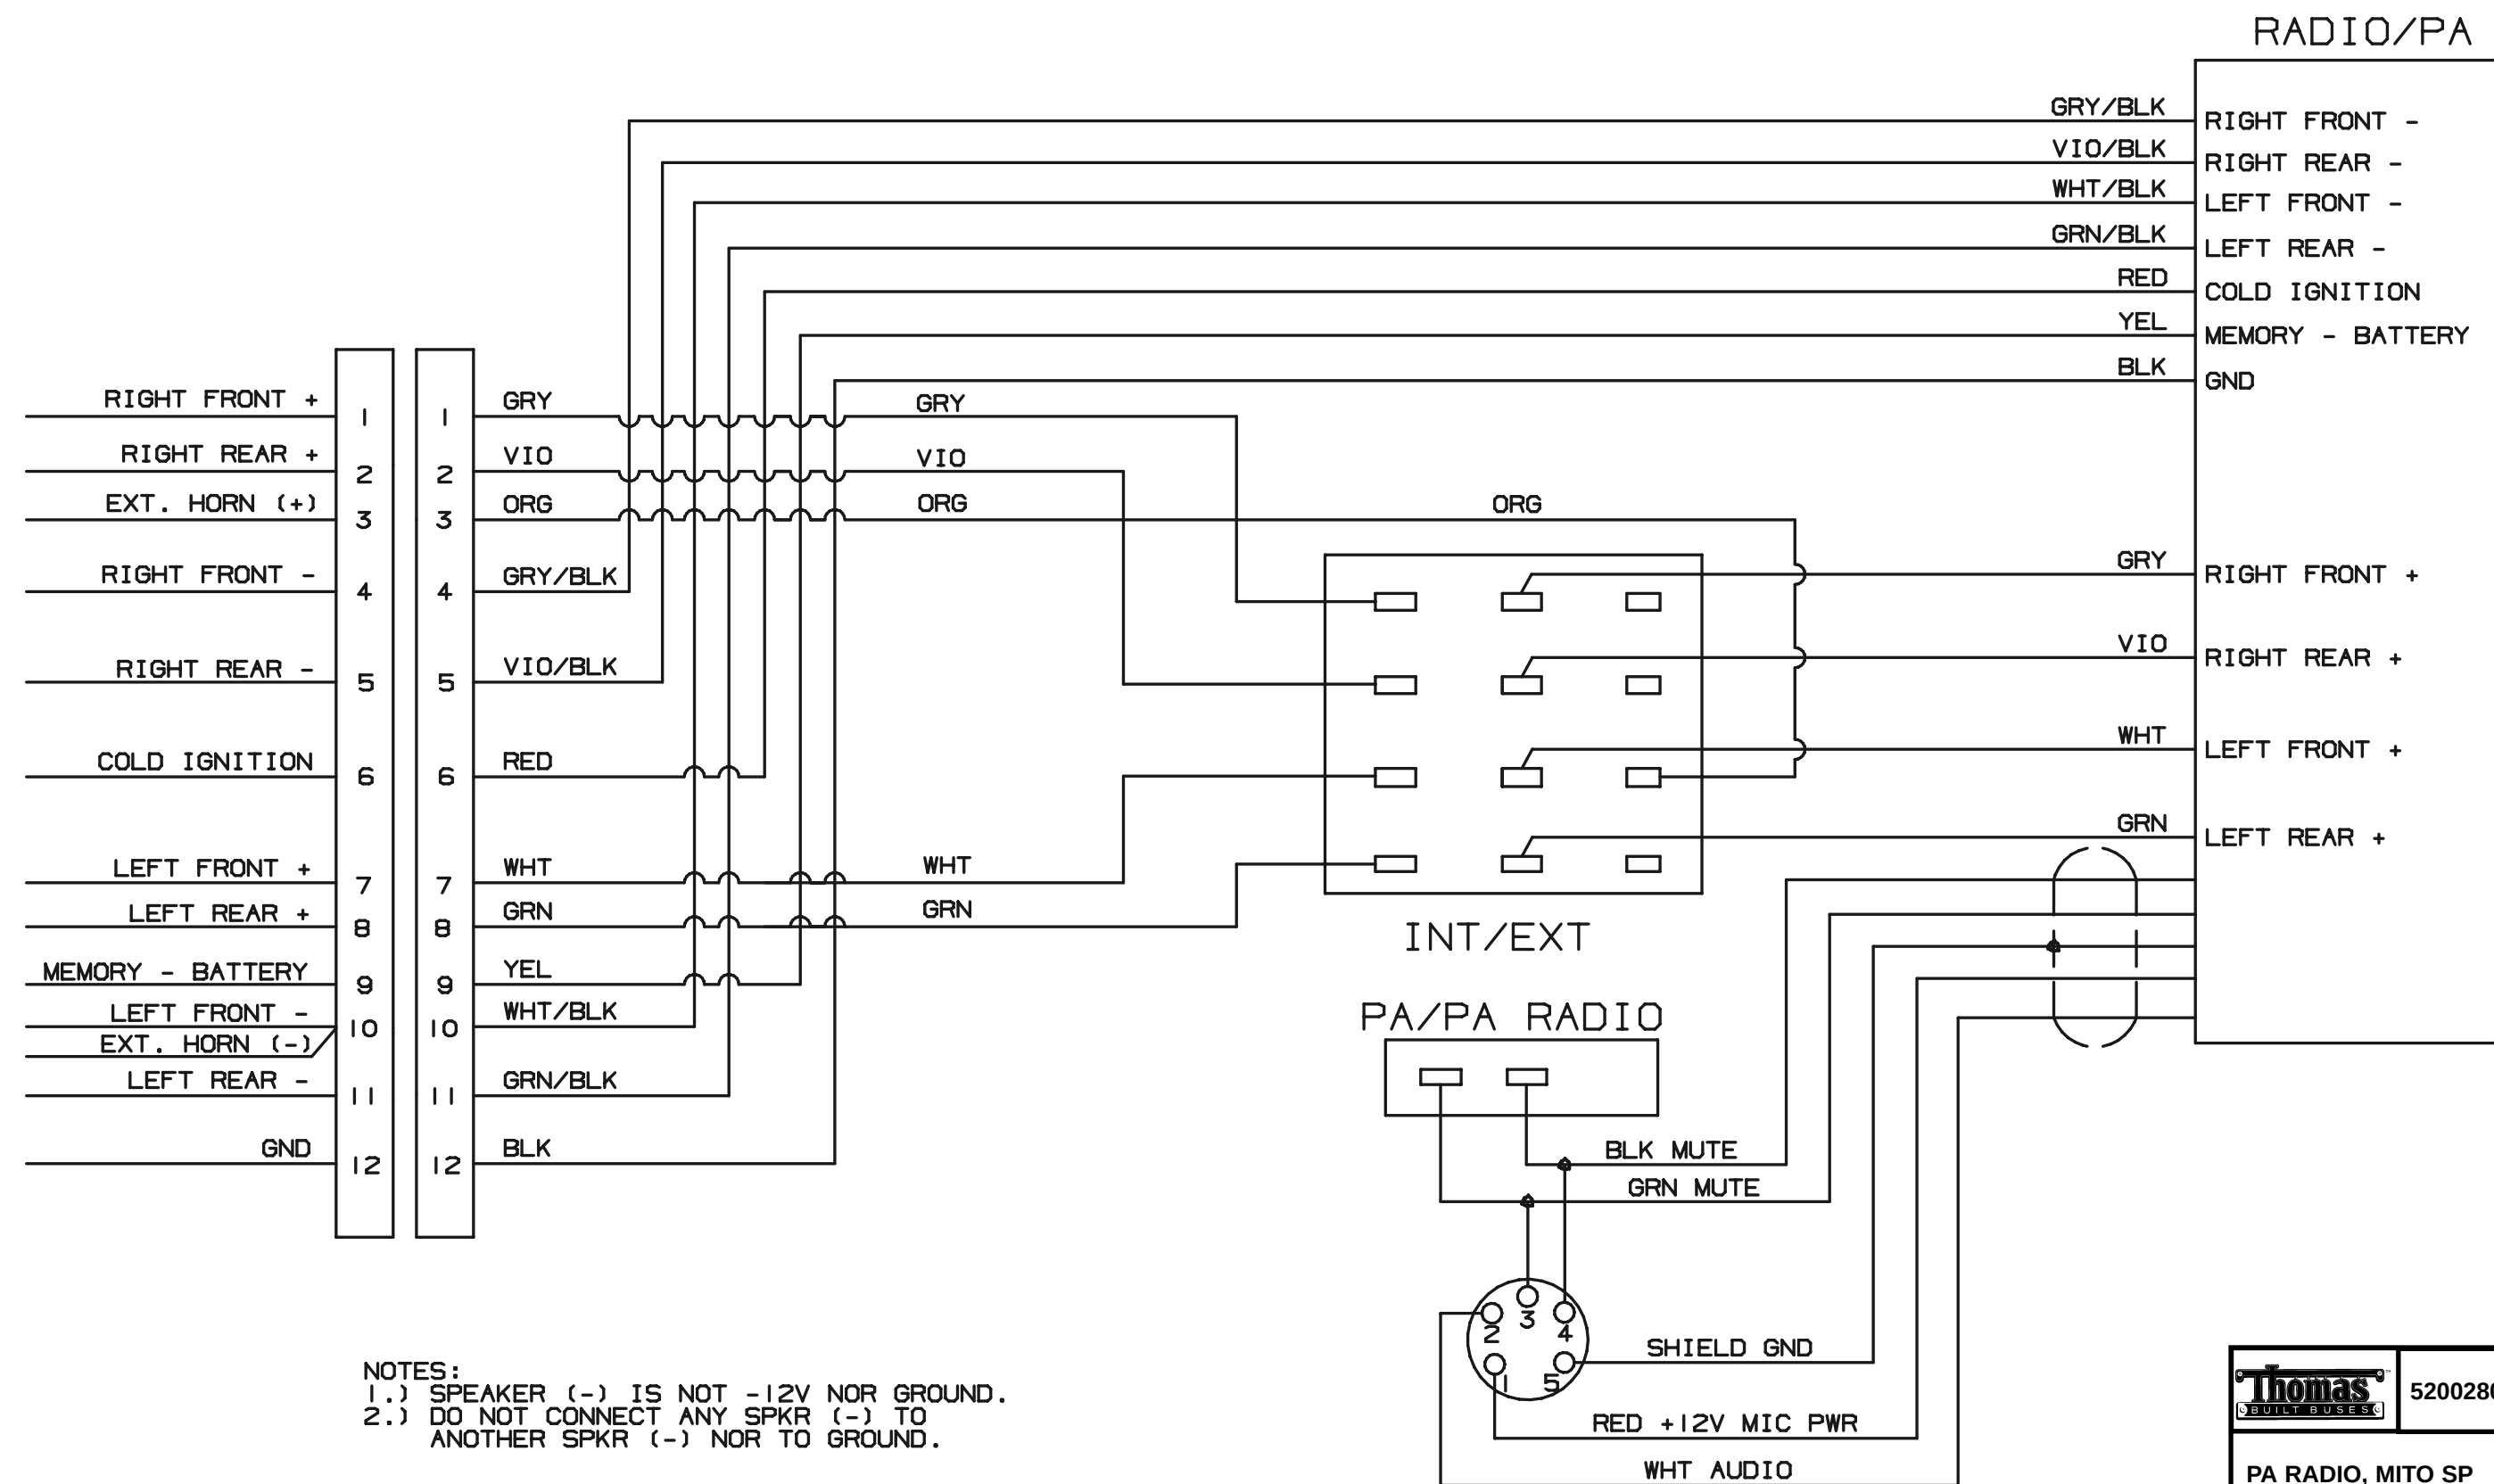


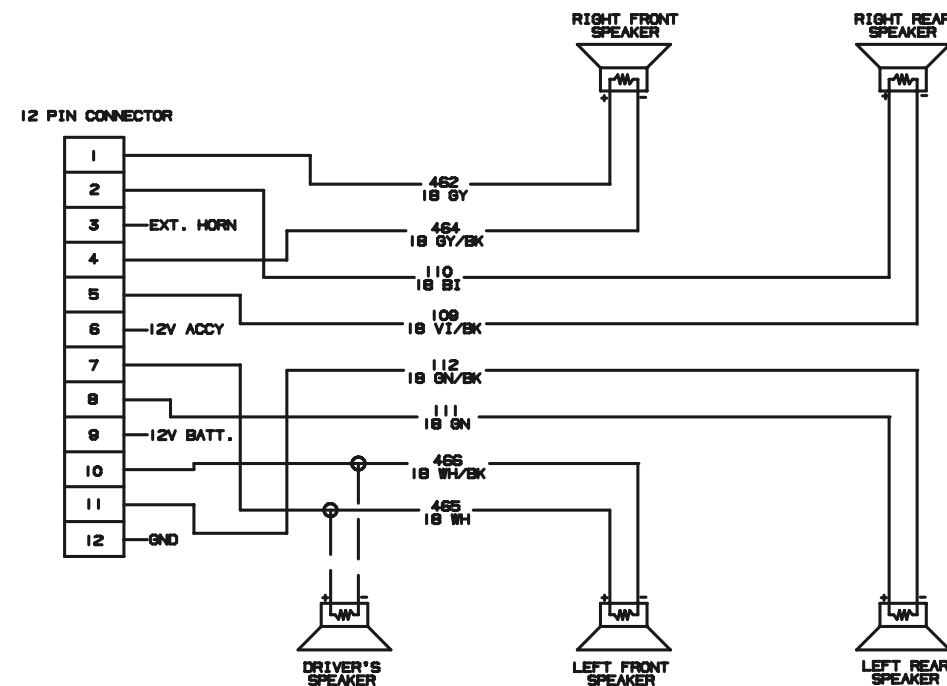

FOUR (4) SPEAKER SYSTEM
USE HARNESS # 52002787

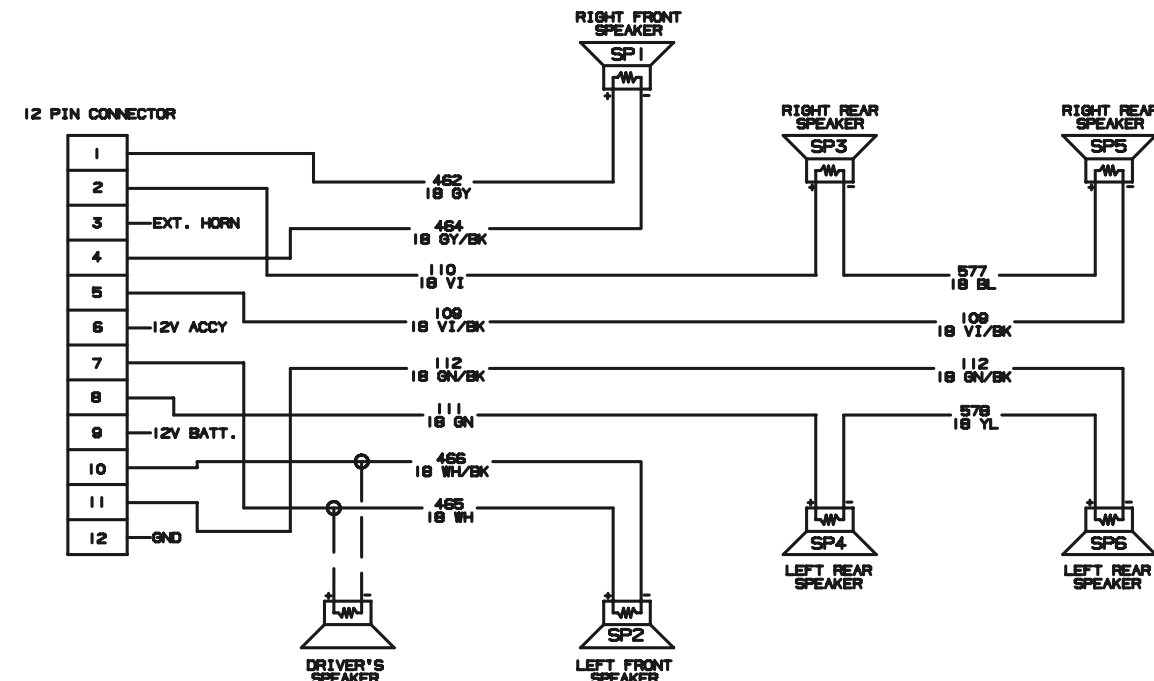


SIX (6) SPEAKER SYSTEM
USE HARNESS #52002795

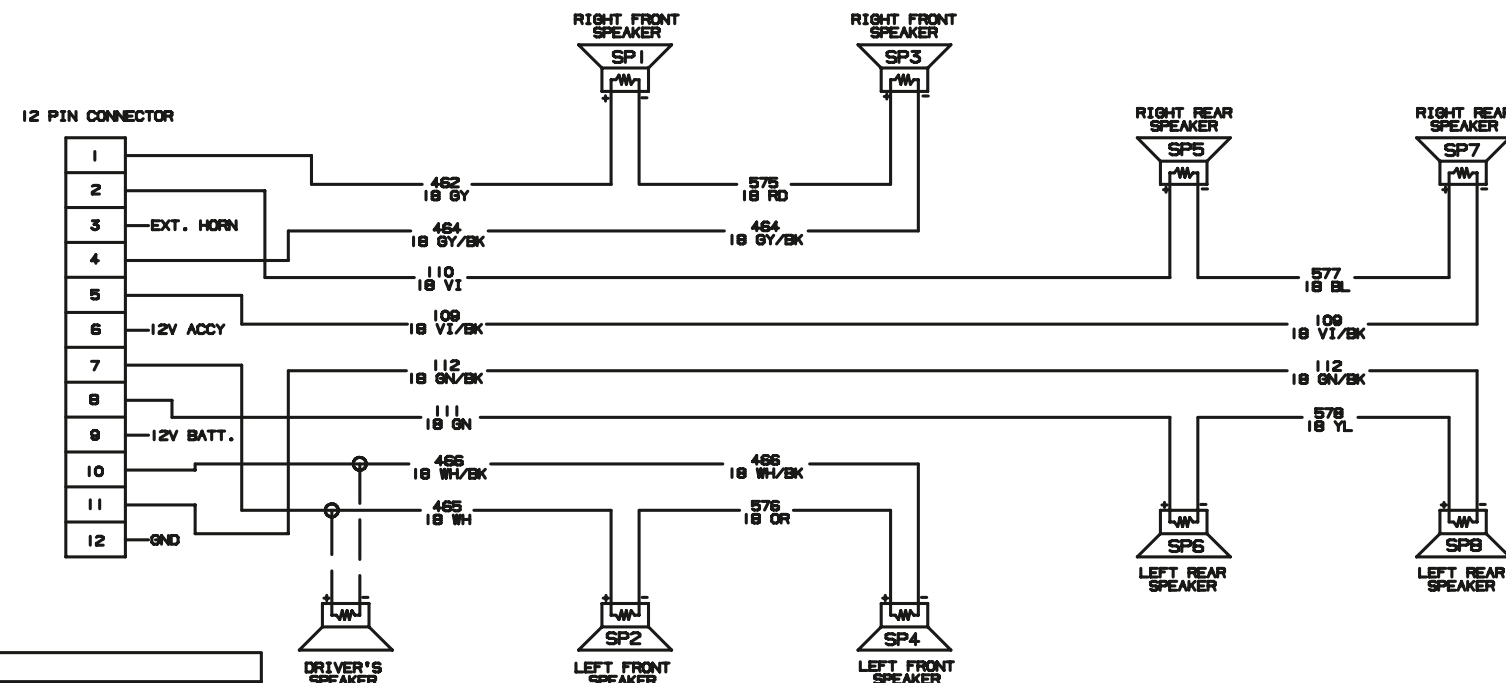

EIGHT (8) SPEAKER SYSTEM
USE HARNESS #52002805

CIR	GA	COLOR	DESCRIPTION
109	18	VIOLET/BLACK	RIGHT REAR SPEAKER (-)
110	18	VIOLET	RIGHT REAR SPEAKER (+)
111	18	GREEN	LEFT REAR SPEAKER (+)
112	18	GREEN/BLACK	LEFT REAR SPEAKER (-)
462	18	GRAY	RIGHT FRONT SPEAKER (+)
464	18	GRAY/BLACK	RIGHT FRONT SPEAKER (-)
465	18	WHITE	LEFT FRONT SPEAKER (+)
466	18	WHITE/BLACK	LEFT FRONT SPEAKER (-)
575	18	RED	FROM SP1(-) TO SP3(+)
576	18	ORANGE	FROM SP2(-) TO SP4(+)
577	18	BLUE	FROM SP5(-) TO SP7(+)
578	18	YELLOW	FROM SP6(-) TO SP8(+)

	52002786 B
	RADIO SPEAKERS

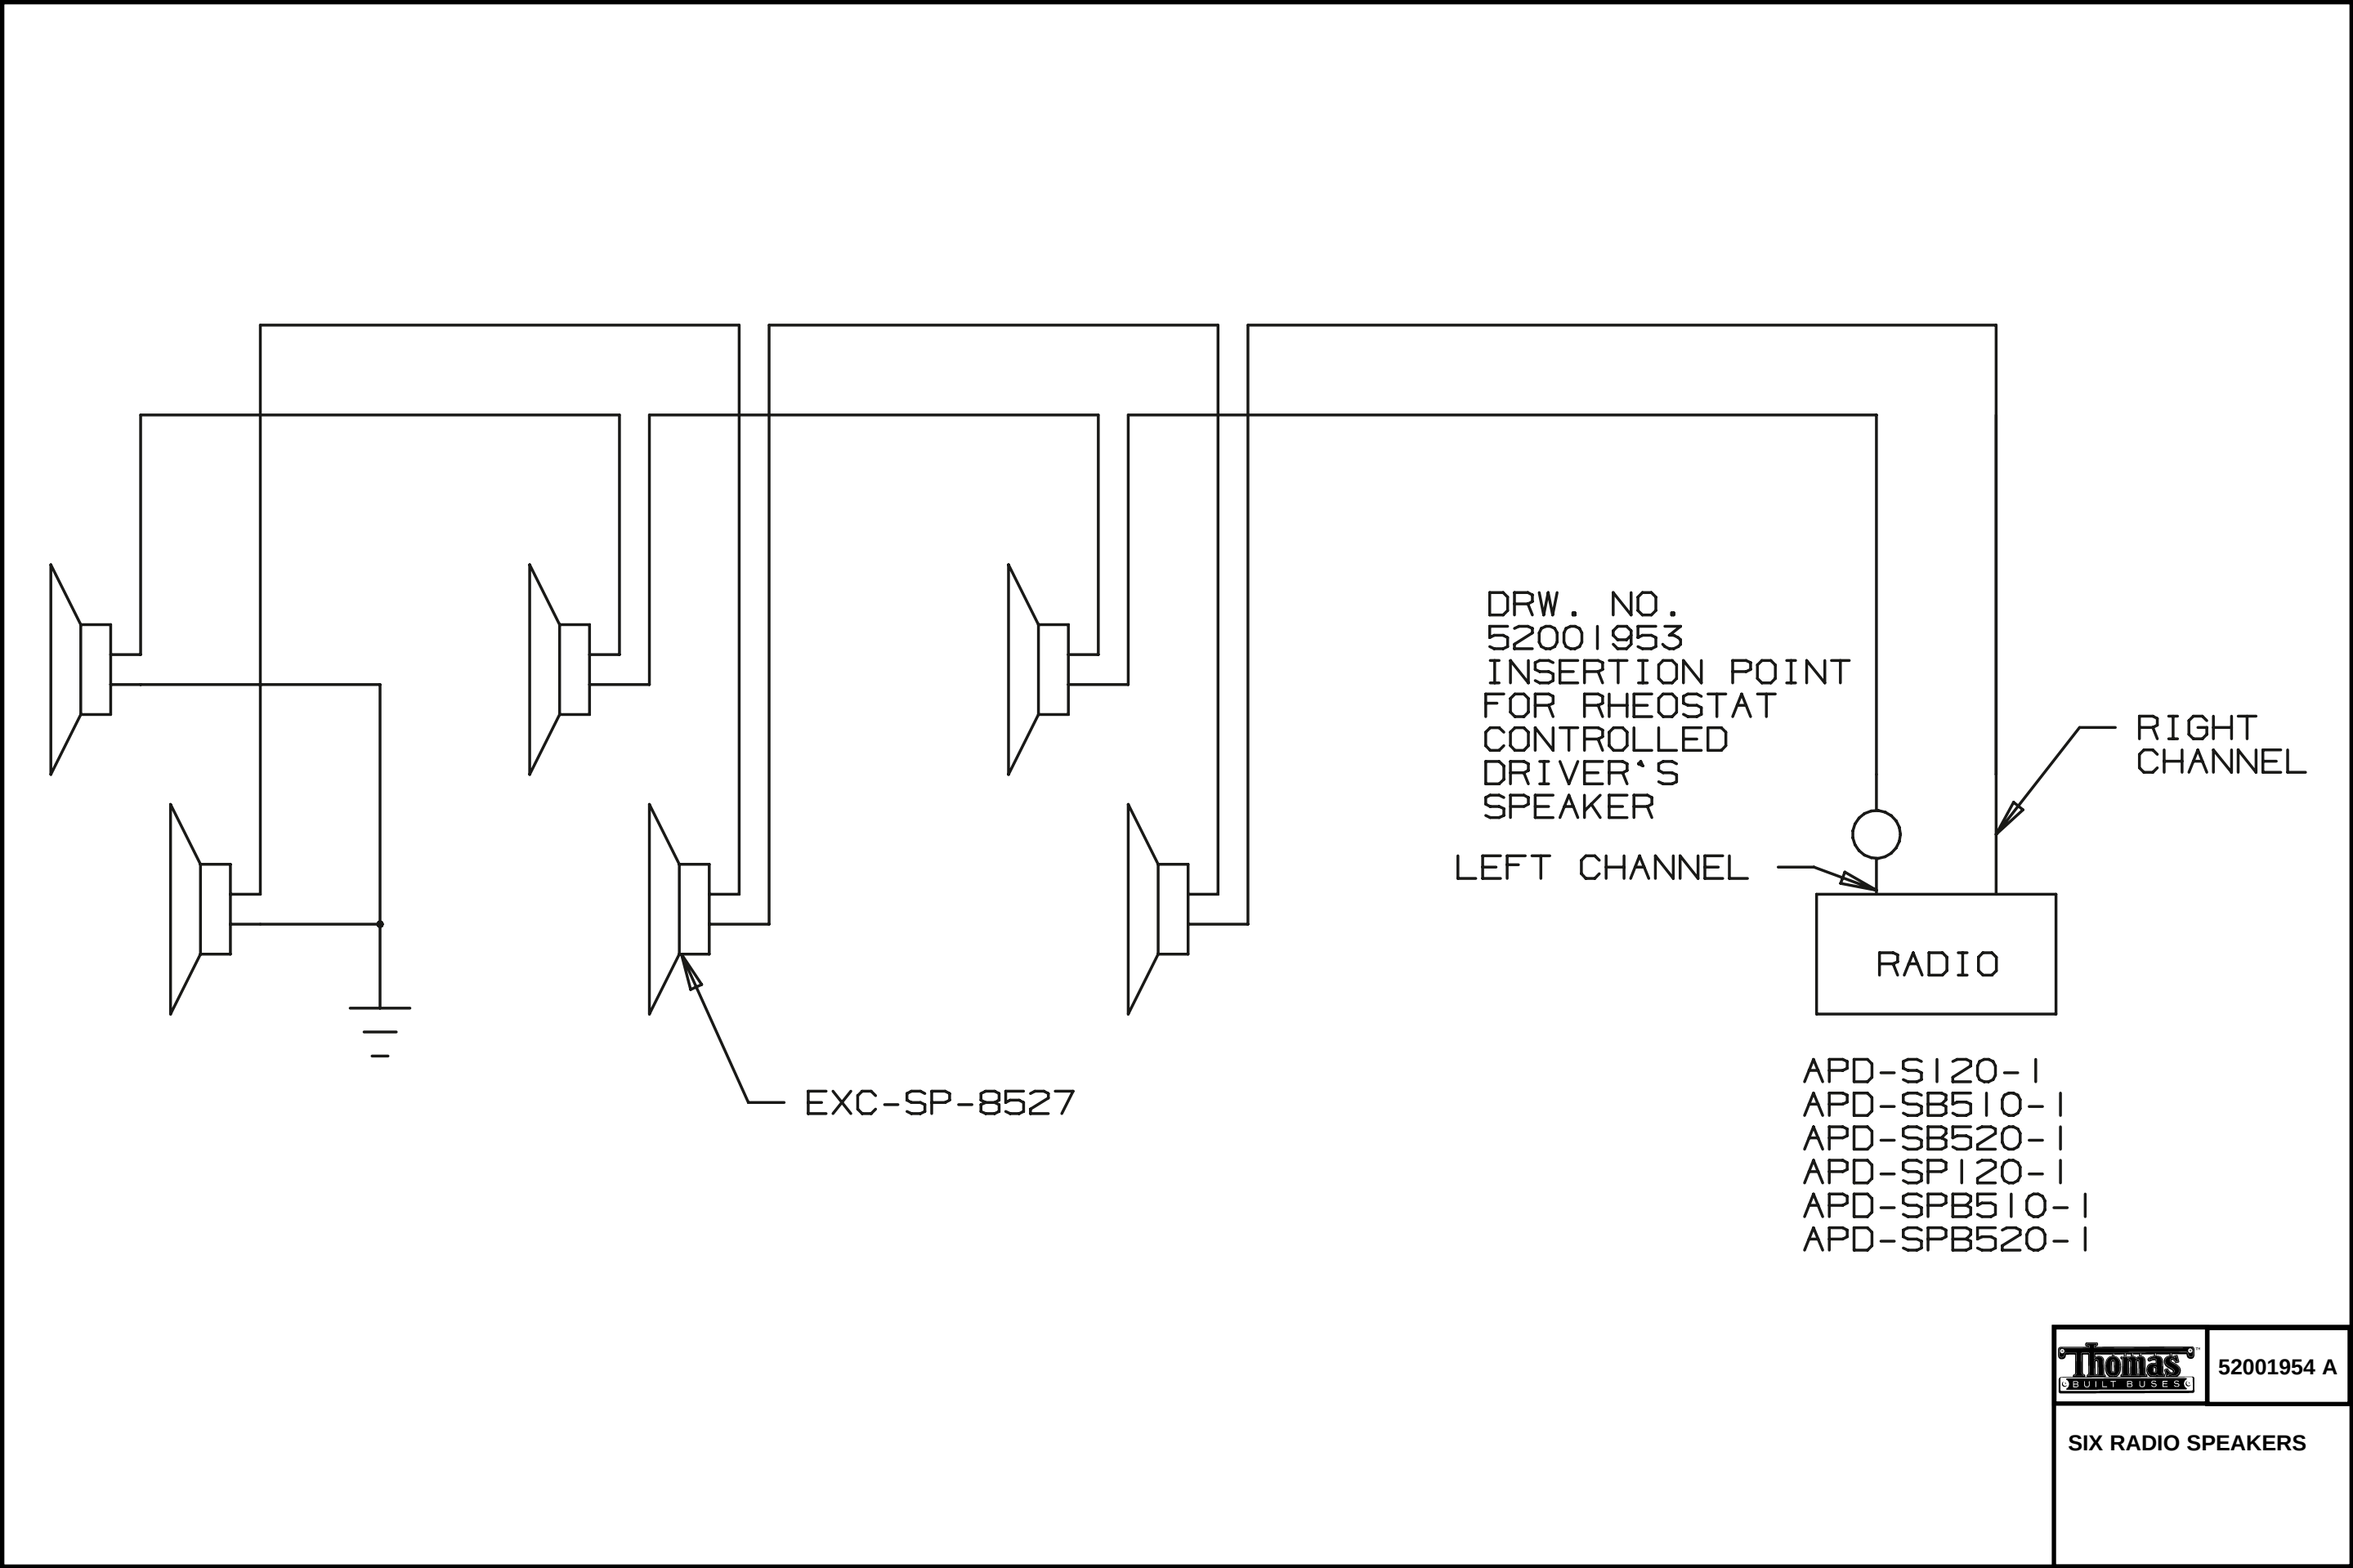


RADIO

- APD-S120-1
- APD-SB510-1
- APD-SB520-1
- APD-SP120-1
- APD-SPB510-1
- APD-SPB520-1


Thomas BUILT BUSES	52001954 A
SIX RADIO SPEAKERS	

LEFT CHANNEL
RADIO OUTPUT
DWG. NO.
520901954

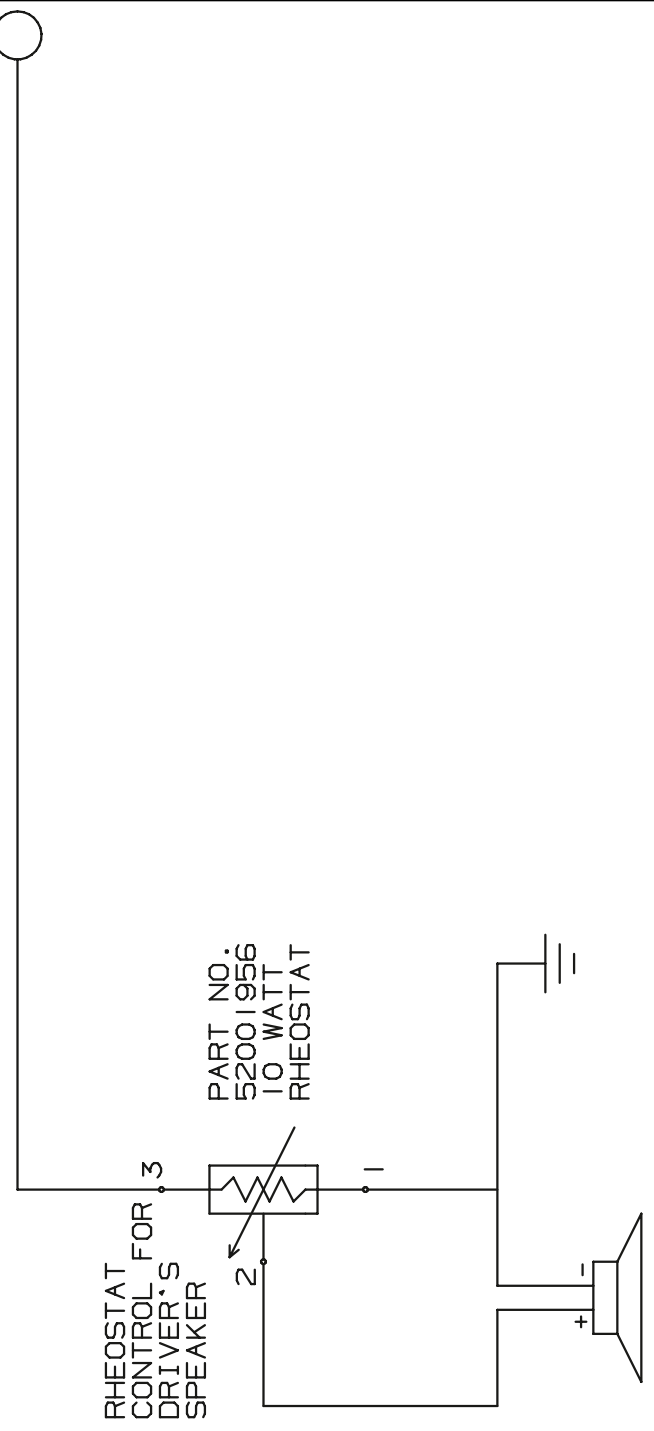


DRIVER'S SPEAKER
THIS IS THE STANDARD 4 OHM SPEAKER

	52001953 A
RHEOSTAT CONTROLLED DRIVER'S SPEAKER	

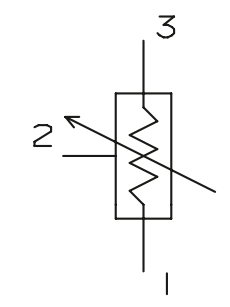

WIRING DIAGRAM

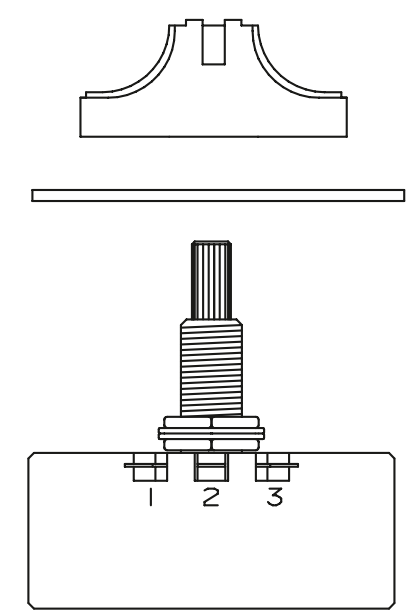

PART NO. 958-8575
10 WATT AUDIO RHEOSTAT


RHEOSTAT SHOULD BE POSITIONED IN THE RADIO BOX ON PUSHERS AND FORWARD CONTROLS. IT SHOULD BE POSITIONED IN THE BULK HEAD BESIDE THE RADIO BOX ON VISTAS. CENTER ANY AVAILABLE KNOCKOUT ON CONVENTIONAL ELECTRICAL PANEL, IF NONE ARE AVAILABLE, POSITION RHEOSTAT JUST TO THE RIGHT IN THE SPACE PROVIDED.

	52001956 A
RHEOSTAT - 10 WATT SINGLE LINE AUDIO	

NOTES:






**MVP-ER
MISCELLANEOUS
SCHEMATICS**

LAMP FUNCTION:	DORAN #	TBB CIR #	OLD TBB CIR #	TBB COLOR	OLD TBB COLOR
RED WARNING LAMP RIGHT INPUT	4A	160	160	BK	BK
RED WARNING LAMP RIGHT FRONT OUTPUT	1A	216	2	BR	BR
RED WARNING LAMP RIGHT REAR OUTPUT	6A	217	3	OR	OR
AMBER WARNING LAMP RIGHT INPUT	2A	164	164	BL	YE/BL
AMBER WARNING LAMP RIGHT FRONT OUTPUT	3A	220	6	WH	WH
AMBER WARNING LAMP RIGHT REAR OUTPUT	5A	221	7	RD	RD
RED WARNING LAMP LEFT INPUT	4B	162	162	OR	RD/BL
RED WARNING LAMP LEFT FRONT OUTPUT	1B	218	4	YE	YE
RED WARNING LAMP LEFT REAR OUTPUT	6B	215	1	BK	BK
AMBER WARNING LAMP LEFT INPUT	2B	166	166	RD	YE/BK
AMBER WARNING LAMP LEFT FRONT OUTPUT	3B	222	8	GR	GR
AMBER WARNING LAMP LEFT REAR OUTPUT	5B	219	5	BL	BL
TURN SIGNAL LAMP RIGHT REAR OUTPUT	3C	9	9	GR	GR
TURN SIGNAL LAMP RIGHT REAR INPUT	4C	175	175	GR	GR
TURN SIGNAL LAMP LEFT REAR INPUT	2D	174	174	YE	YE
TURN SIGNAL LAMP LEFT REAR OUTPUT	3D	10	10	YE	YE
STOP LAMP - INPUT	1C	172	172	RD	RD
STOP LAMP RIGHT - OUTPUT	2C	16	16	RD/WH	RD/WH
STOP LAMP LEFT - OUTPUT	1D	15	15	RD	RD
TAIL LAMP - INPUT	7D	168	168	BR	BR
TAIL LAMP RIGHT - OUTPUT	7C	11	11	BR	BR
TAIL LAMP LEFT - OUTPUT	8D	12	12	BR/WH	BR/WH
BACK-UP LAMP - INPUT	6C	170	170	BL	BL
BACK-UP LAMP RIGHT OUTPUT	8C	13	13	BL	BL
BACK-UP LAMP LEFT OUTPUT	5D	14	14	BL/WH	BL/WH
12 VOLT D.C. POSITIVE	4D	176	176	BK	BK
GROUND	6D	177	177	WH	WH
OPEN CAVITY	5C	-----	-----	-----	-----

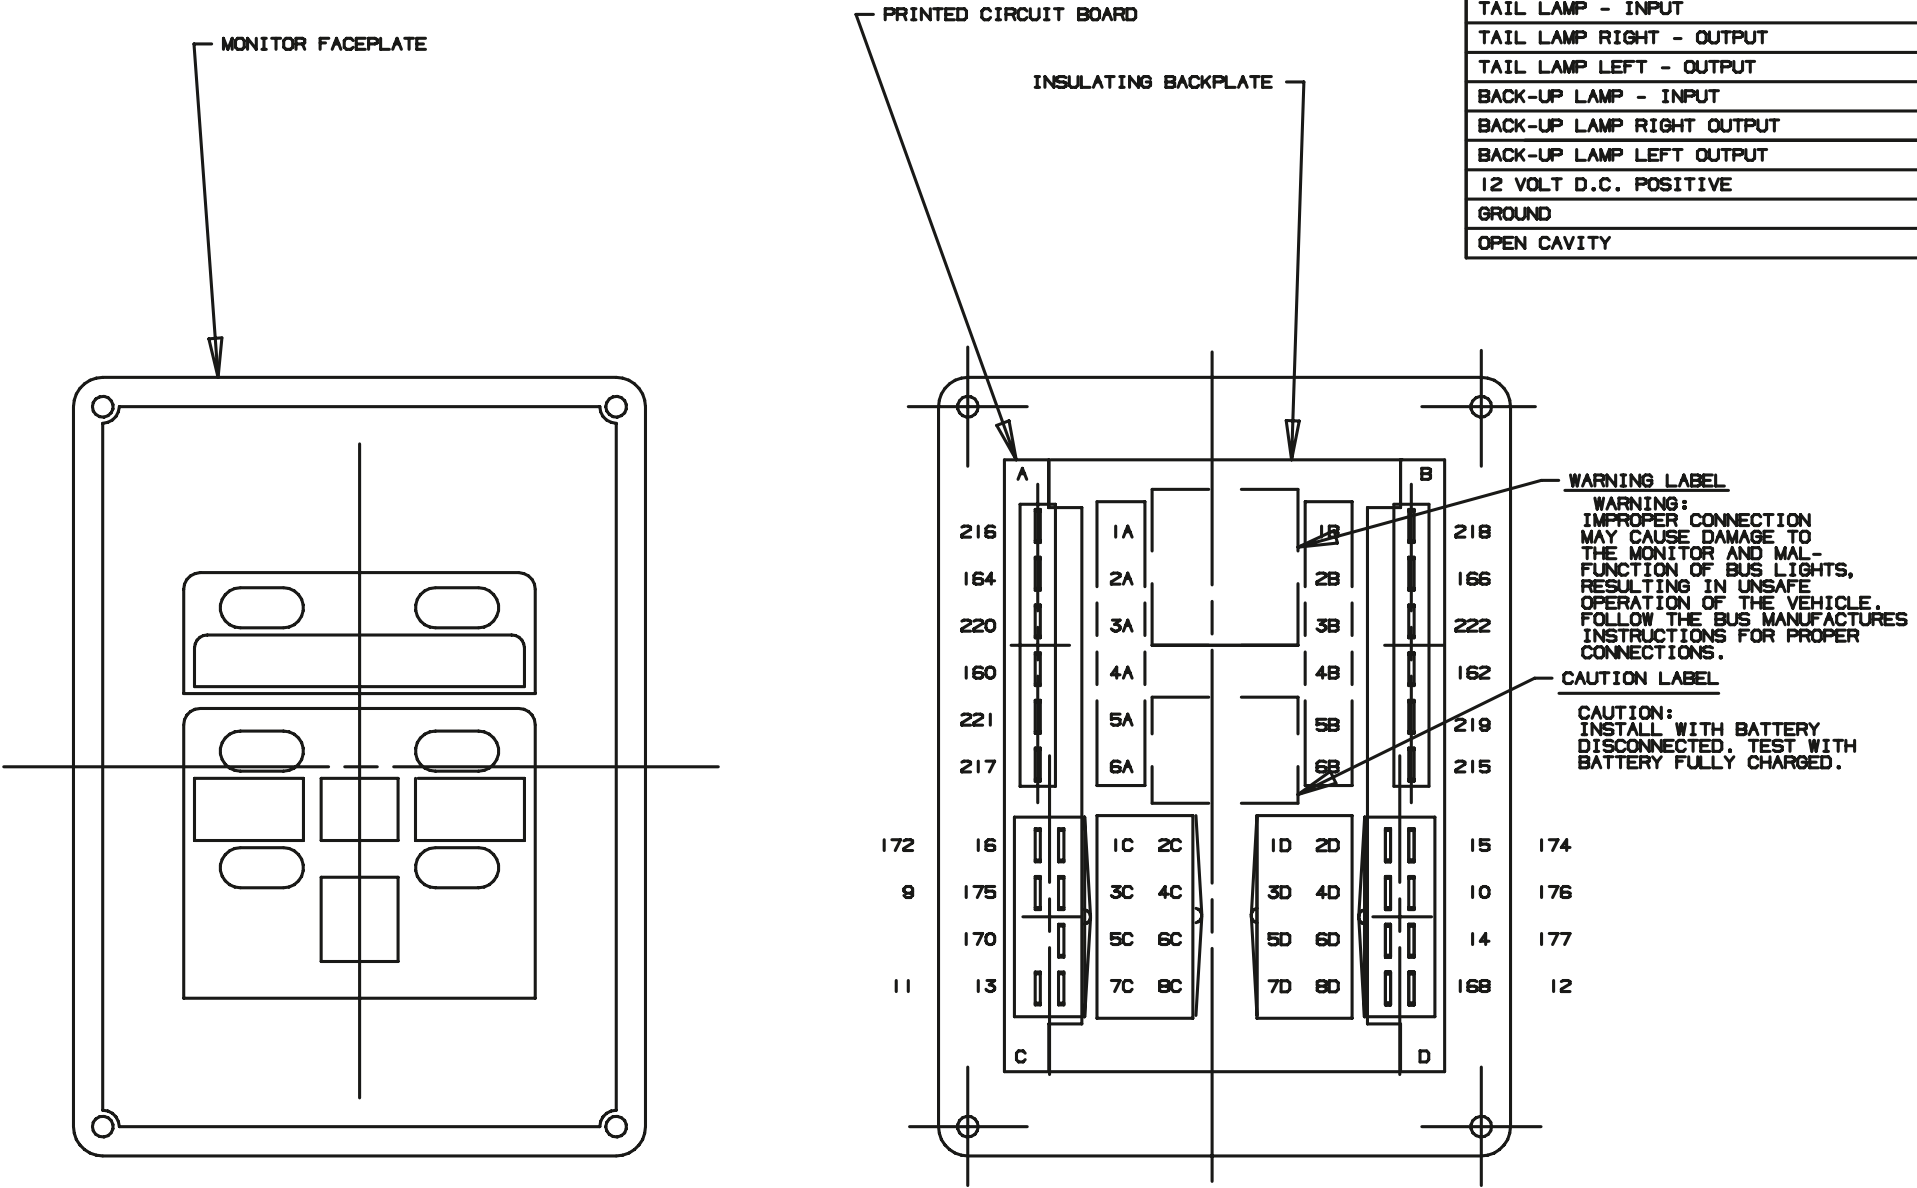


52001932 A


DORAN MONITOR
ALL MODELS

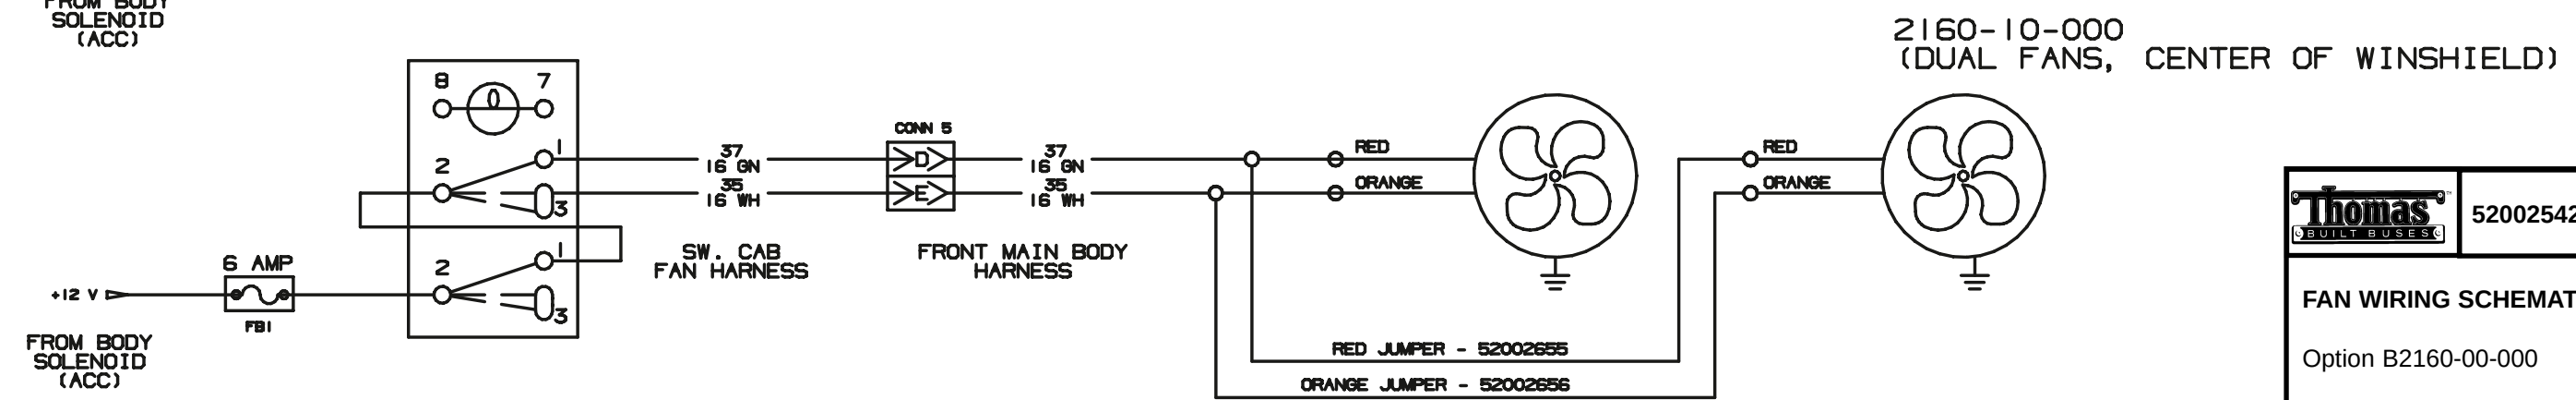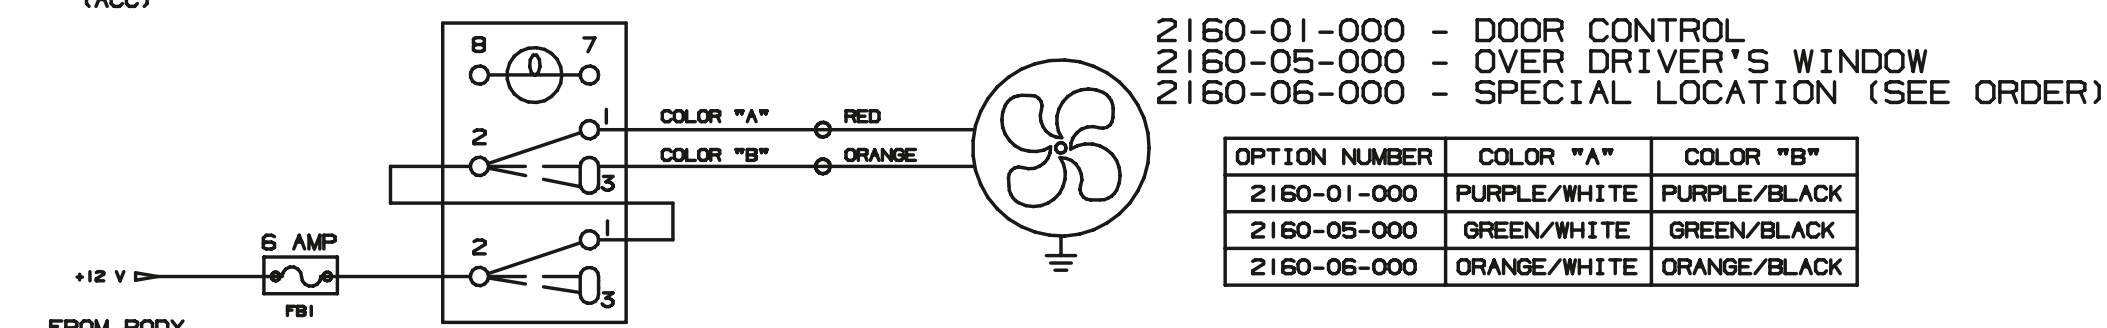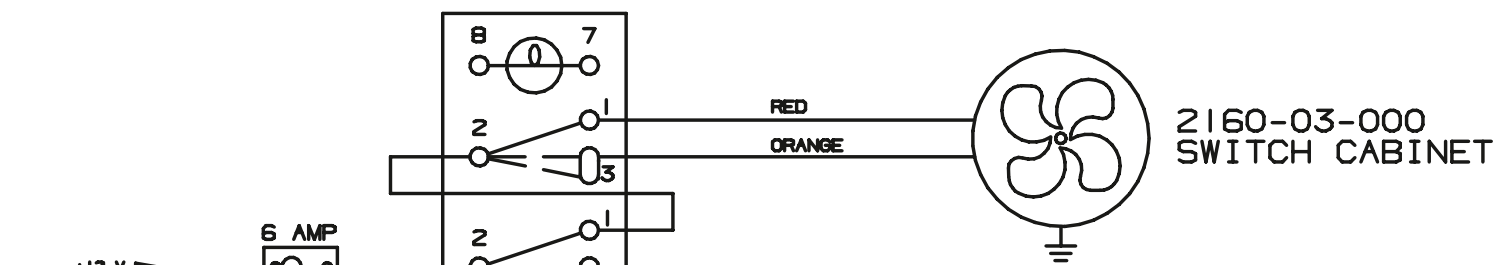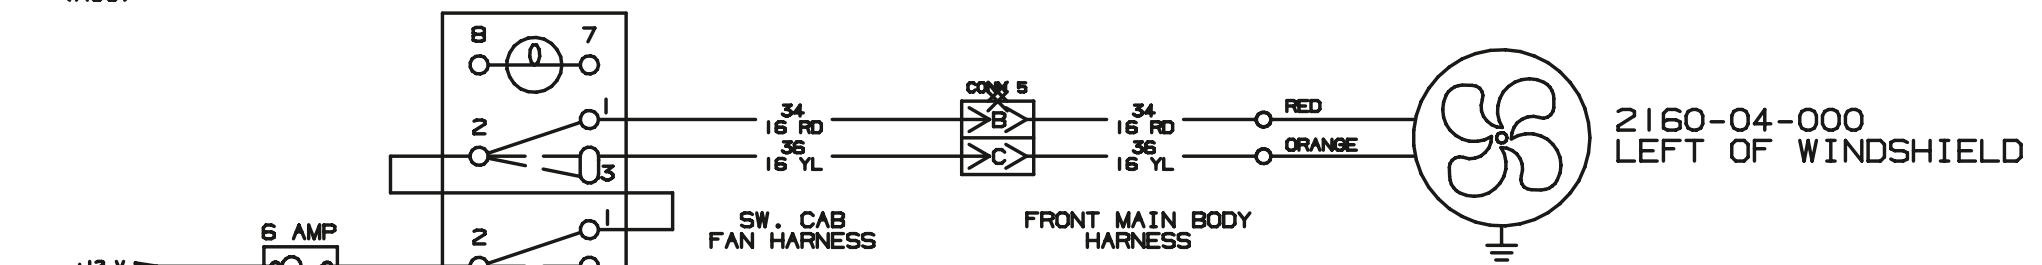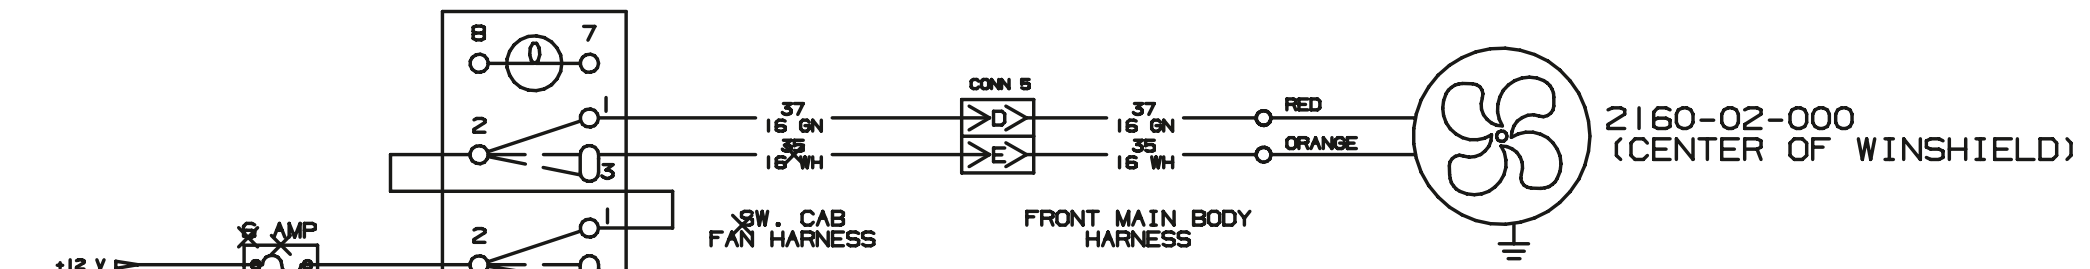


Thomas BUILT-BUSES	52002542 B
FAN WIRING SCHEMATIC	
Option B2160-00-000	

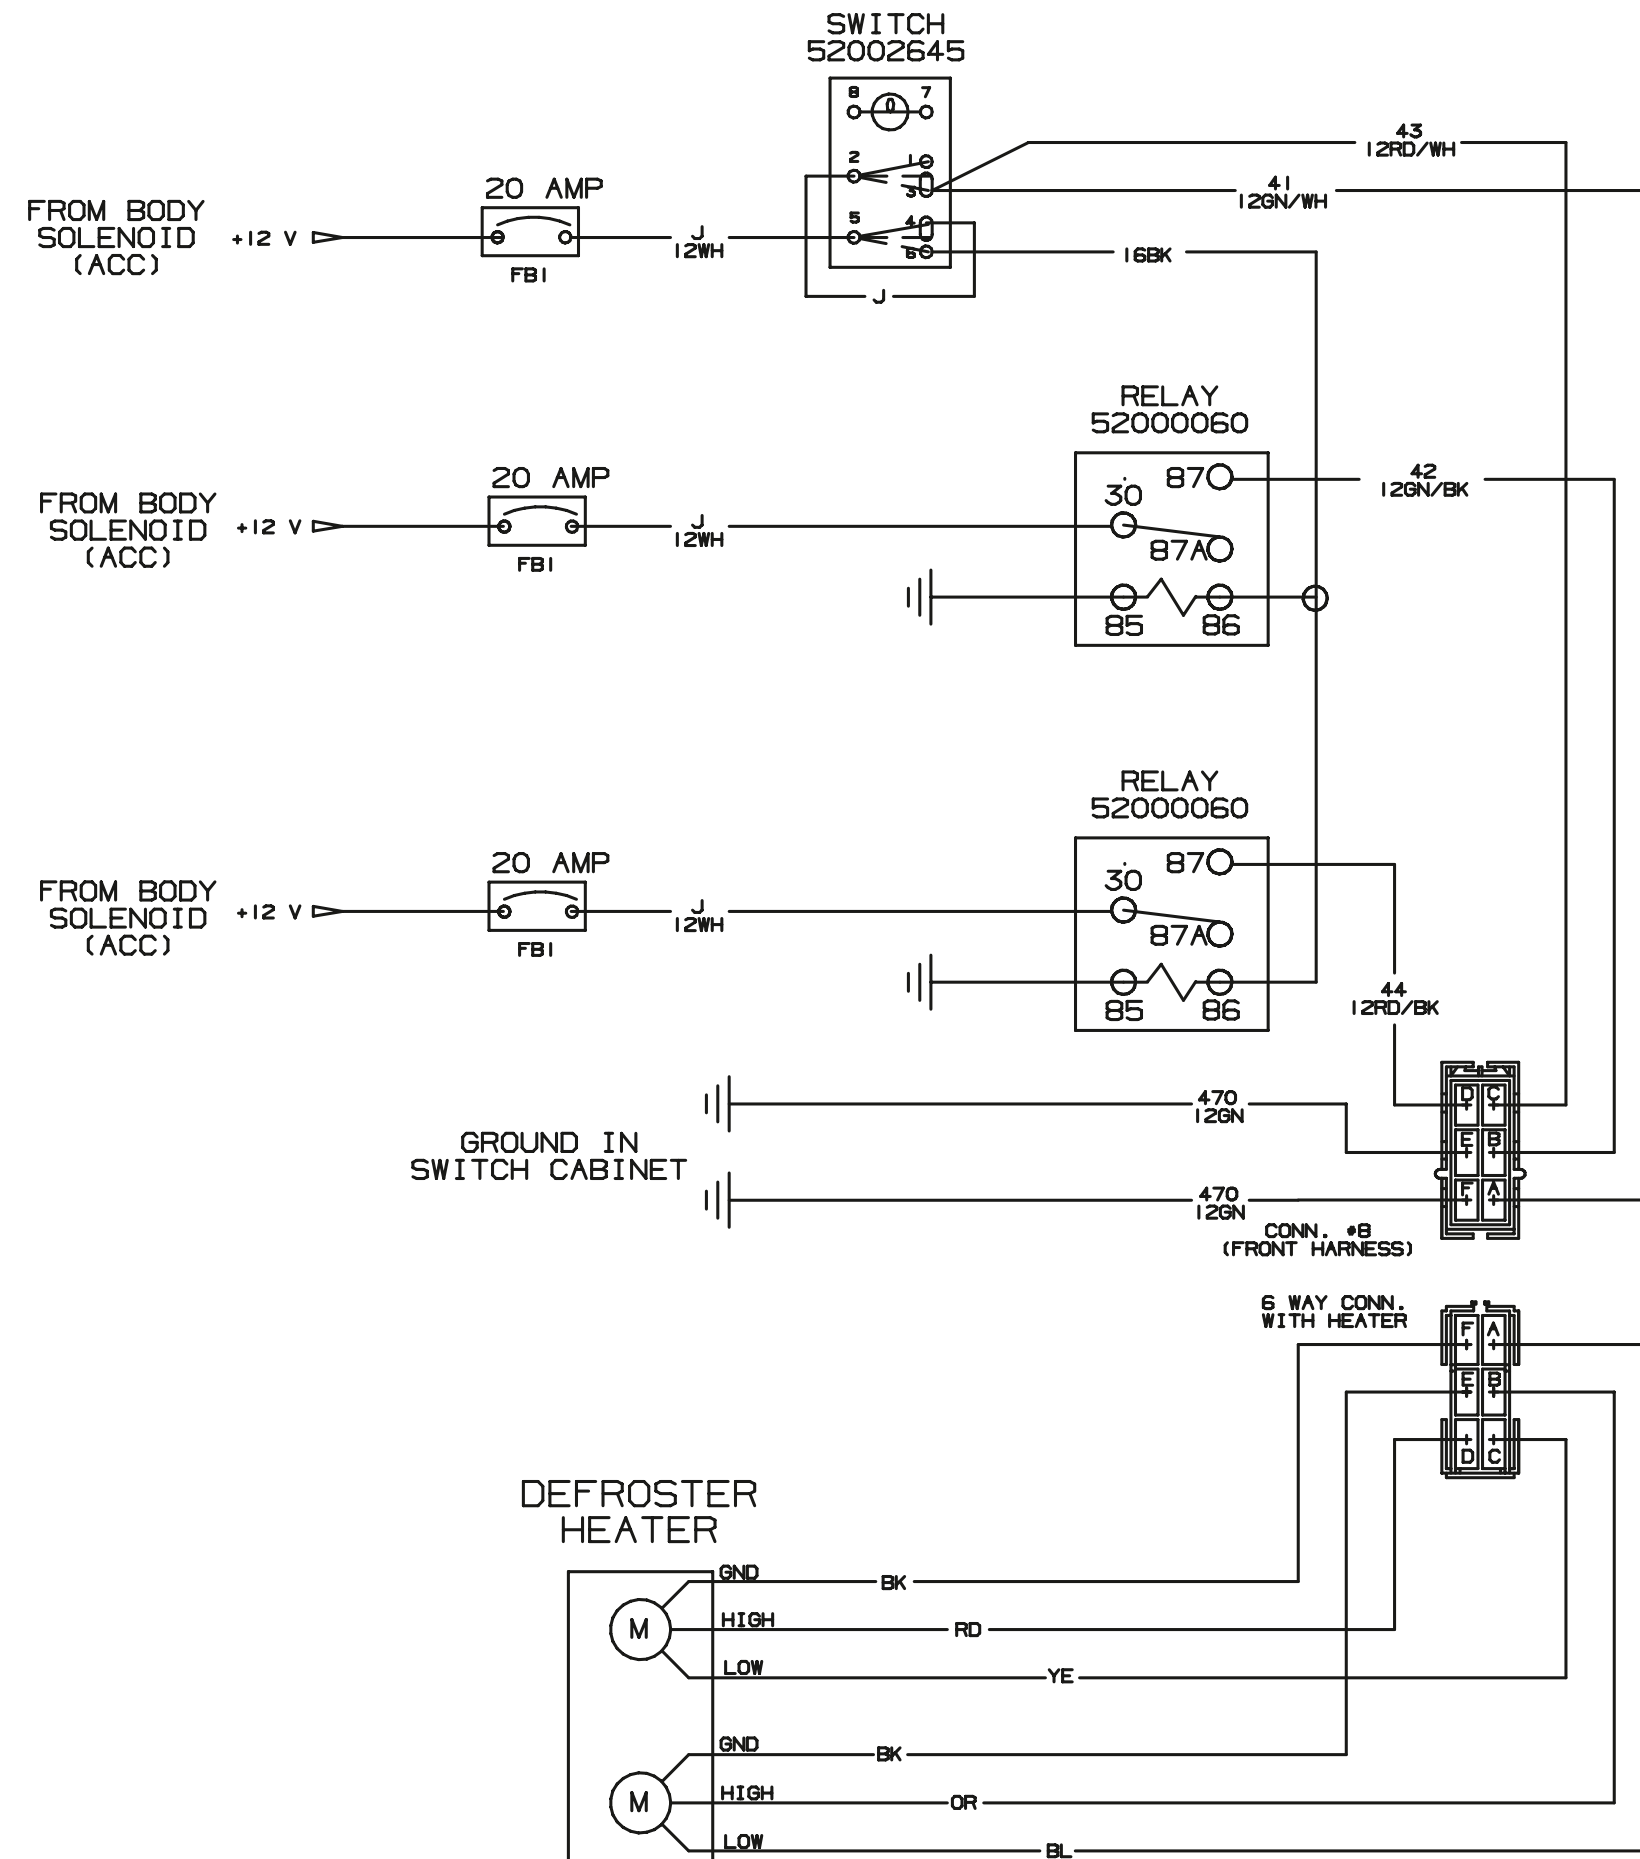

	52002767 A
SINGLE DEFROSTER SWITCH Option: B3826-00-000	

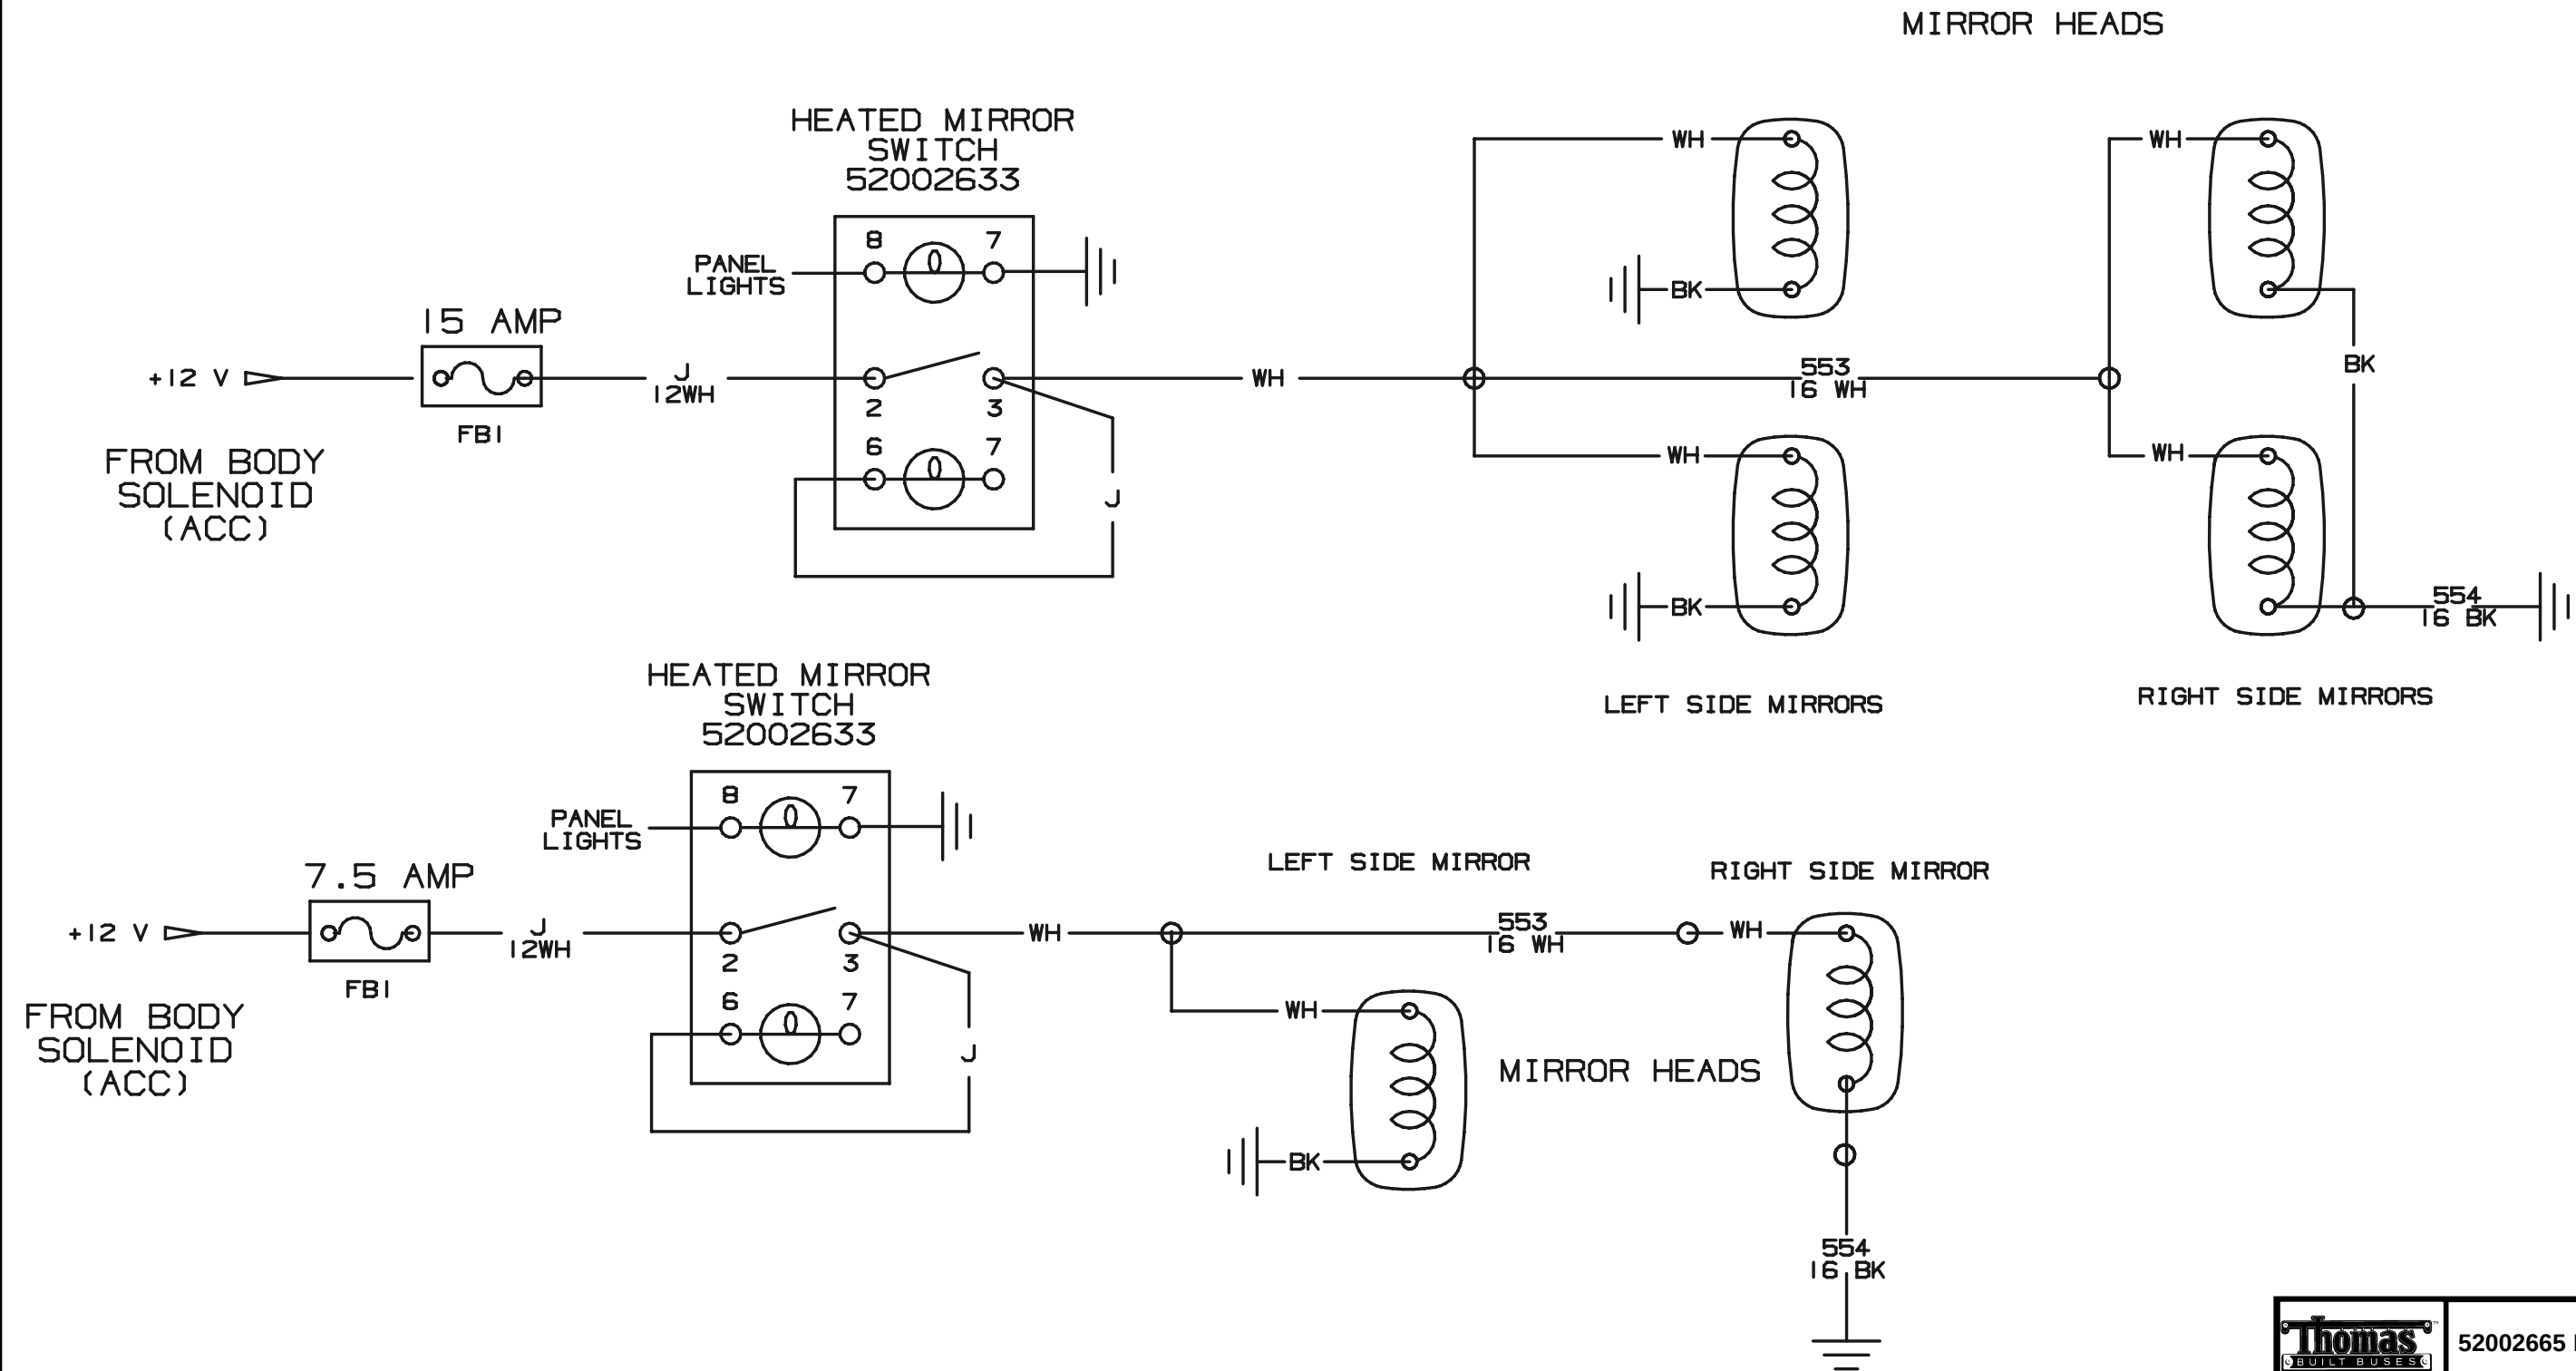


	52002665 B
HEATED MIRRORS	


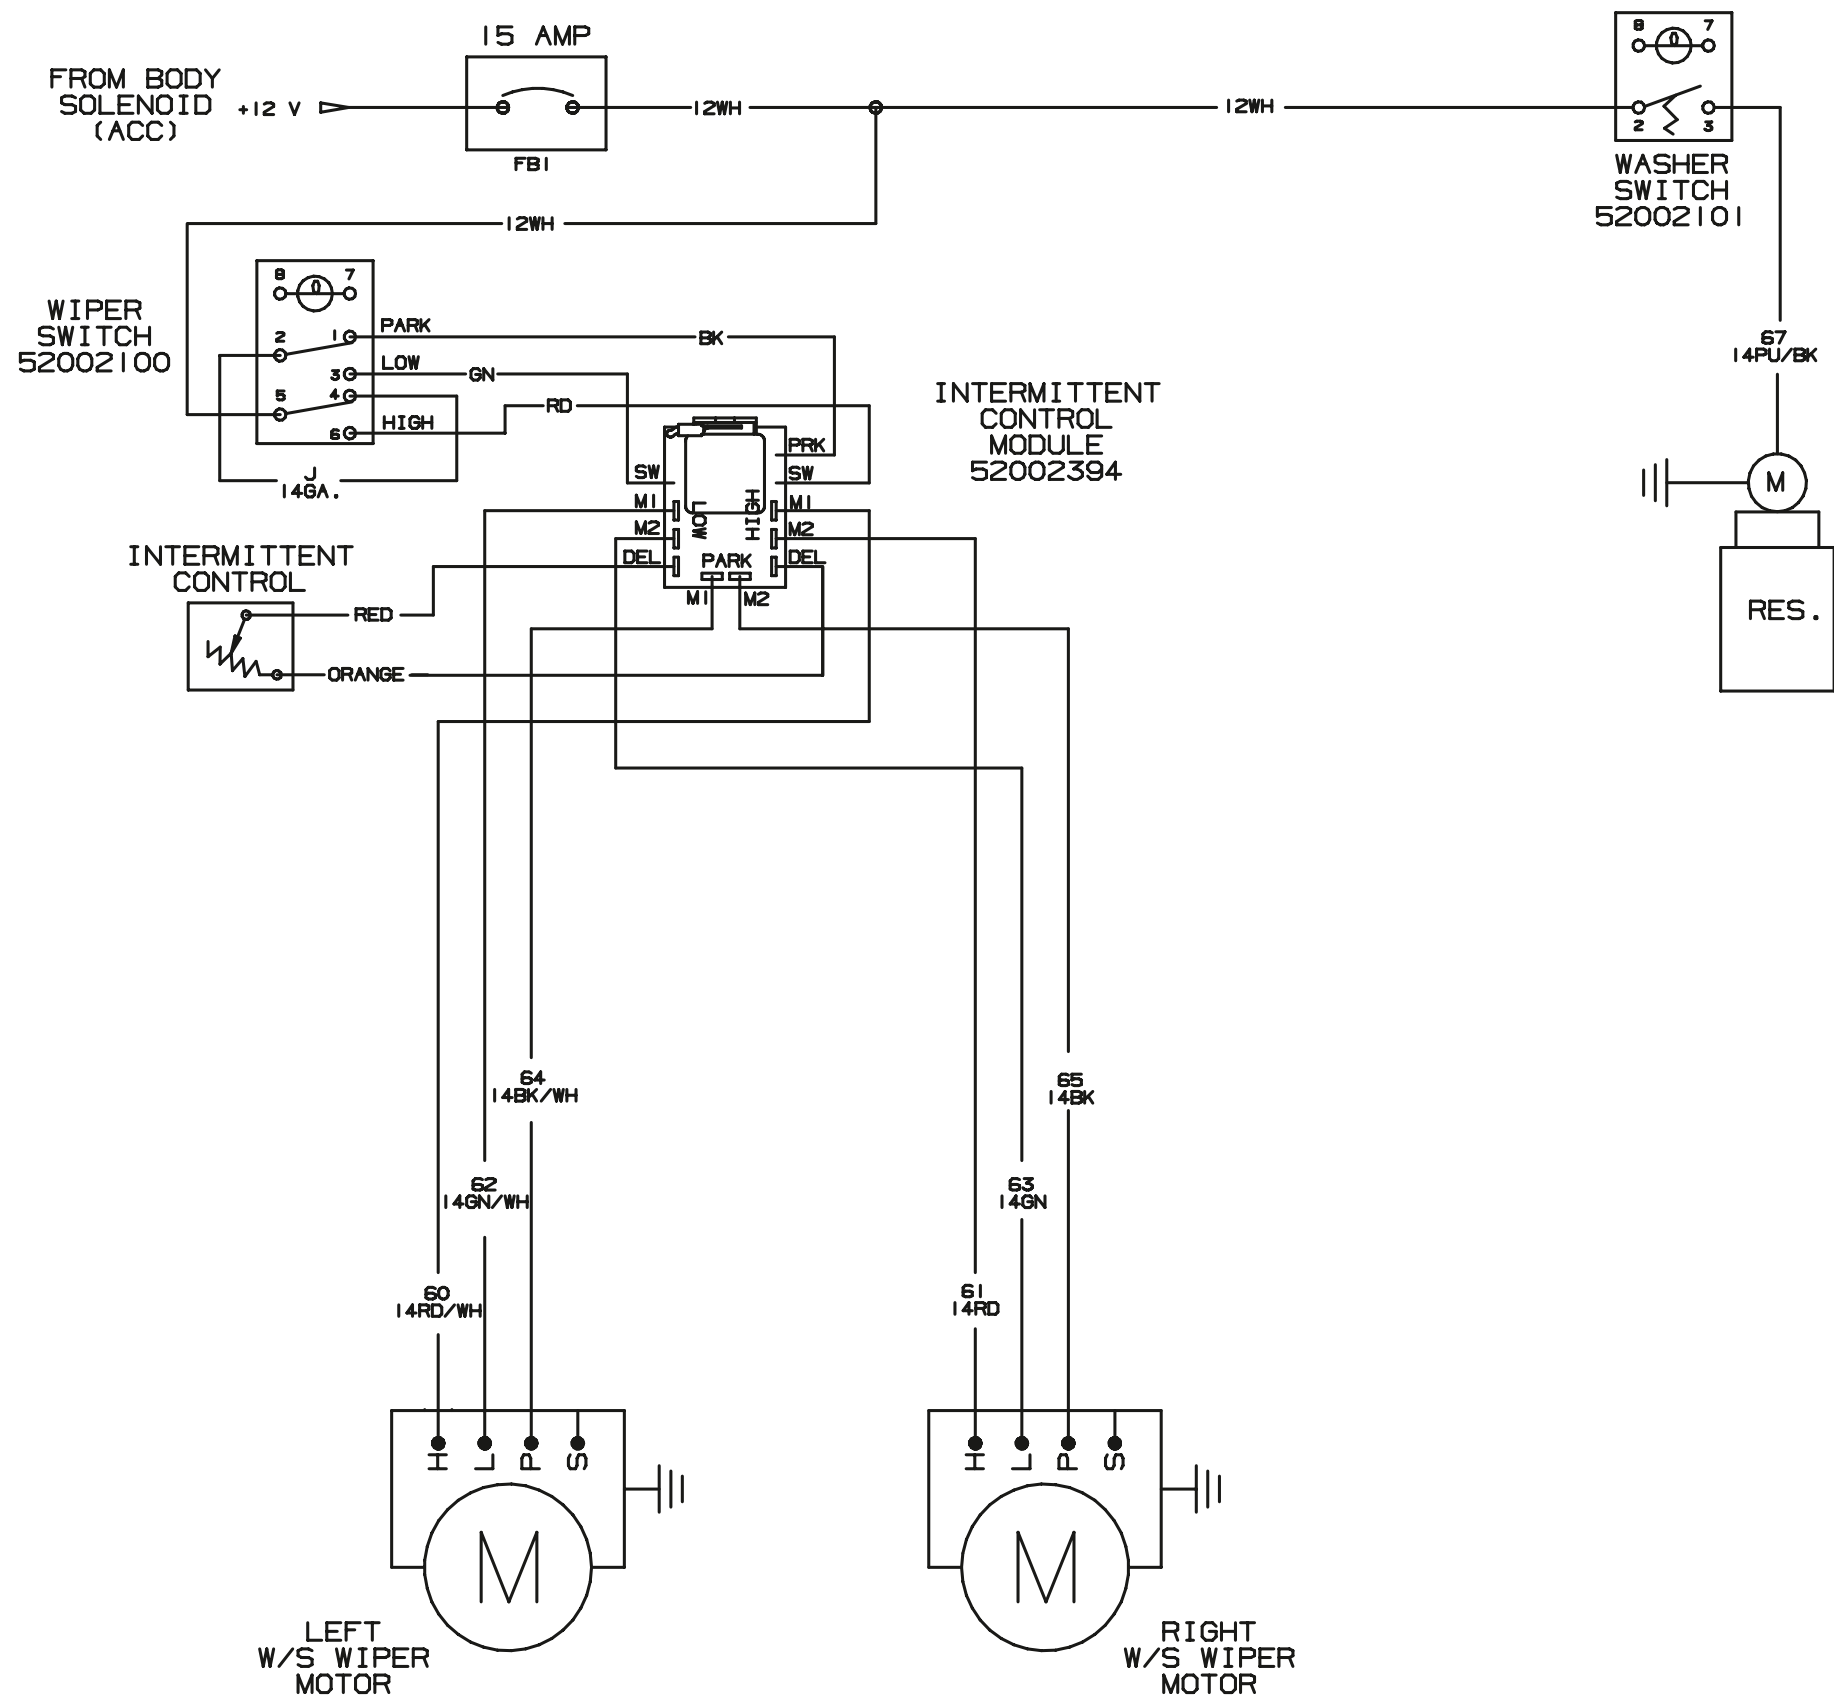


	52002416 B
INTERMITTENT WIND-SHIELD WIPER, DUAL WITH MODULE	


OPTION B3826-04-000

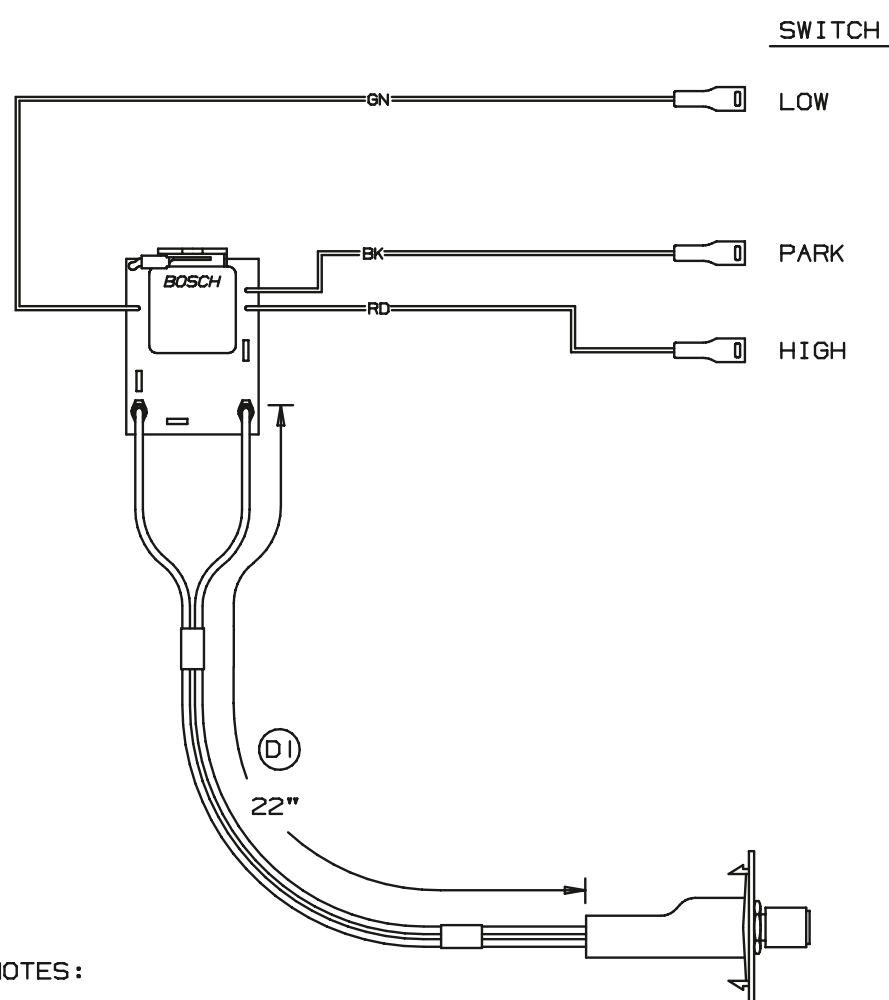

VENDOR: RCM INC.
VENDOR PART NO.: 1022-WD

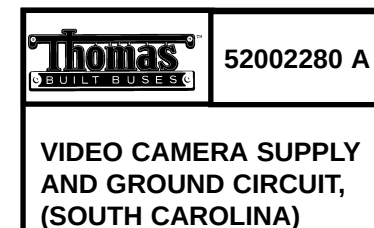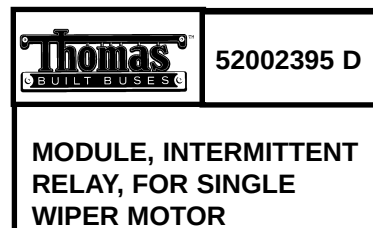

CIR	GA.	COLOR	CIRCUIT DESCRIPTION
107	14	BLACK	BACKING ALARM

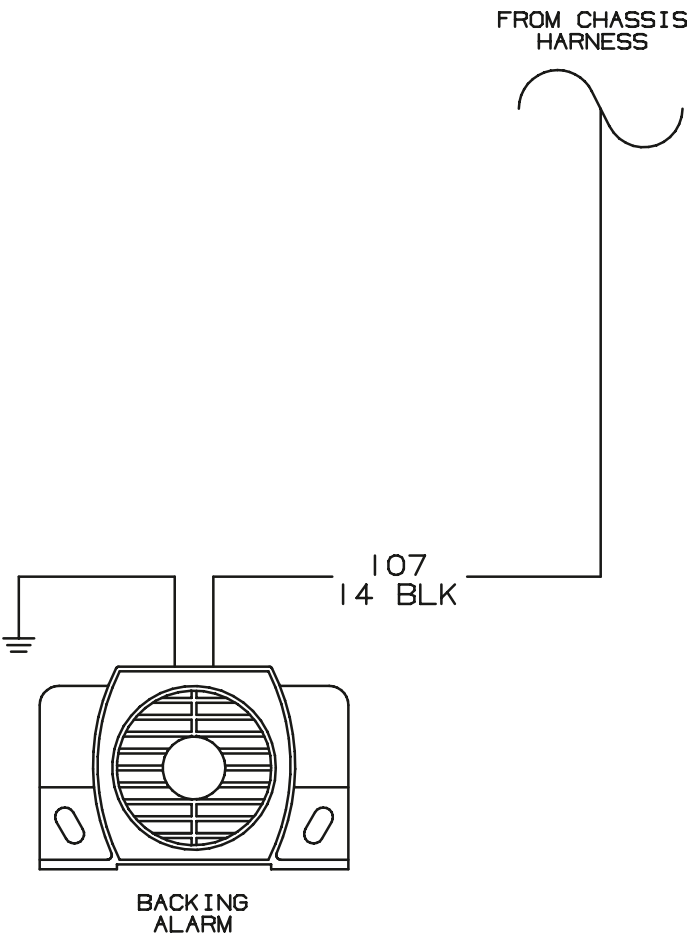


BACKING ALARM
 OPTION B2310-02-000
 OR
 OPTION B2310-03-000



52002608 A

BACKING ALARM

CIR	GA.	COLOR	CIRCUIT DESCRIPTION
476	16	WHITE	ALARM SIGNAL FROM MODULE

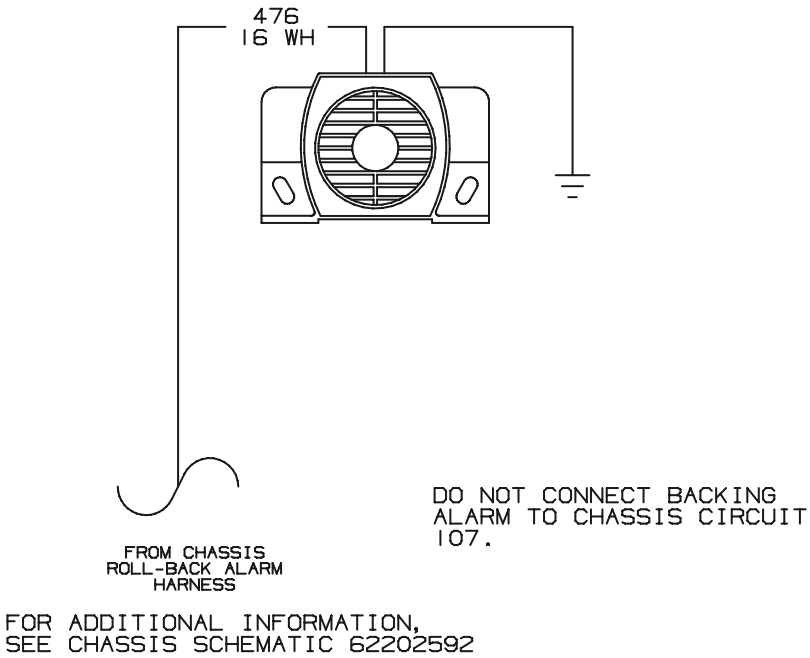


ROLL-BACK ALARM
 OPTION B2310-04-000 (STD-ER)
 OPTION B2310-07-000 (MVP-ER)




52002593 A

ROLL BACK ALARM

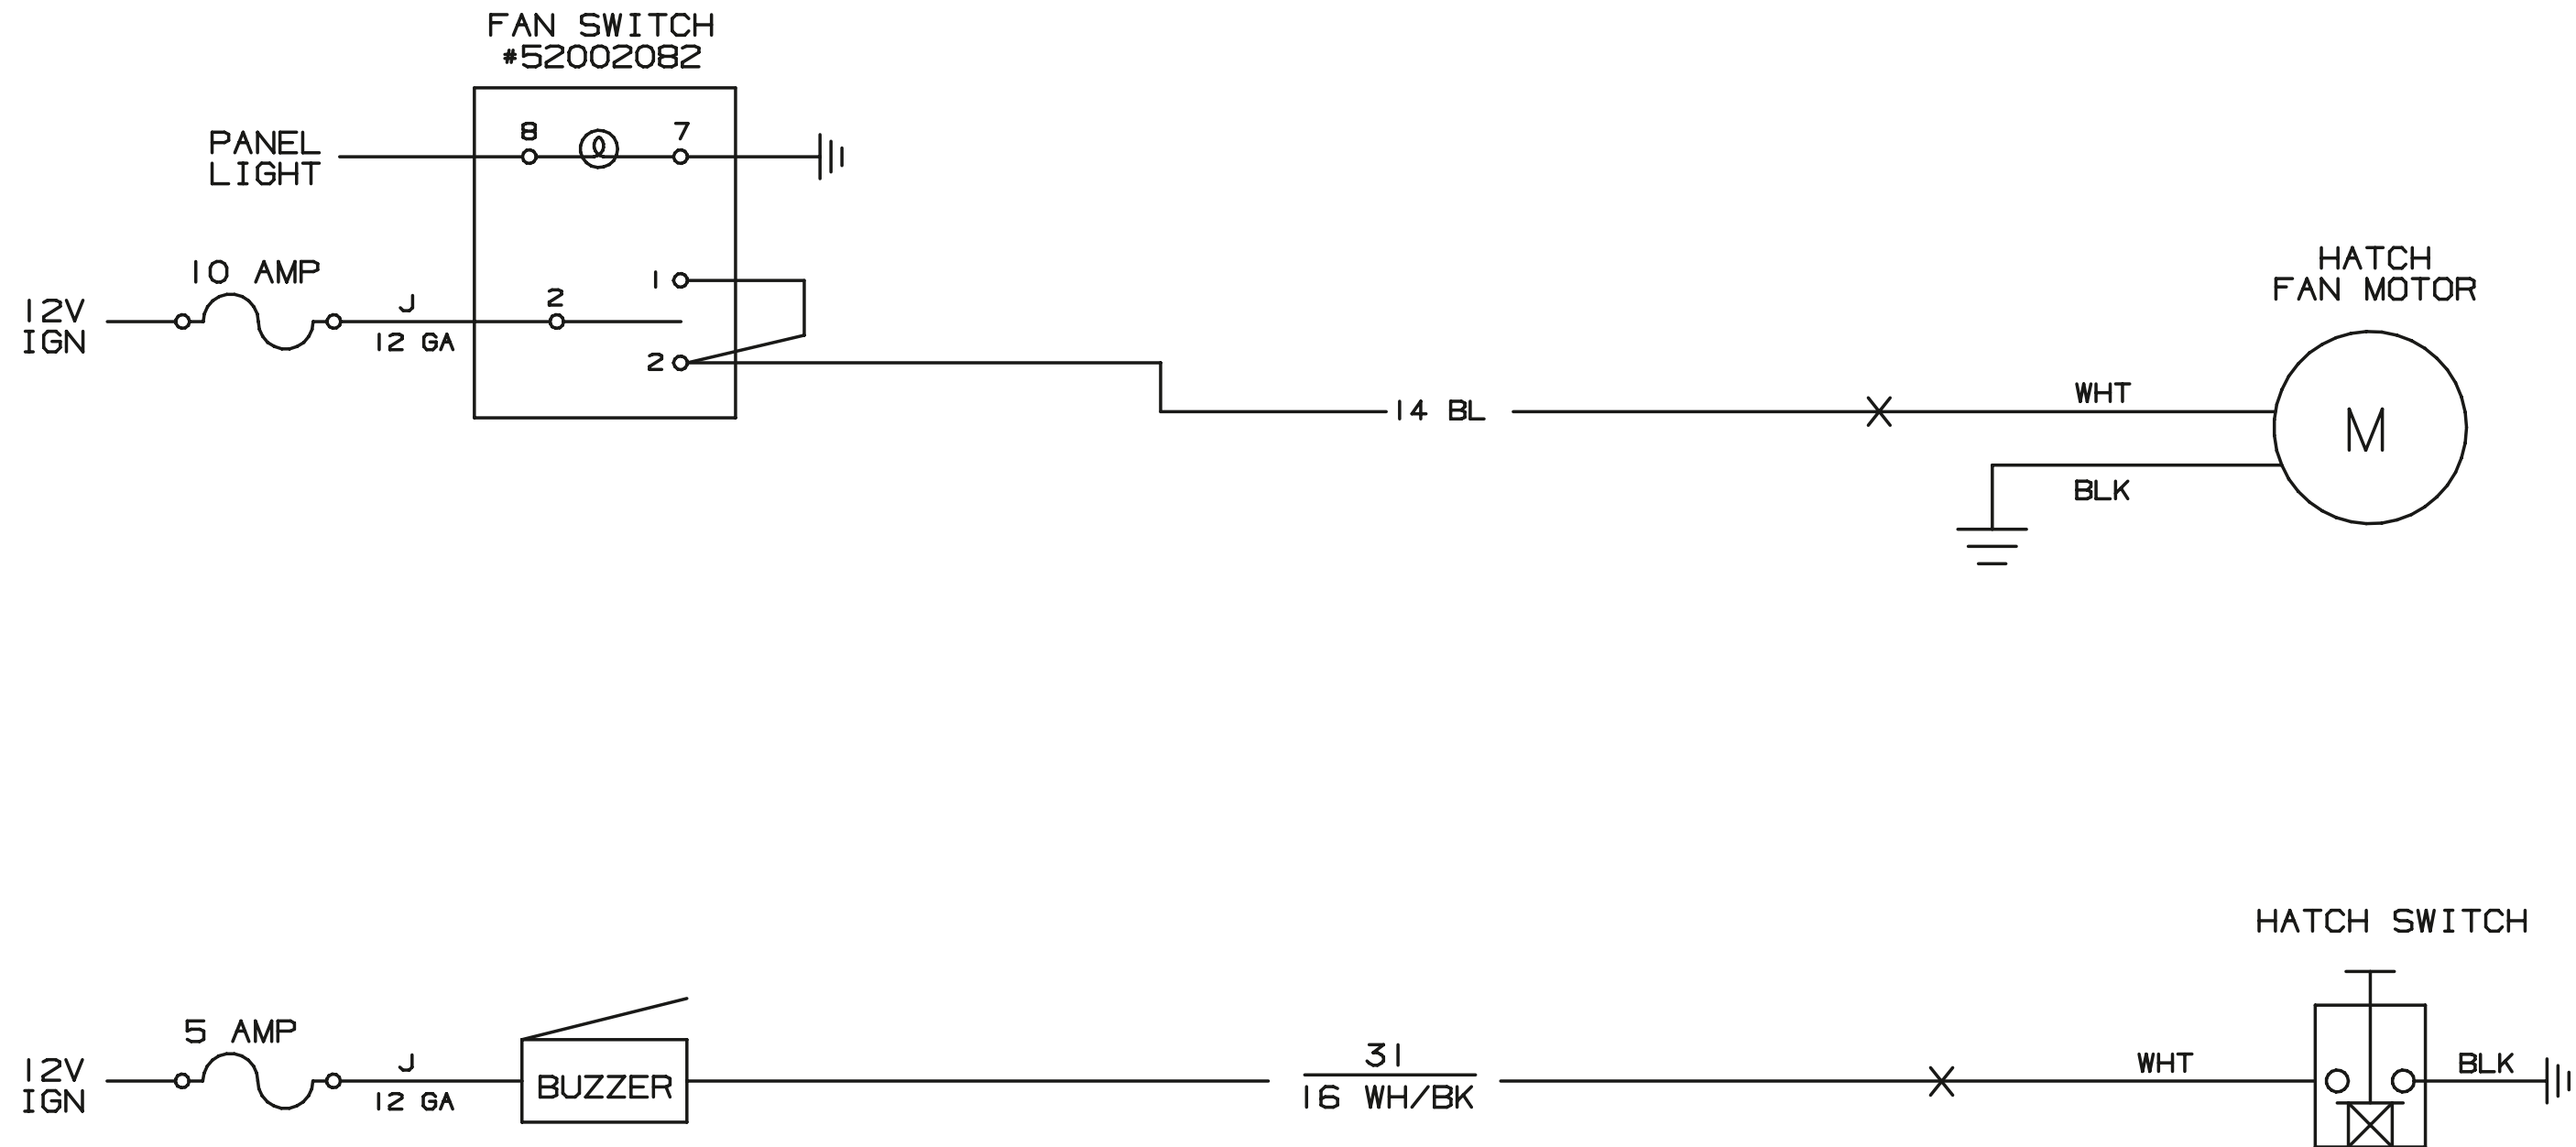


 BUILT BUSES	52002392 A
ROOF ESCAPE HATCH w/POWER VENT (TRANSPEC, MODEL 1600)	

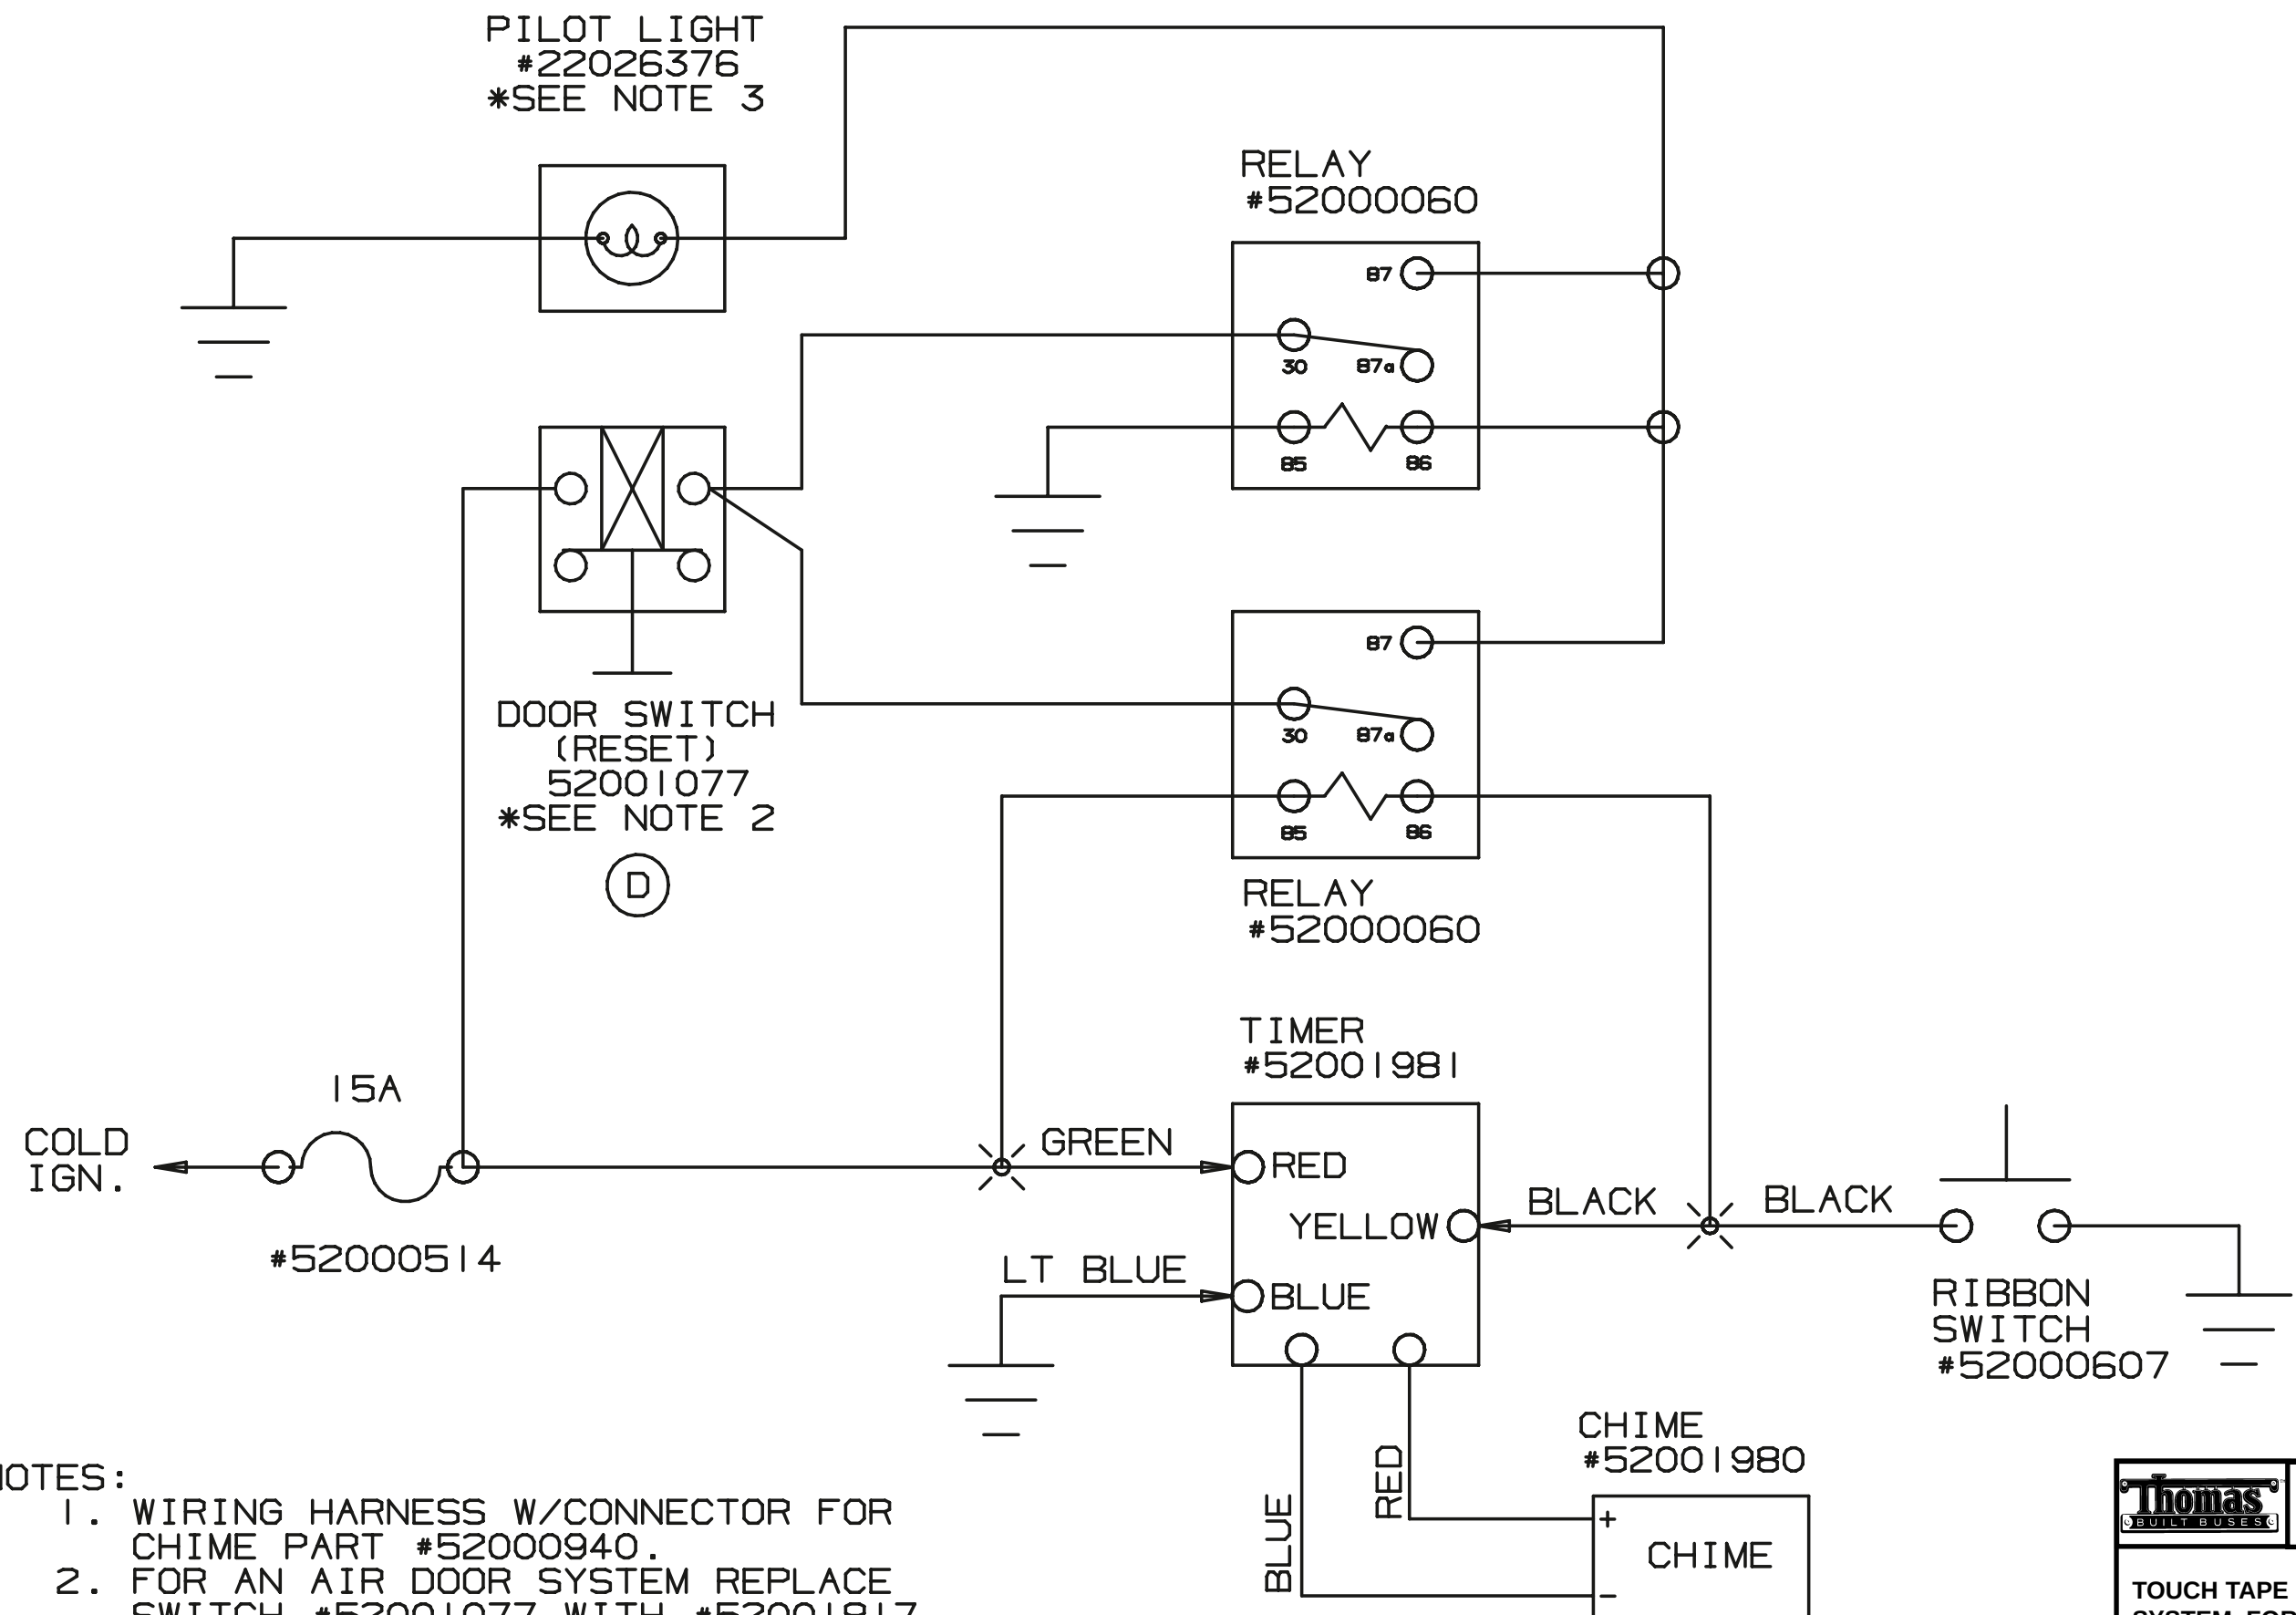

NOTES:

1. WIRING HARNESS W/CONNECTOR FOR CHIME PART #52000940.
2. FOR AN AIR DOOR SYSTEM REPLACE SWITCH #52001077 WITH #52001817.
3. FOR M-BODY USE PILOT LIGHT IN BODY PILOT ASM. #6221000.

Thomas BUILT BUSES	52001843 D
TOUCH TAPE CHIME SYSTEM, FOR ADA STOP REQUEST	

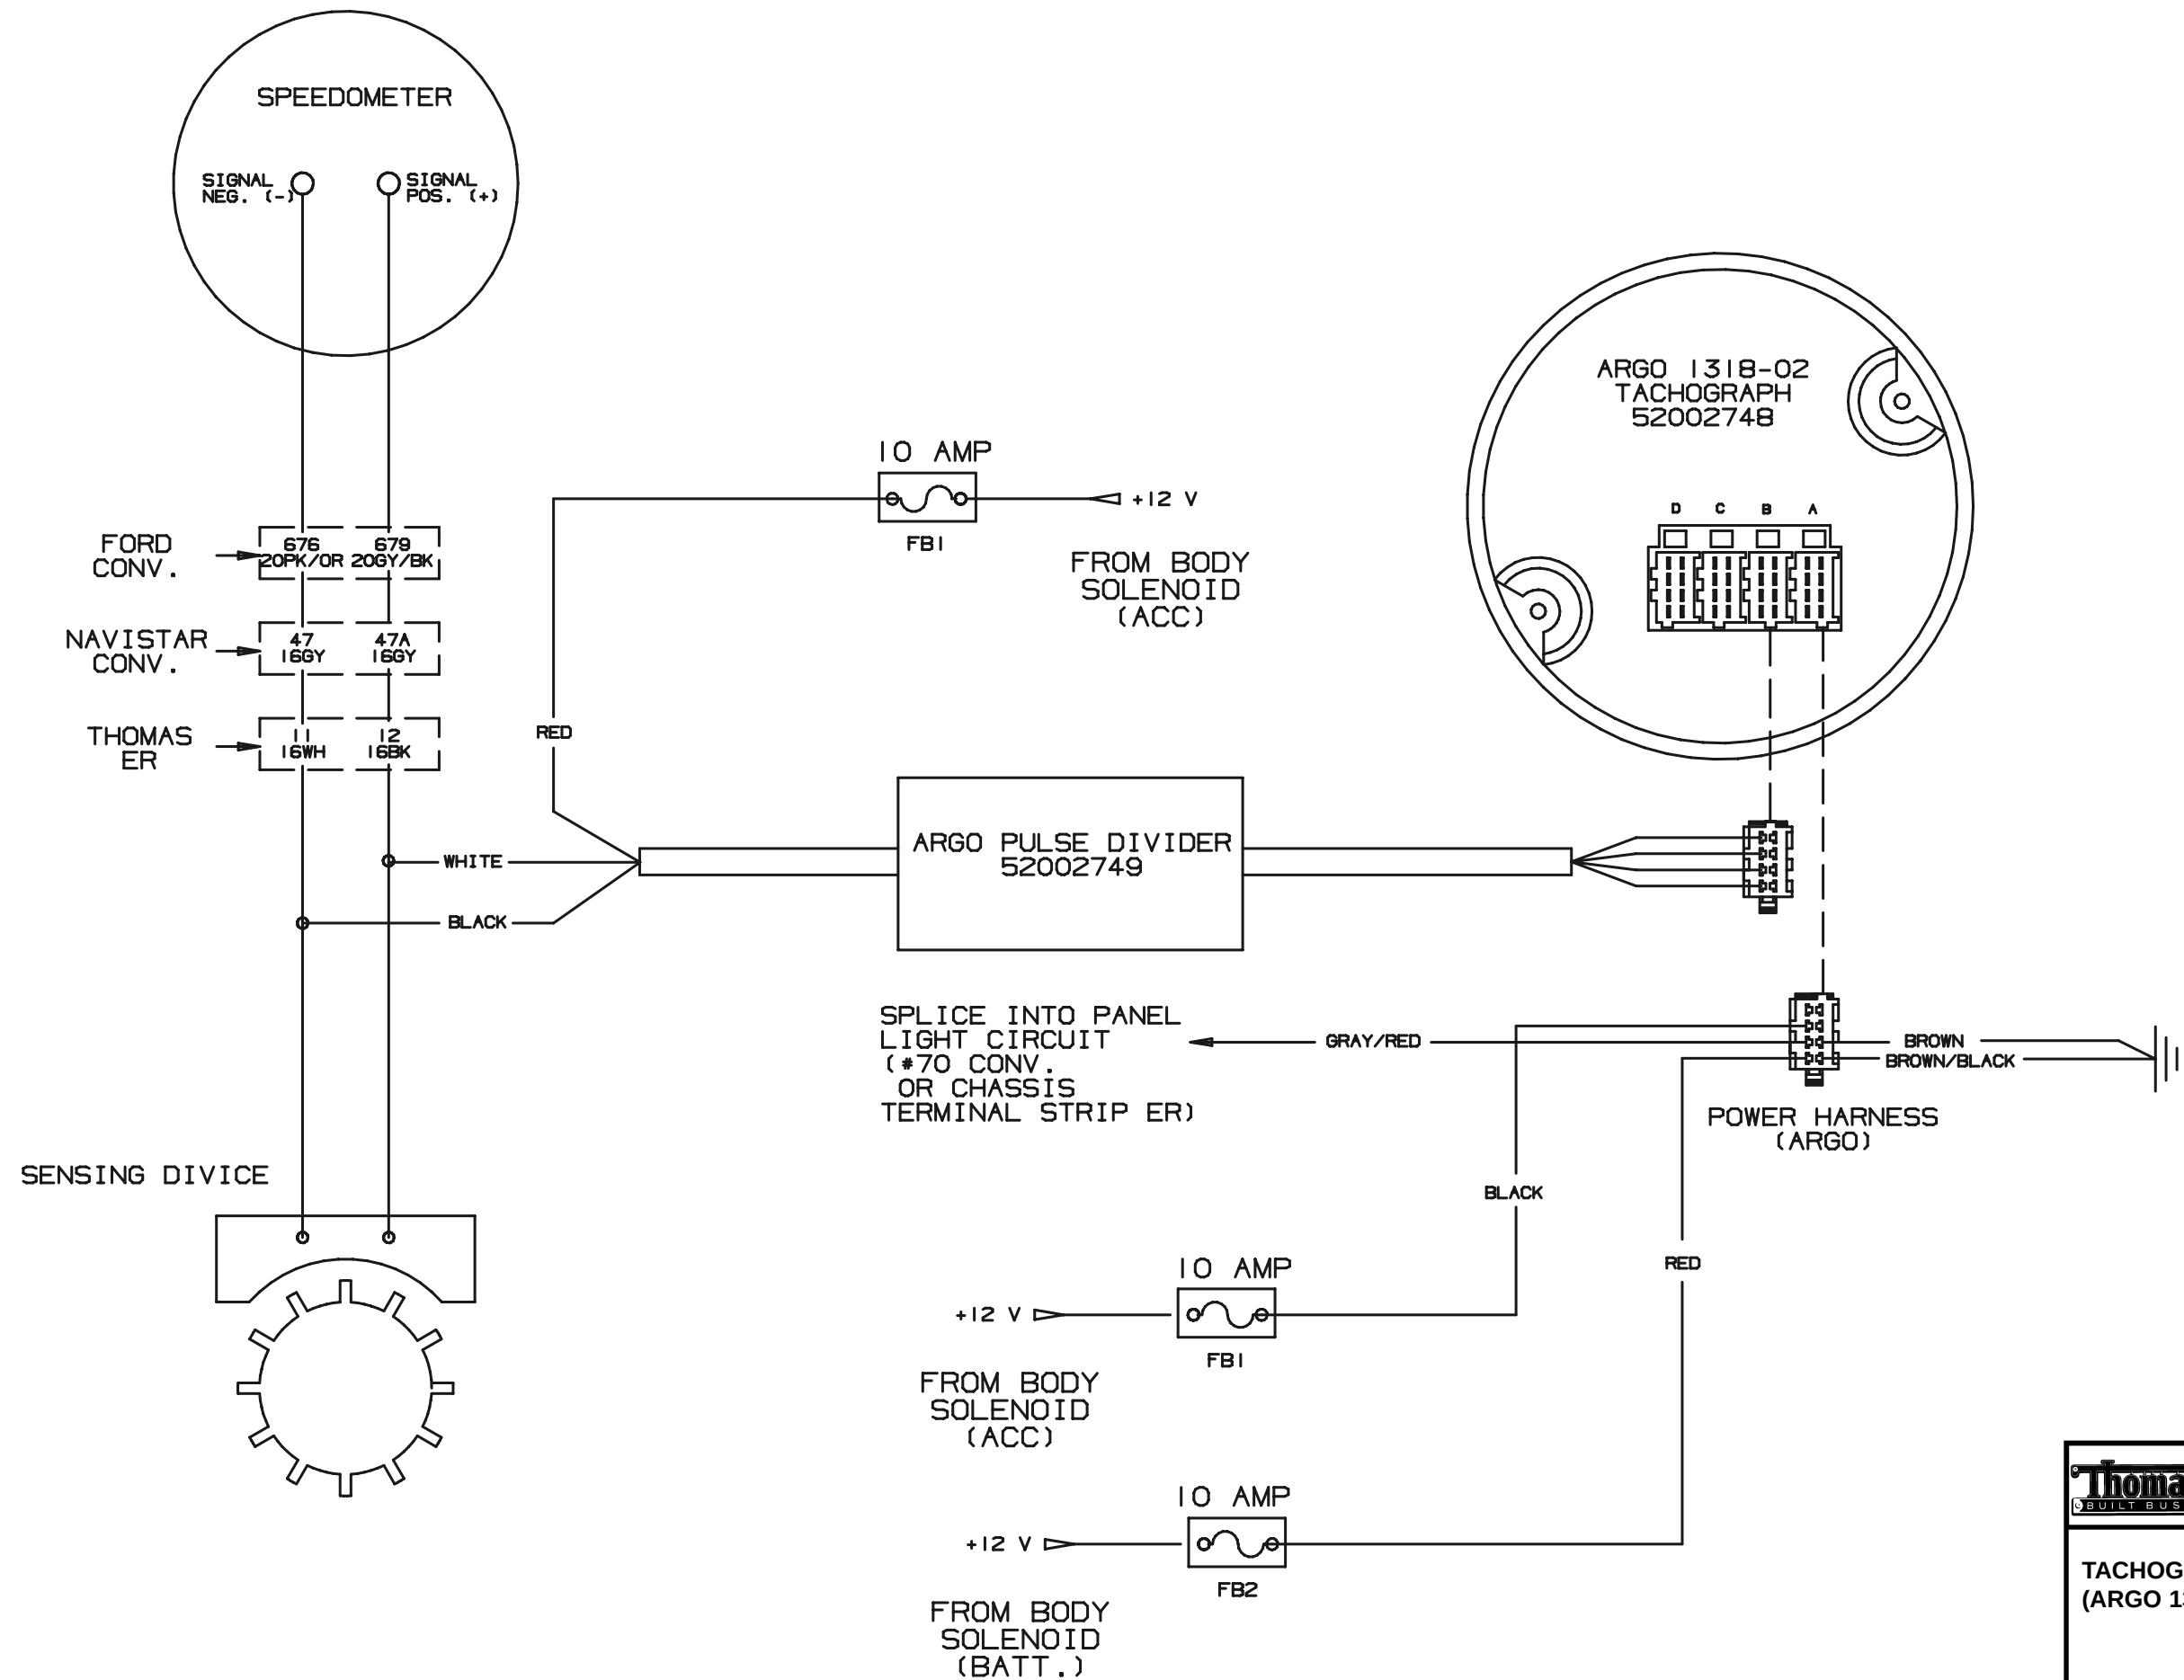


	52002751 A
TACHOGRAPH (ARGO 1318-02)	

NOTES: _

[illegible]


**MVP-ER
MAIN CHASSIS
SCHEMATICS**

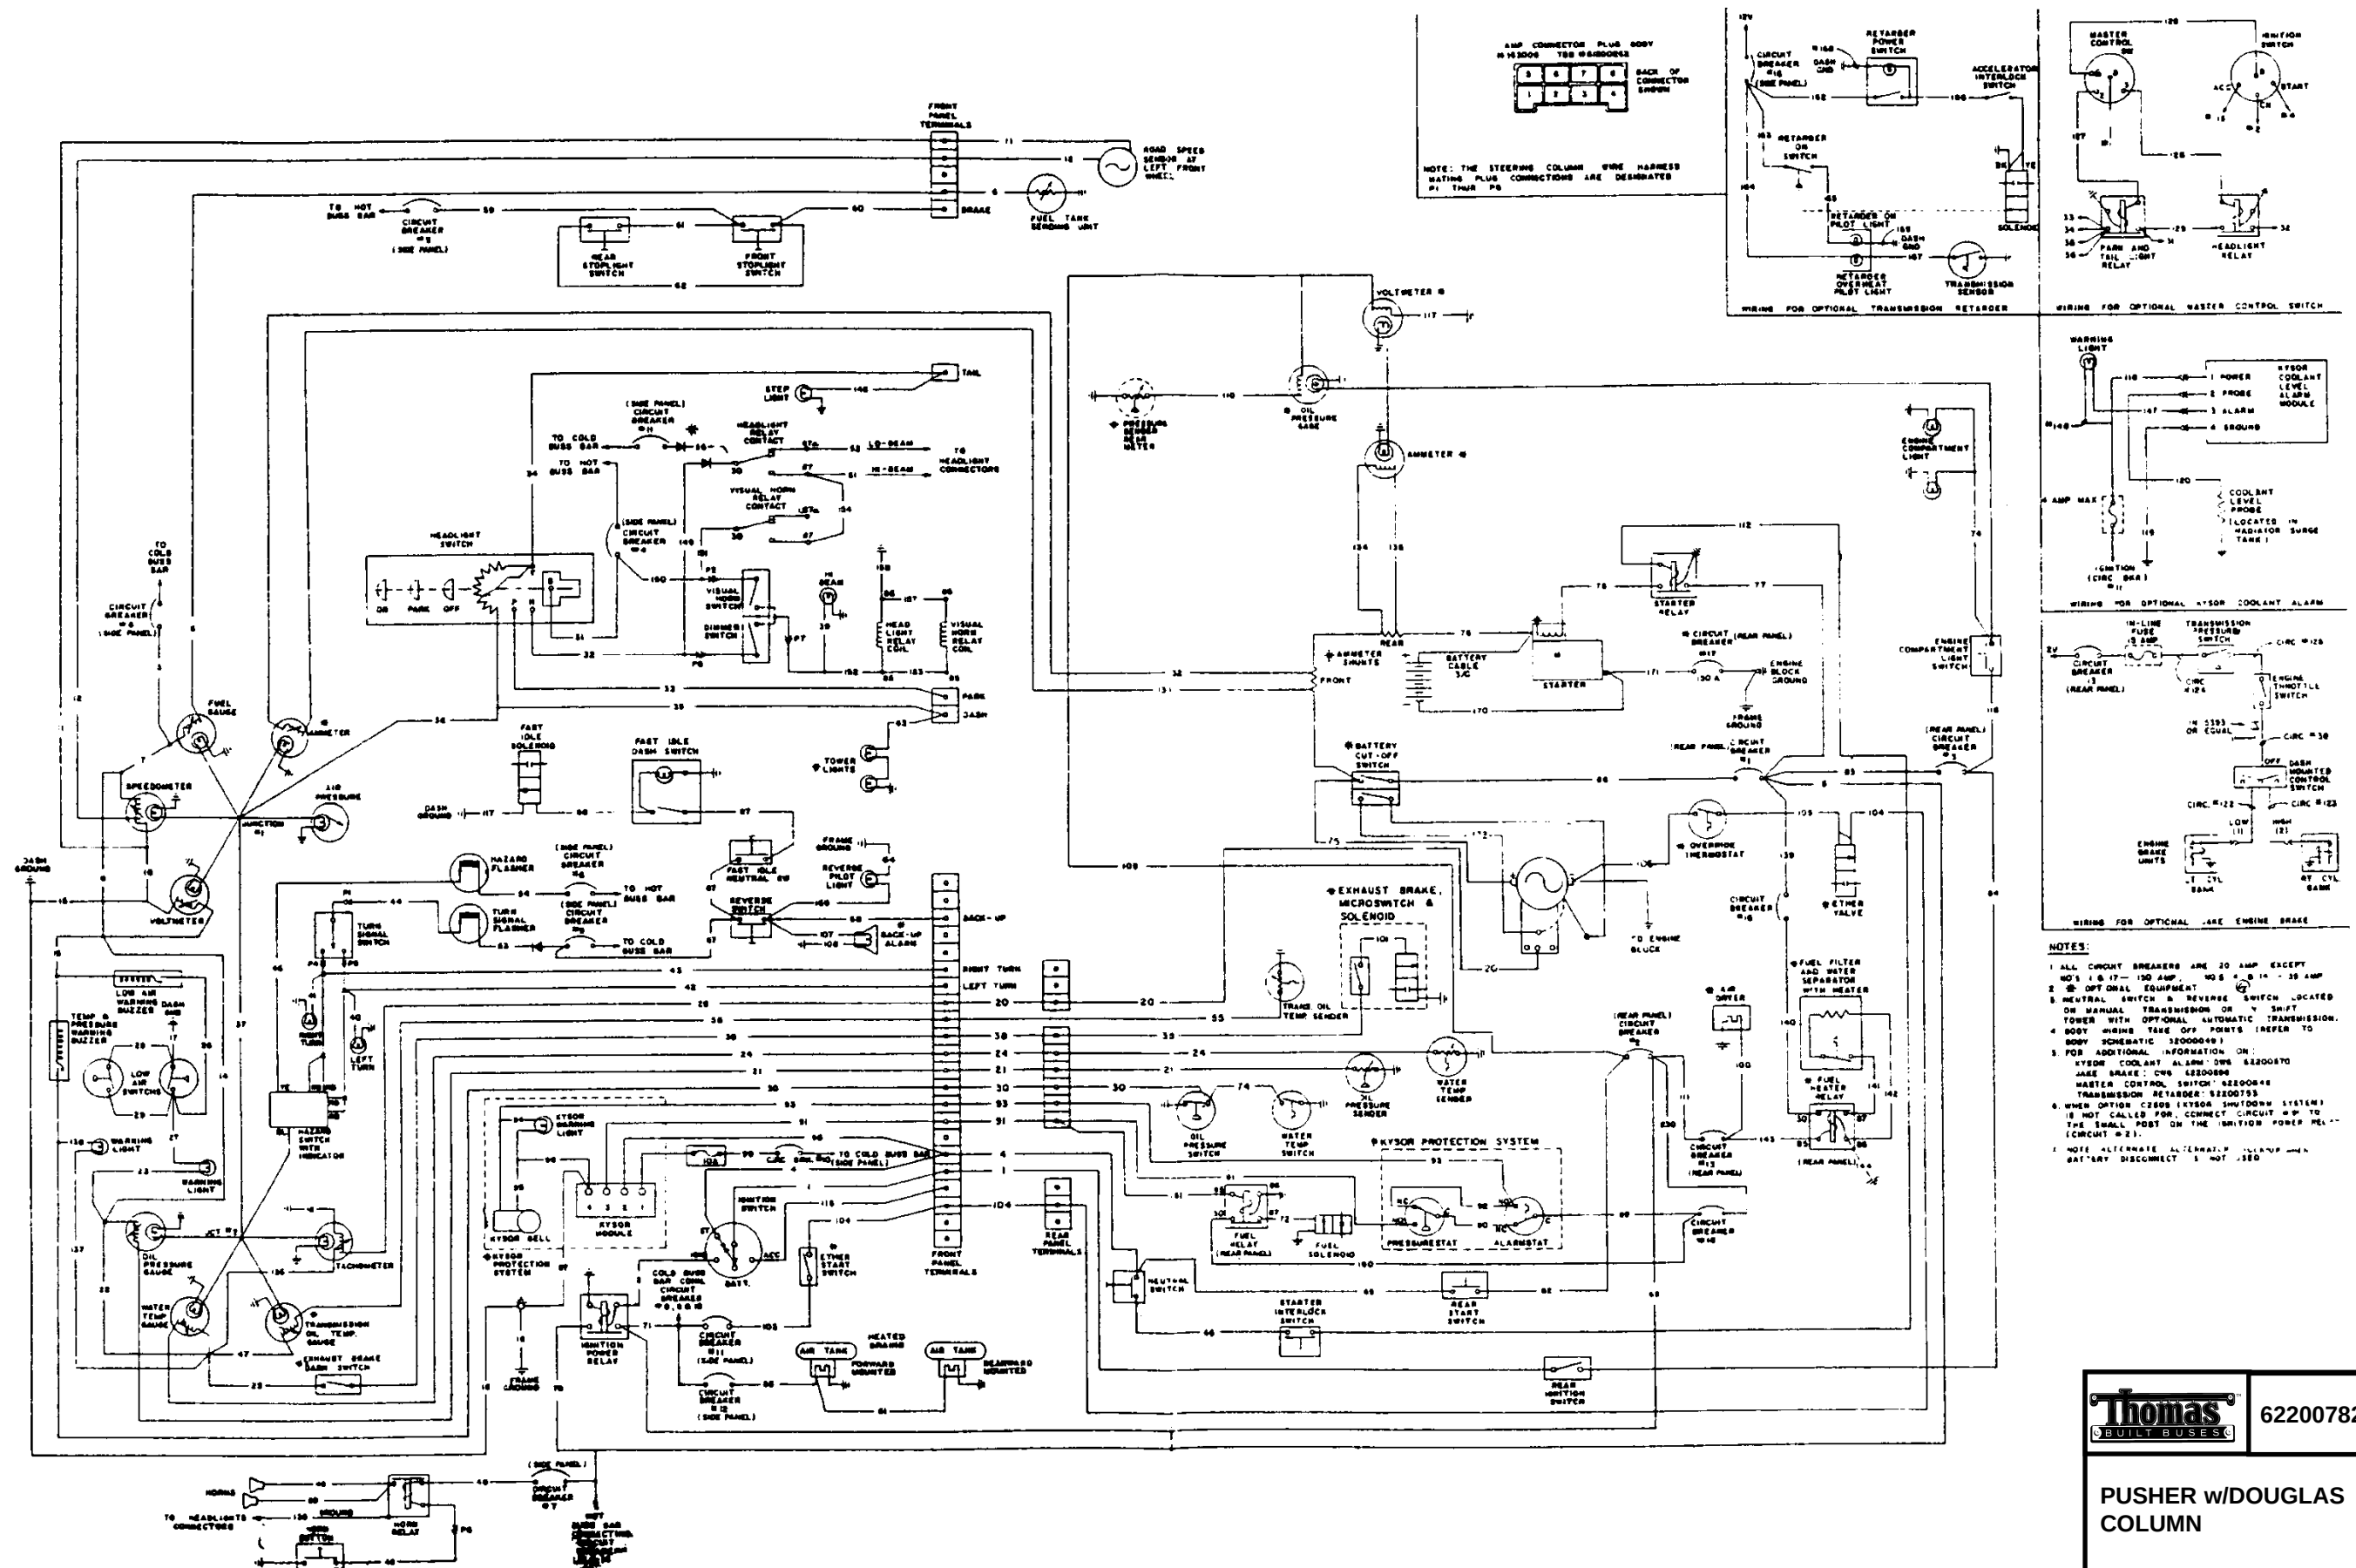



Thomas
 BUILT BUSES


62200782 E


PUSHER W/DOUGLAS COLUMN

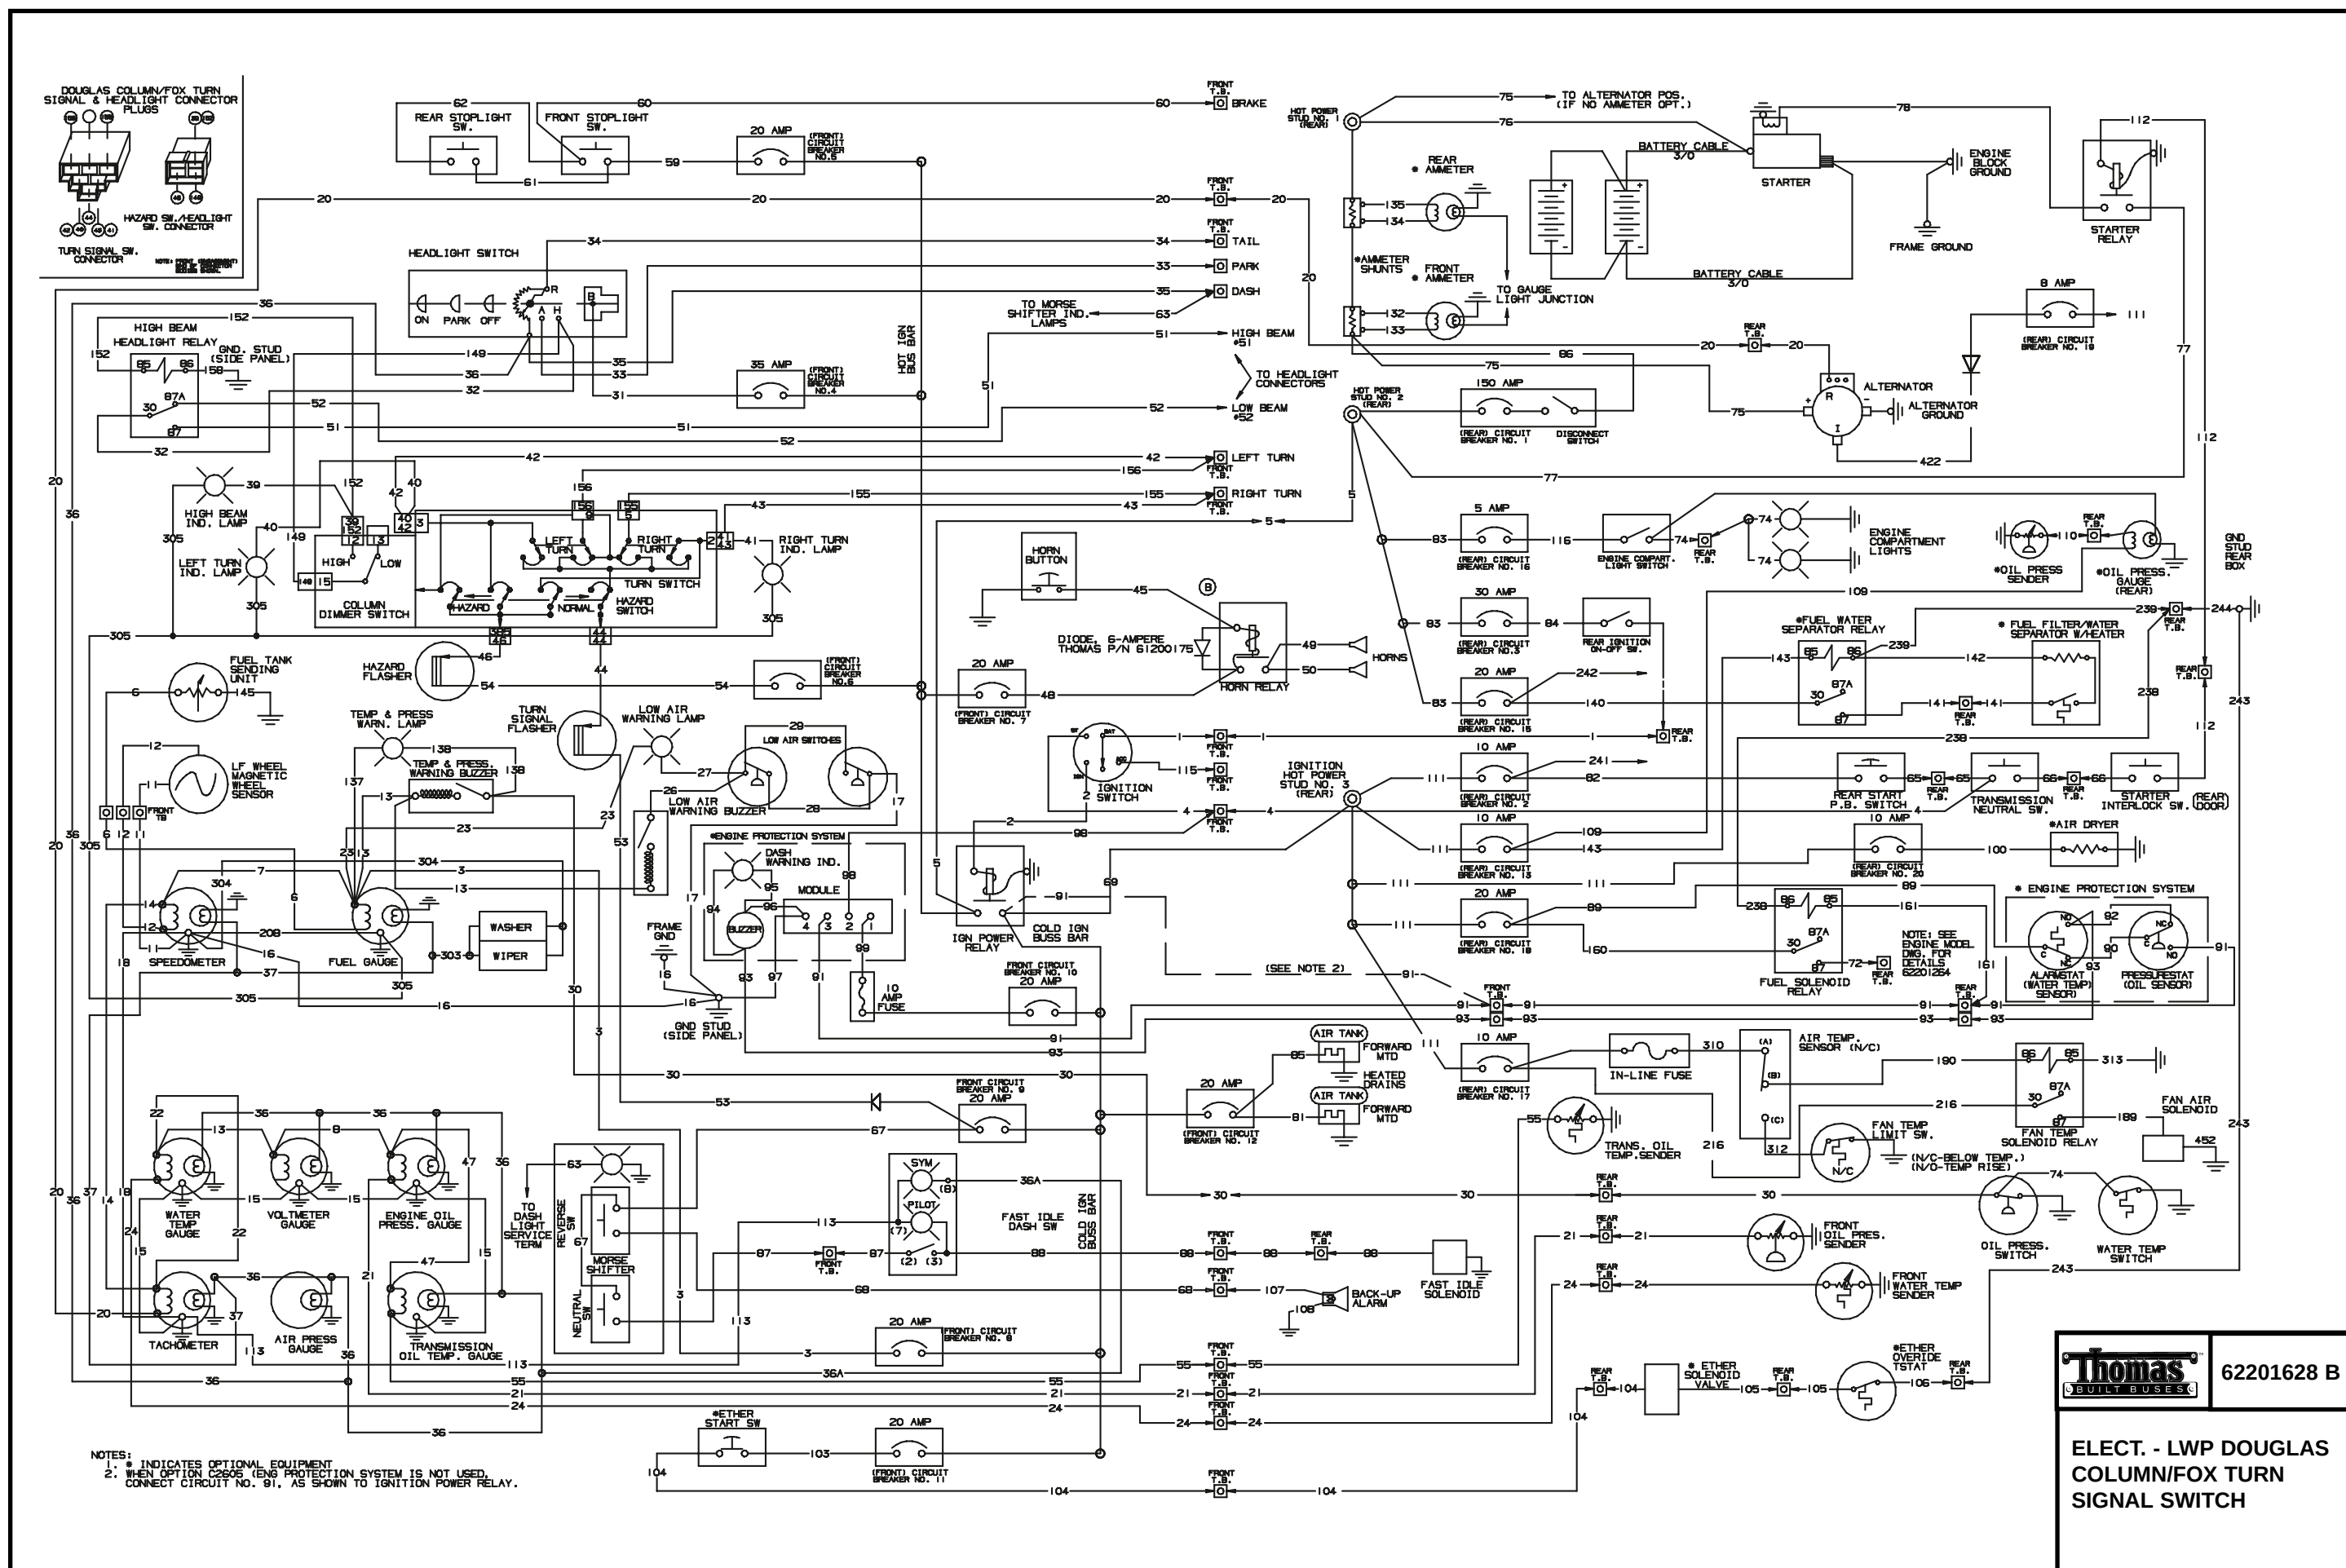


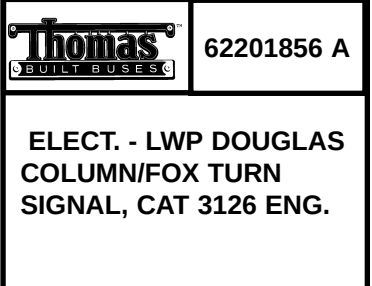

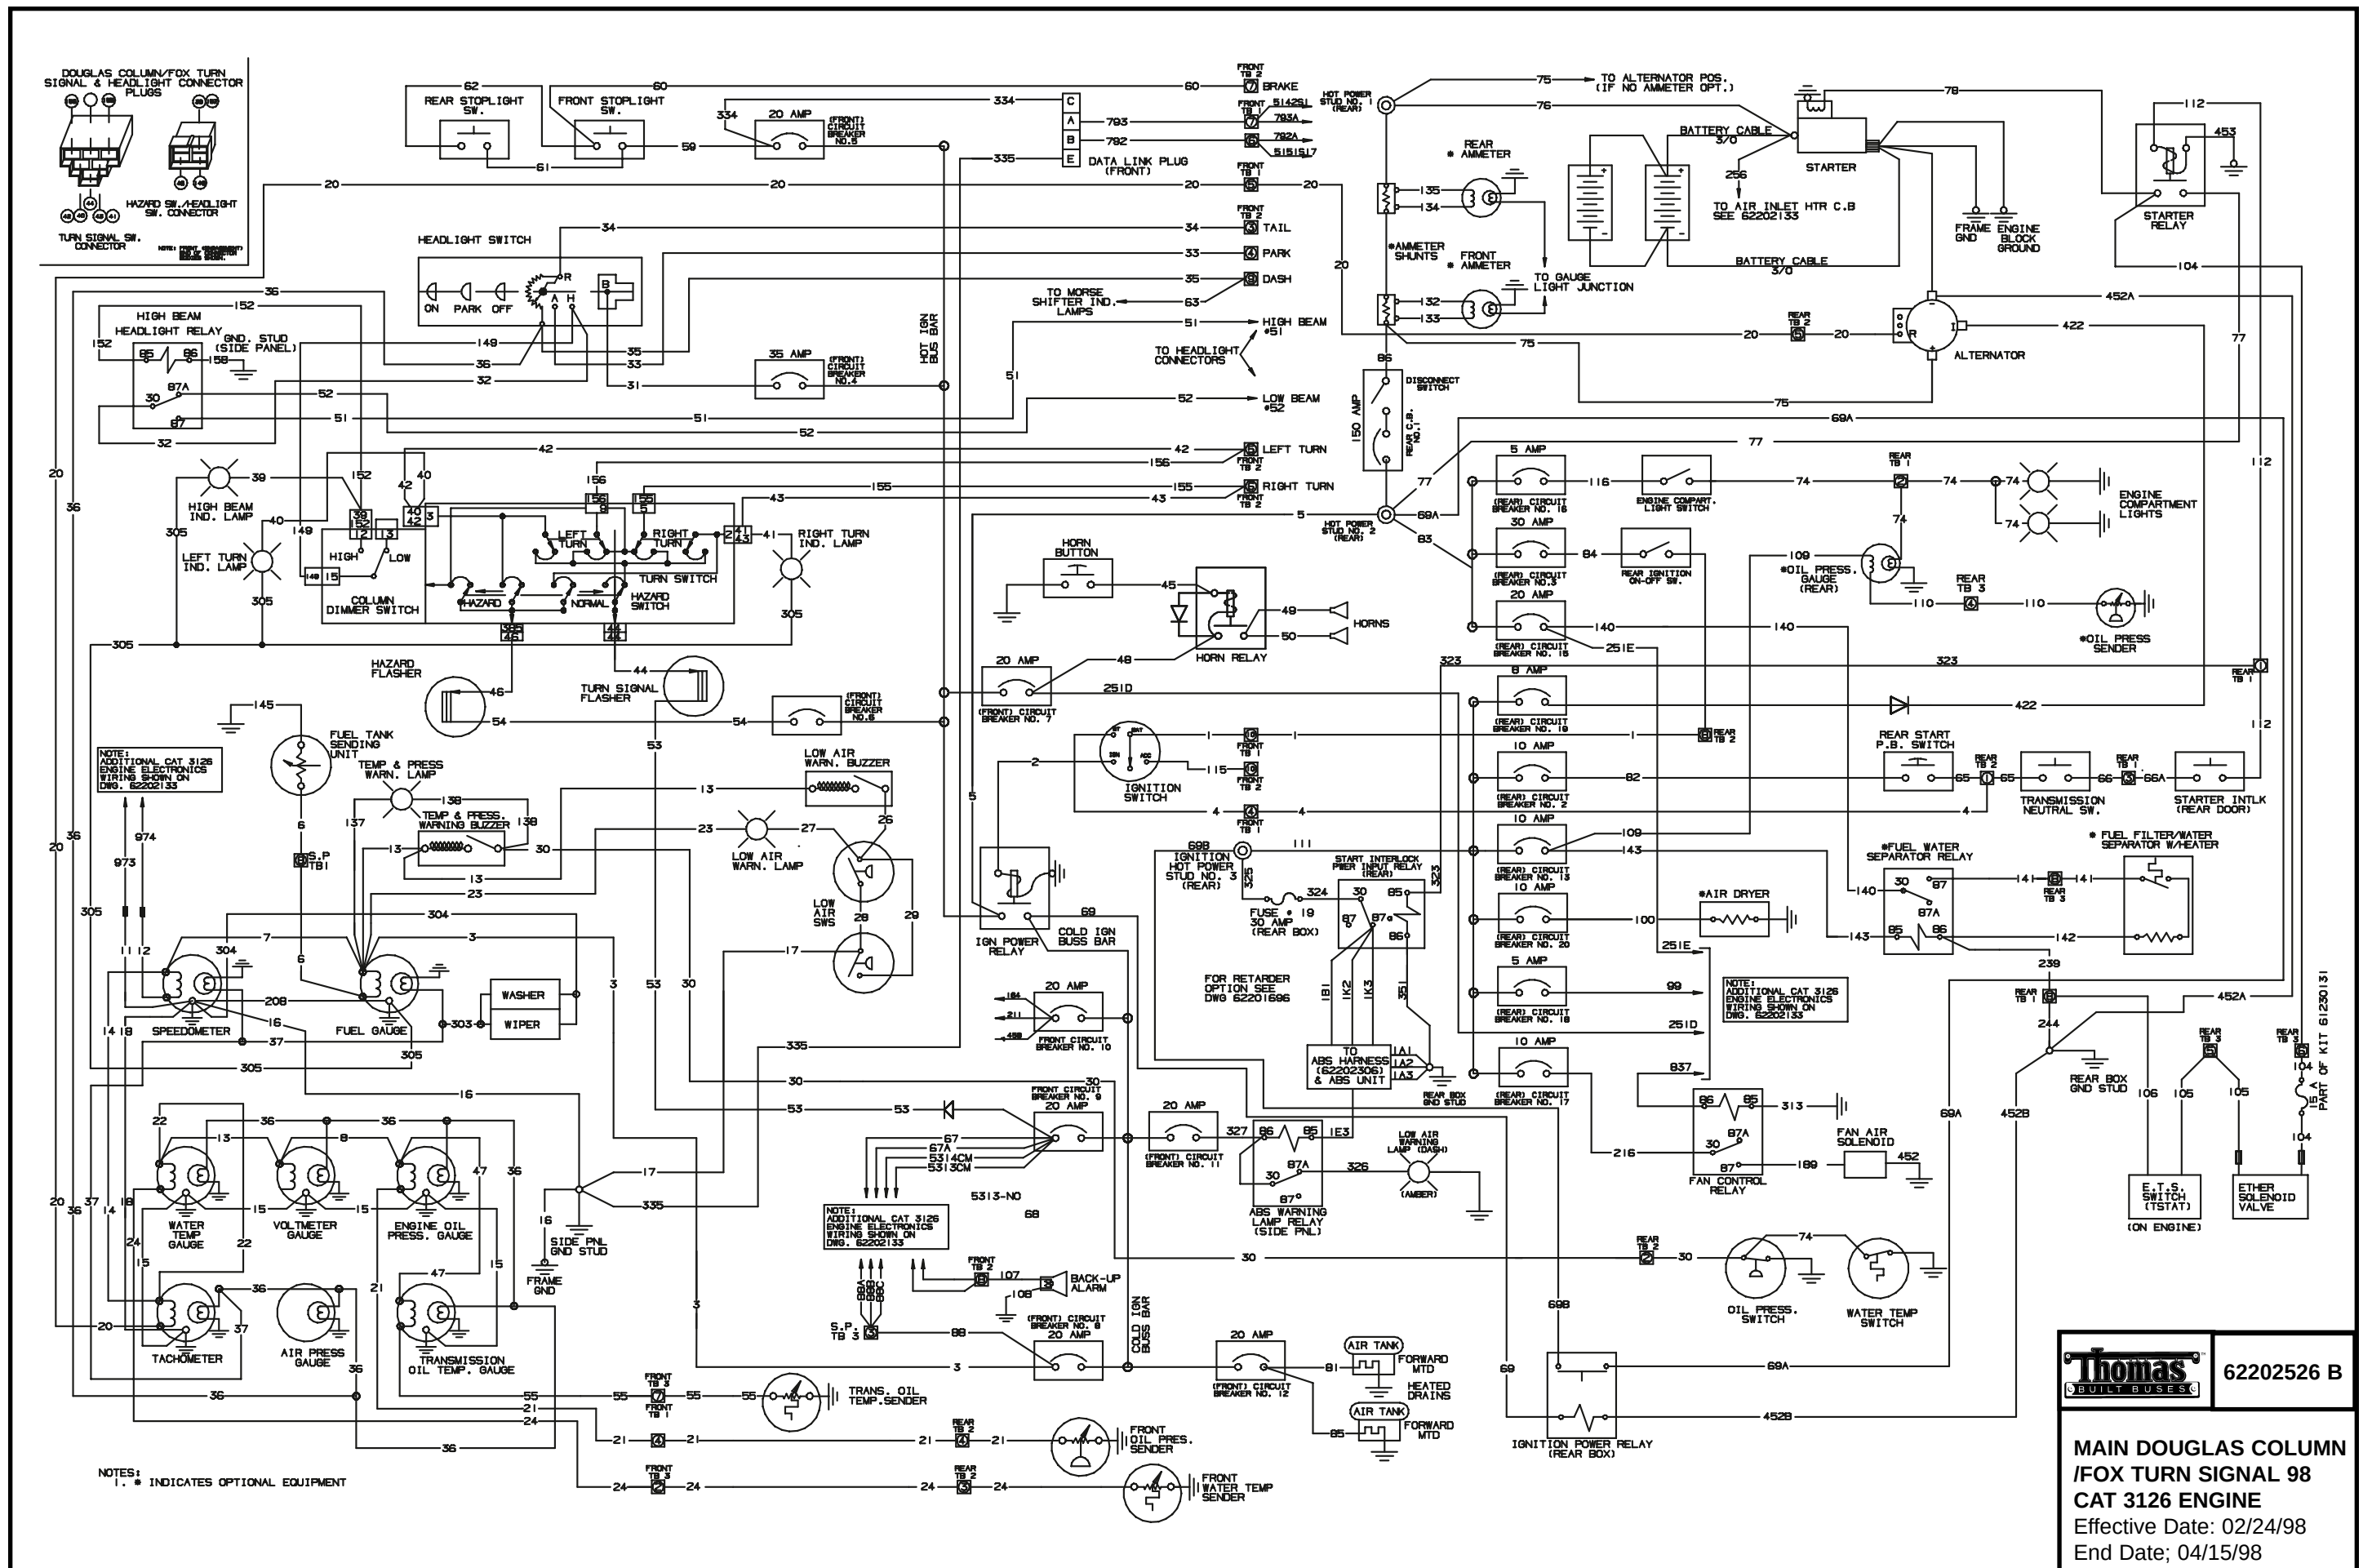

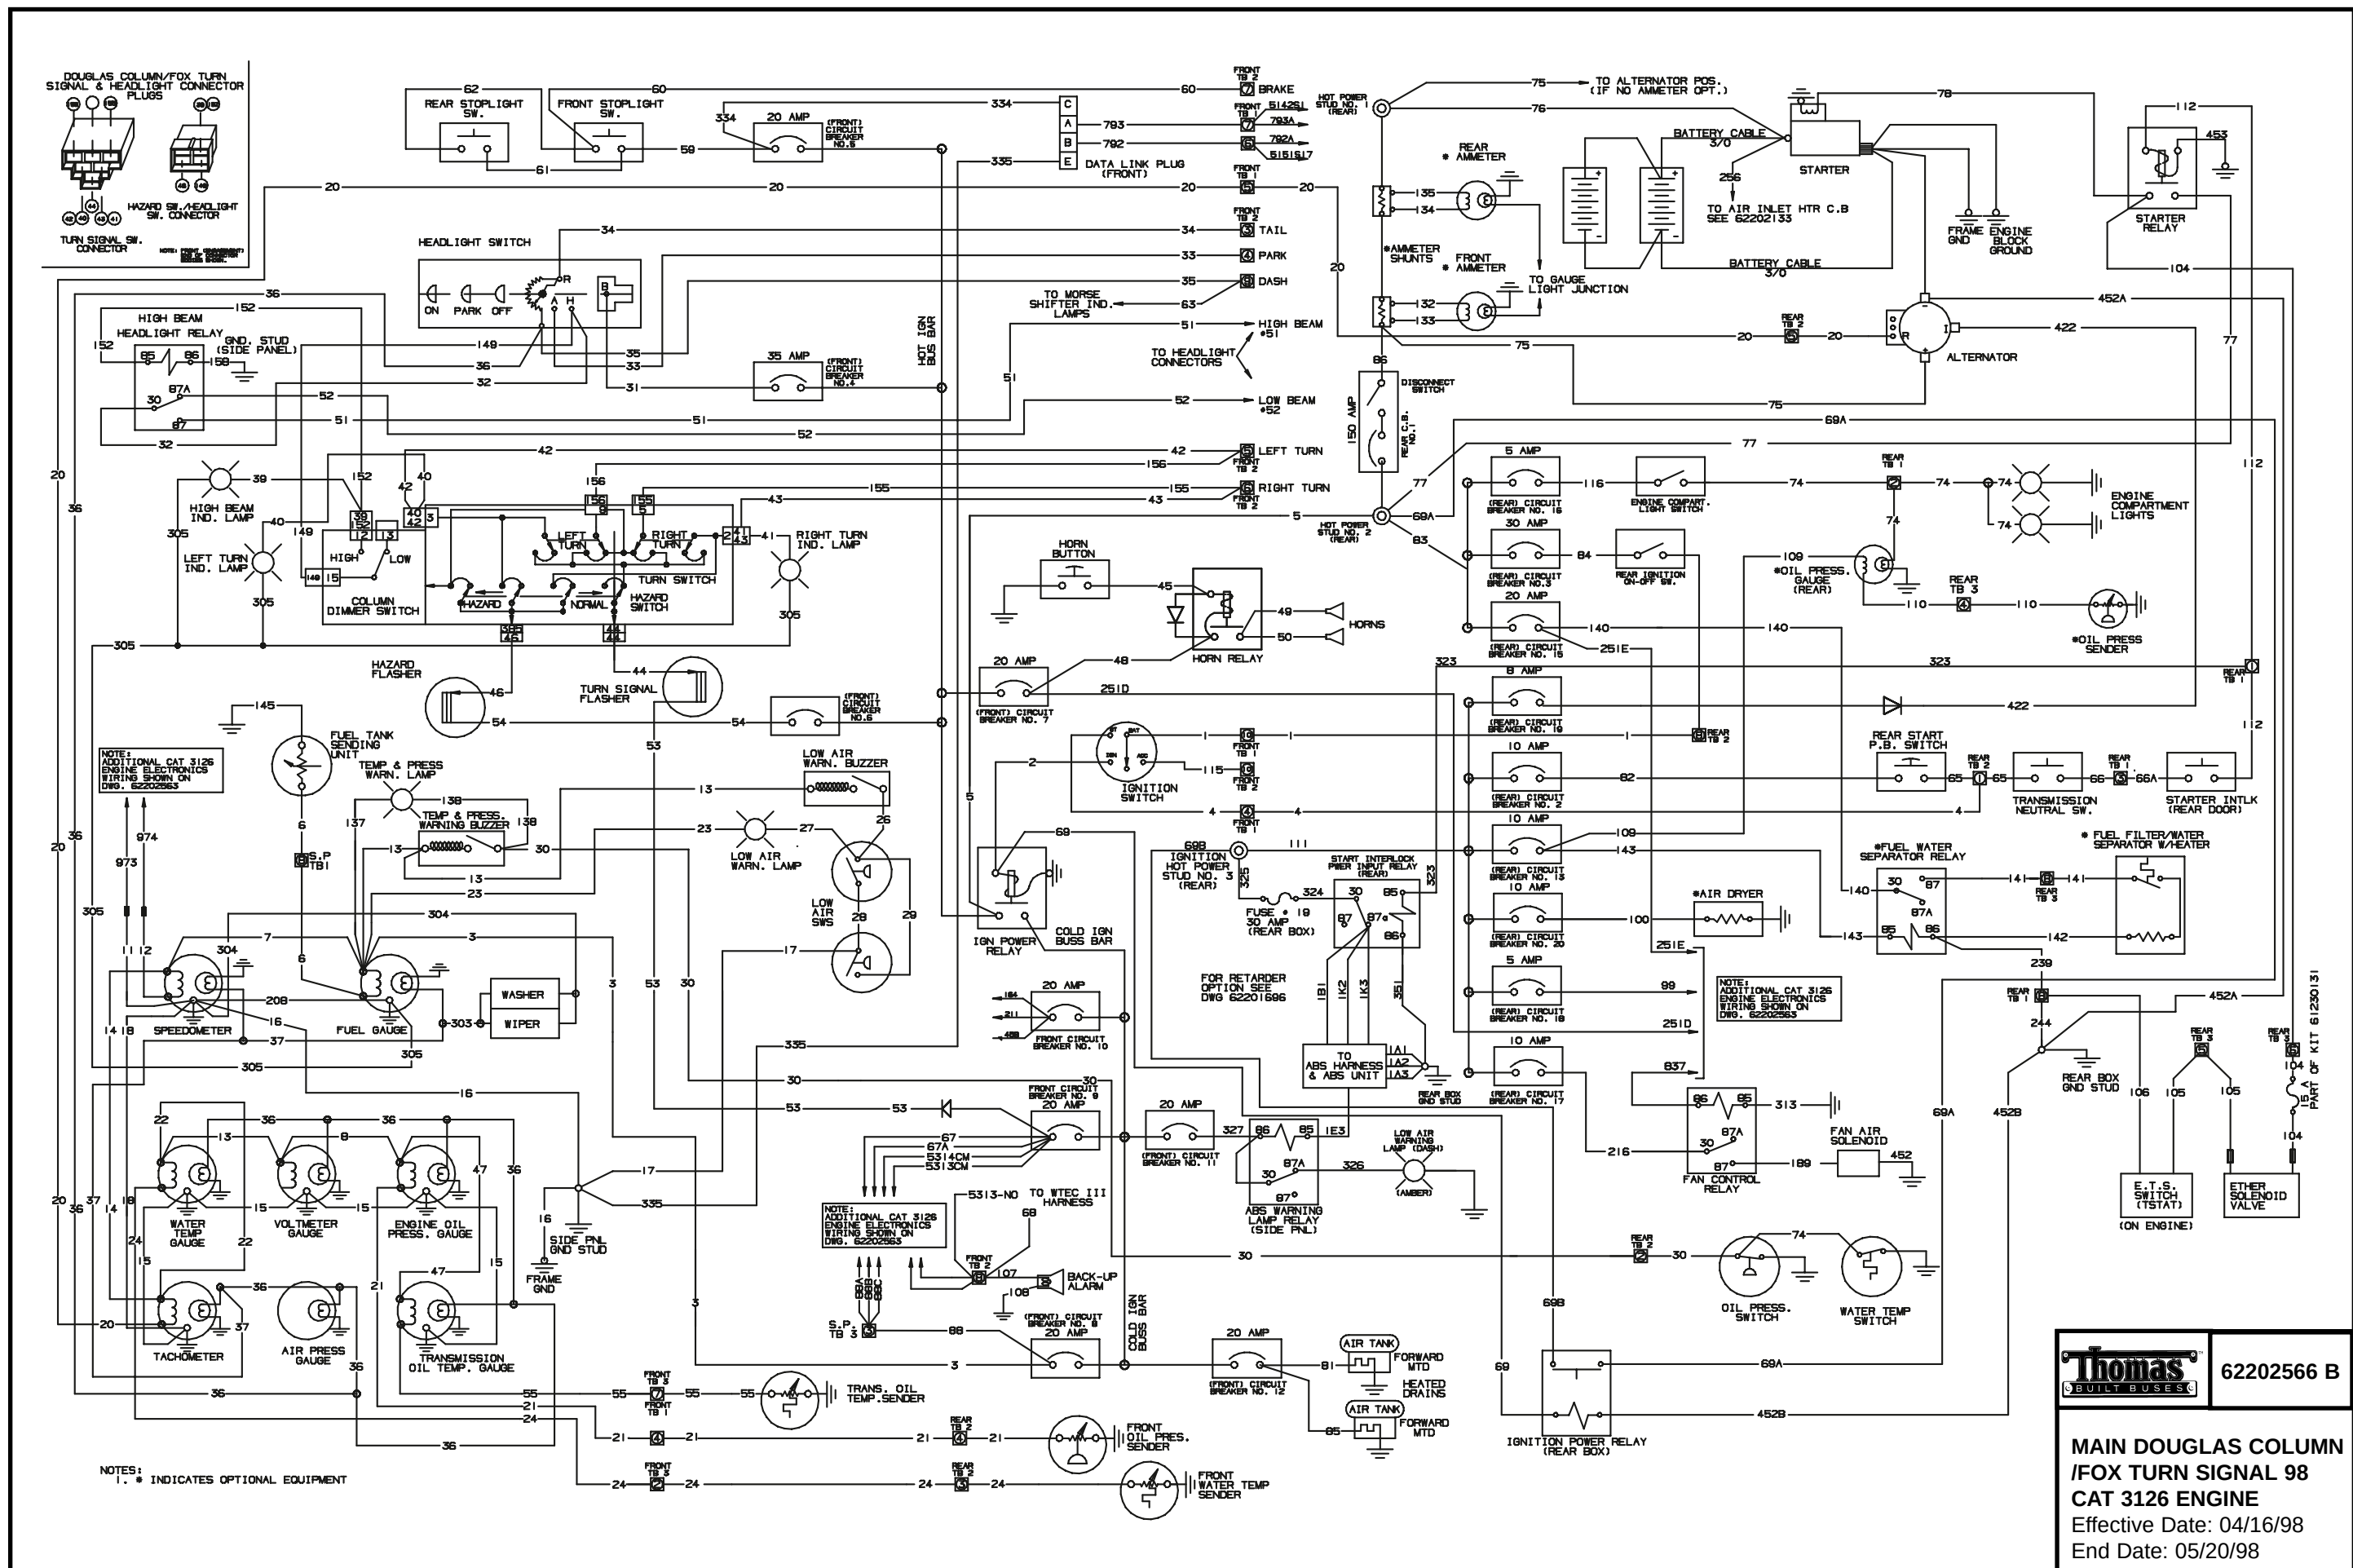

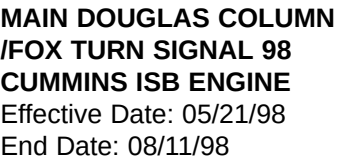


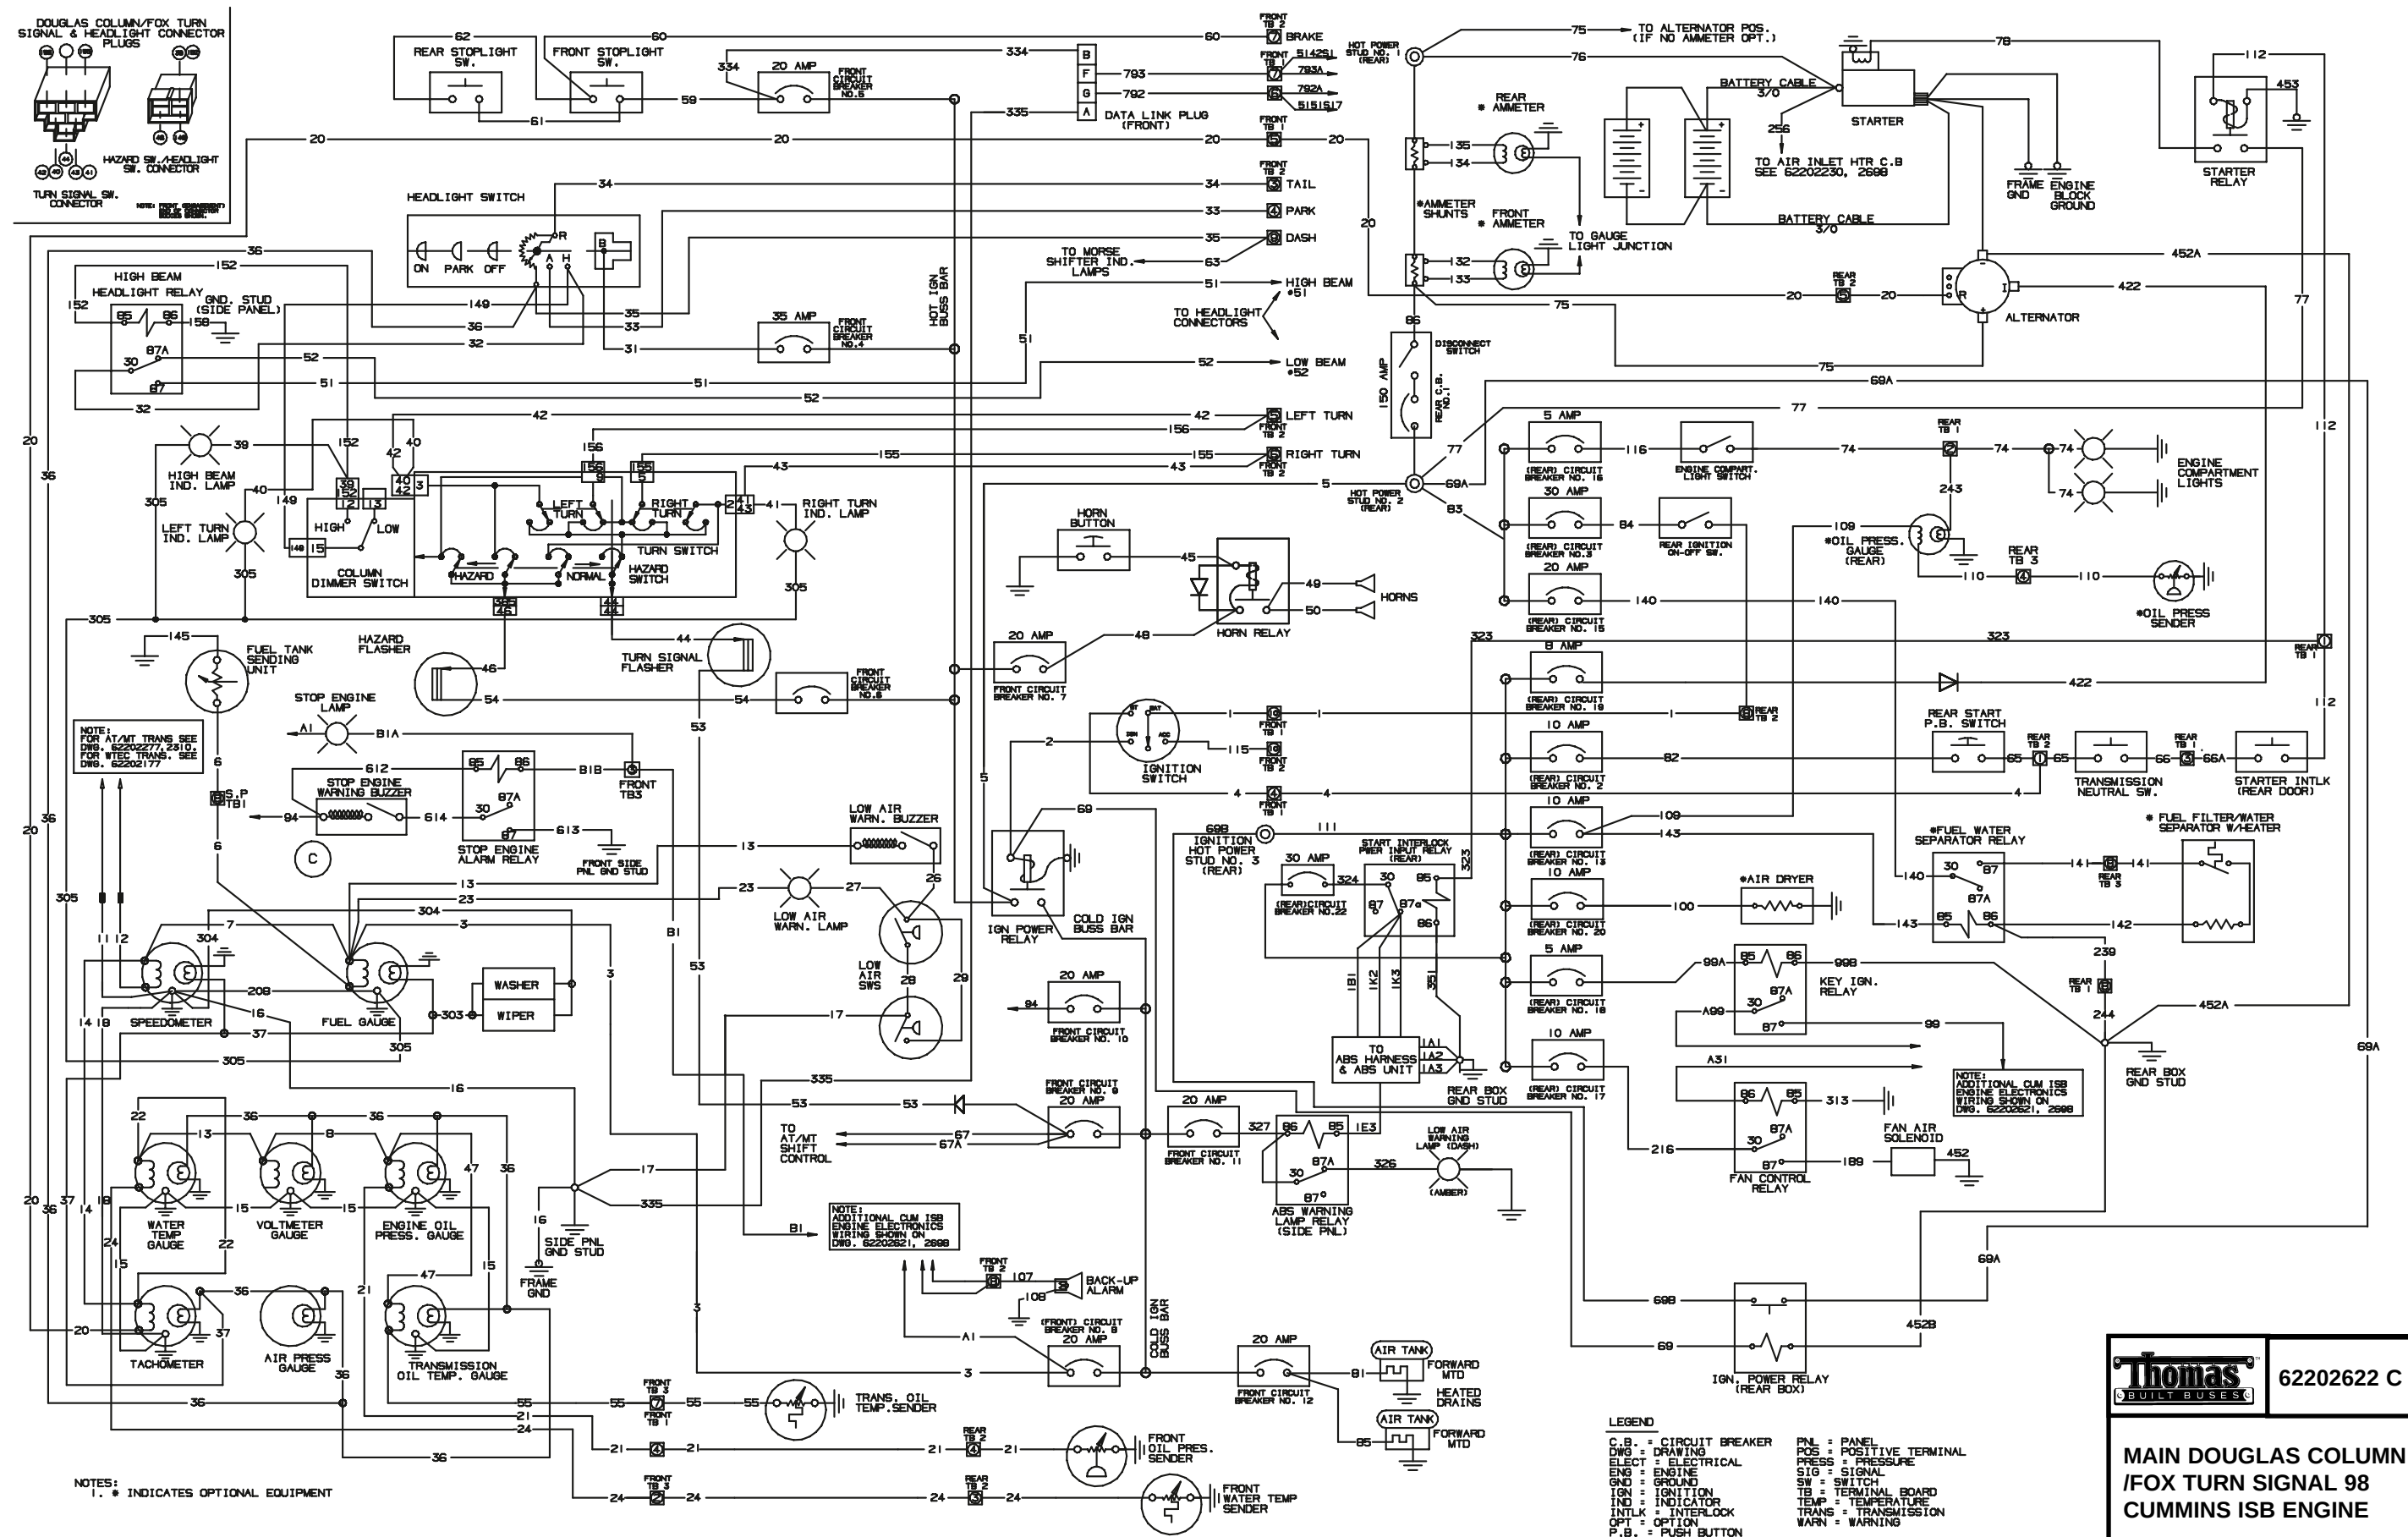


62202622 C

MAIN DOUGLAS COLUMN /FOX TURN SIGNAL 98 CUMMINS ISB ENGINE


Effective Date: 08/12/98

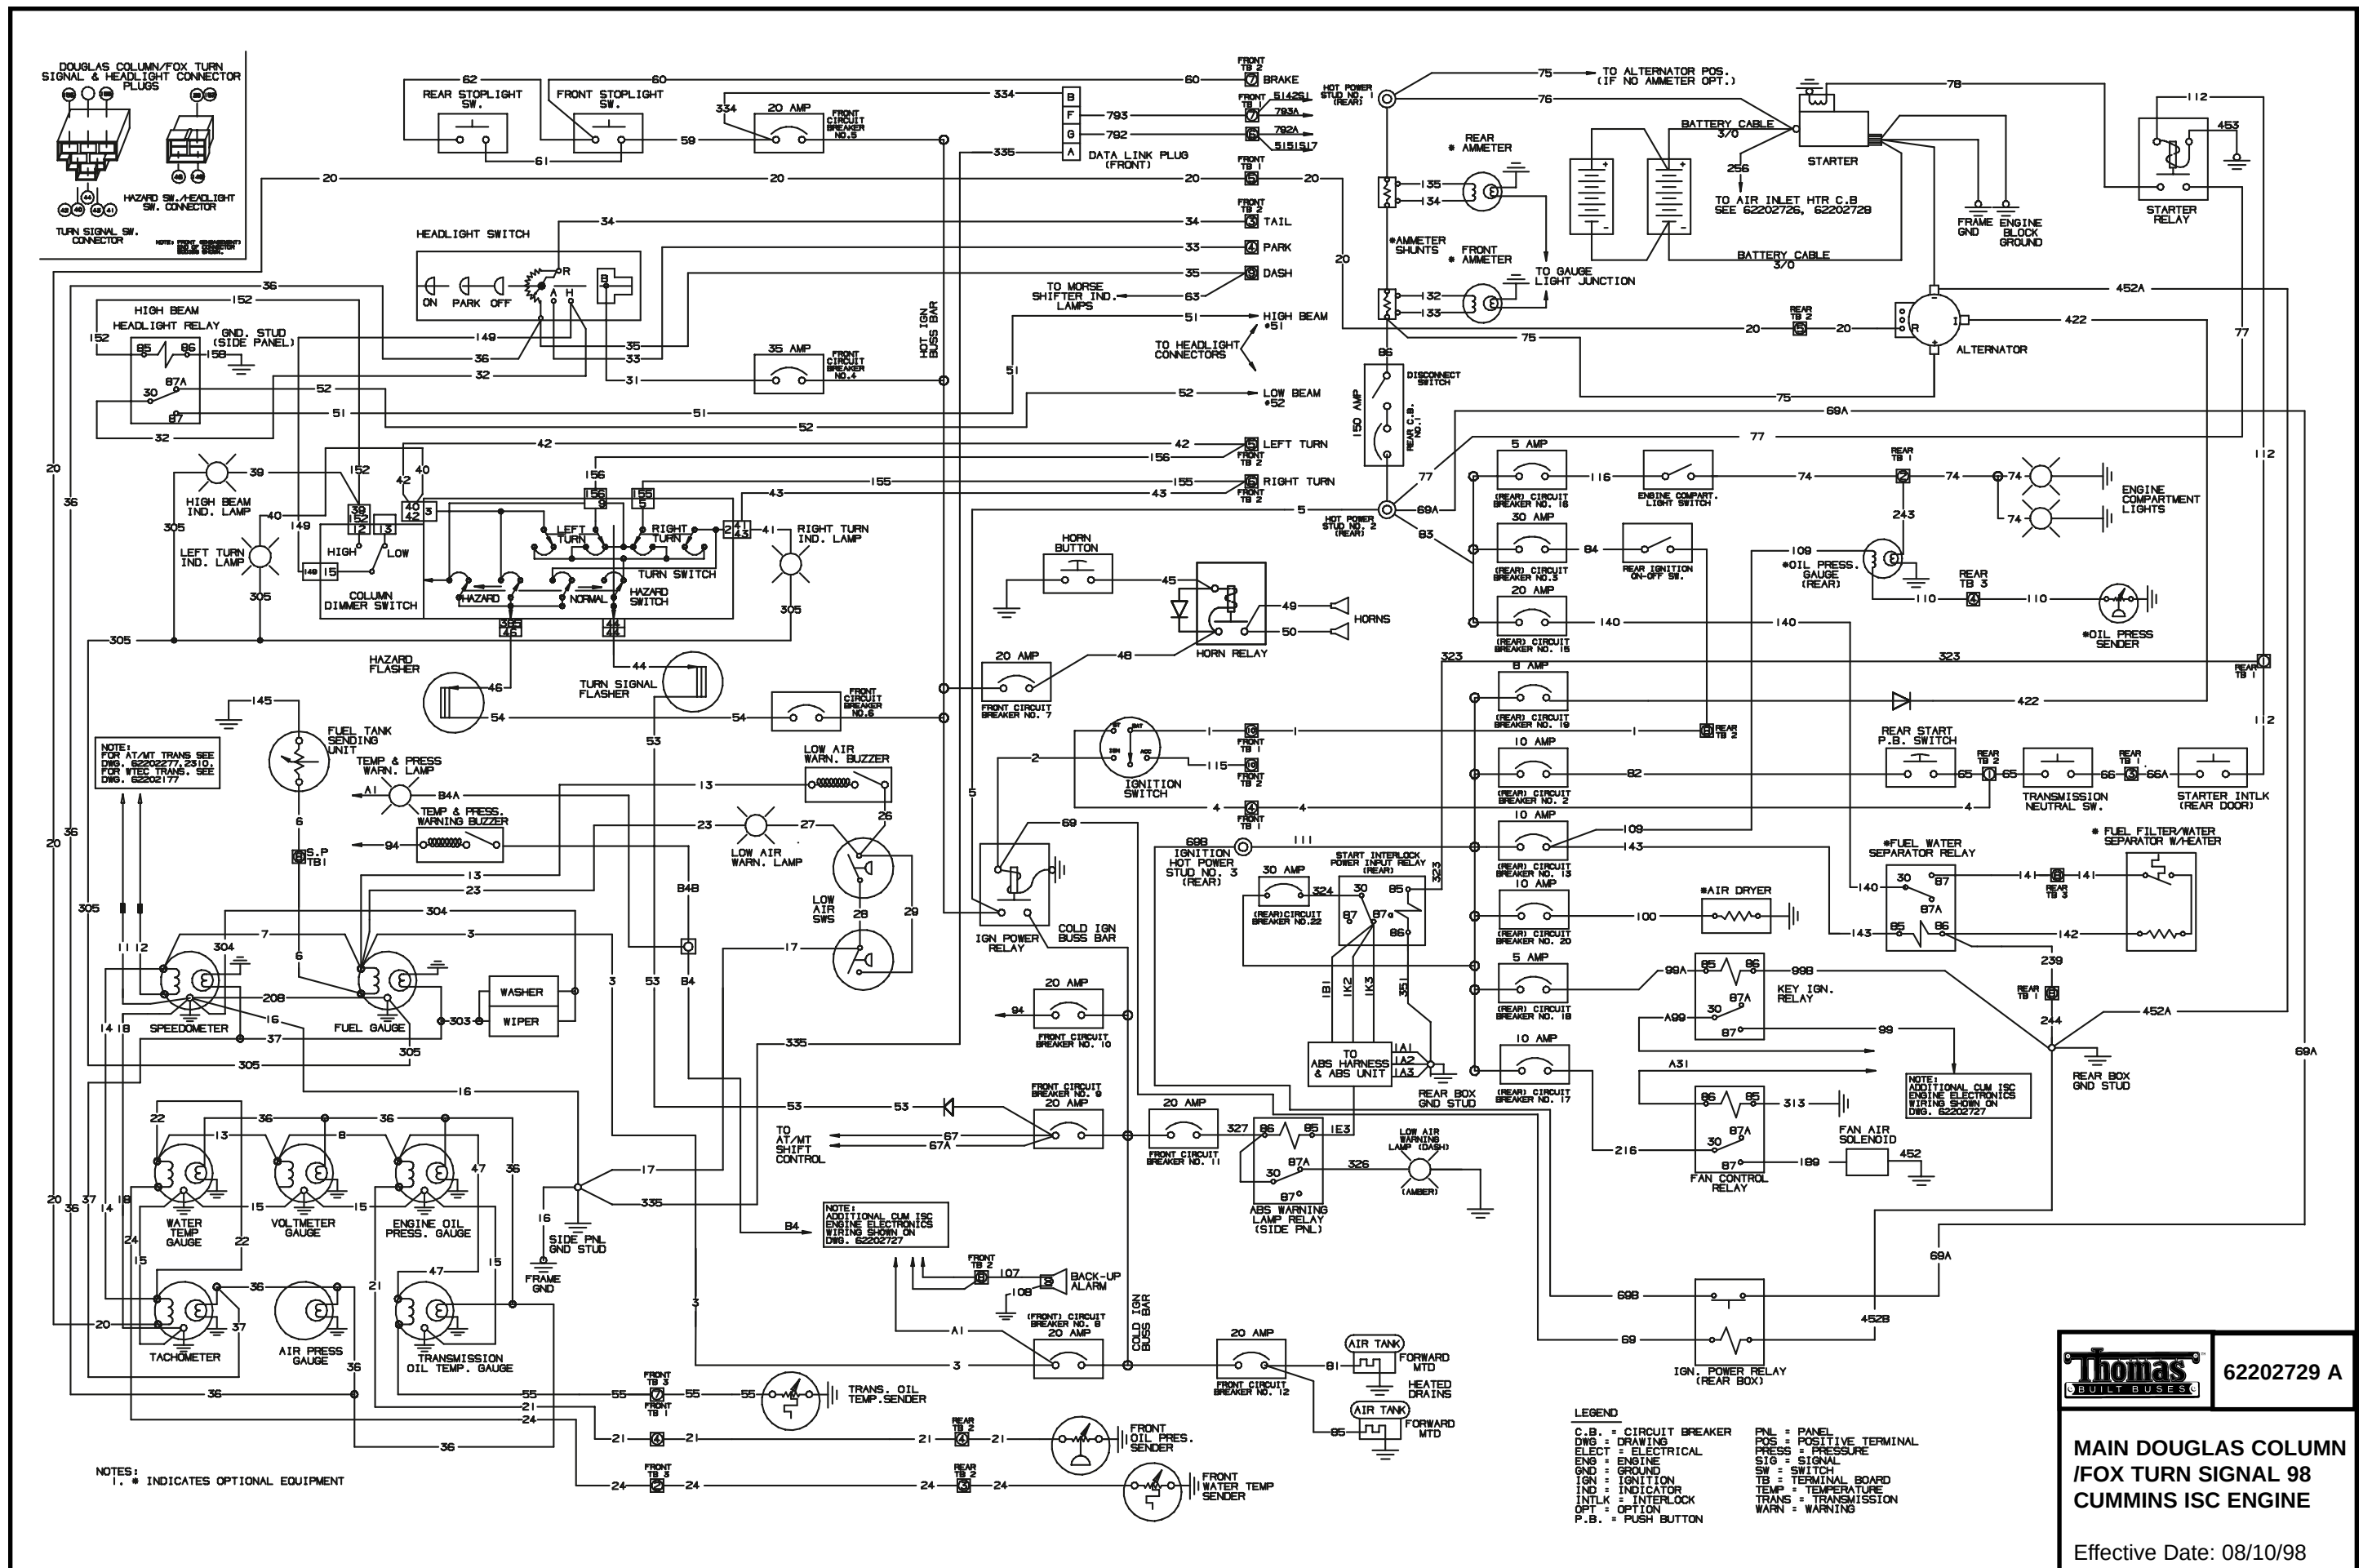


**MVP-ER
ENGINE
SCHEMATICS**

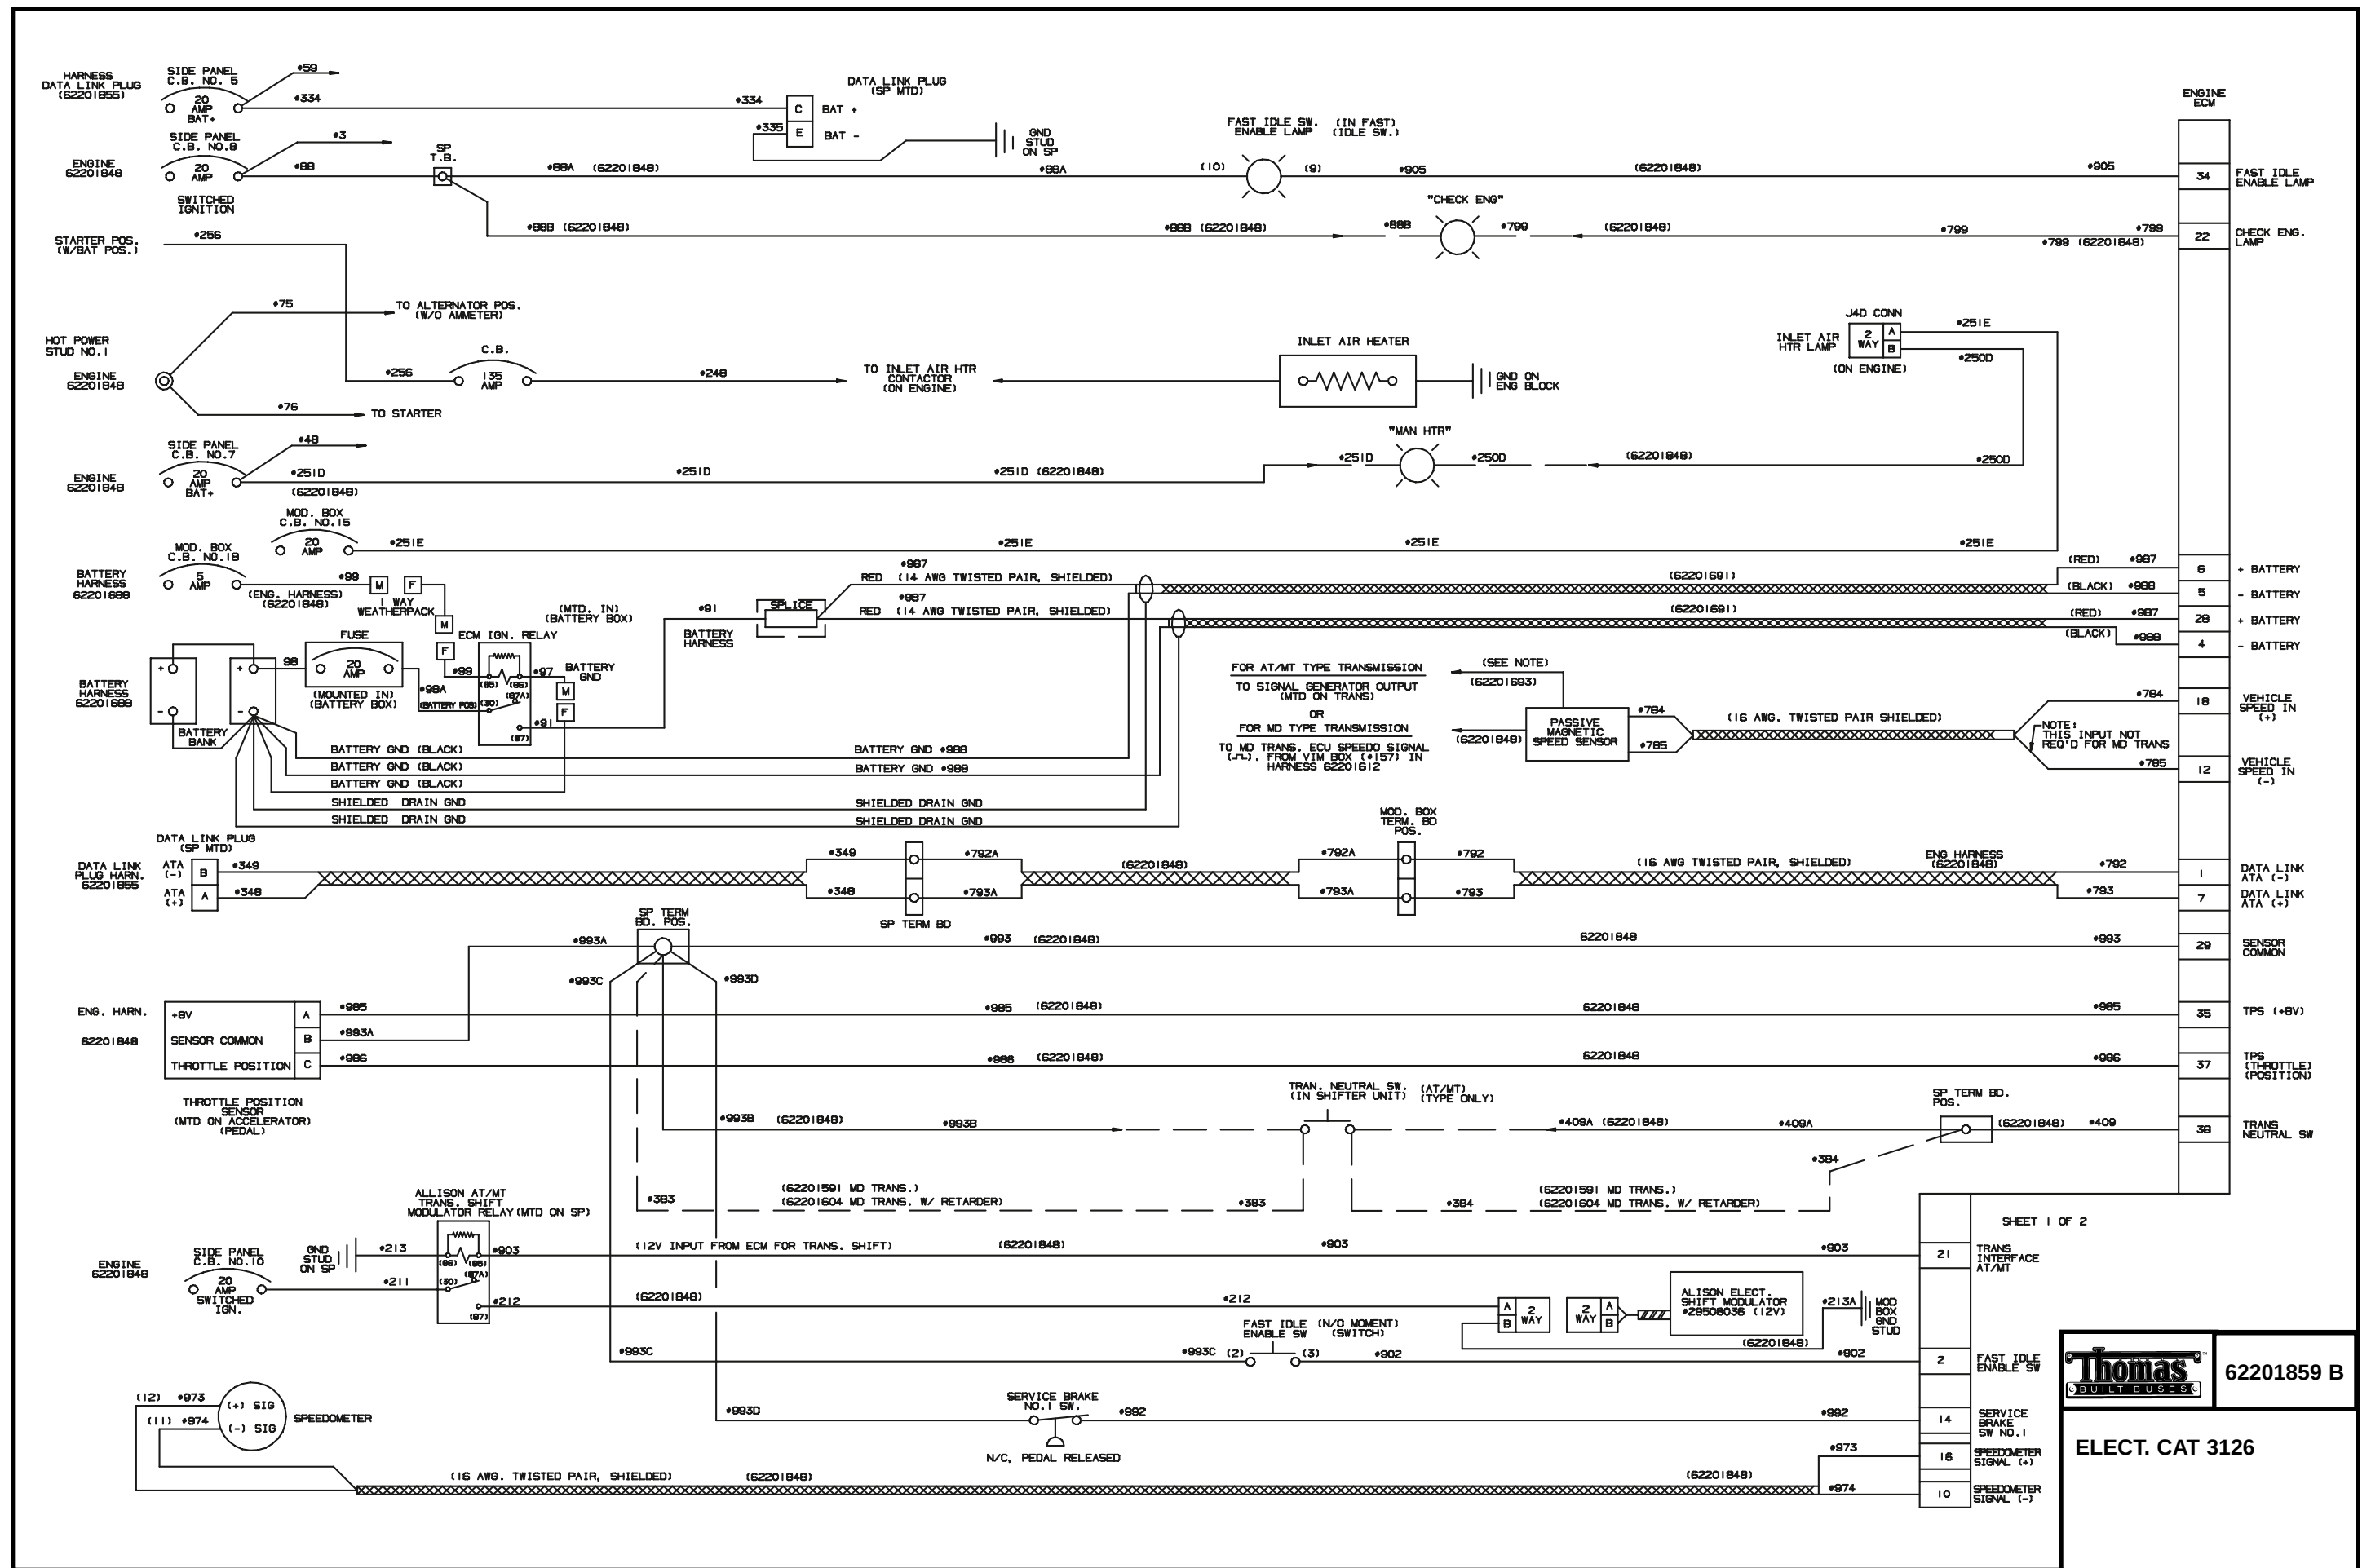

(OPTIONS) CAT 3126 INTERFACES

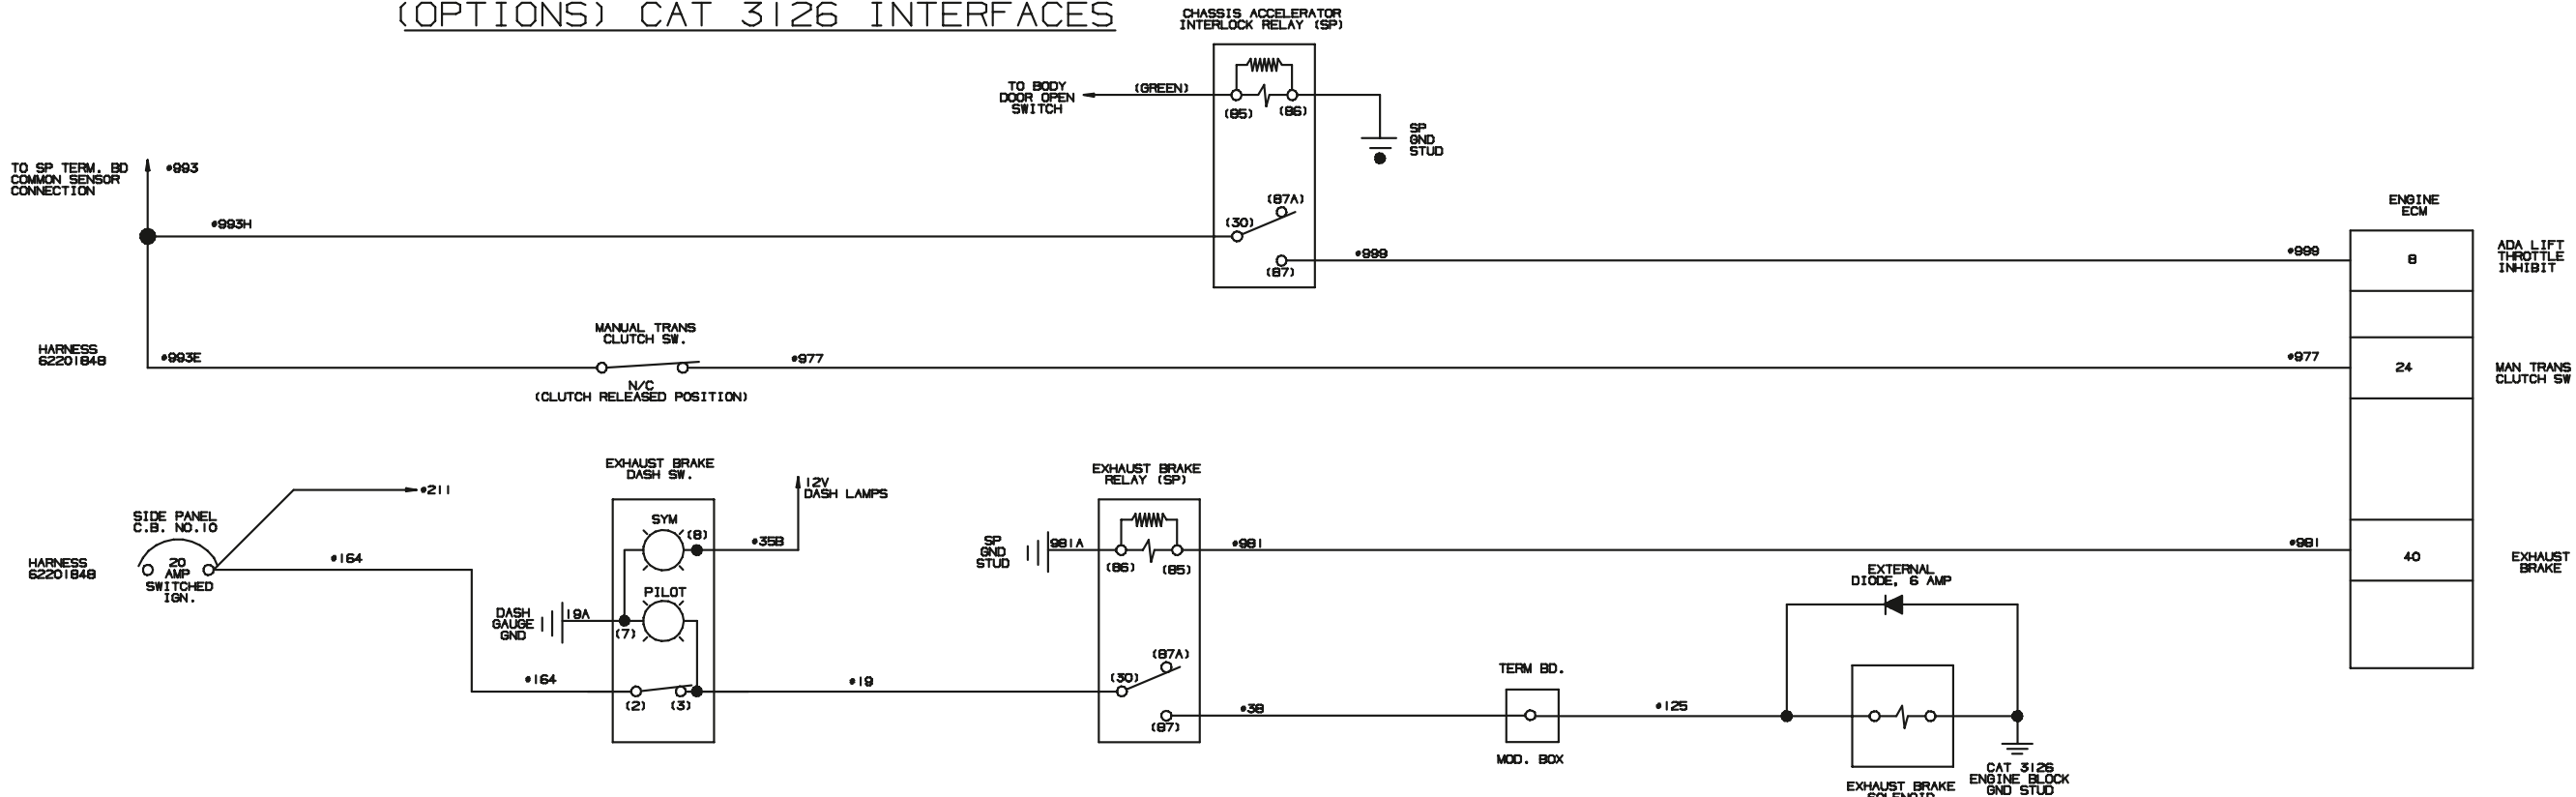


CRUISE CONTROL (OPTION)

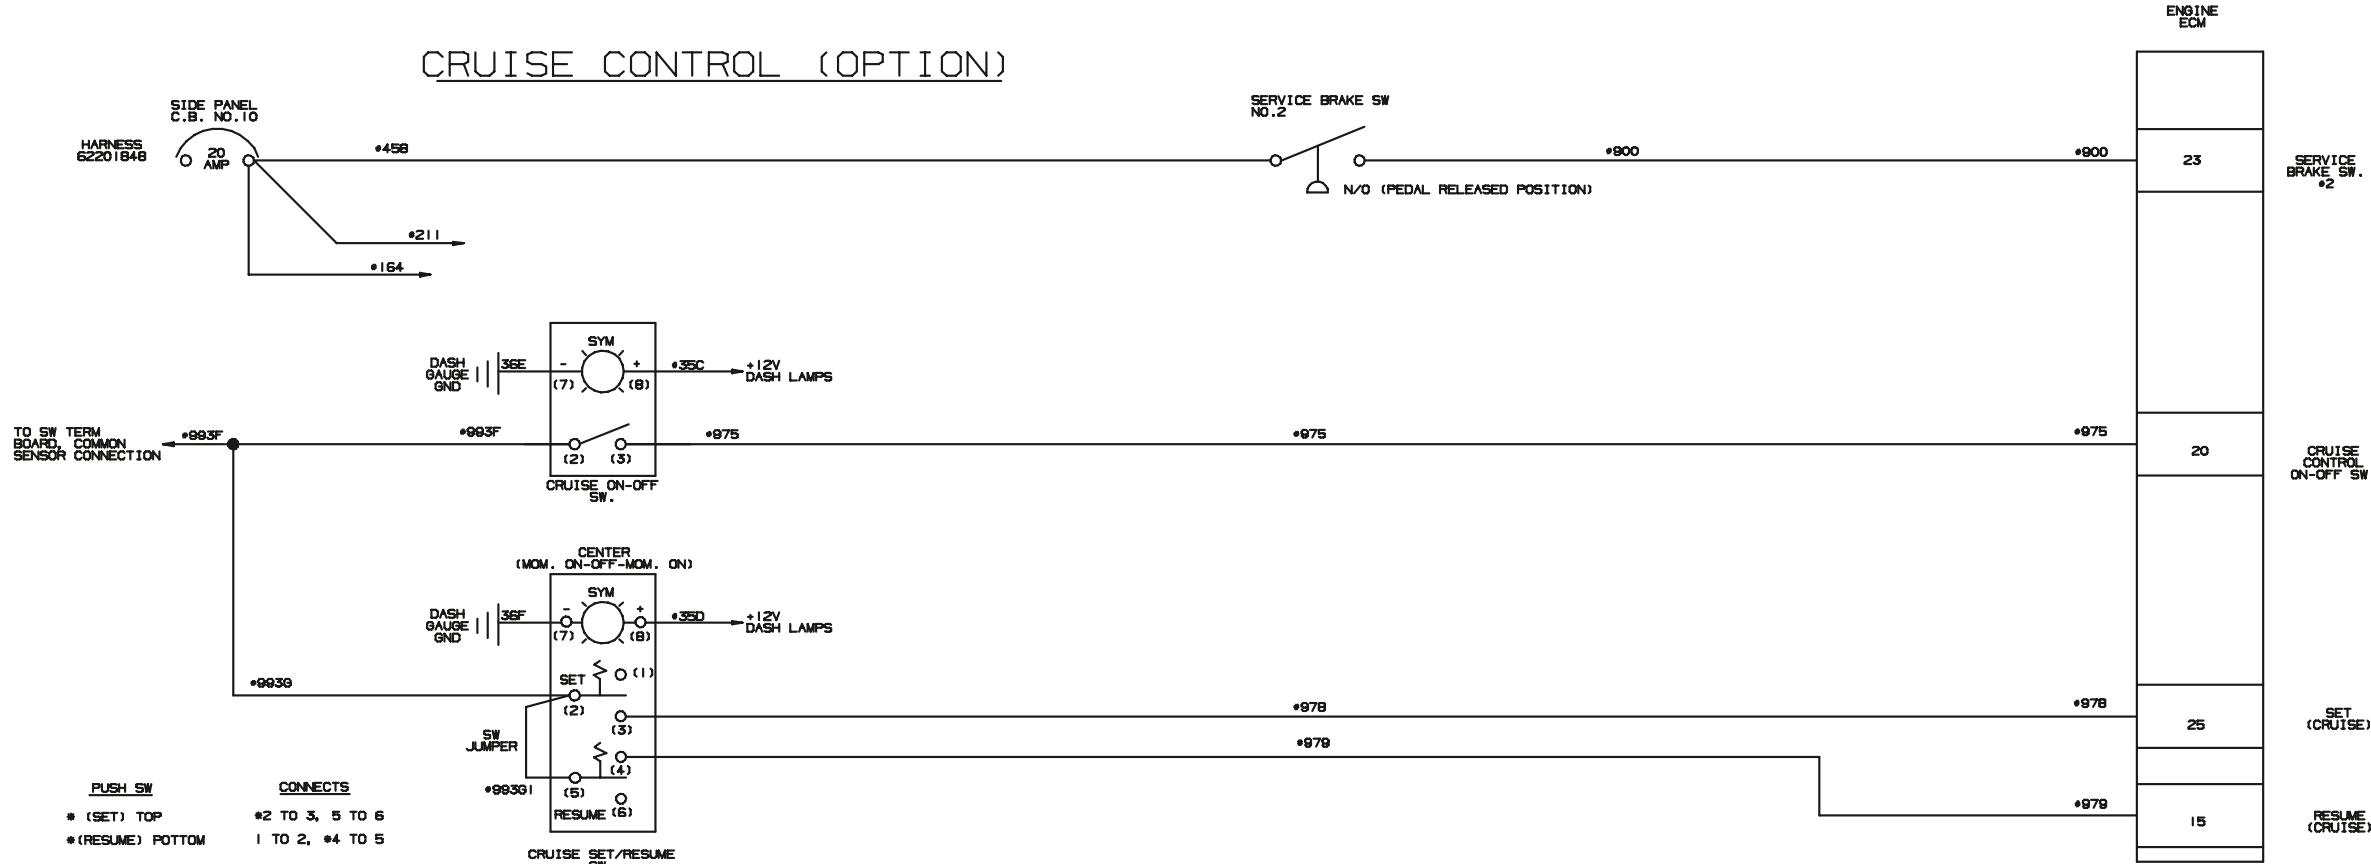

Thomas
BUILT BUSES

62201859 B


ELECT. CAT 3126

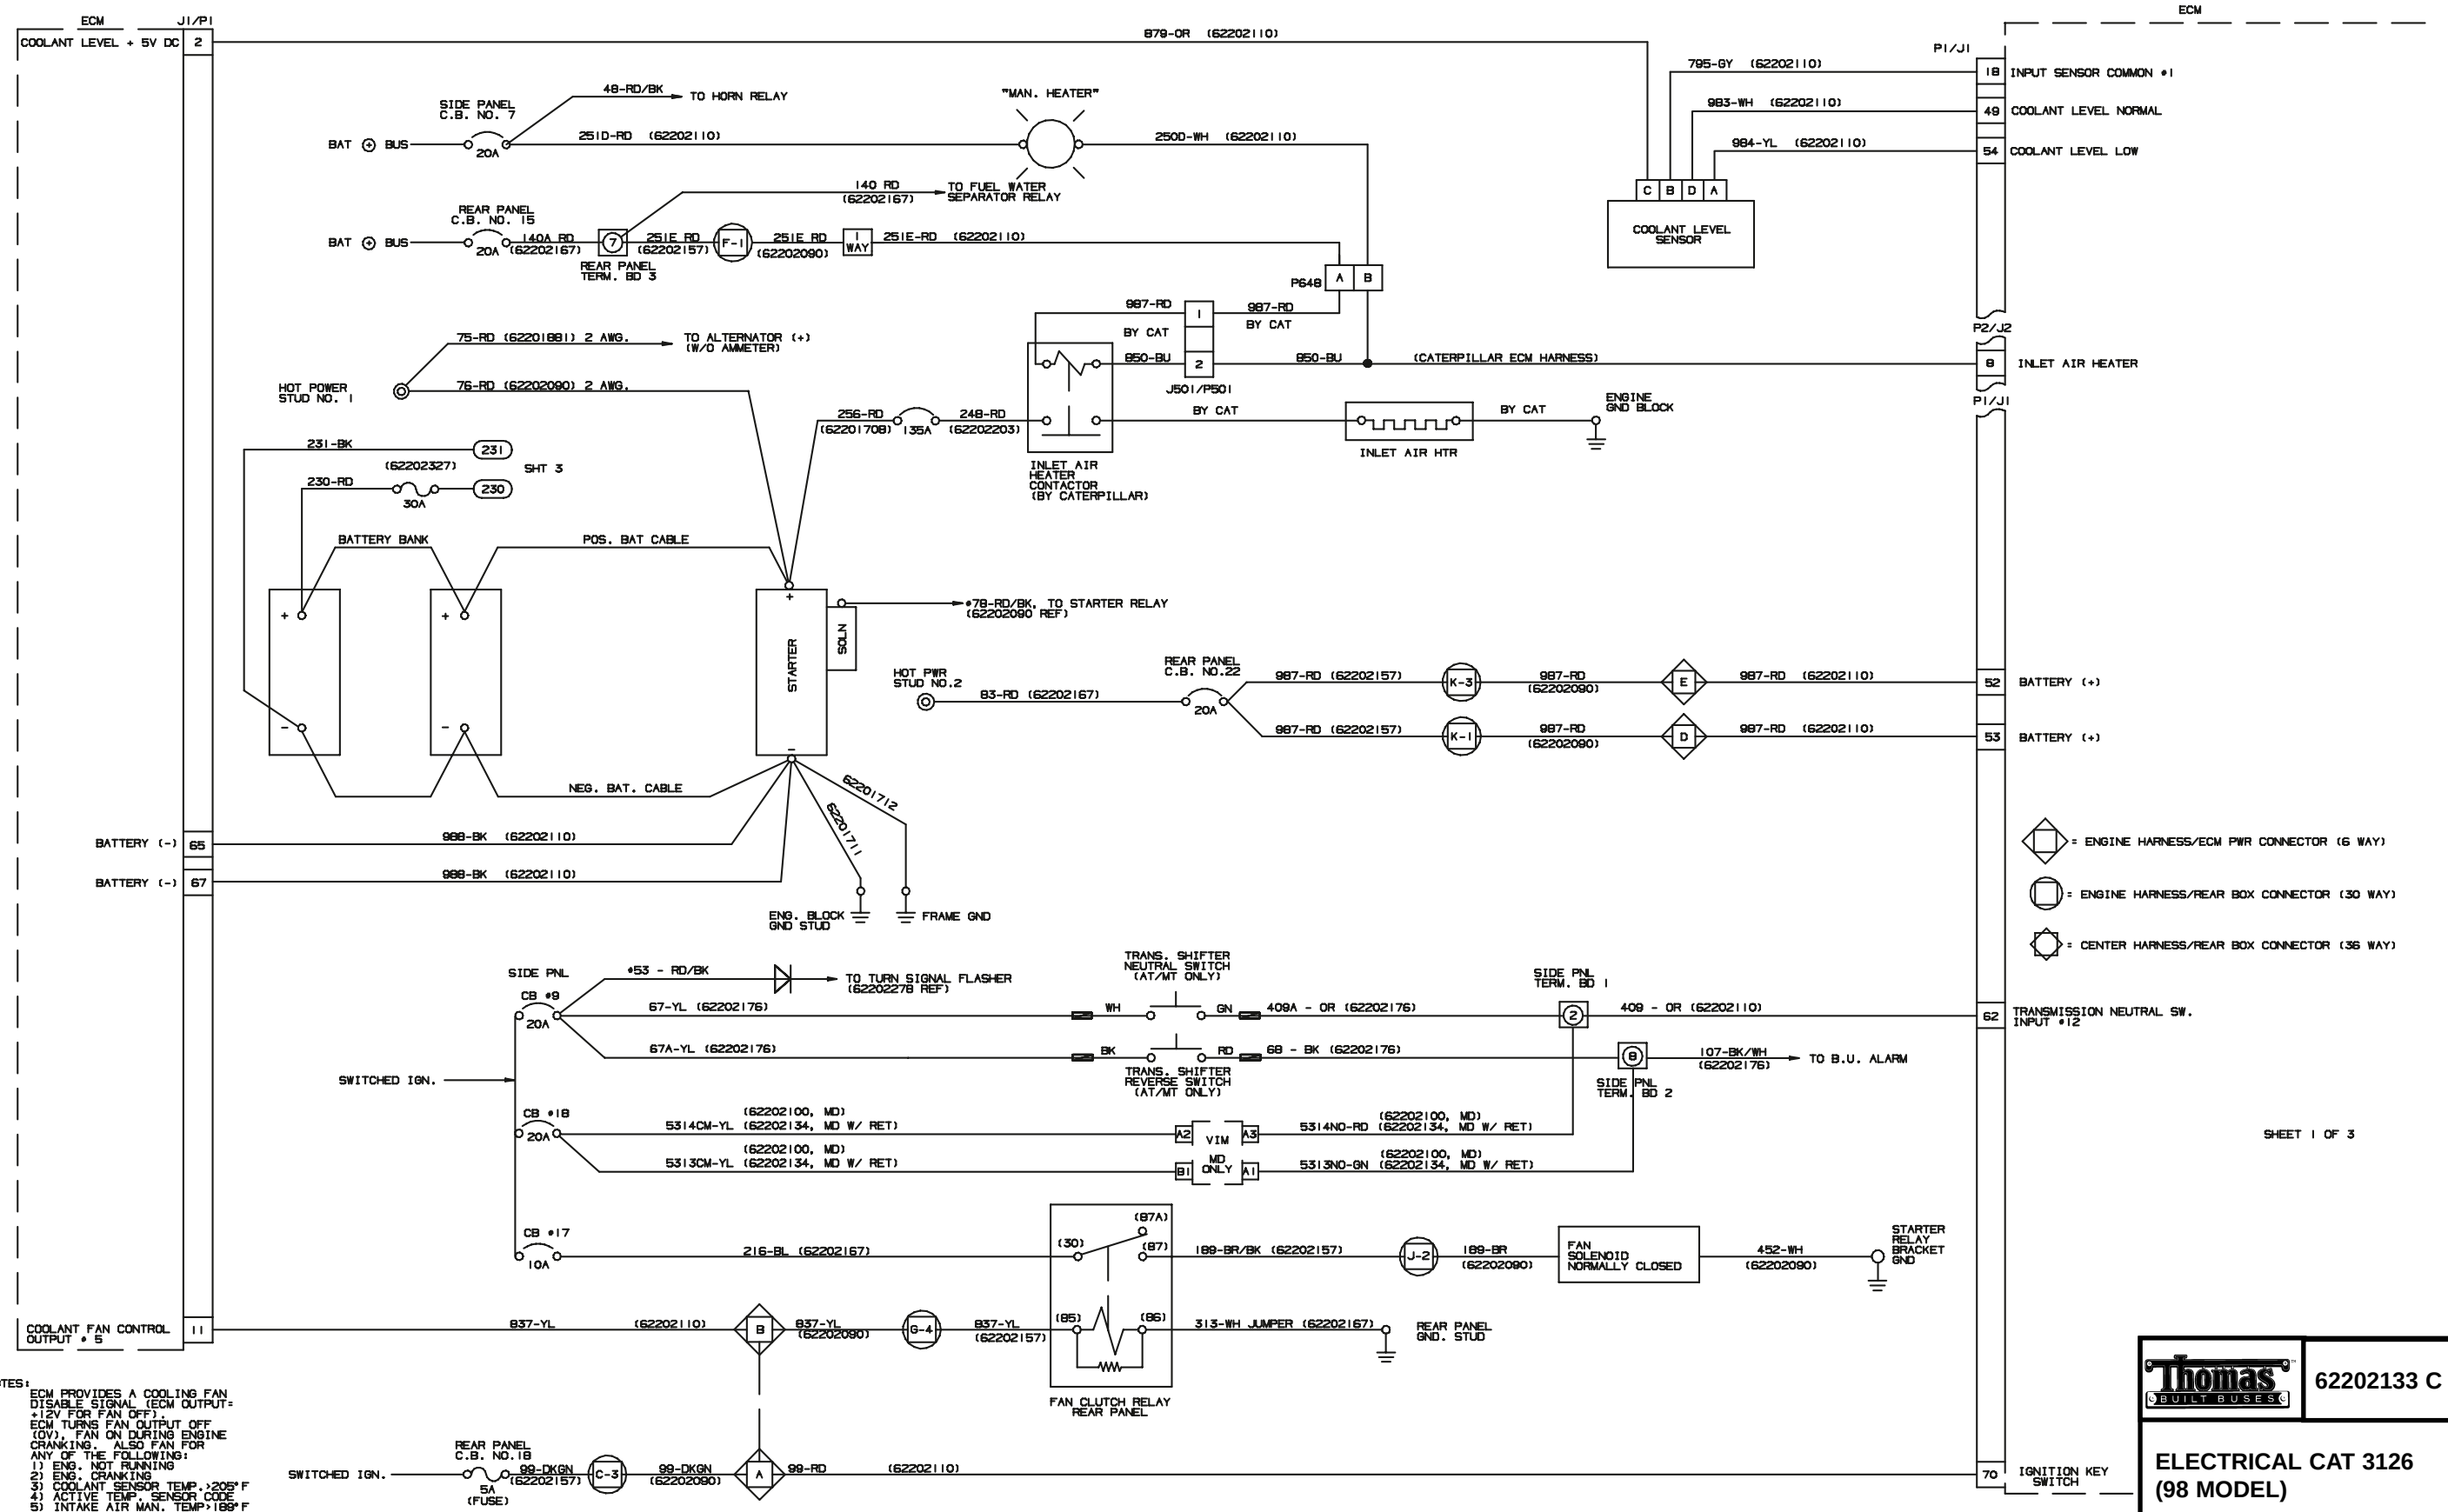

SHEET 1 OF 3

62202133 C

 
ELECTRICAL CAT 3126
(98 MODEL)
 End Date: 03/05/98






62202539 B

Effective Date: 03/05/98
End Date: 04/15/98

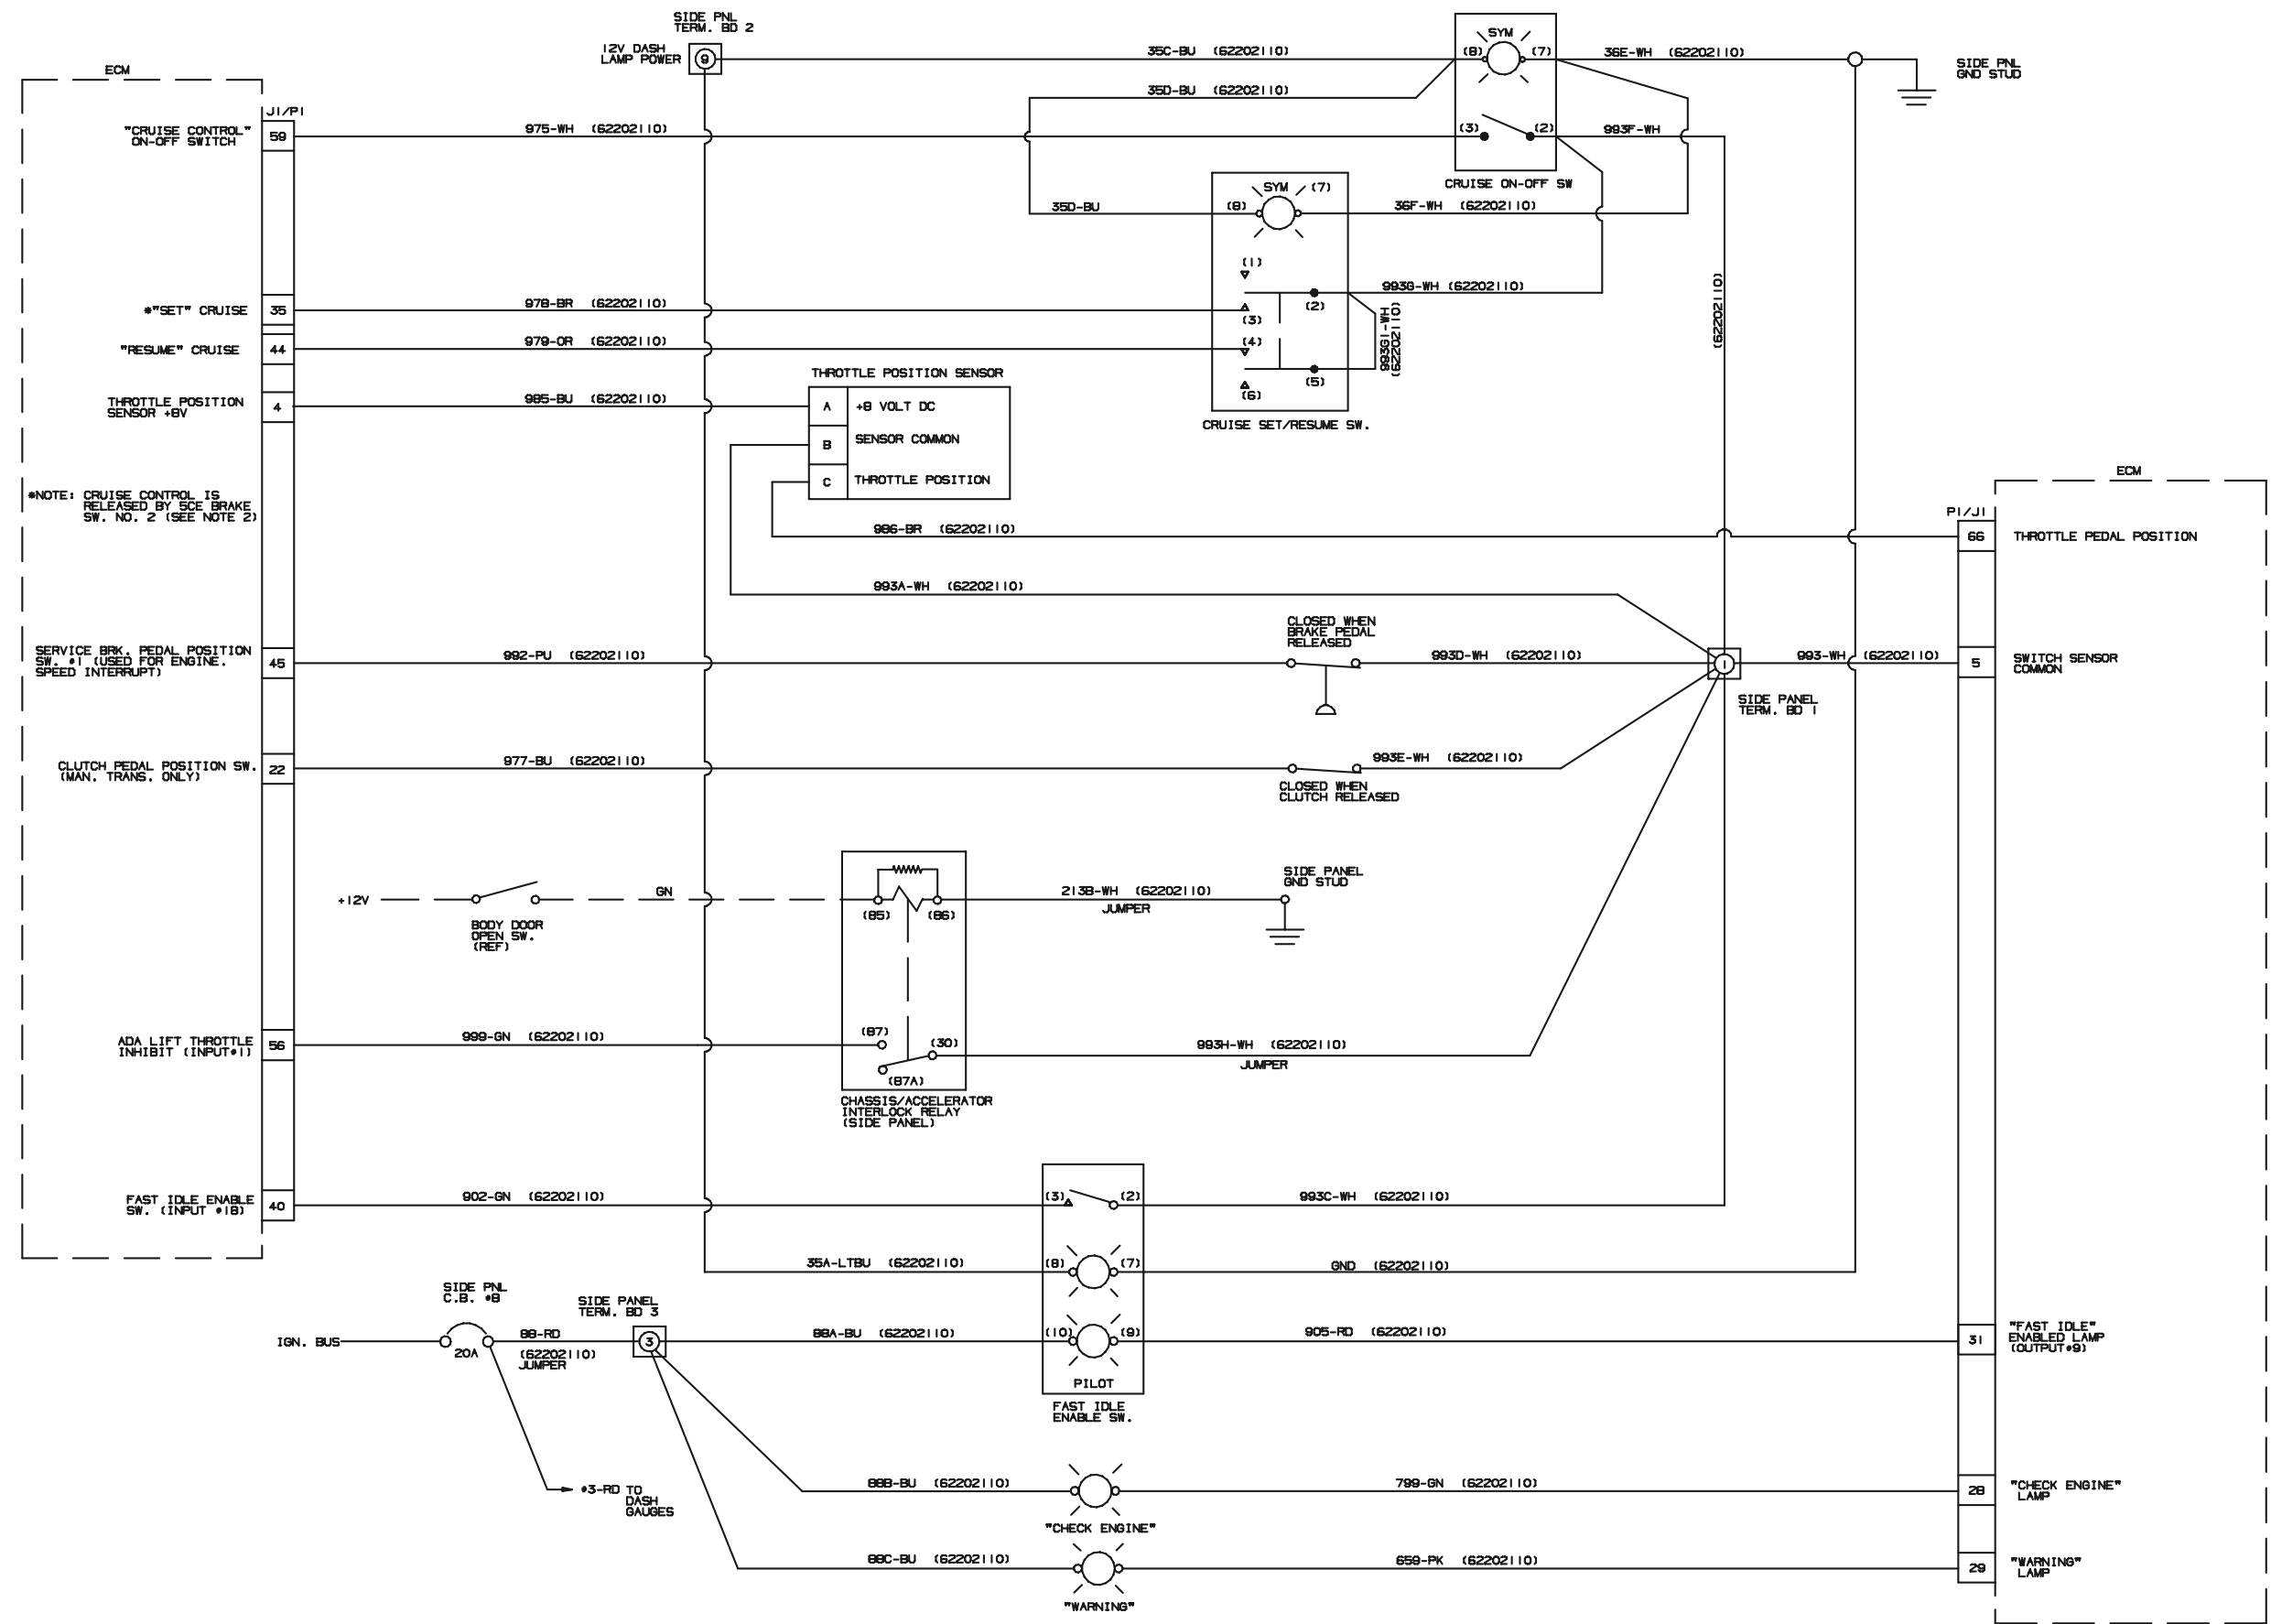

SHEET 2 OF 3

 62202539 B	ELECTRICAL CAT 3126 (98 MODEL)
	Effective Date: 03/05/98 End Date: 04/15/98

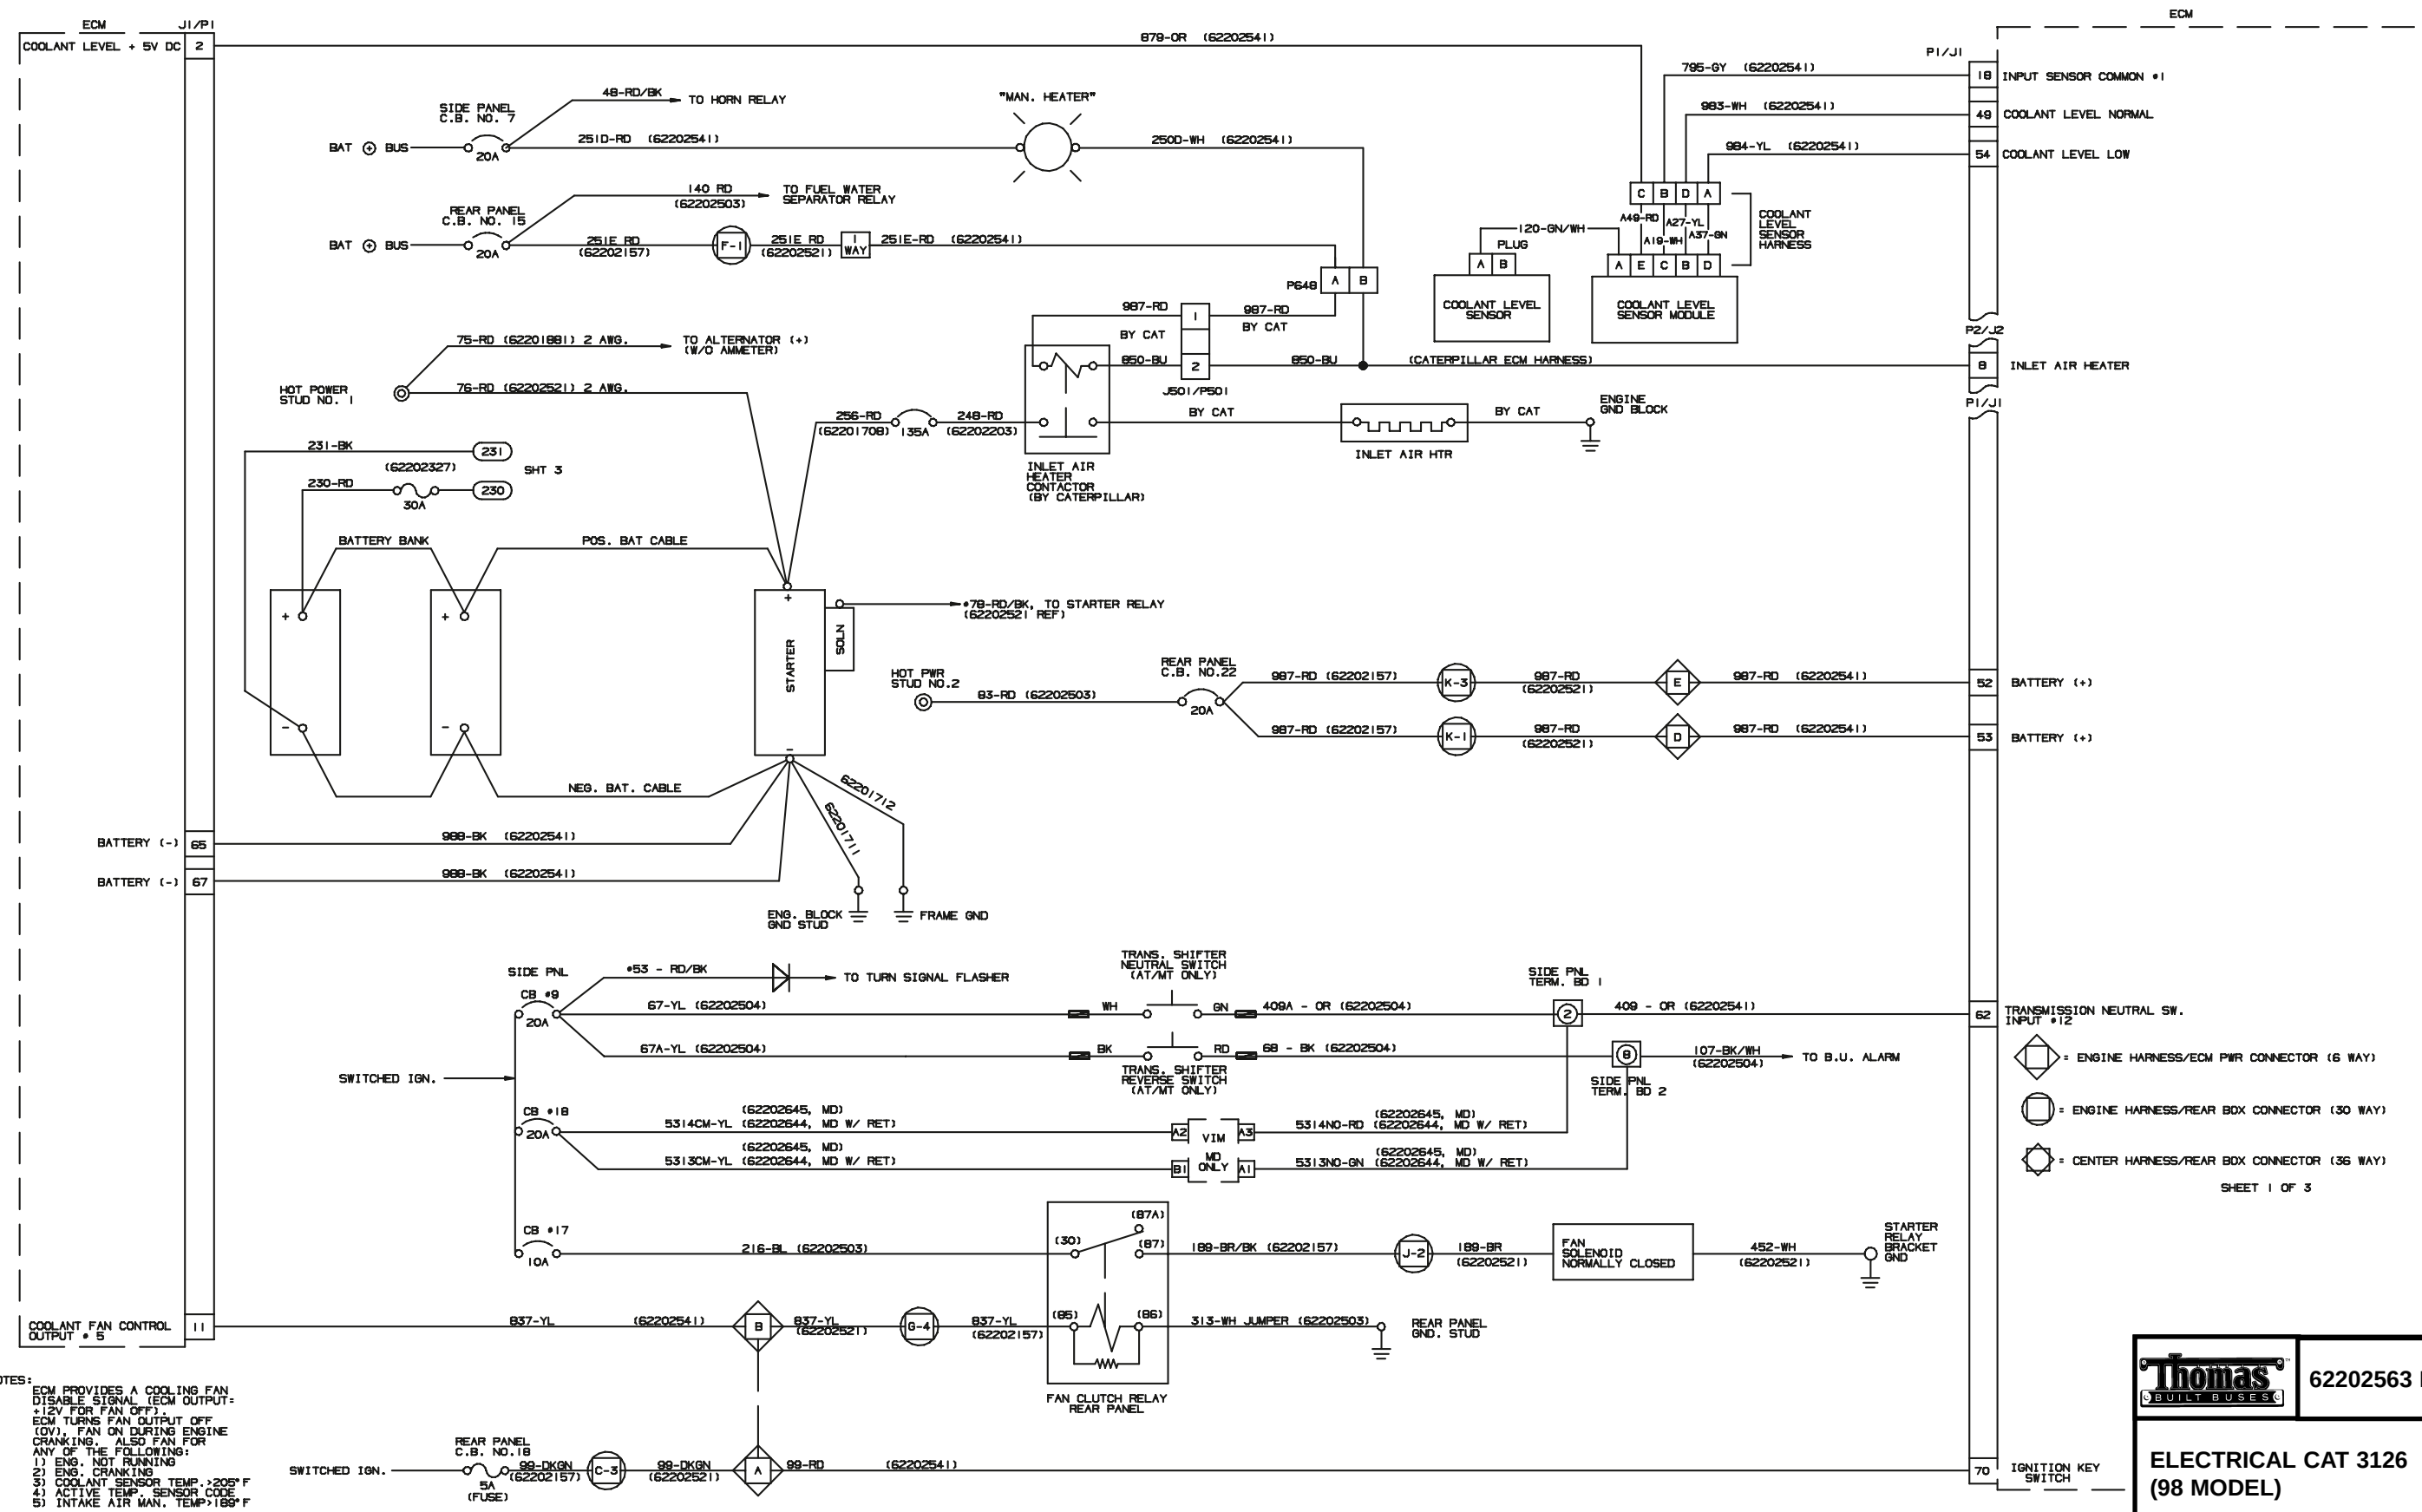

NOTES:

- ECM PROVIDES A COOLING FAN DISABLE SIGNAL (ECM OUTPUT #12V FOR FAN OFF).
- ECM TURNS FAN OUTPUT OFF (OV). FAN ON DURING ENGINE CRANKING. ALSO FAN FOR ANY OF THE FOLLOWING:
- 1) ENG. NOT RUNNING
- 2) ENG. CRANKING
- 3) COOLANT SENSOR TEMP. >205°F
- 4) ACTIVE TEMP. SENSOR CODE
- 5) INTAKE AIR MAN. TEMP. >189°F




62202563 D

ELECTRICAL CAT 3126

(98 MODEL)


Effective Date: 04/16/98

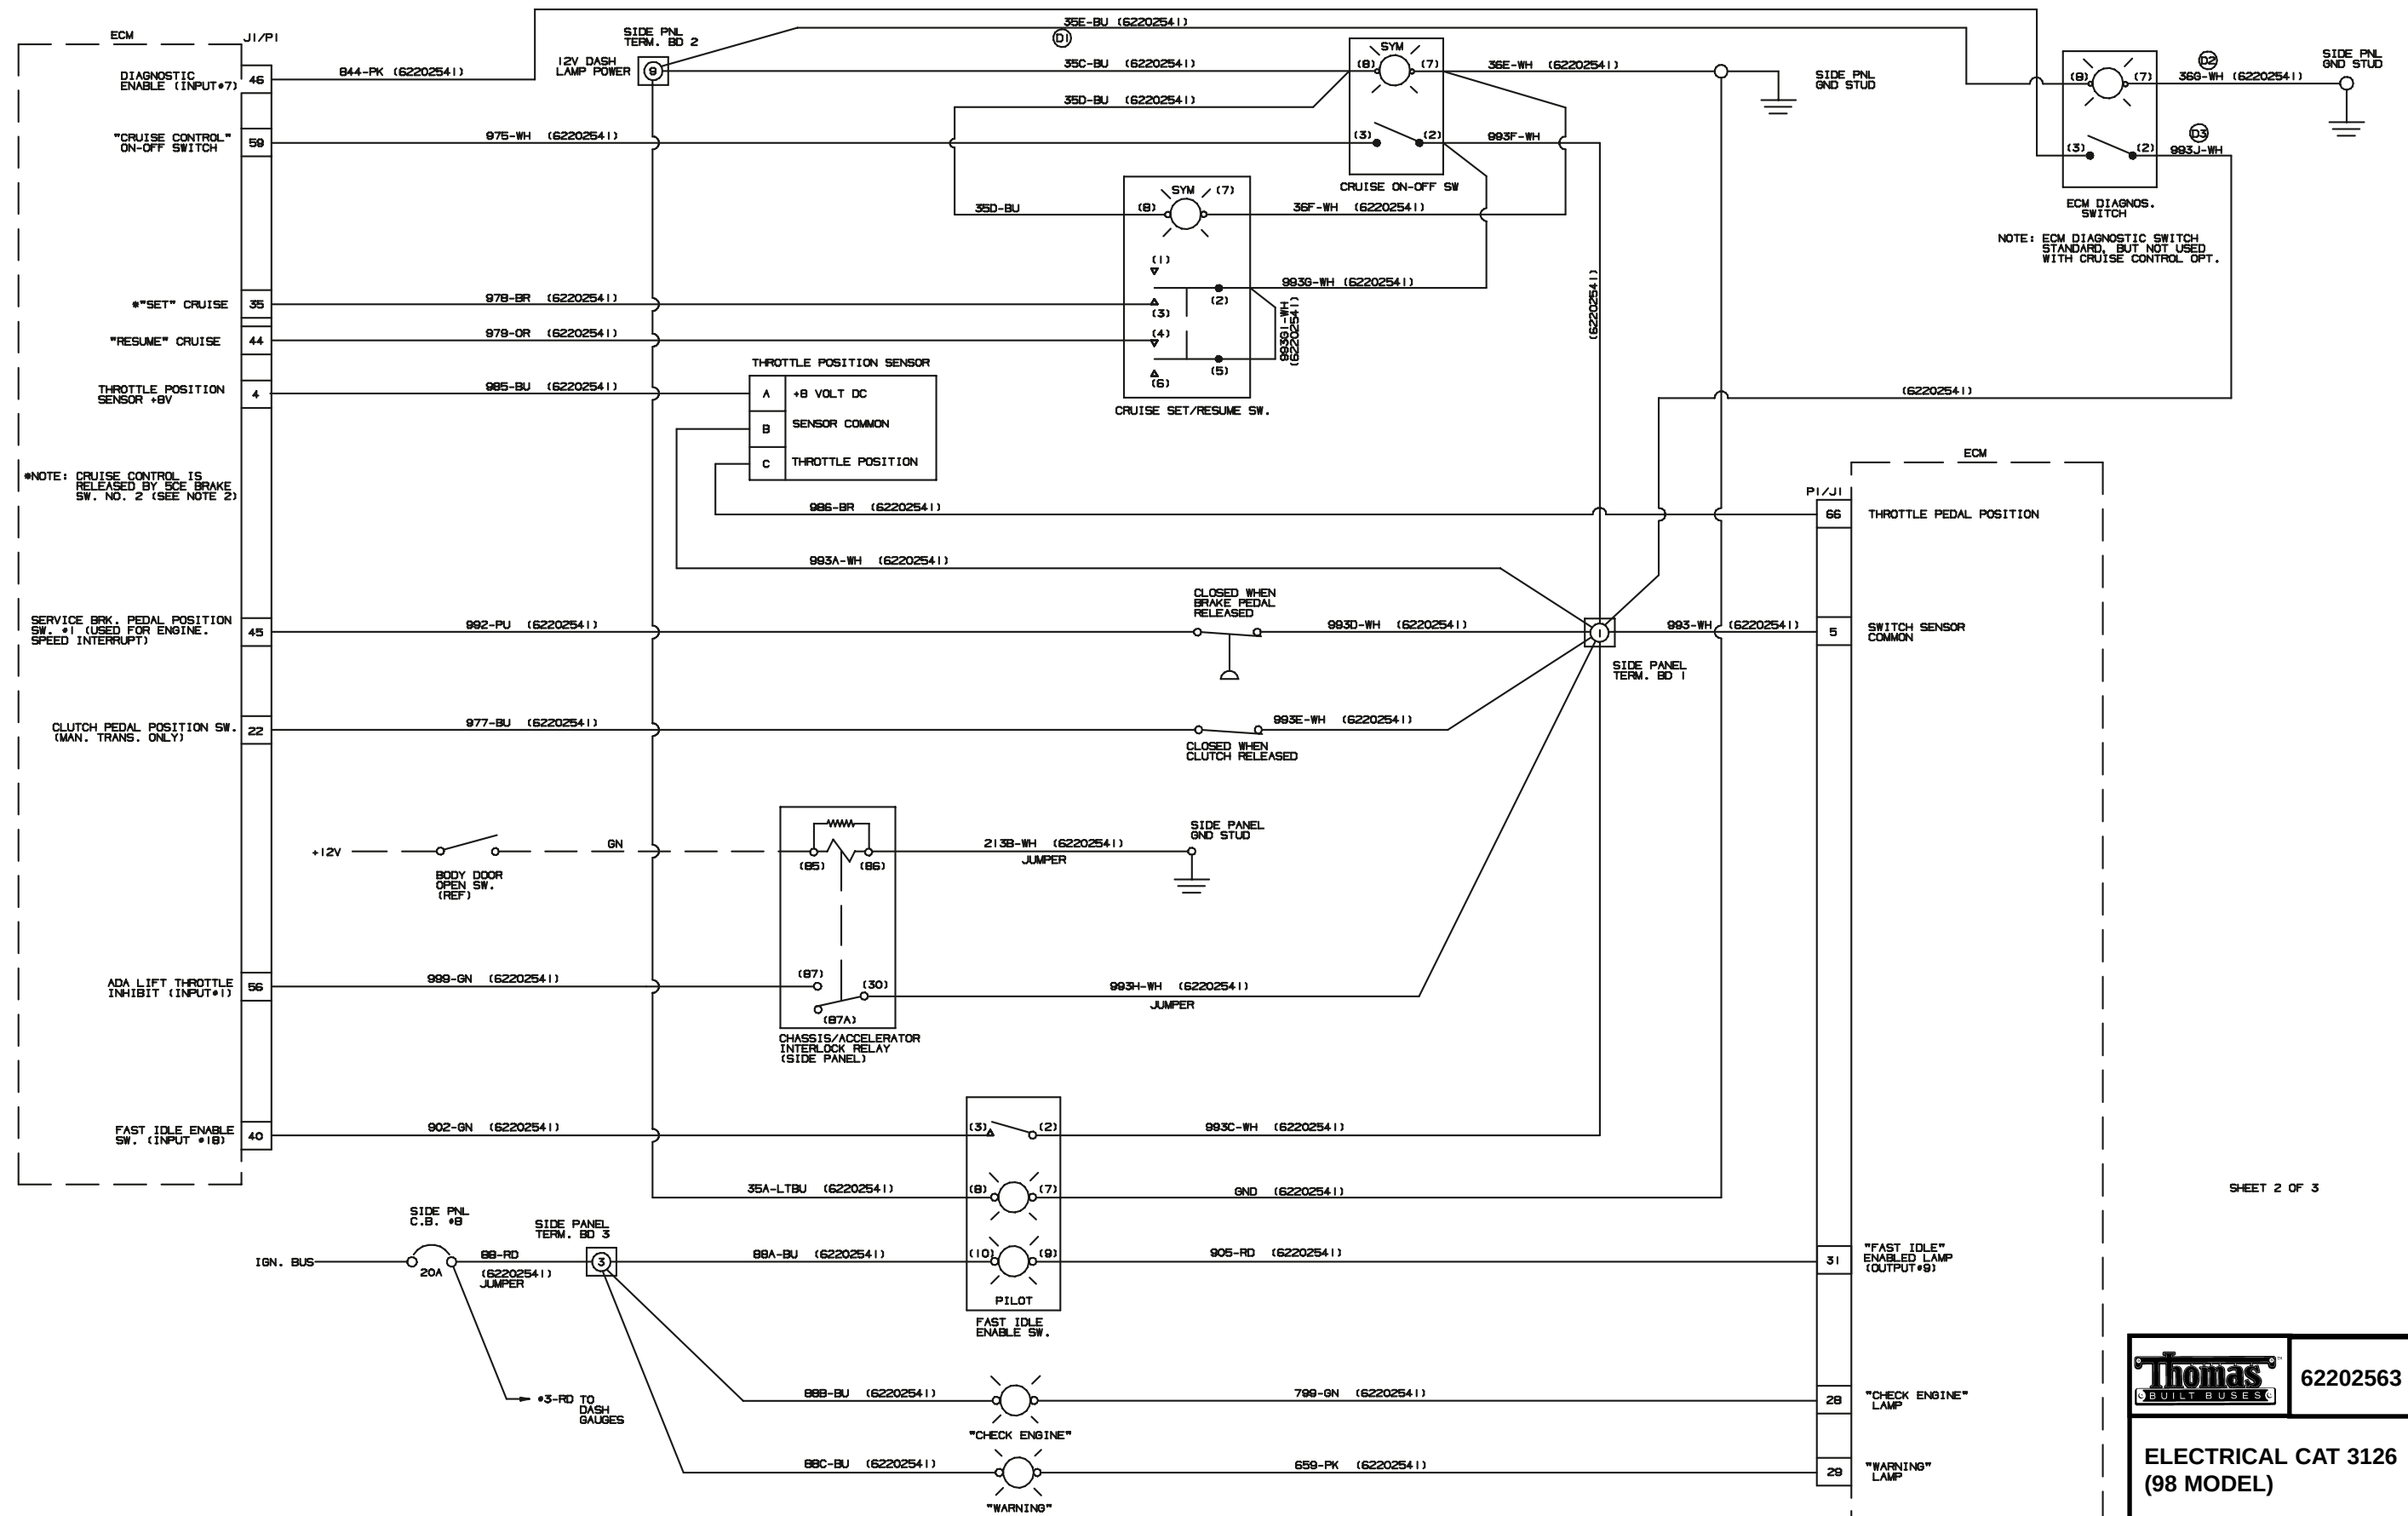

SHEET 2 OF 3



62202563 D

ELECTRICAL CAT 3126
(98 MODEL)
 Effective Date: 04/16/98

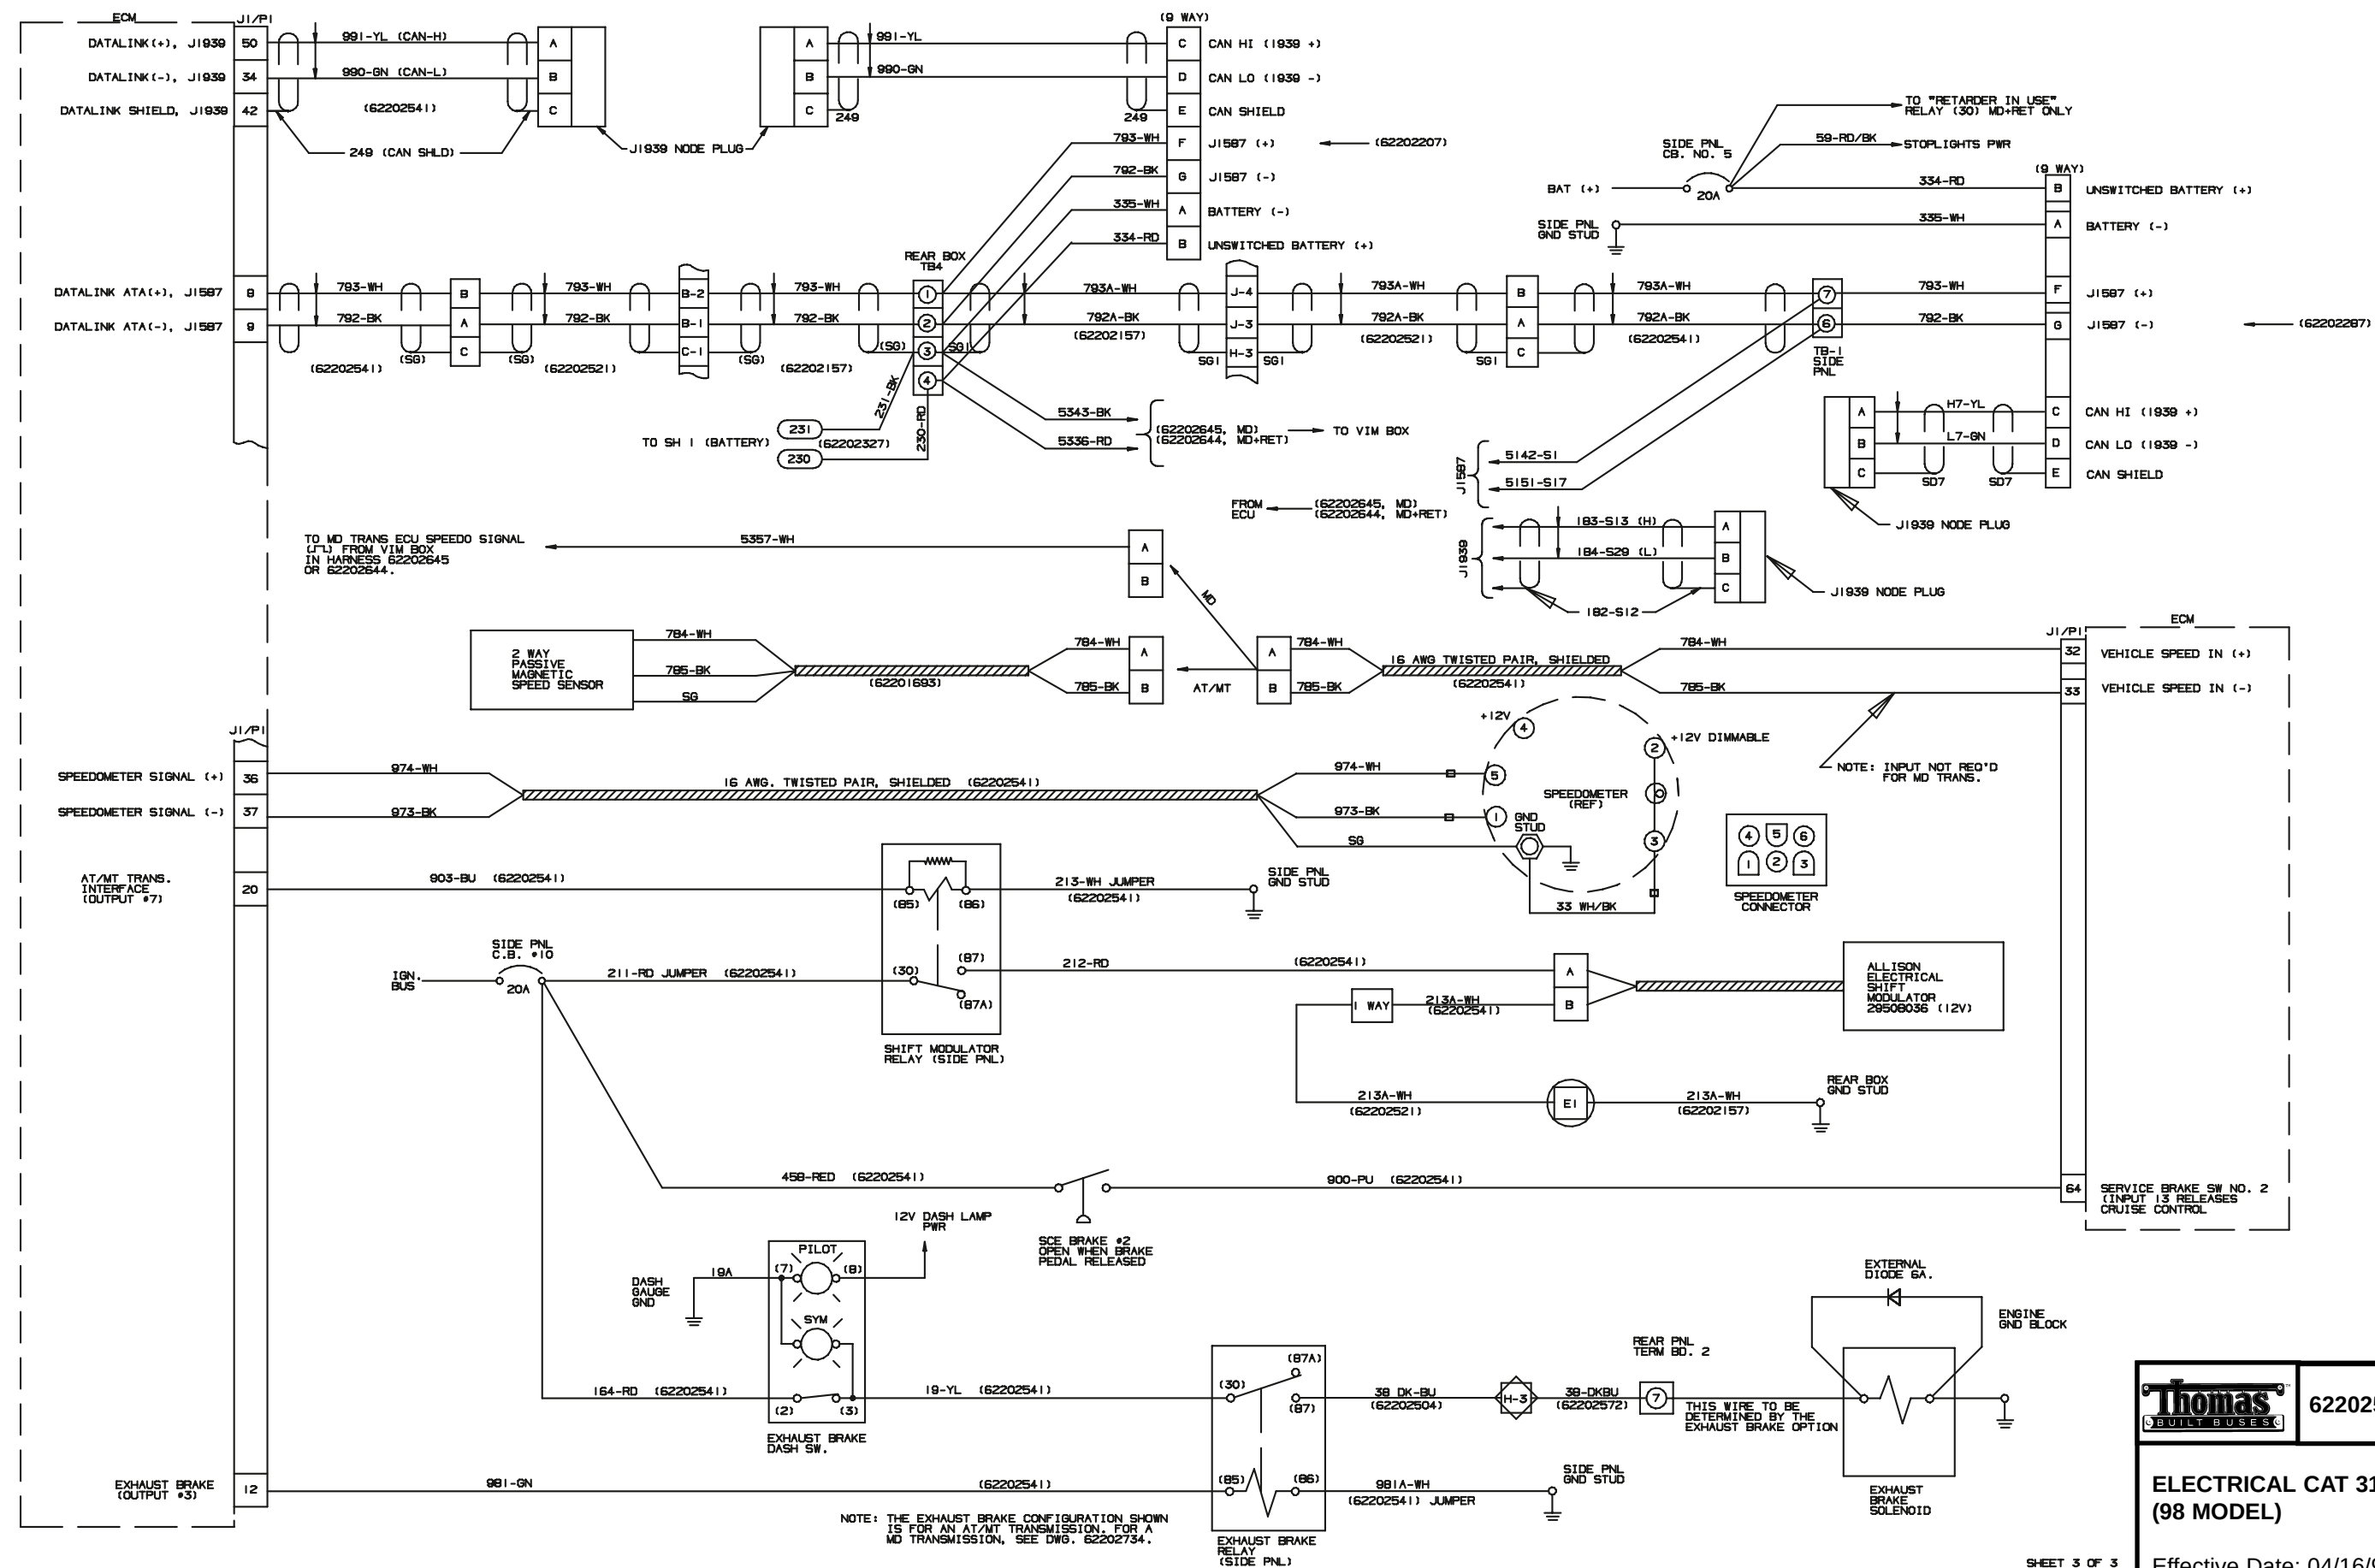


62202563 D


ELECTRICAL CAT 3126
(98 MODEL)
 Effective Date: 04/16/98

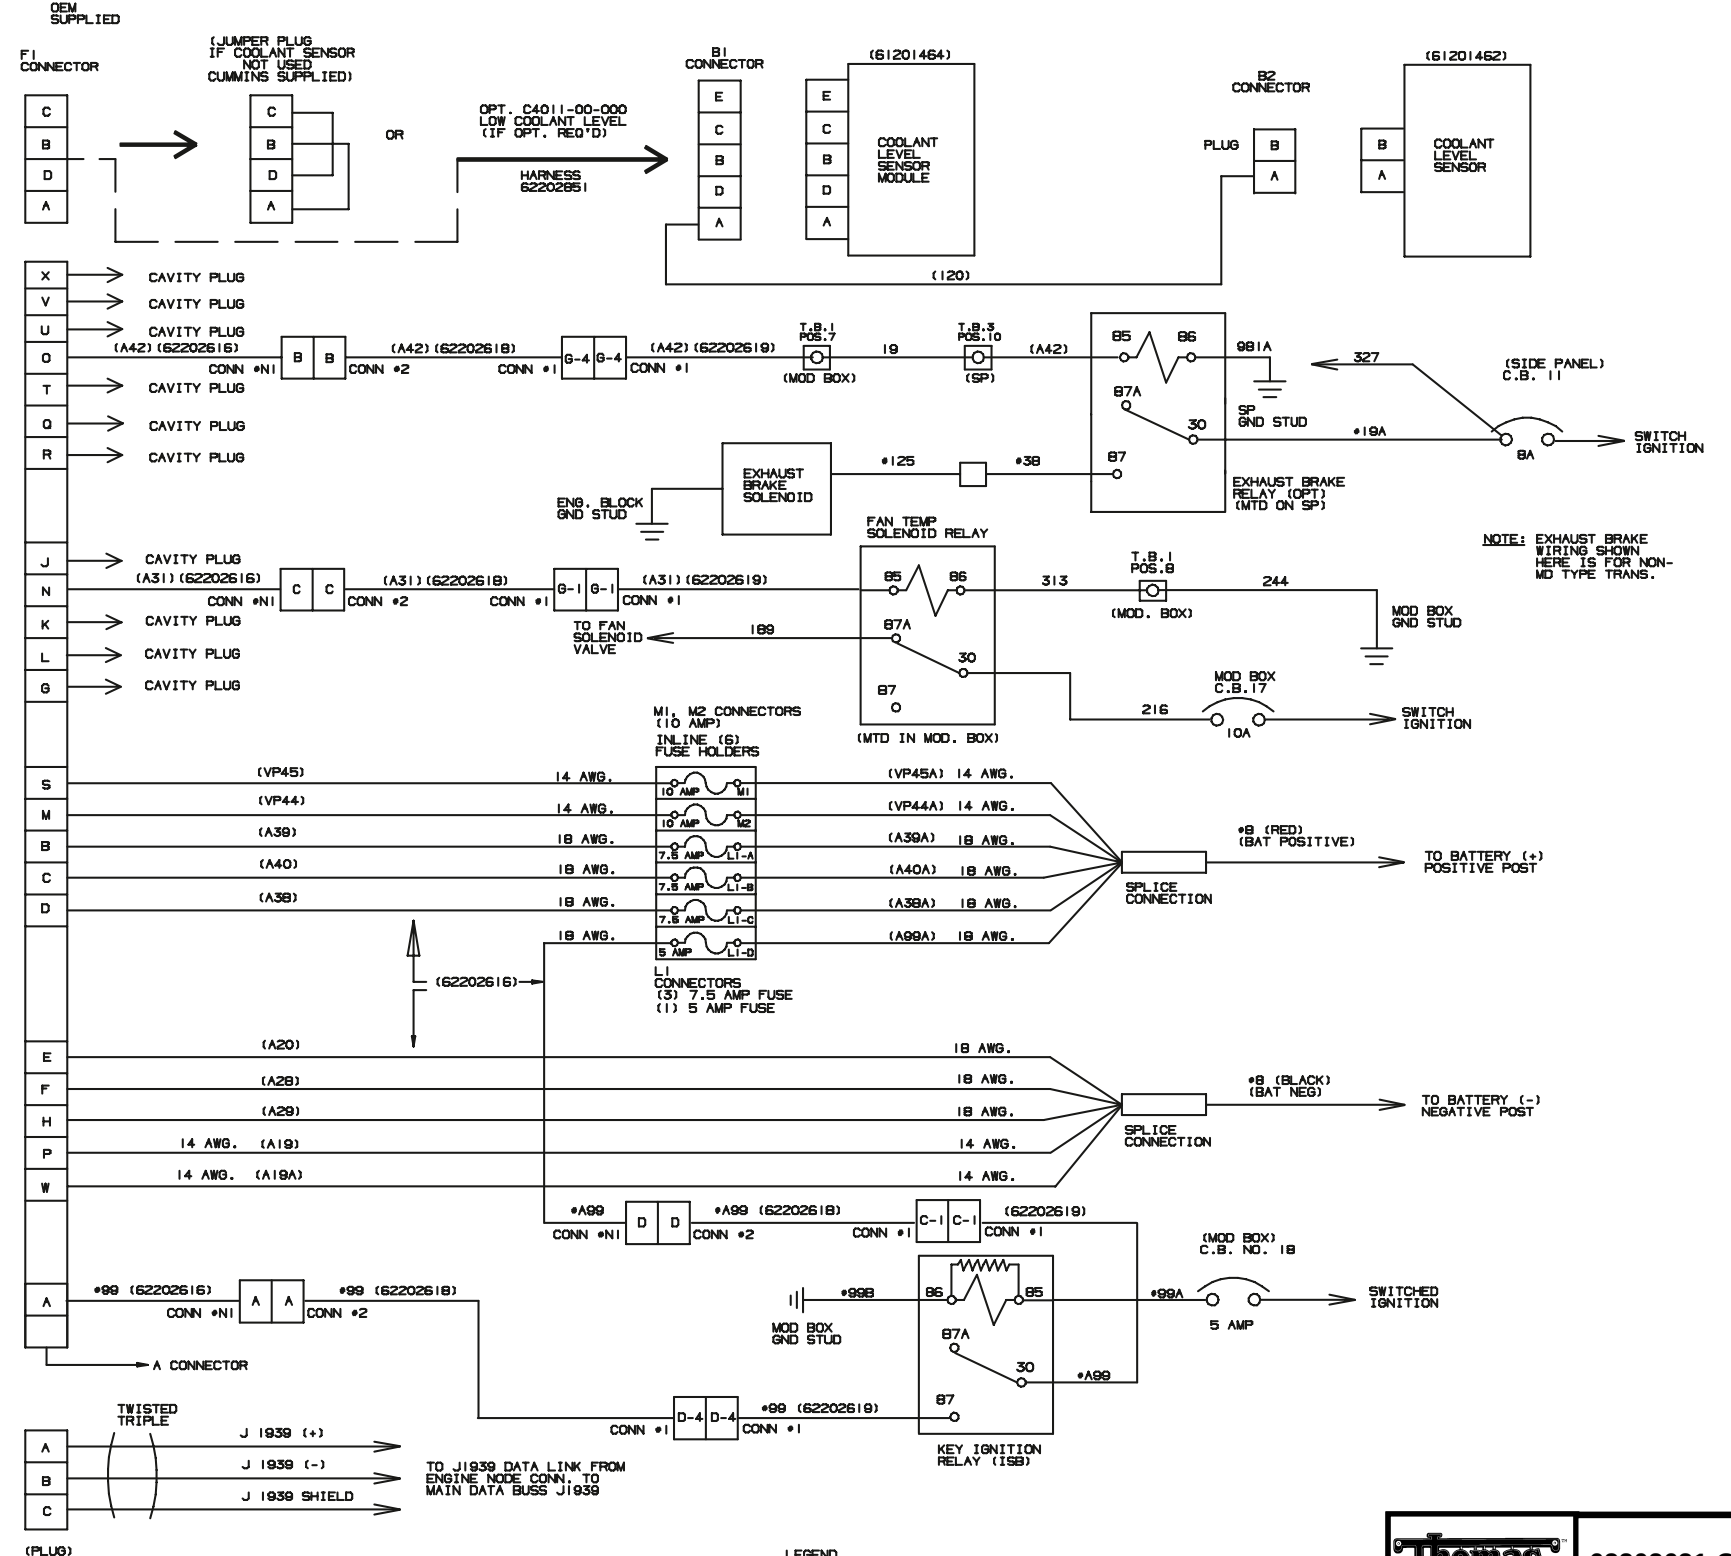
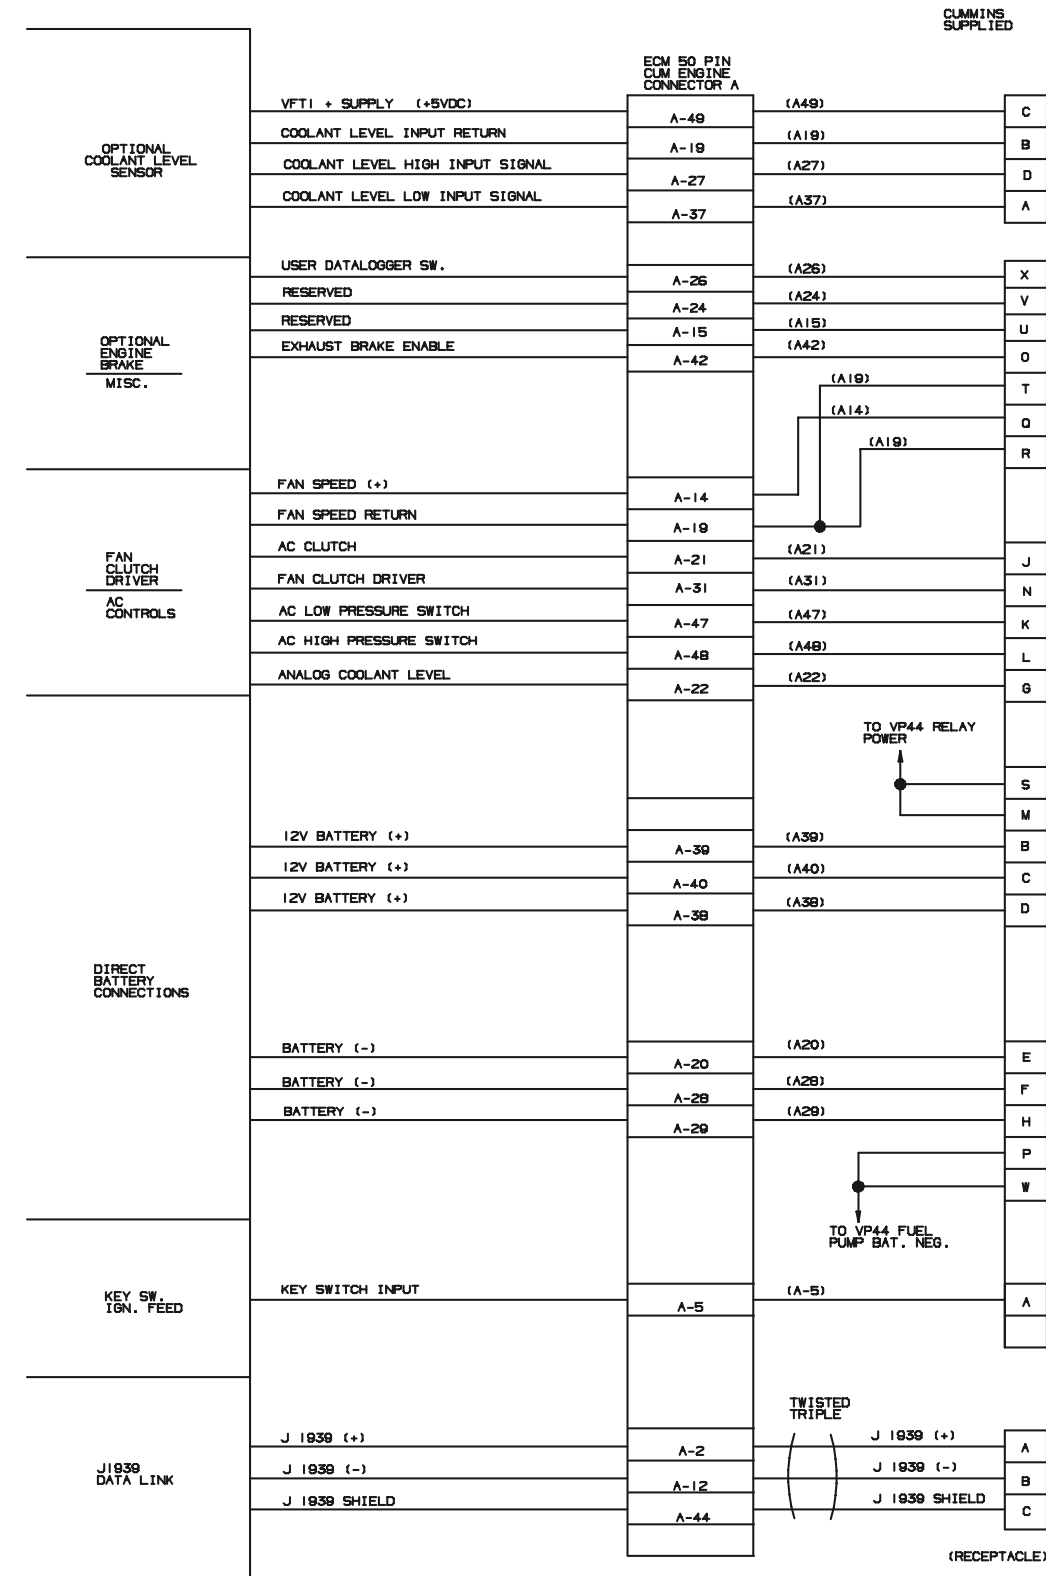


62202621 C

ELECTRICAL CUMMINS
ISB ENG., OEM INTER-
FACE CONN. A
(98 MODEL)
 Effective Date: 08/12/98

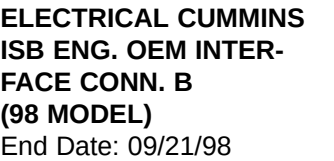

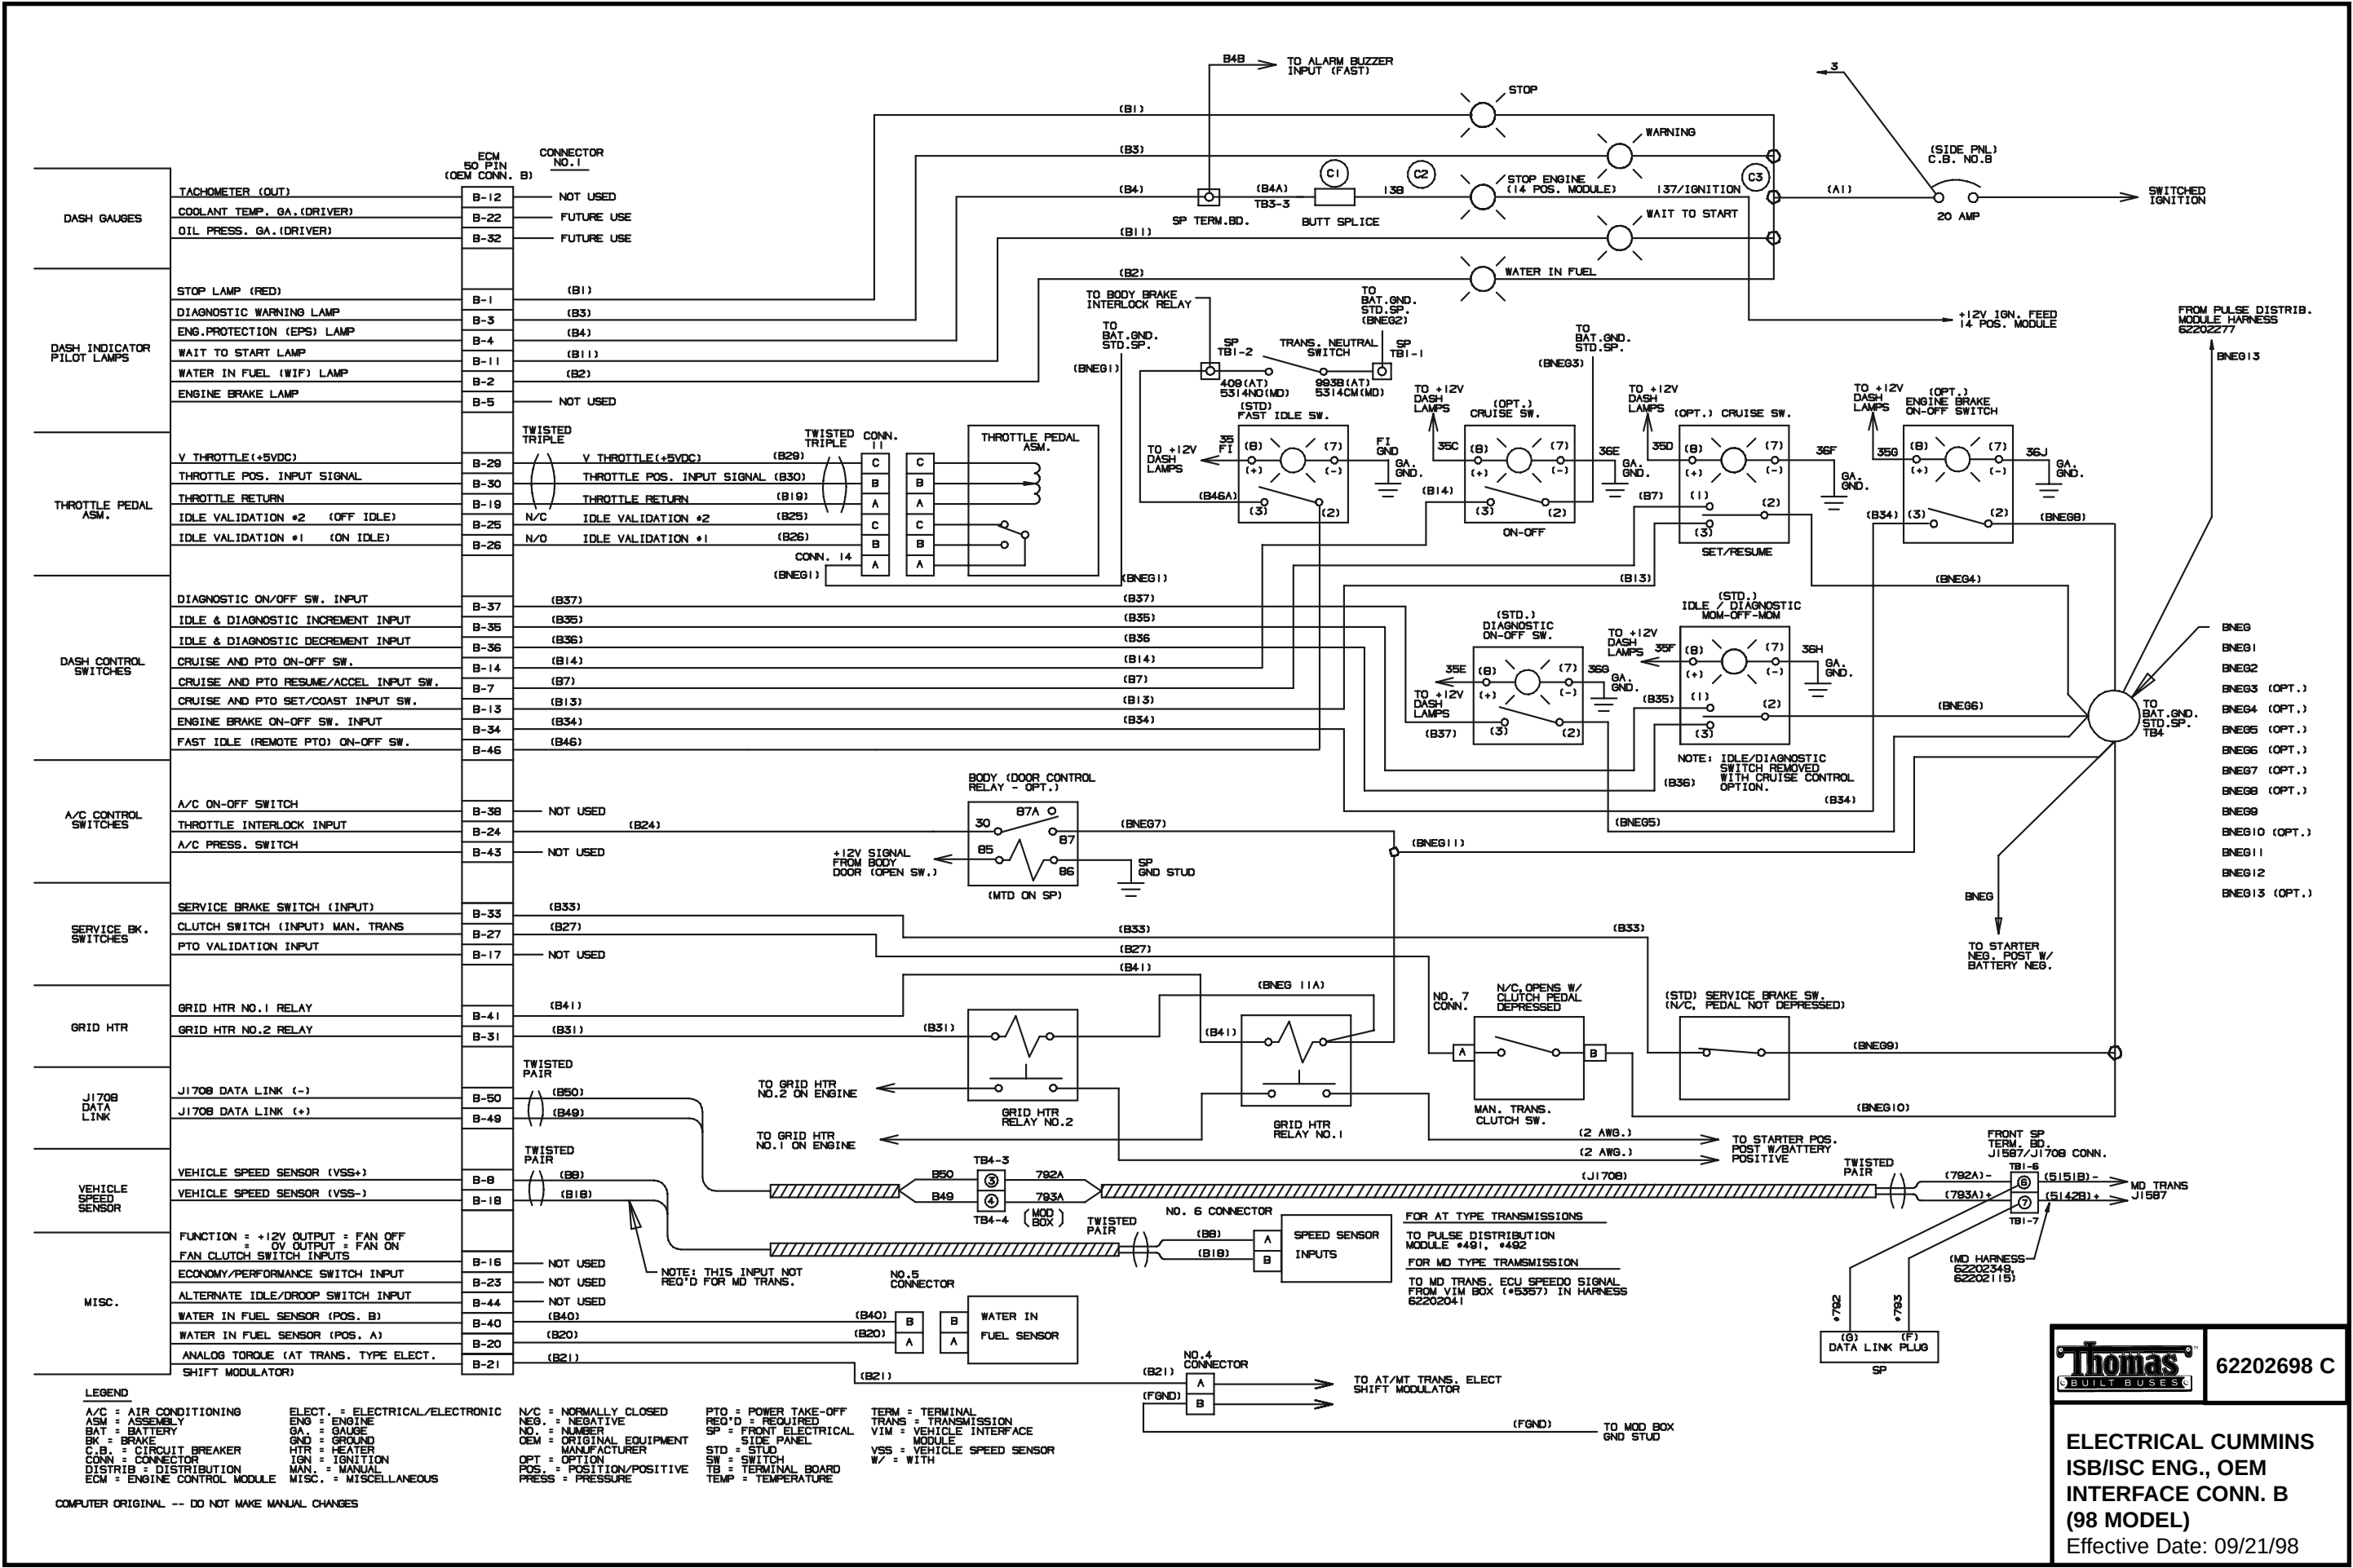

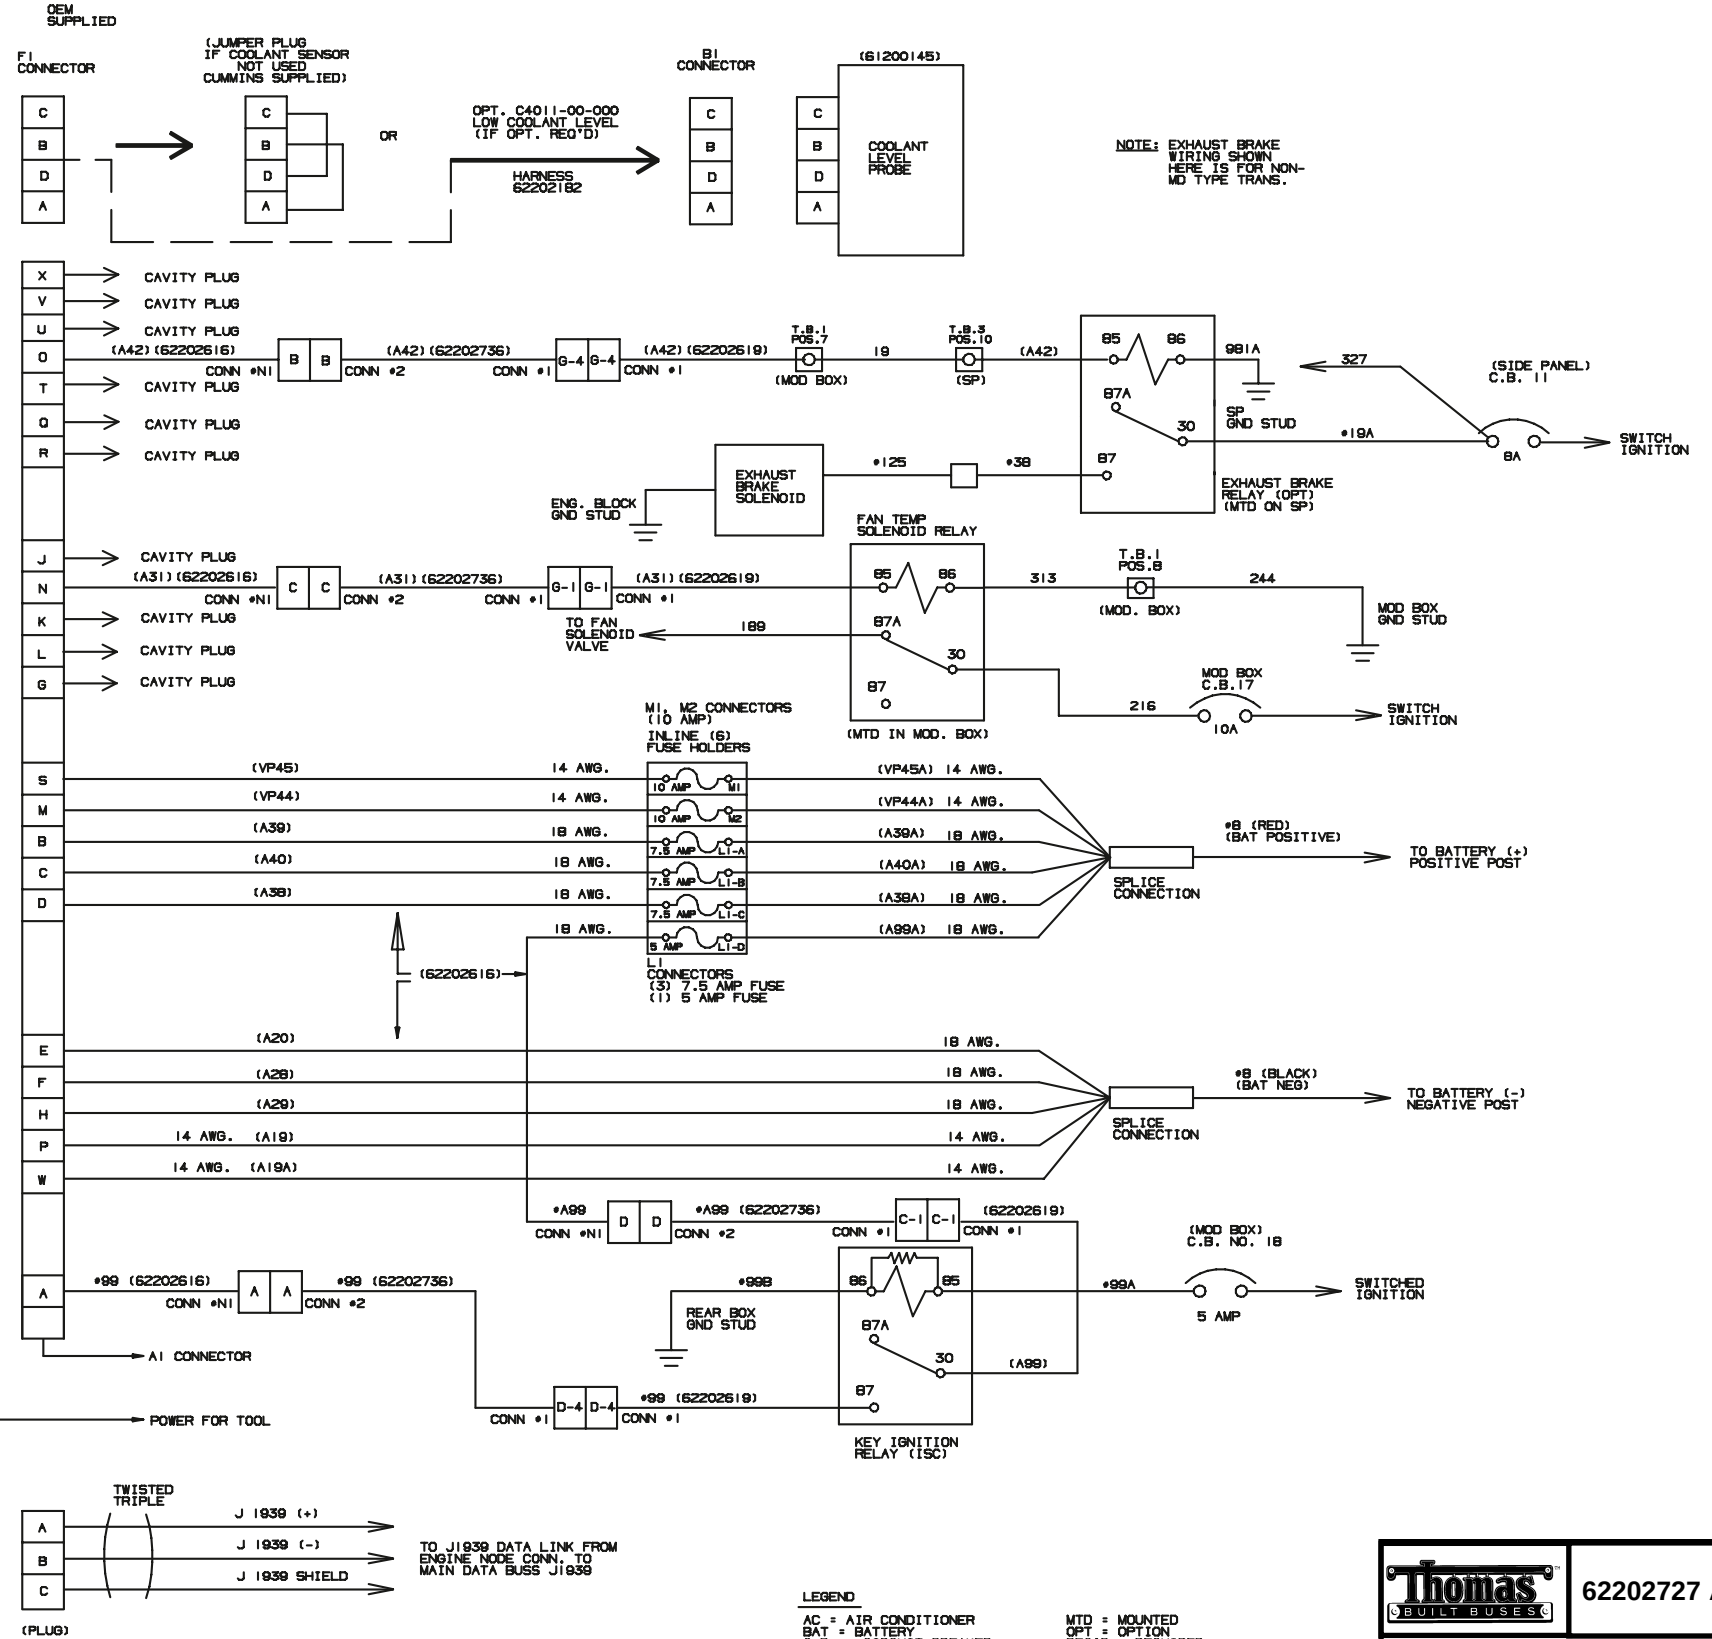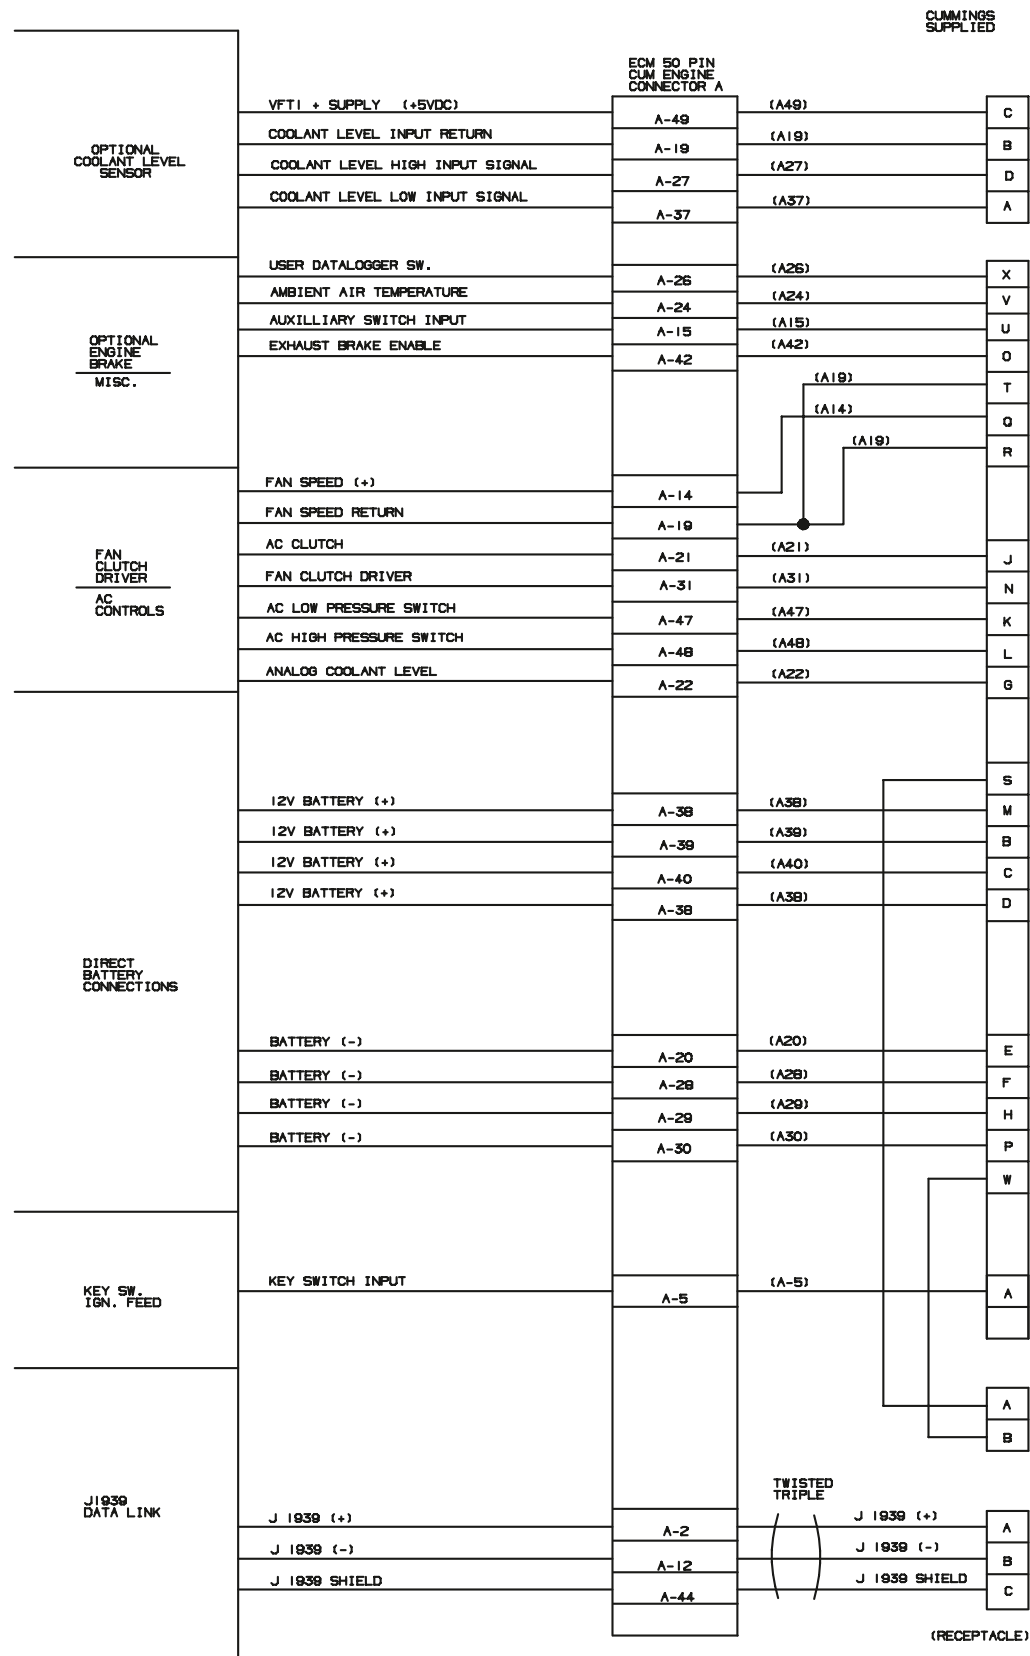



62202727 A


ELECTRICAL CUMMINS
ISC ENG., OEM INTER-
FACE CONN. A
(98 MODEL)
 Effective Date: 08/10/98

NOTES:

**MVP-ER
TRANSMISSION
SCHEMATICS**

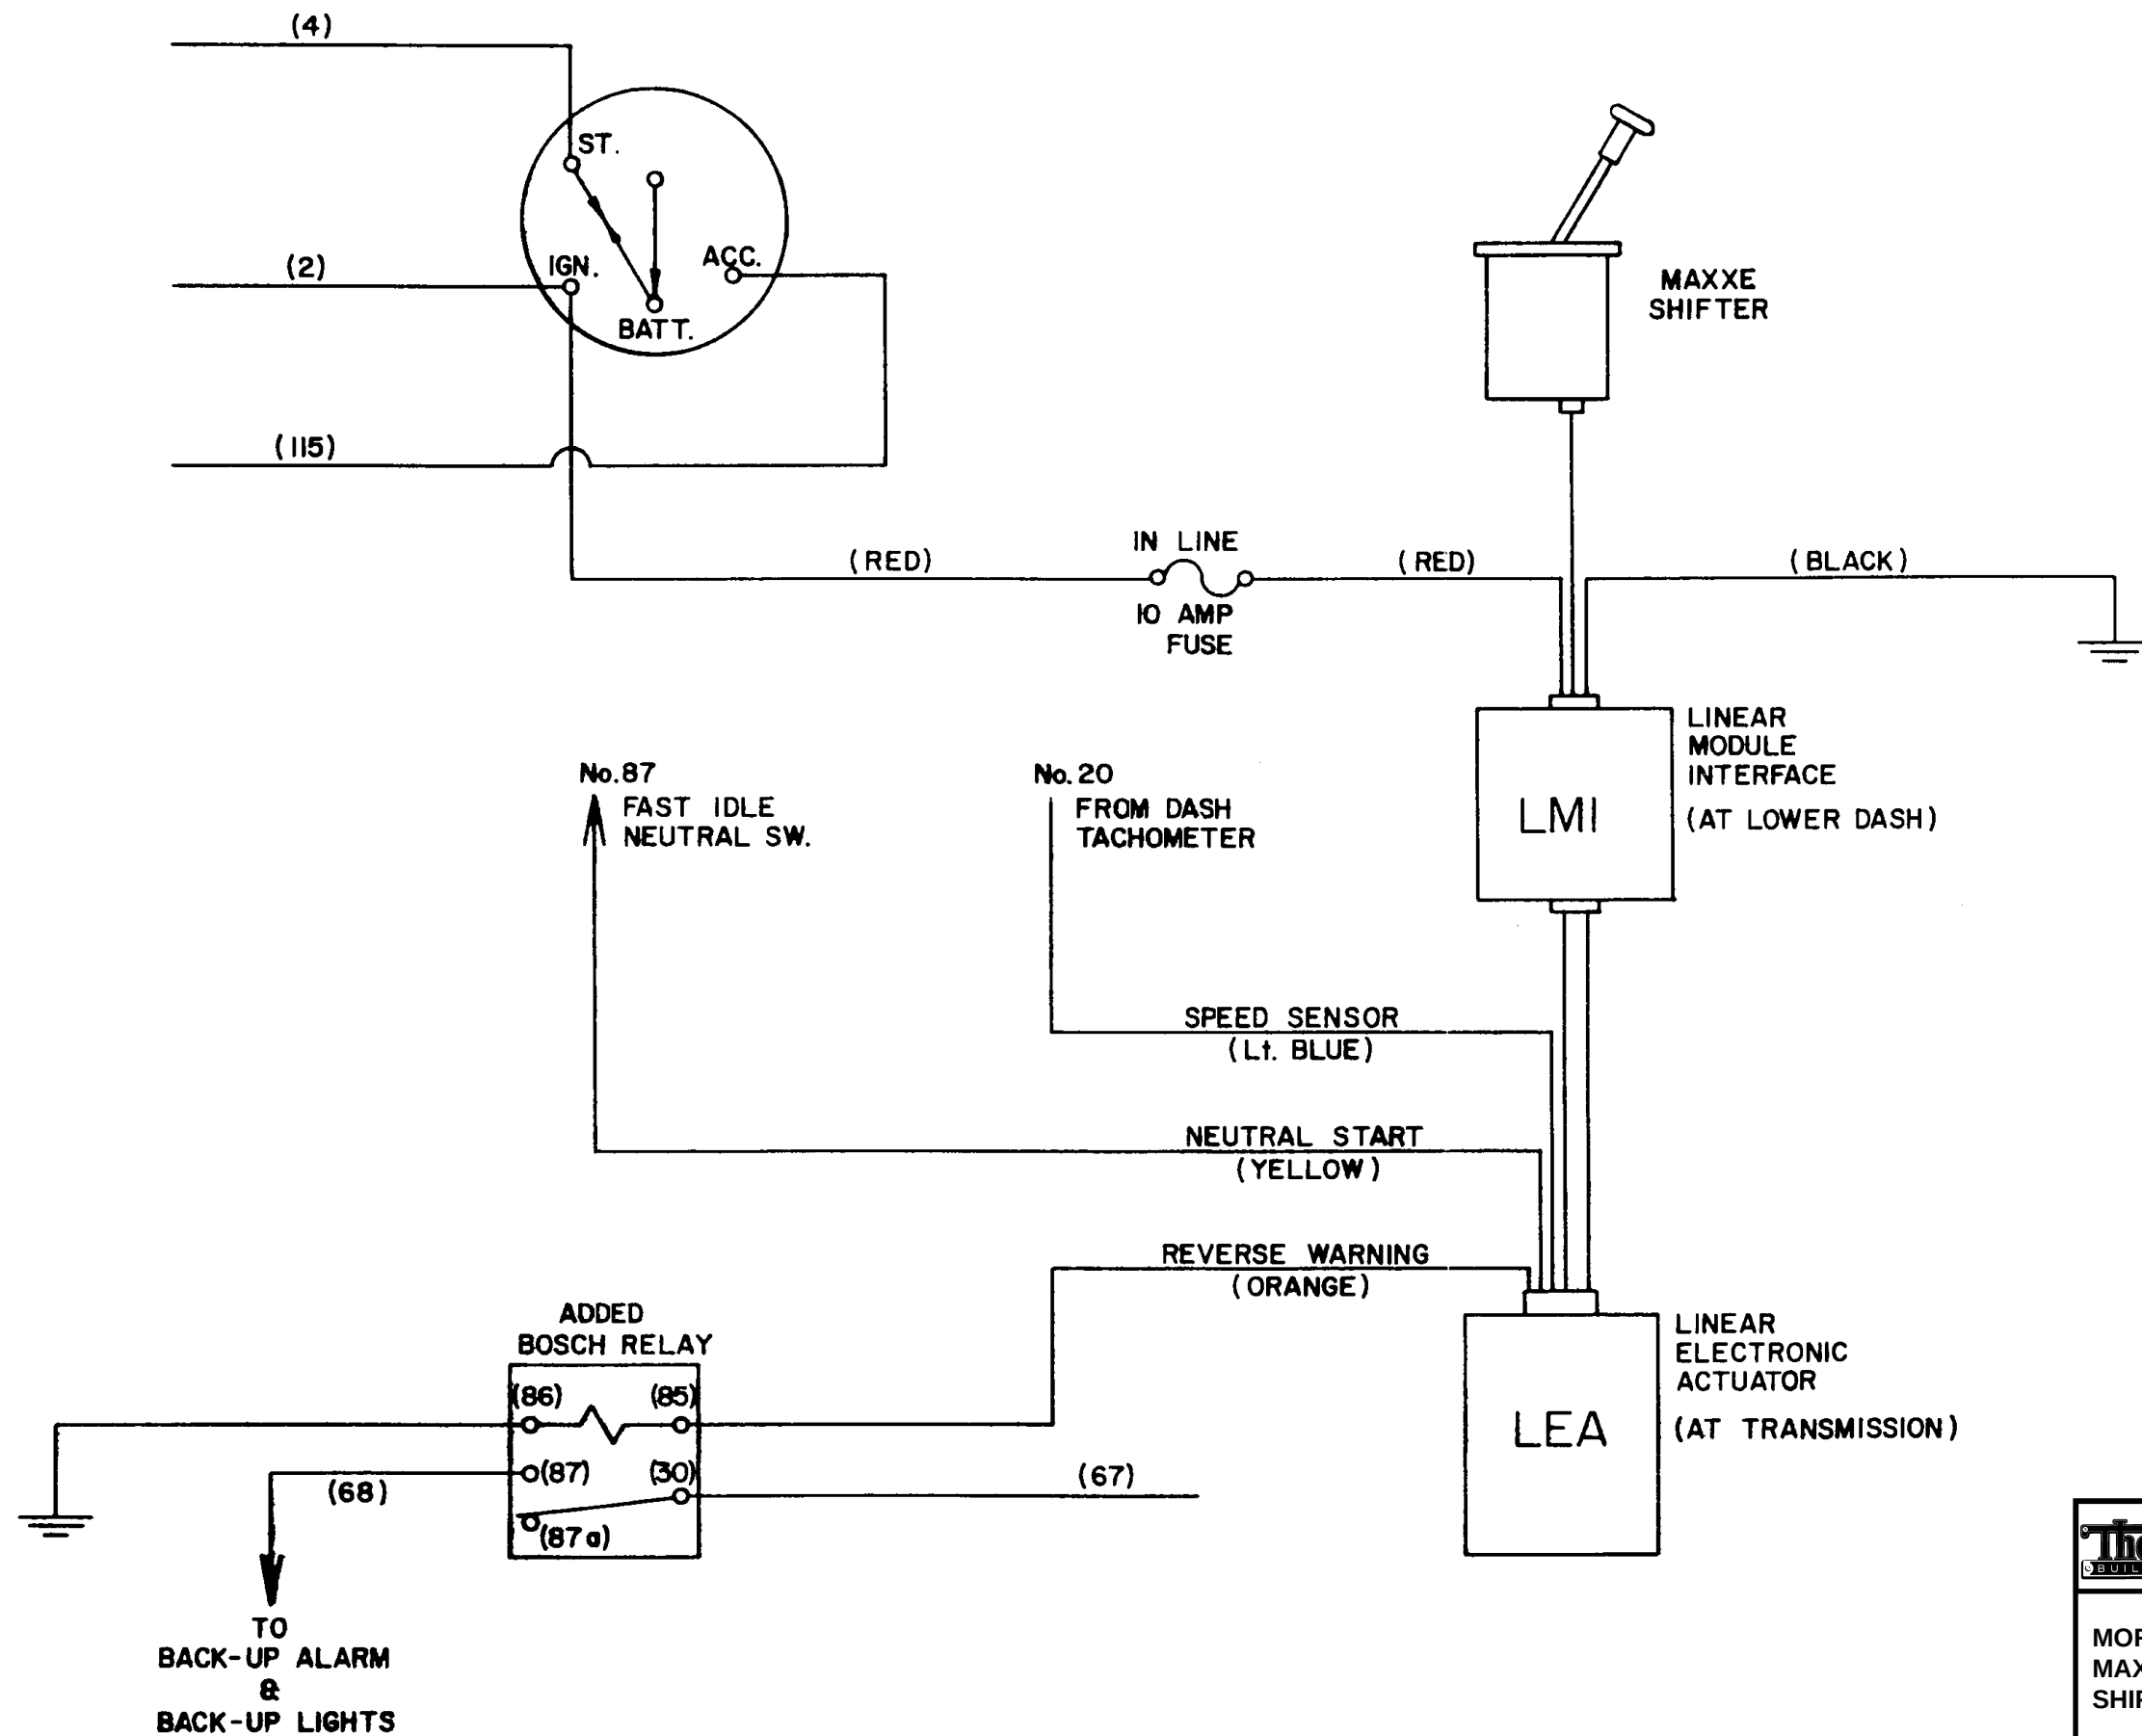


	62200801 A
MORSE ELECTRONIC MAXXE TRANSMISSION SHIFTER (L.A. UNIFIED)	

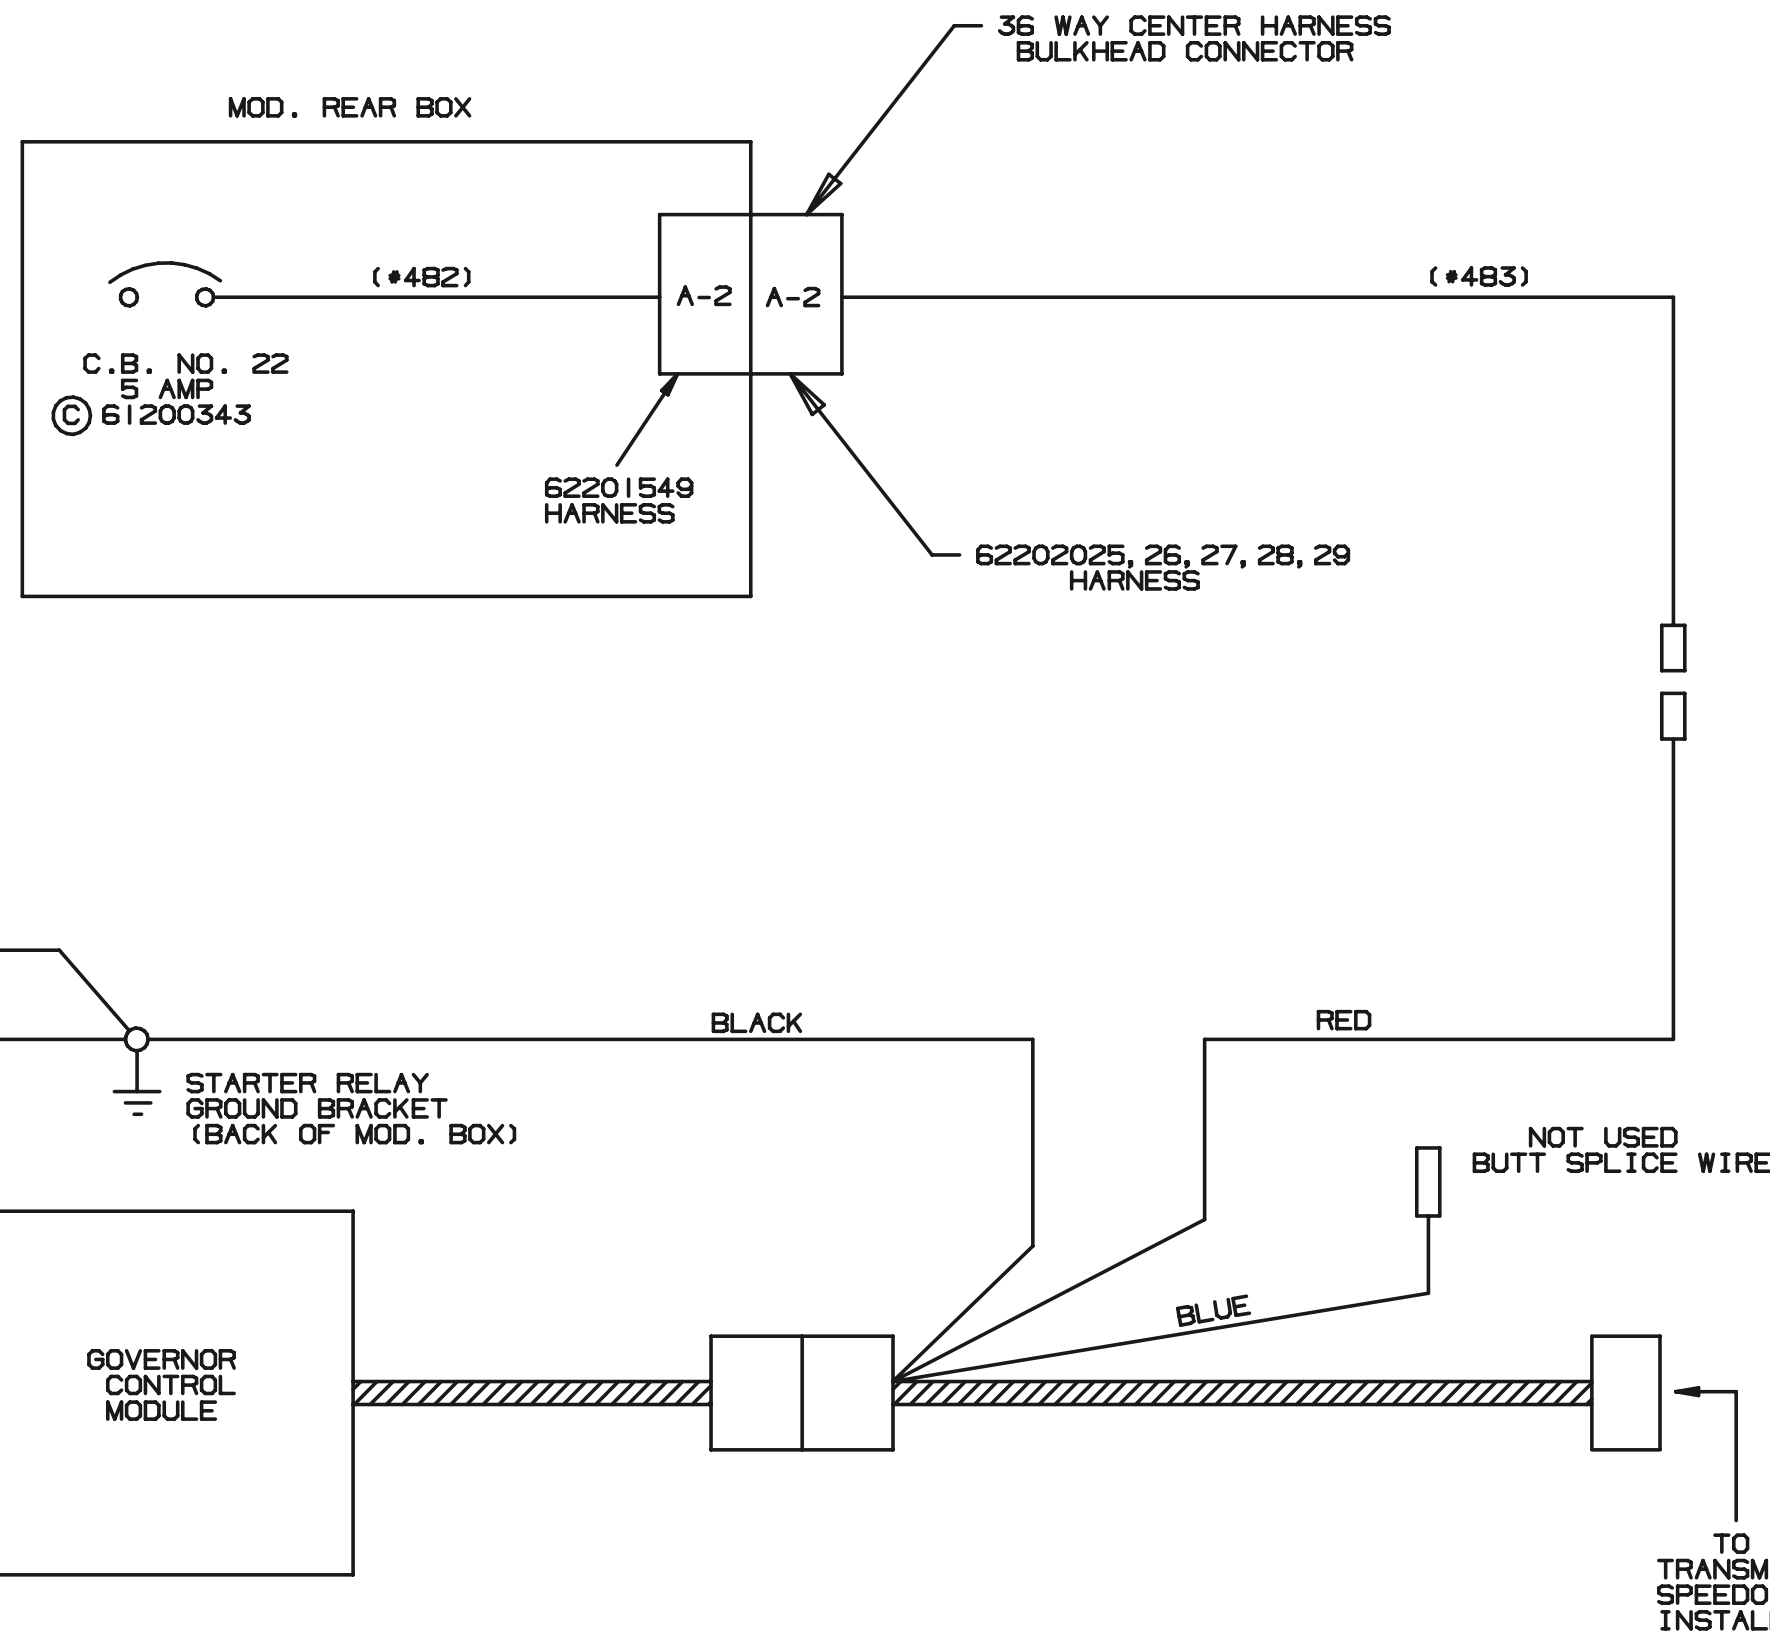



WIRING INSTALLATION INSTRUCTIONS

- 1) BEFORE MOUNTING CENTER HARNESS (62202025, 2026, 2027, 2028, 2029) MODULAR REAR BOX CONNECTOR AND 62201549 INTERIOR MODULAR REAR BOX CONNECTOR, INSTALL STURDY GOVERNOR WIRE JUMPER SET 62201906 INTO APPROPRIATE CONNECTOR BODY.
- 2) NOTE THAT EACH CONNECTOR BODY MUST HAVE SECONDARY LOCKS REMOVED BEFORE JUMPER SET WIRING CAN BE INSTALLED.
- 3) REMOVE CAVITY PLUG IN A-2 POSITION OF MAIN CENTER HARNESS CONNECTOR PLUG. THIS POSITION WILL BE USED FOR ROUTING OF WIRE JUMPER SET INTO THE MODULAR REAR BOX.
- 4) AFTER INSTALLING WIRE JUMPER SET IN EACH APPROPRIATE CONNECTOR BODY OF EACH HARNESS (POS. A-2), THEN HARNESS CONNECTOR BODIES AND HARNESS WIRING CAN BE MOUNTED AND WIRED IN NORMAL FASHION. REFER TO THIS DWG. FOR STURDY GOVERNOR WIRING REQUIRED.


Thomas BUILT-BUSES	62201905 C
ELECT. STURDY GOVERNOR, CAT 3116	

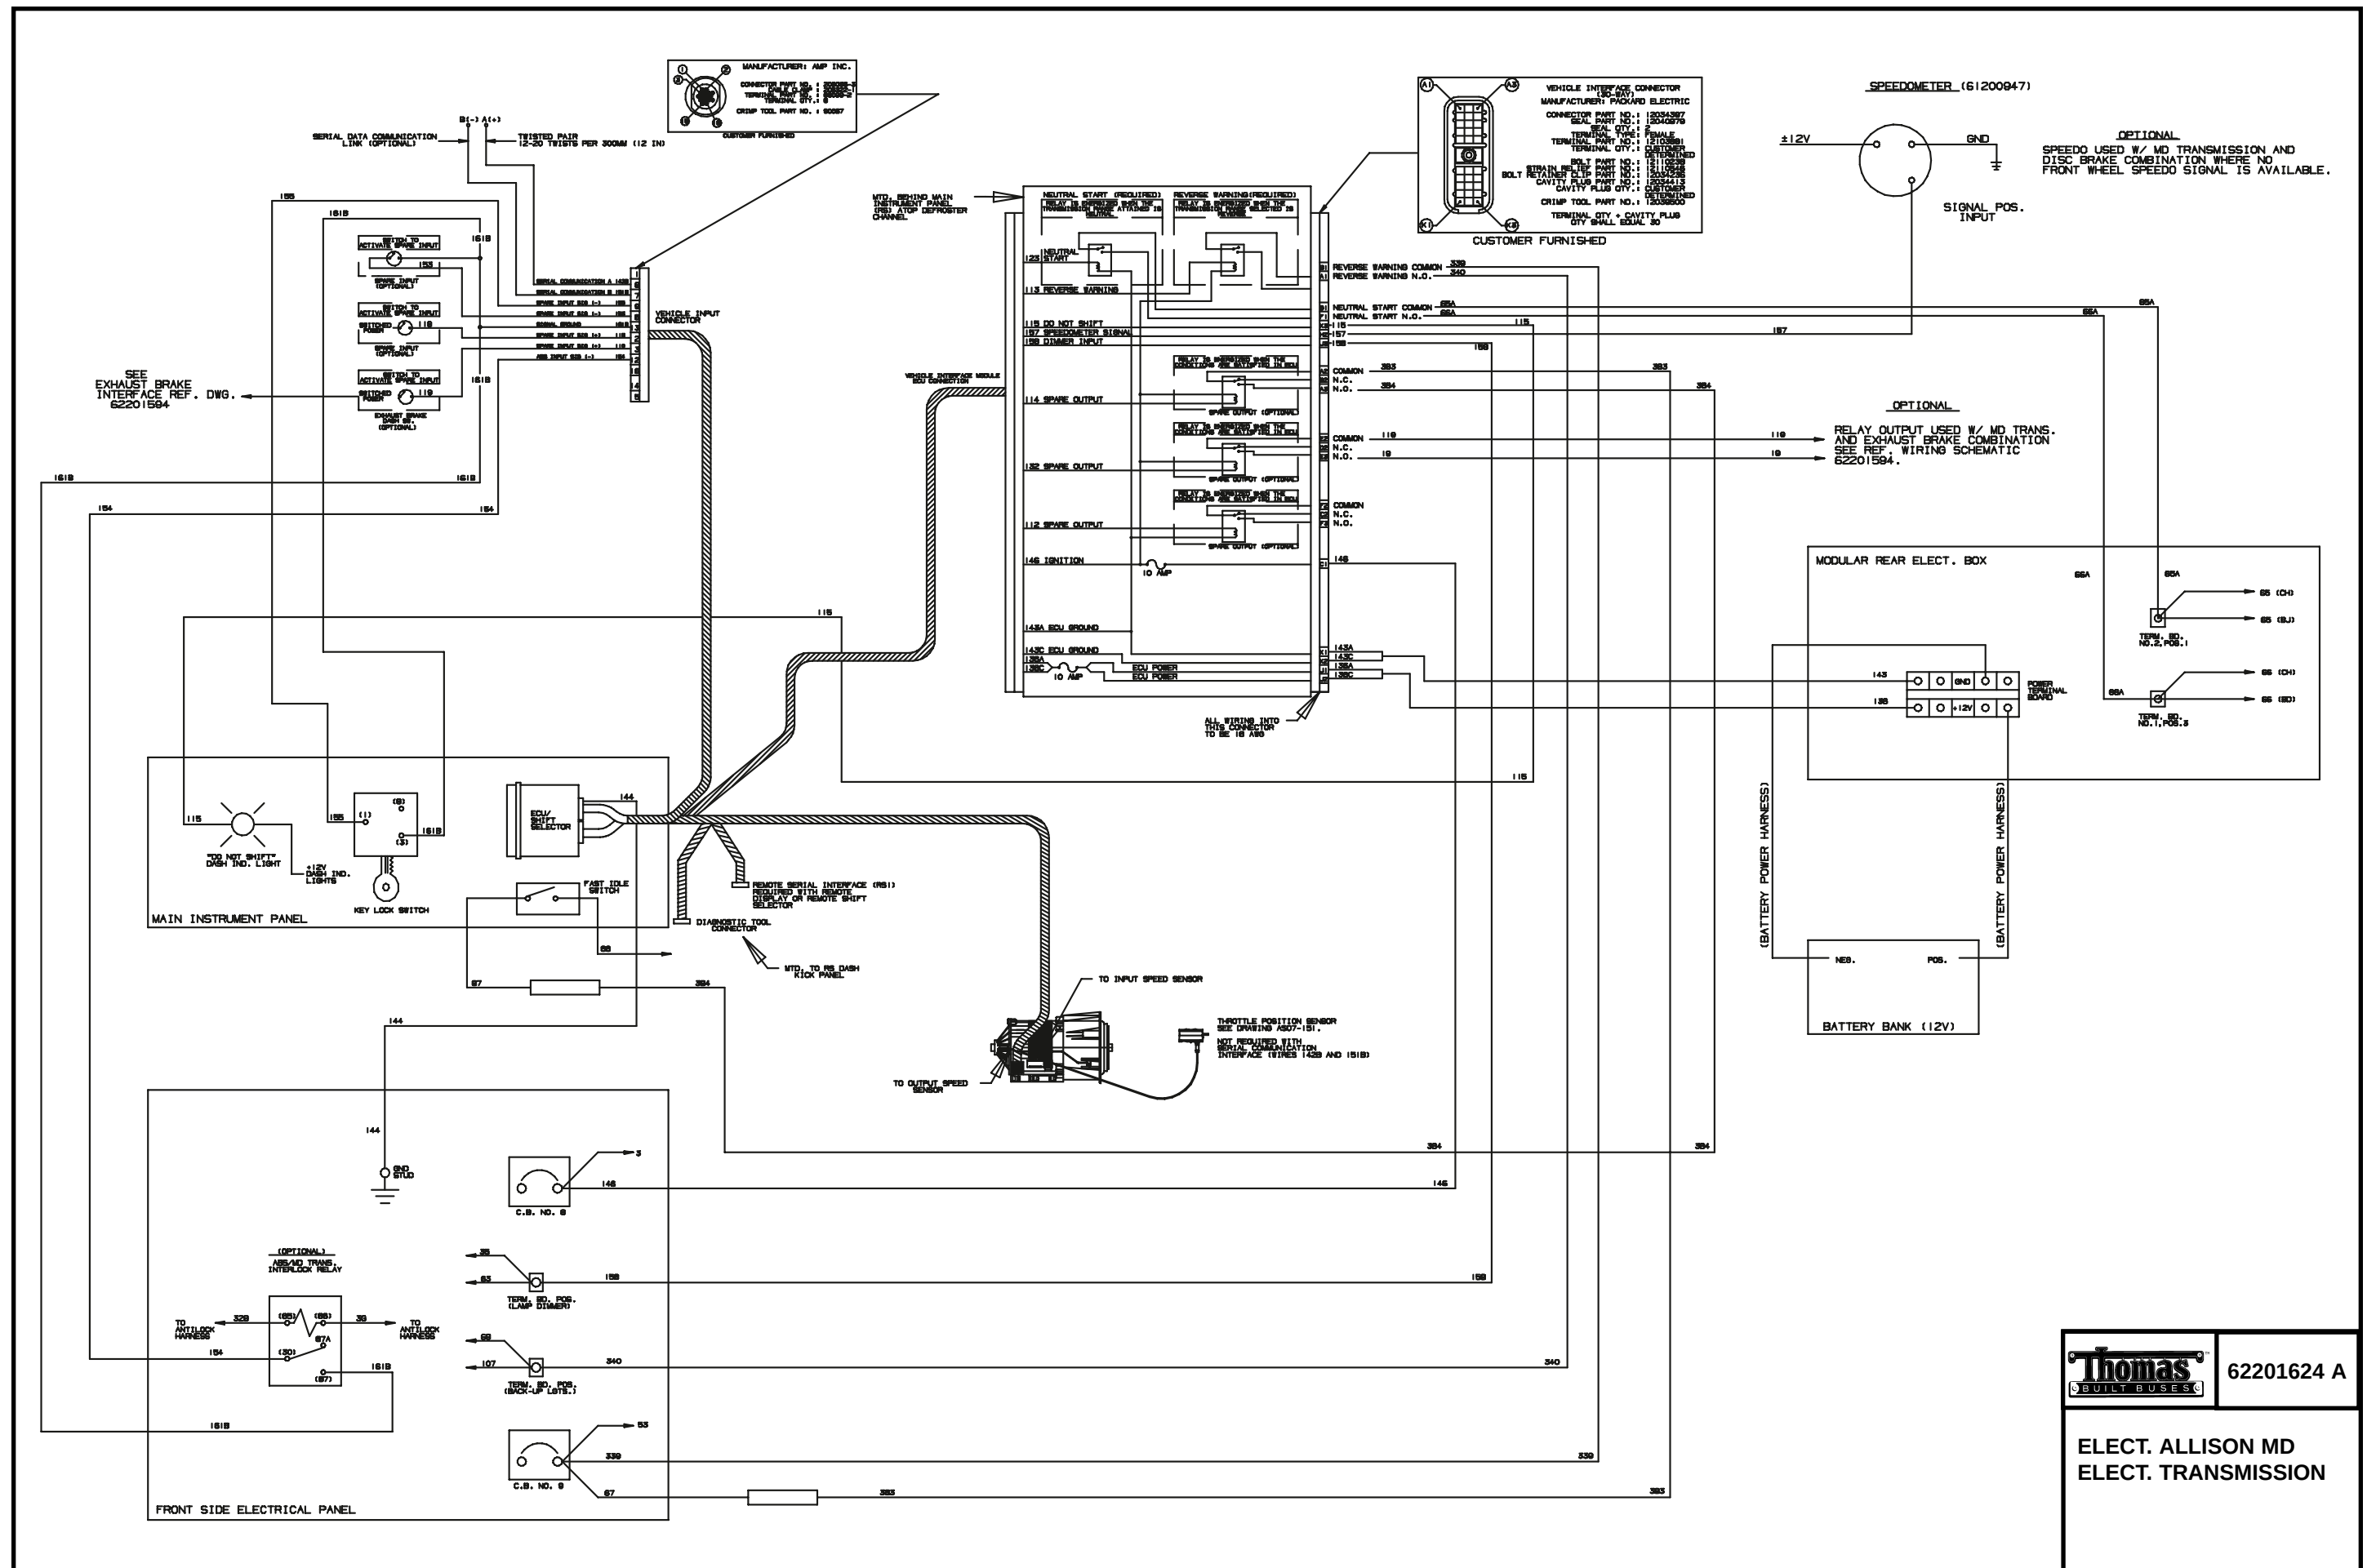



HARNESS - 62202181

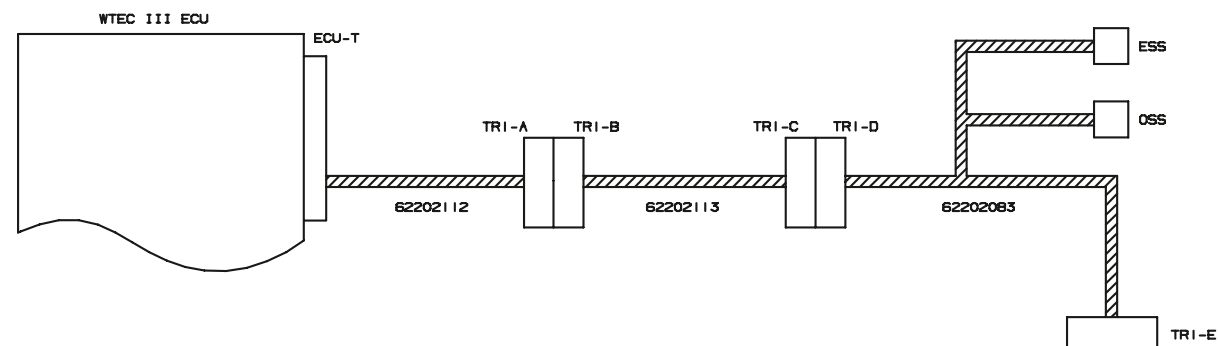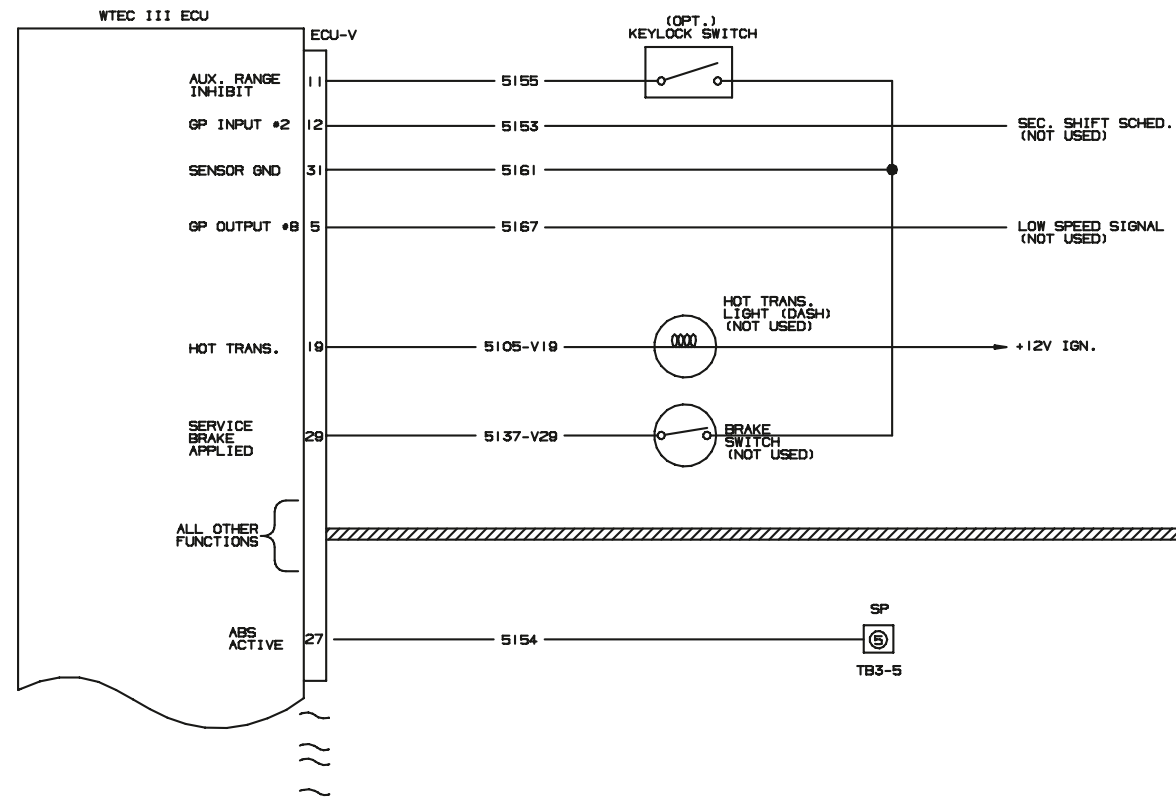

DETAIL A

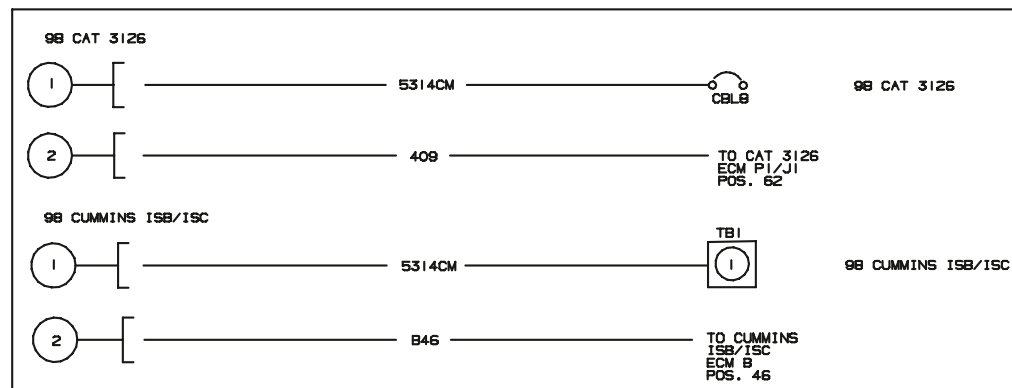

HARNESS - 62202100


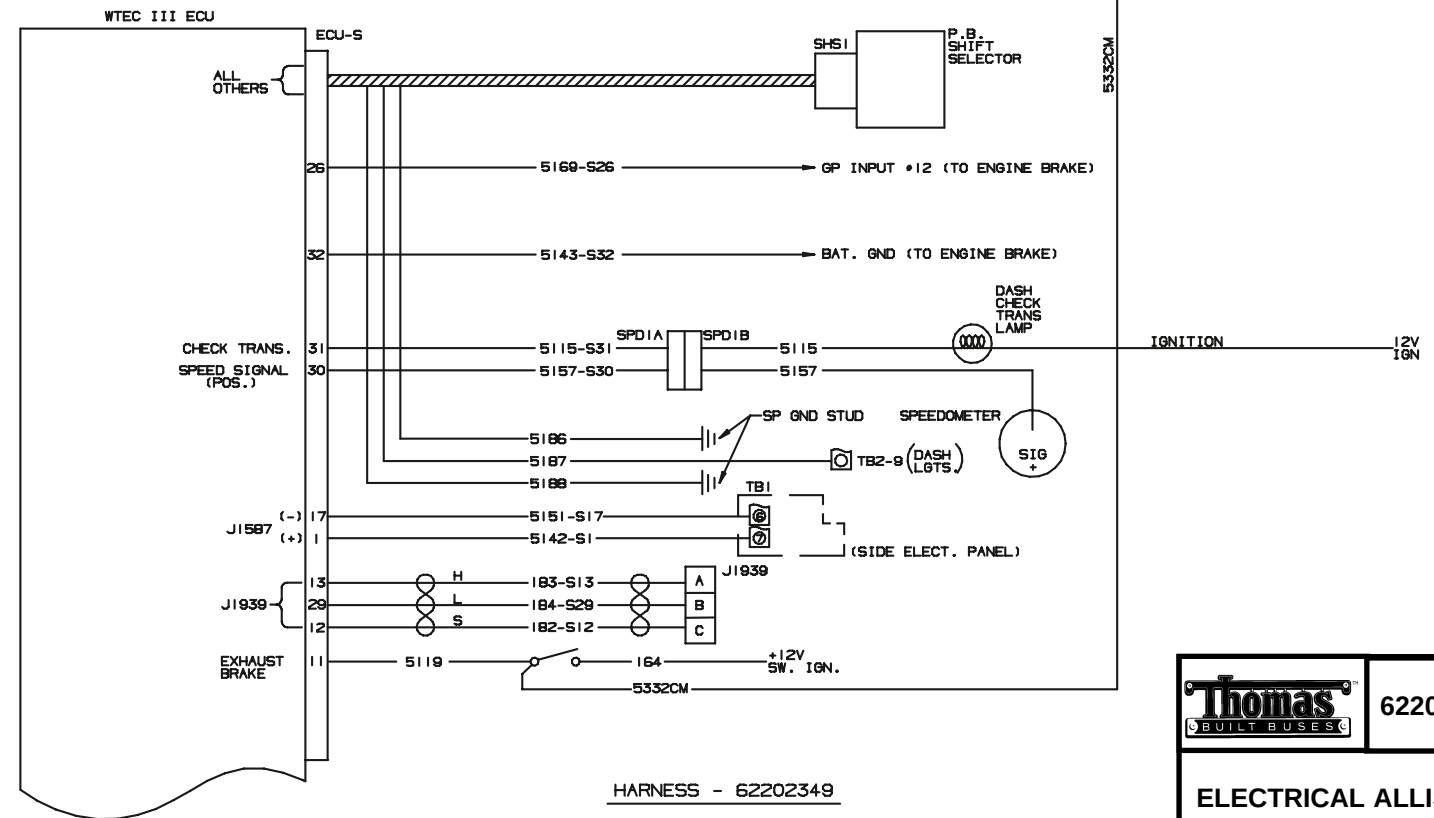
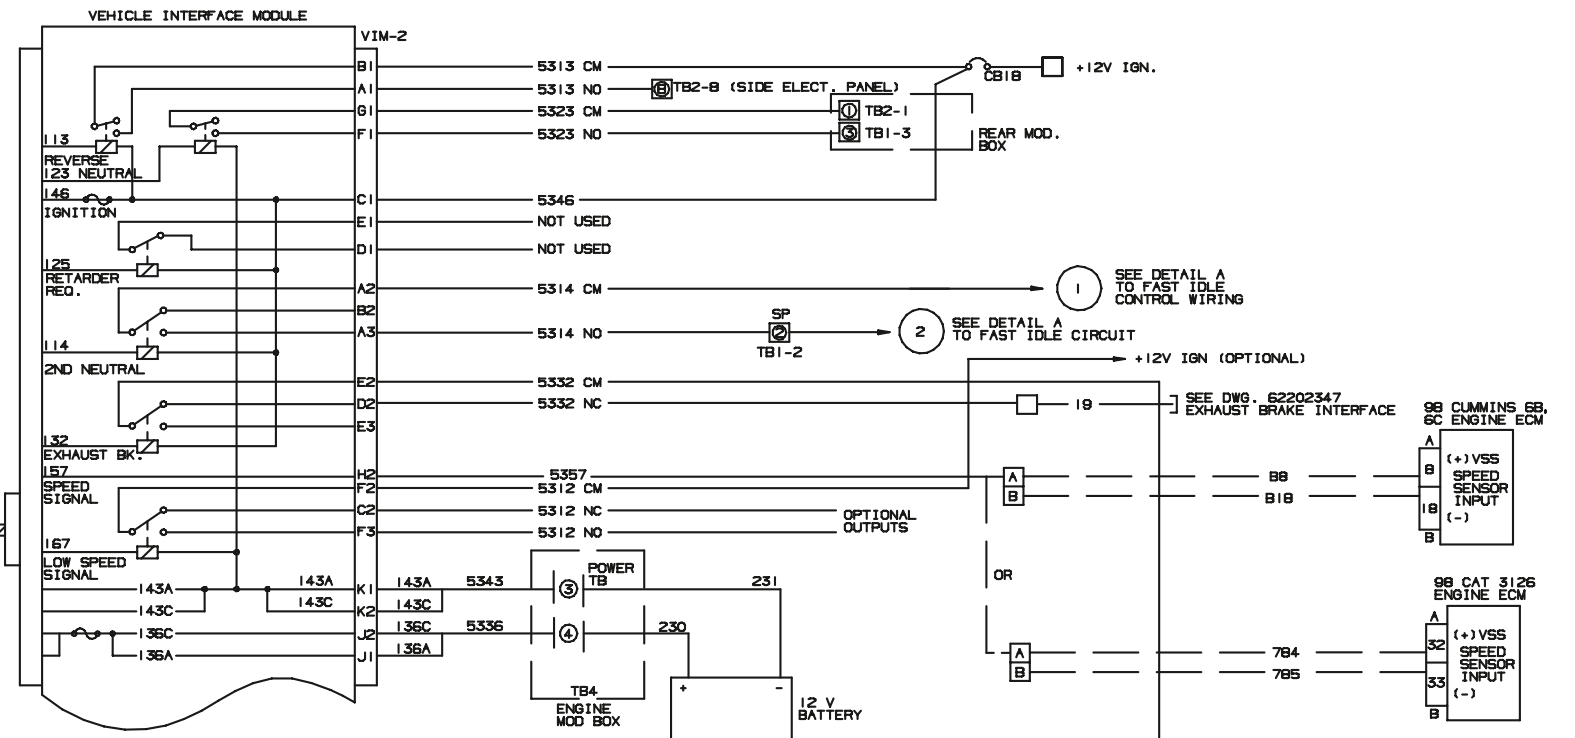


HARNESS - 62202349

62202177 B



ELECTRICAL ALLISON
WTEC III TRANSMISSION
NON RETARDER

HARNESS - 62202645

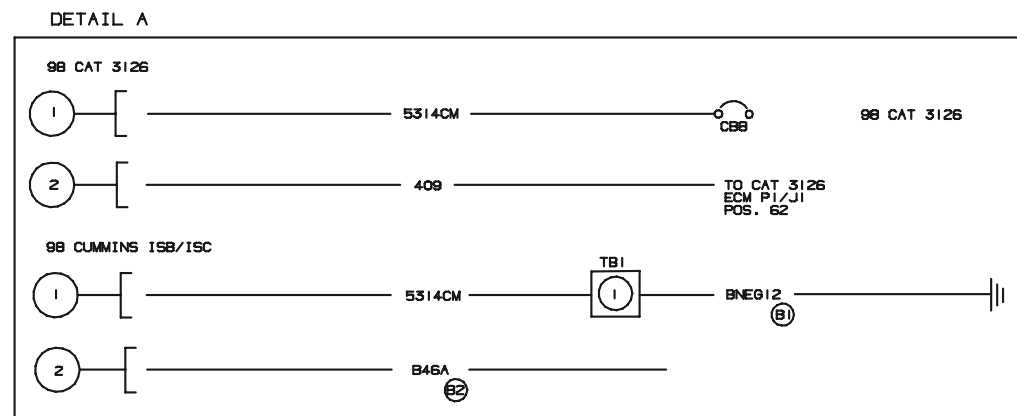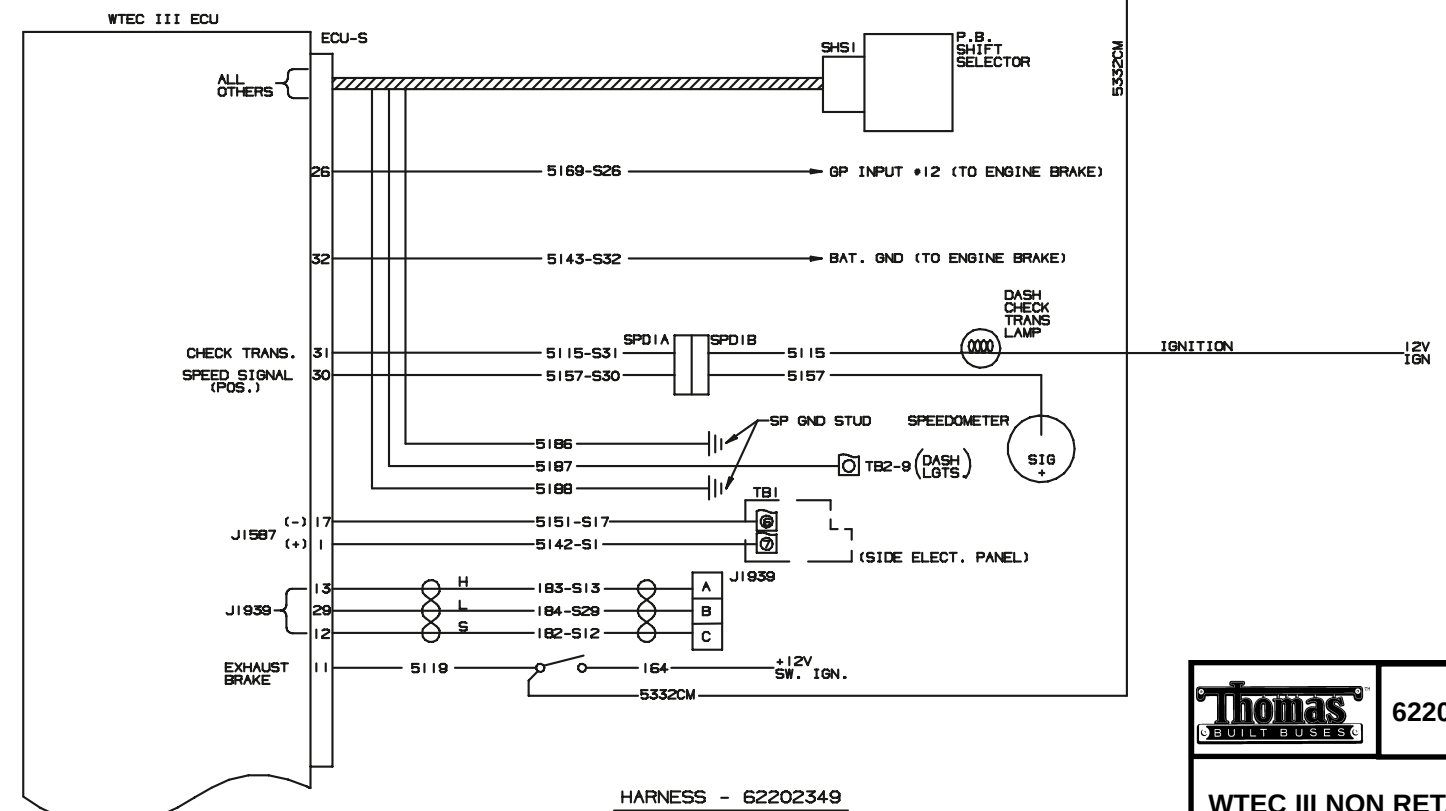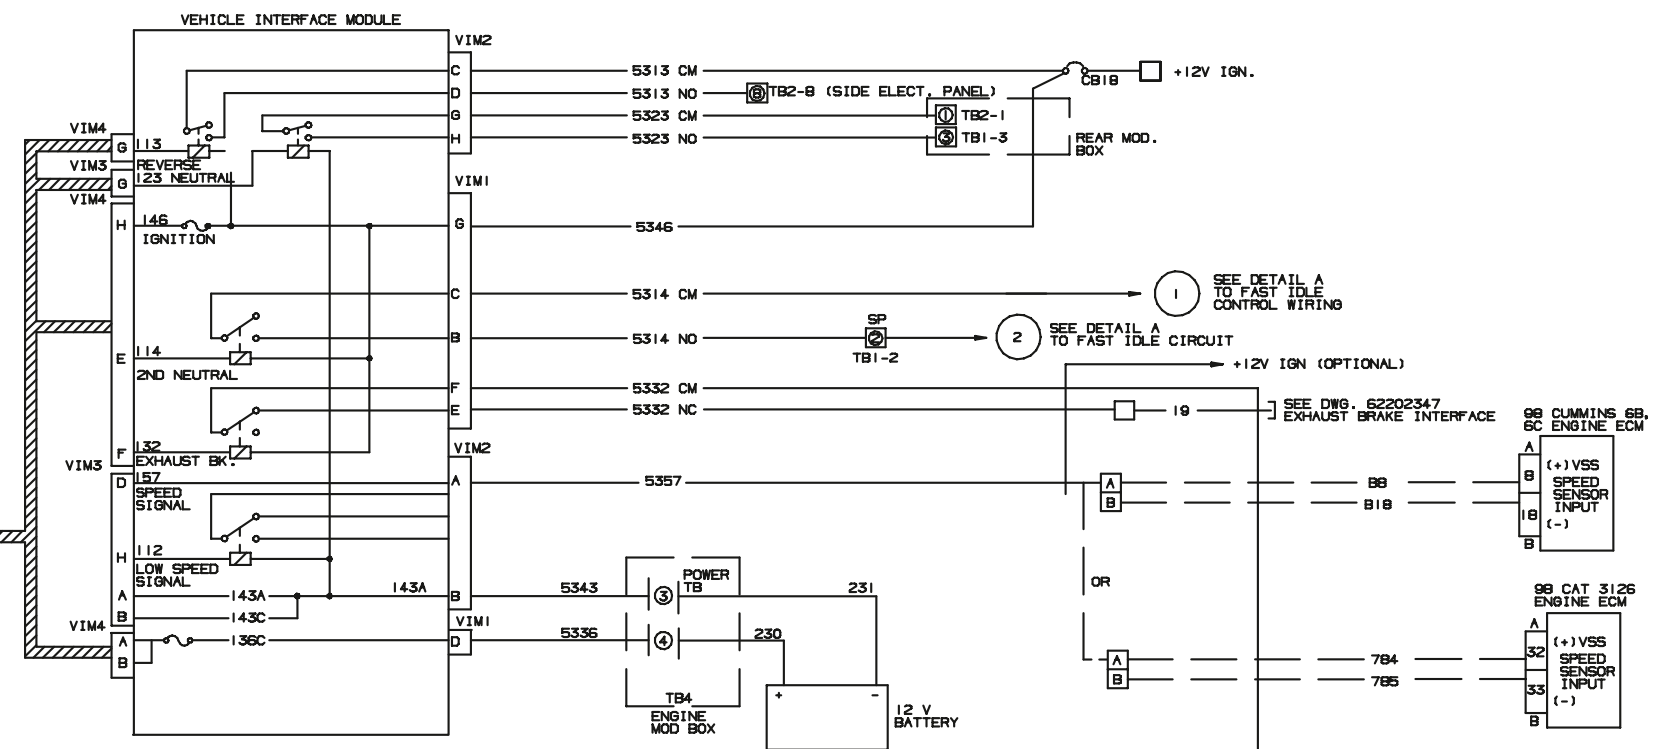





	62202738 B
WTEC III NON RETARDER, BUSSMAN VIM Effective Until: 09/04/98	

HARNESS - 62202134

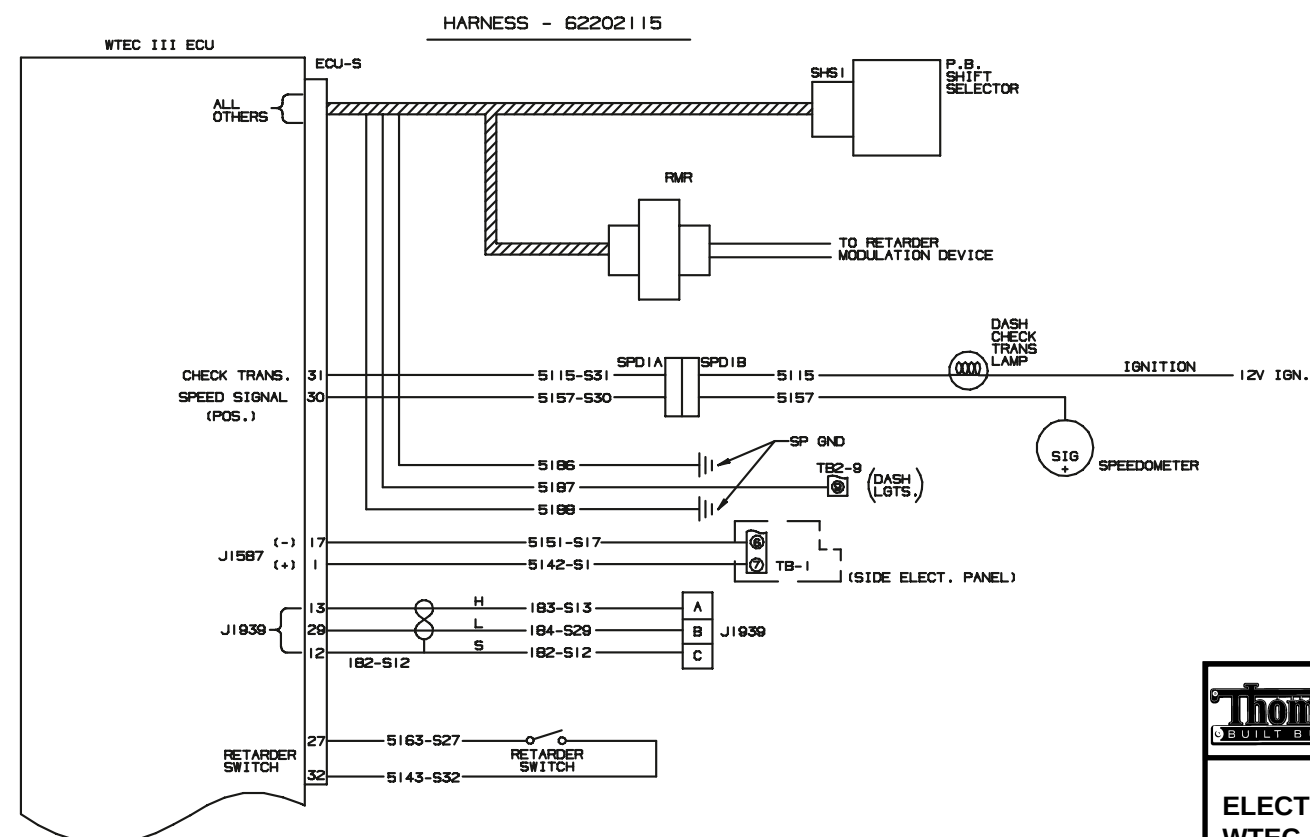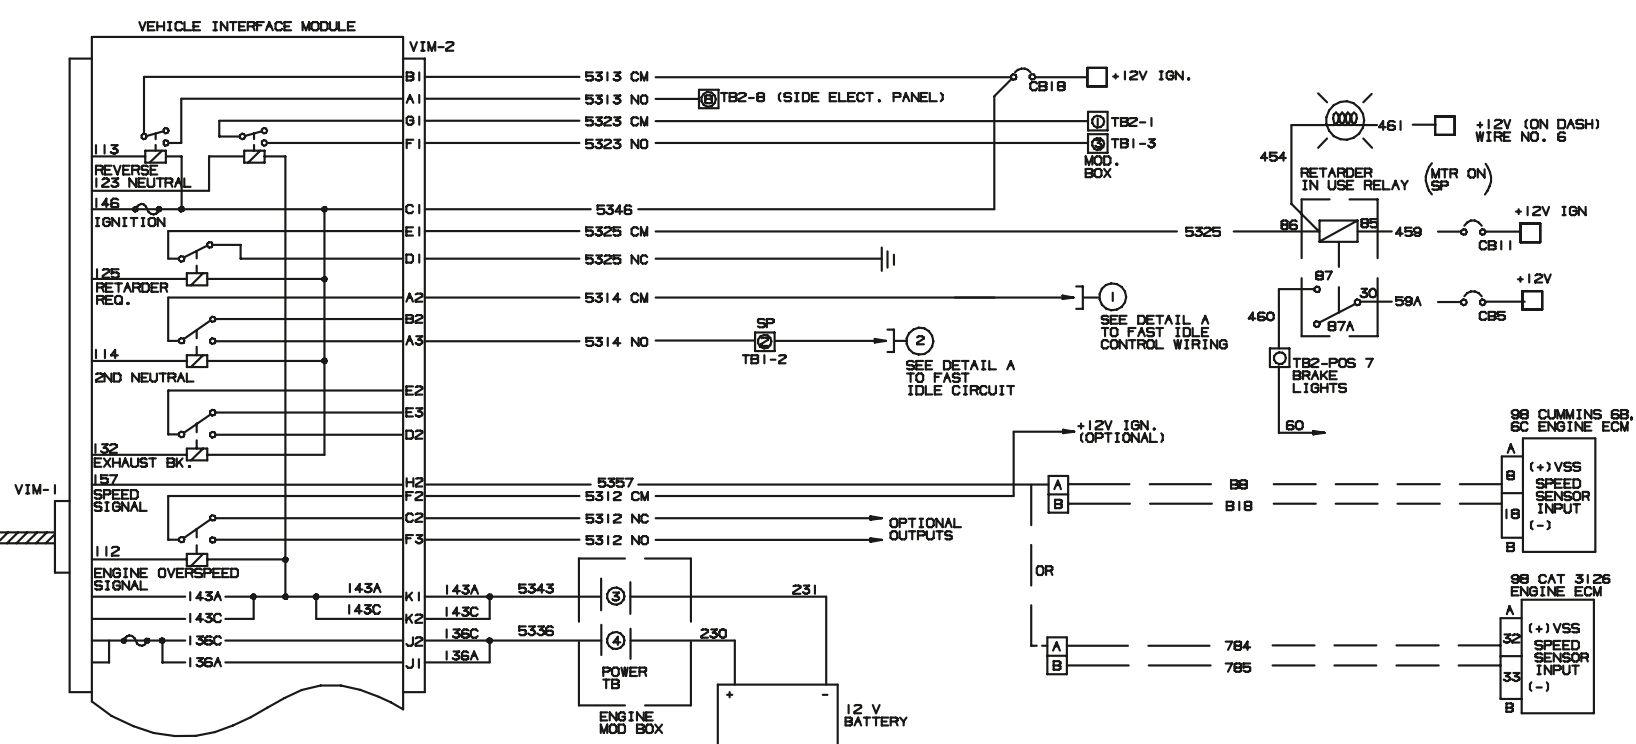

Page 177


HARNESS - 62202646

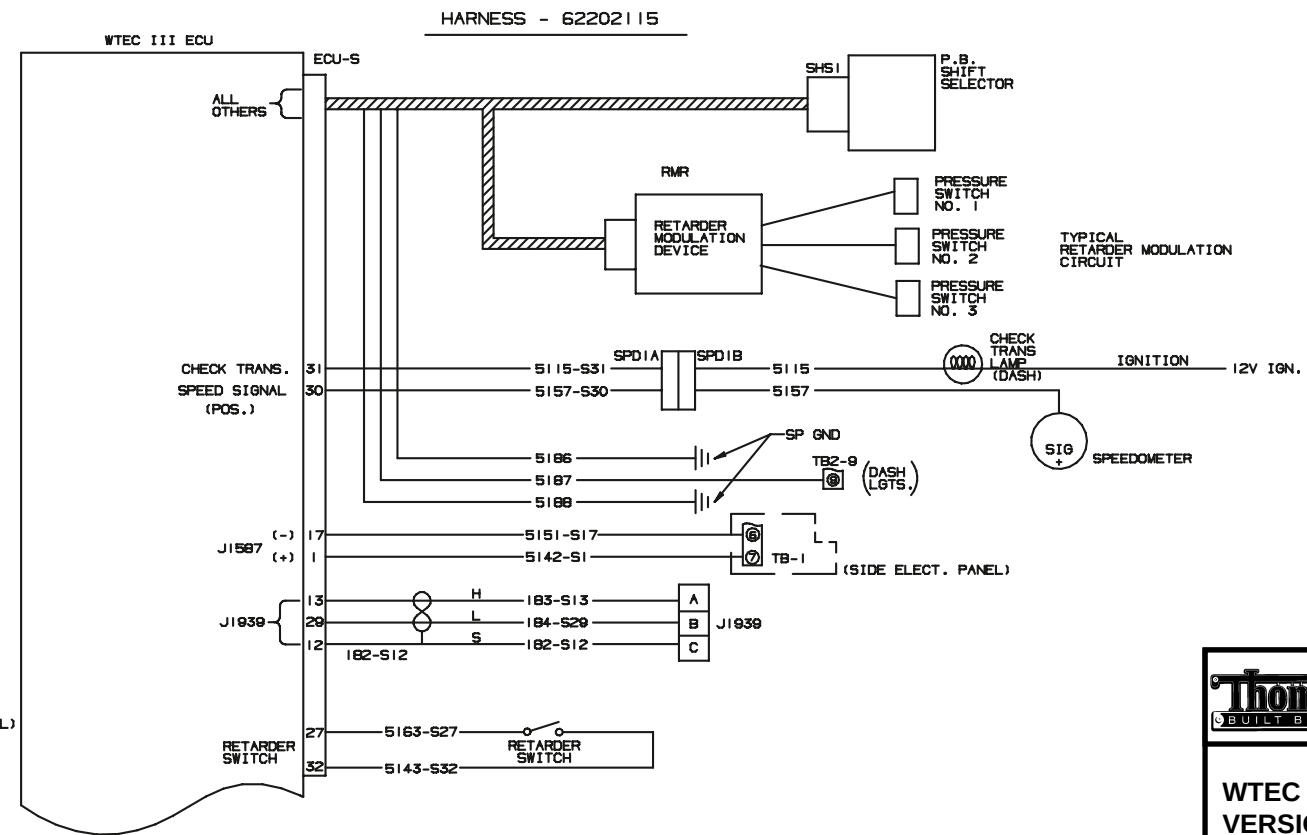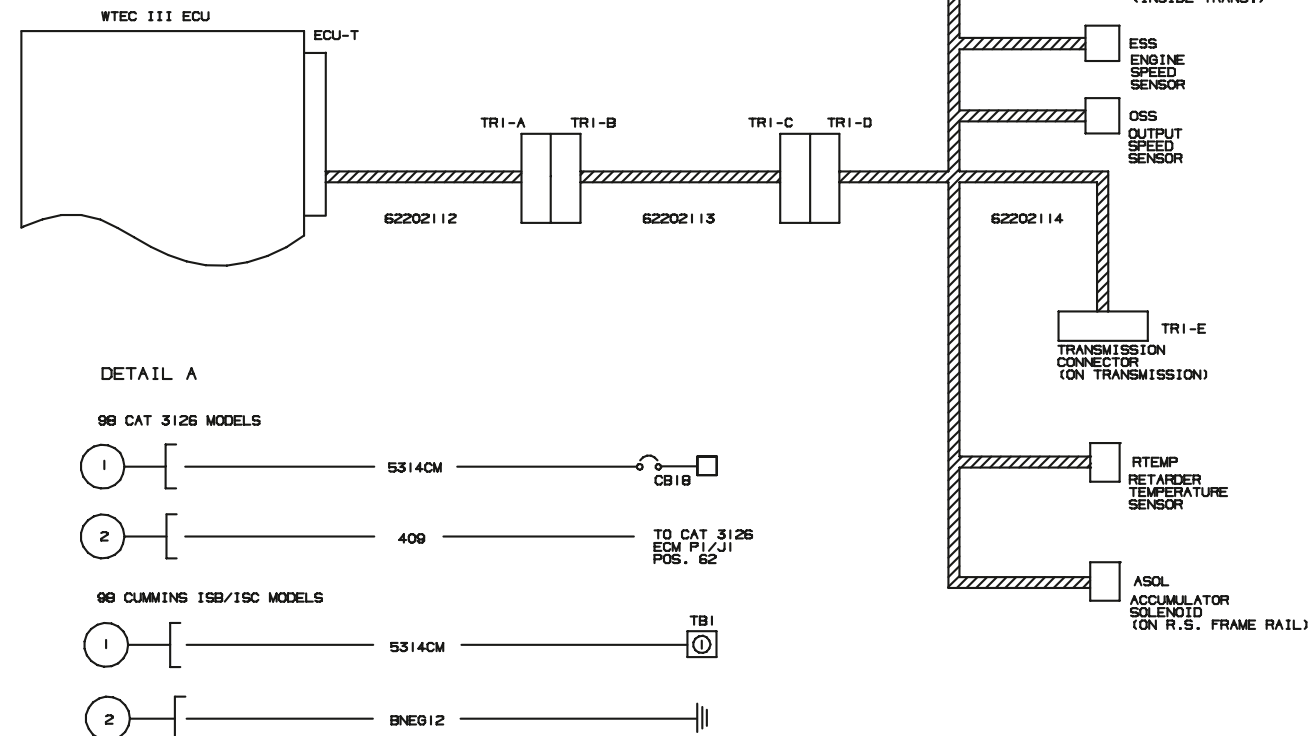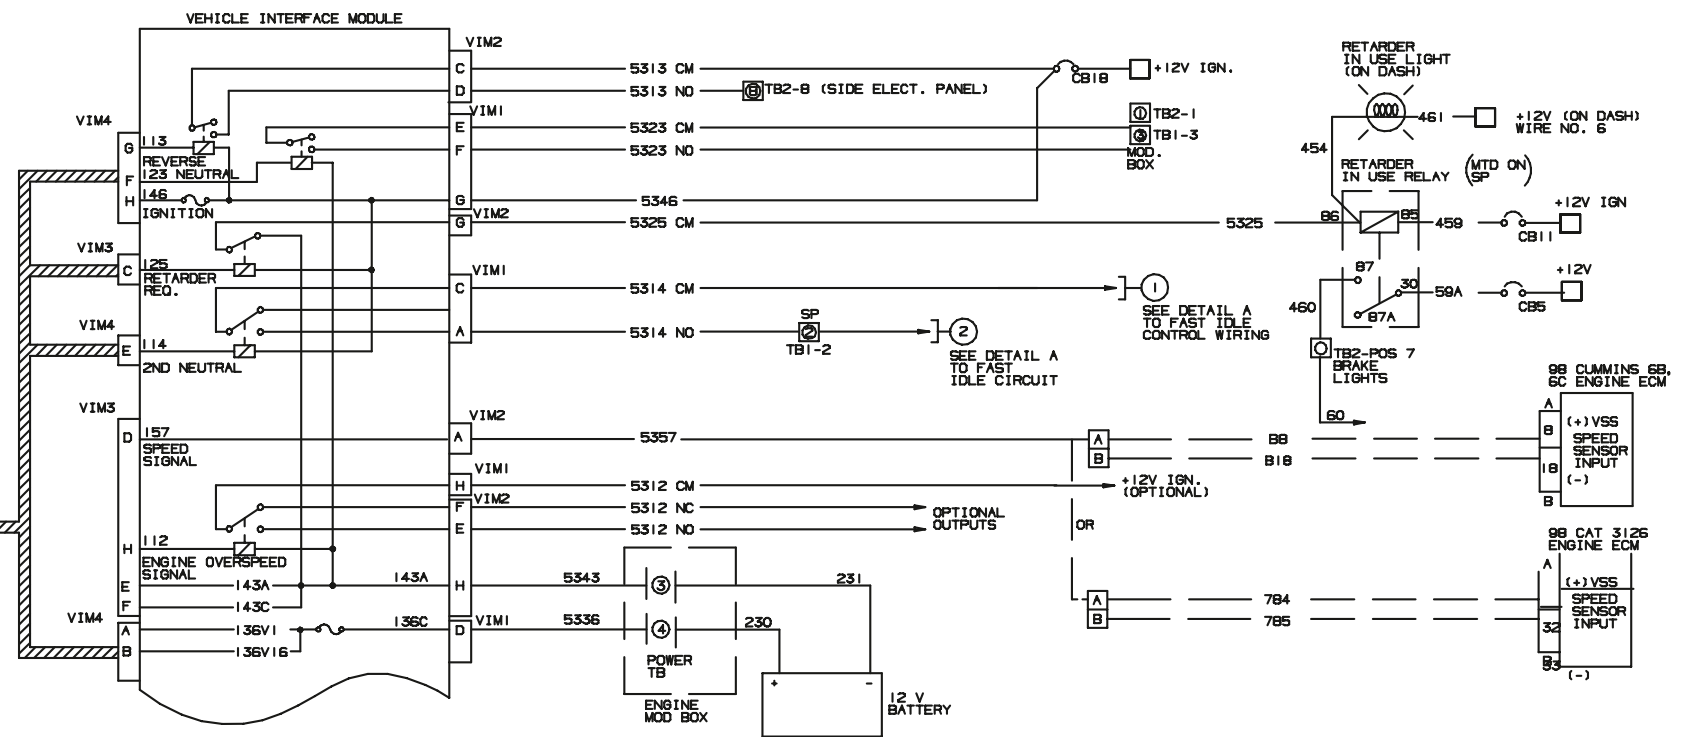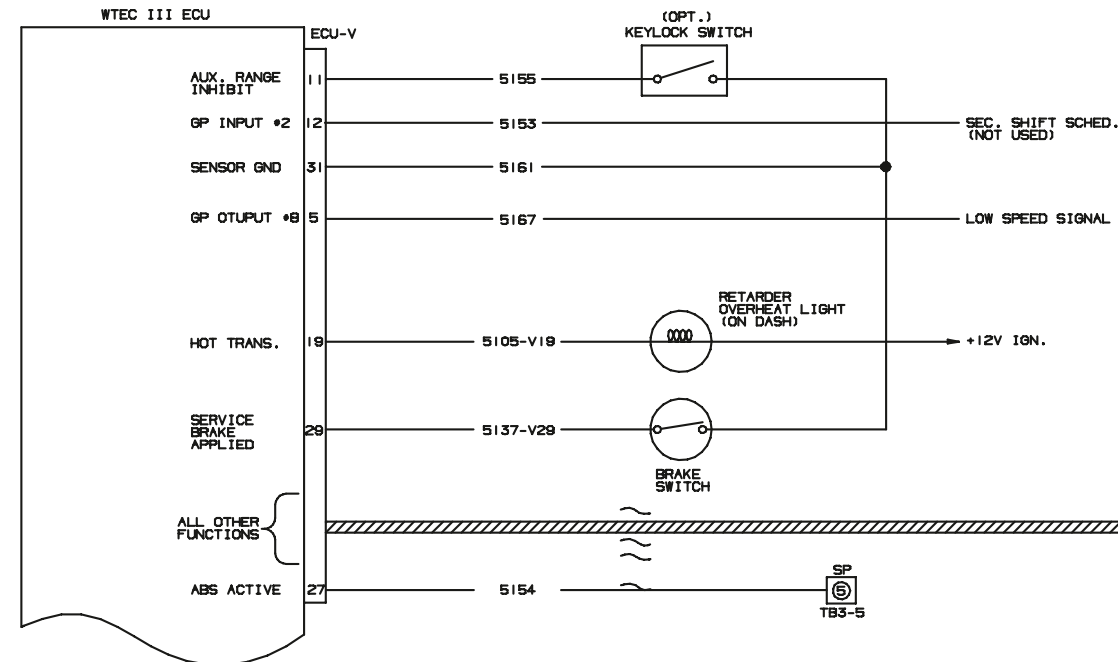

62202739 B


**WTEC III RETARDER
VERSION, BUSSMAN VIM**


Effective Date: 09/04/98

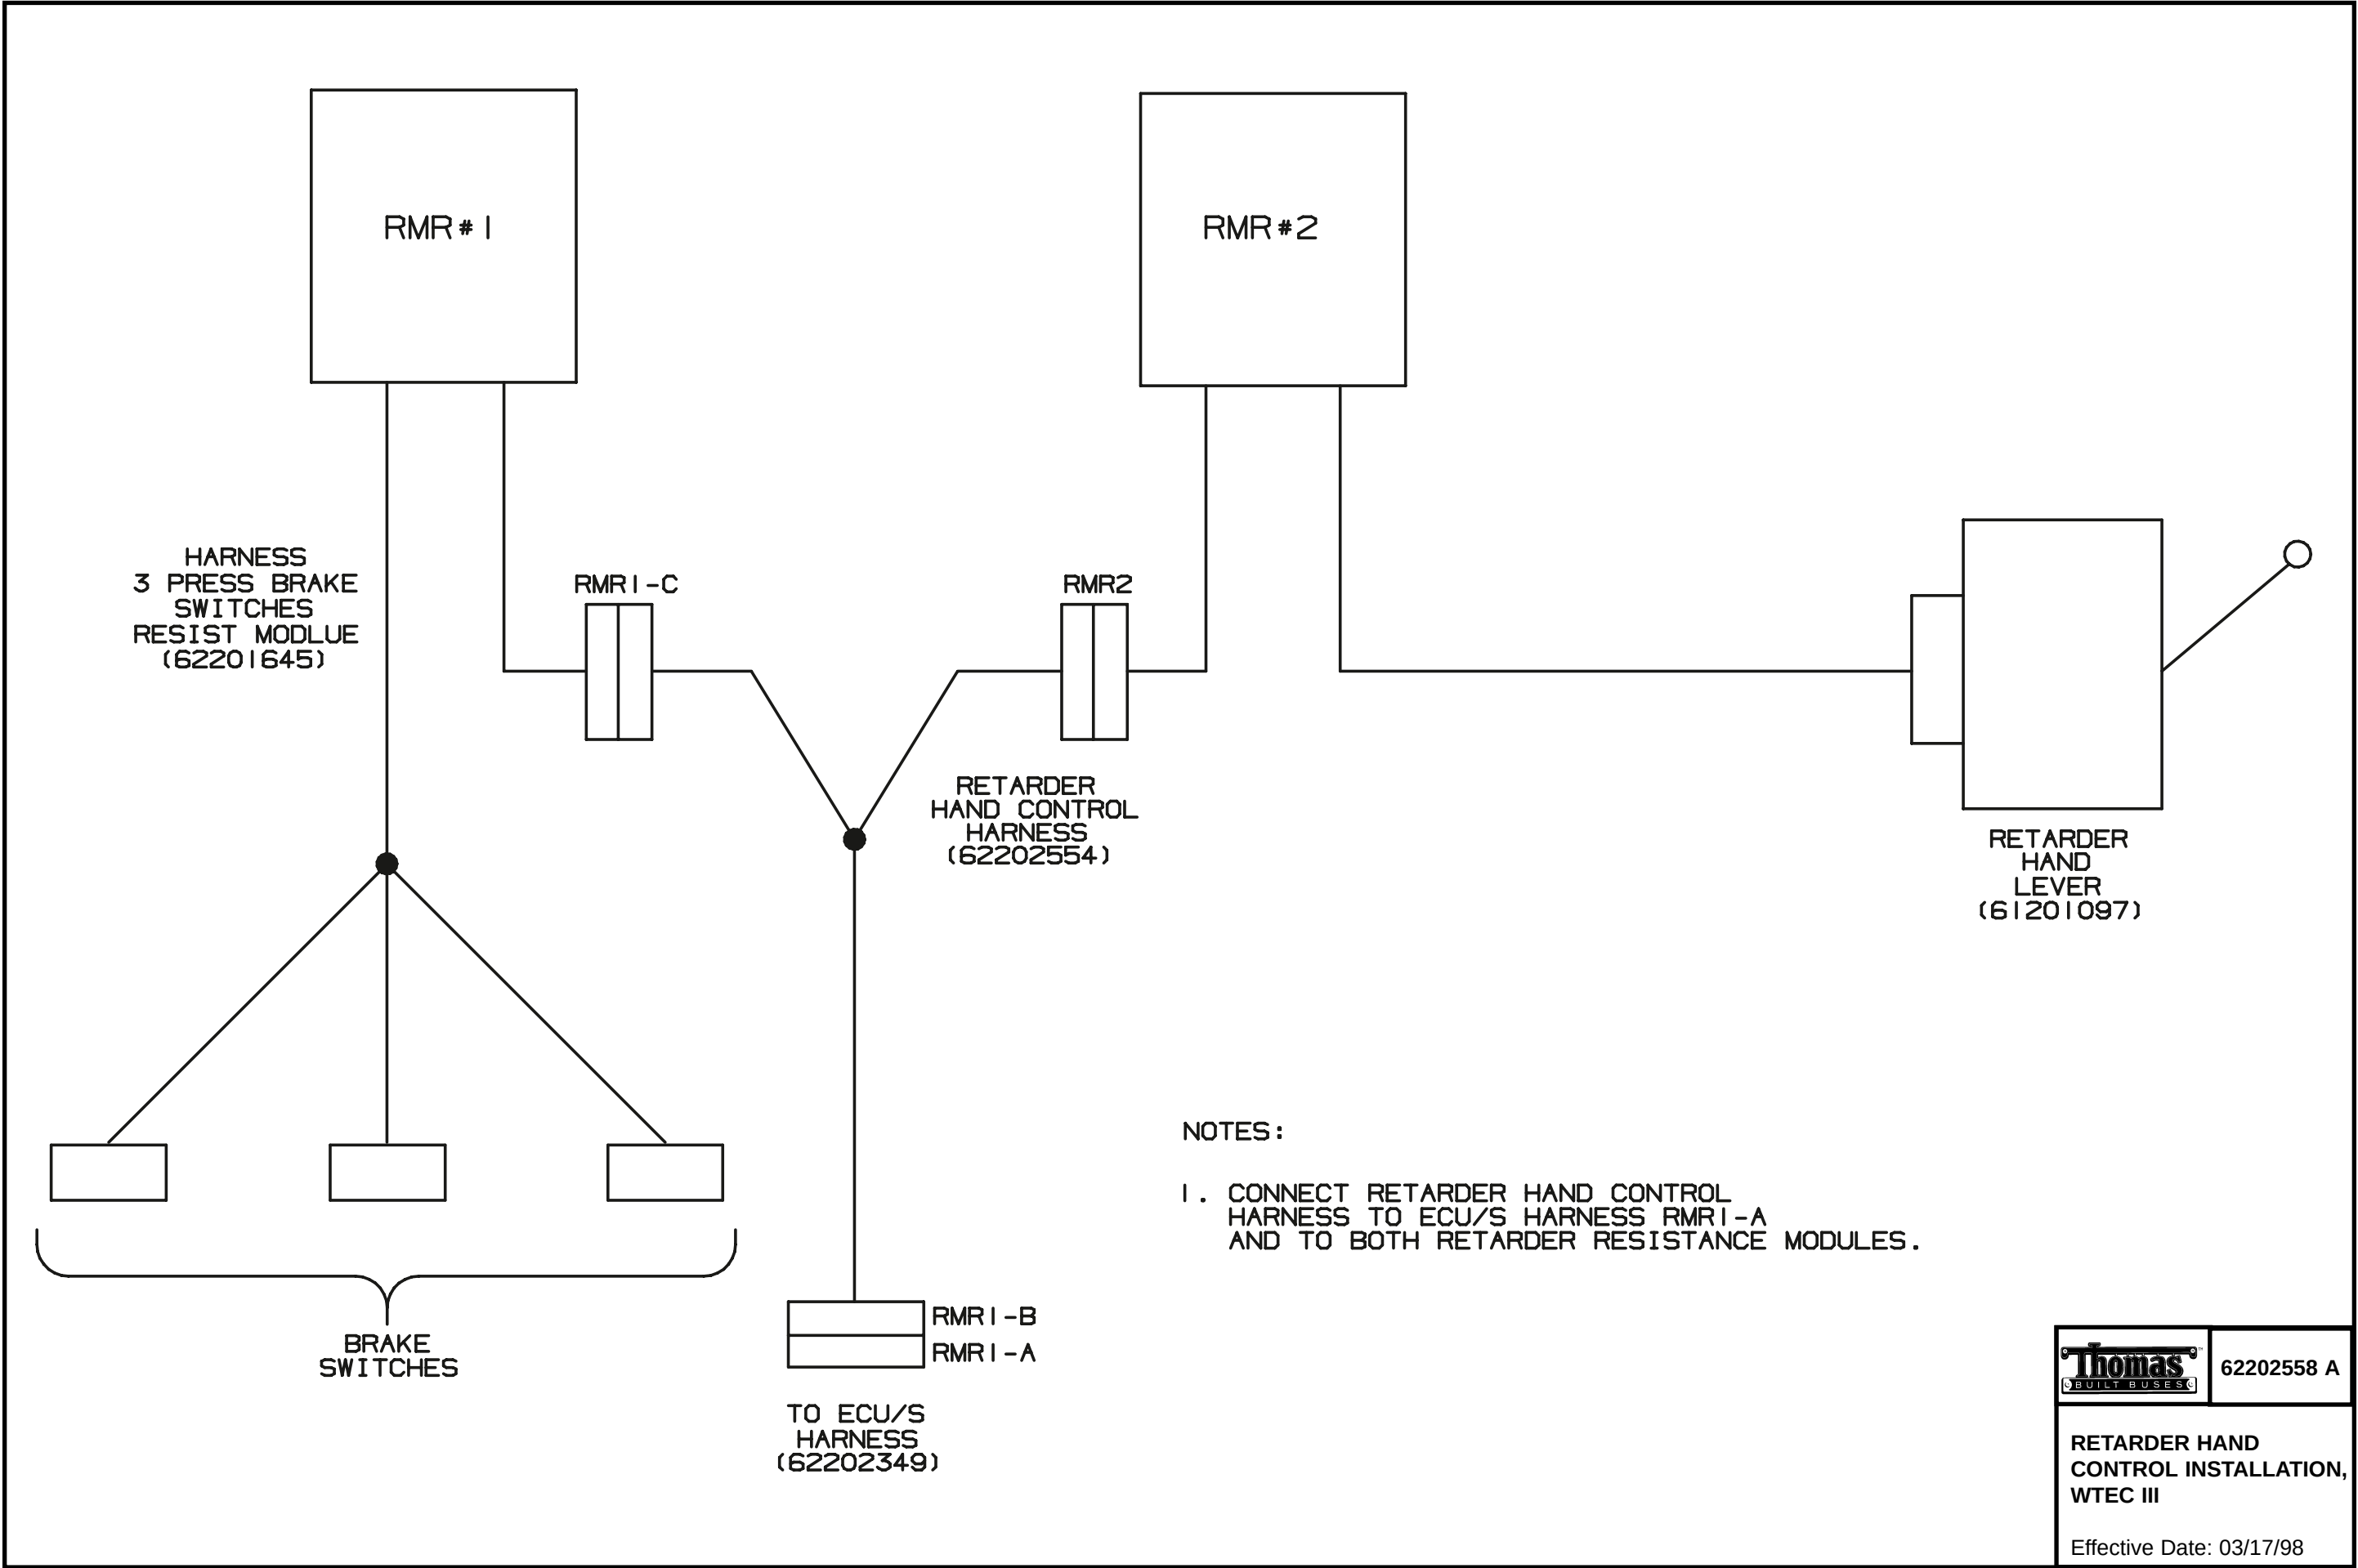


NOTES:_____

**MVP-ER
BRAKE
SCHEMATICS**

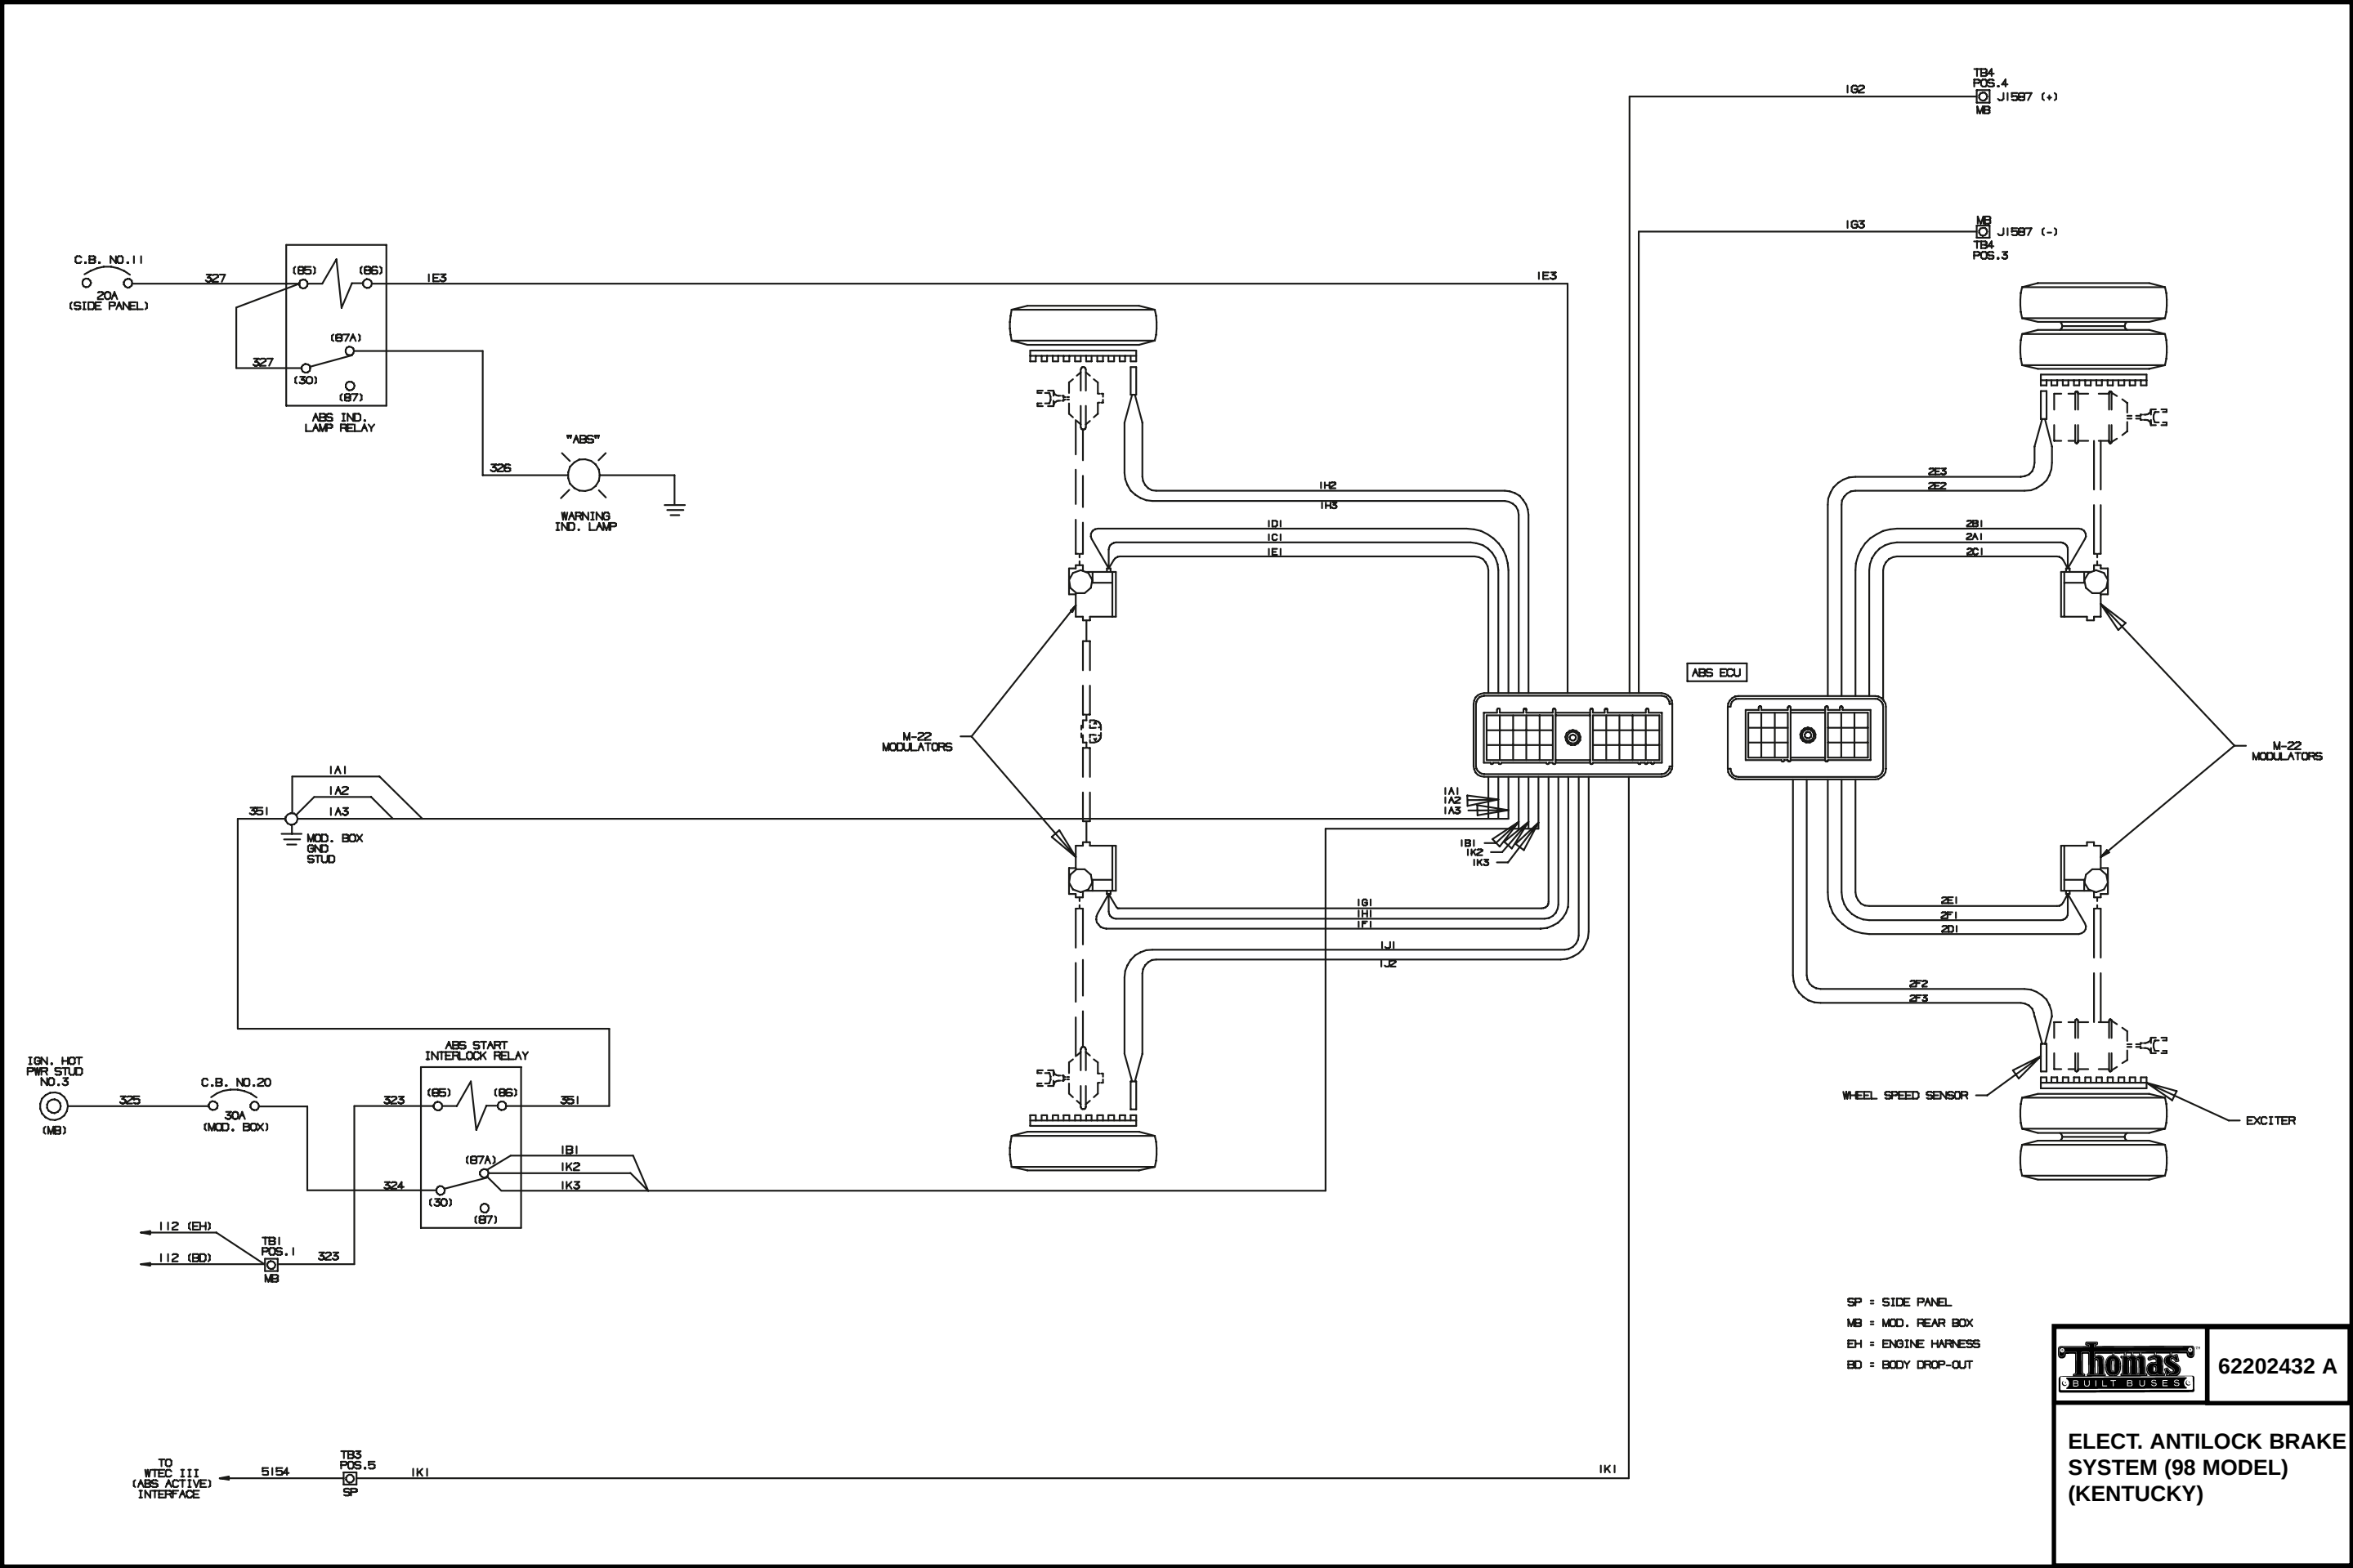

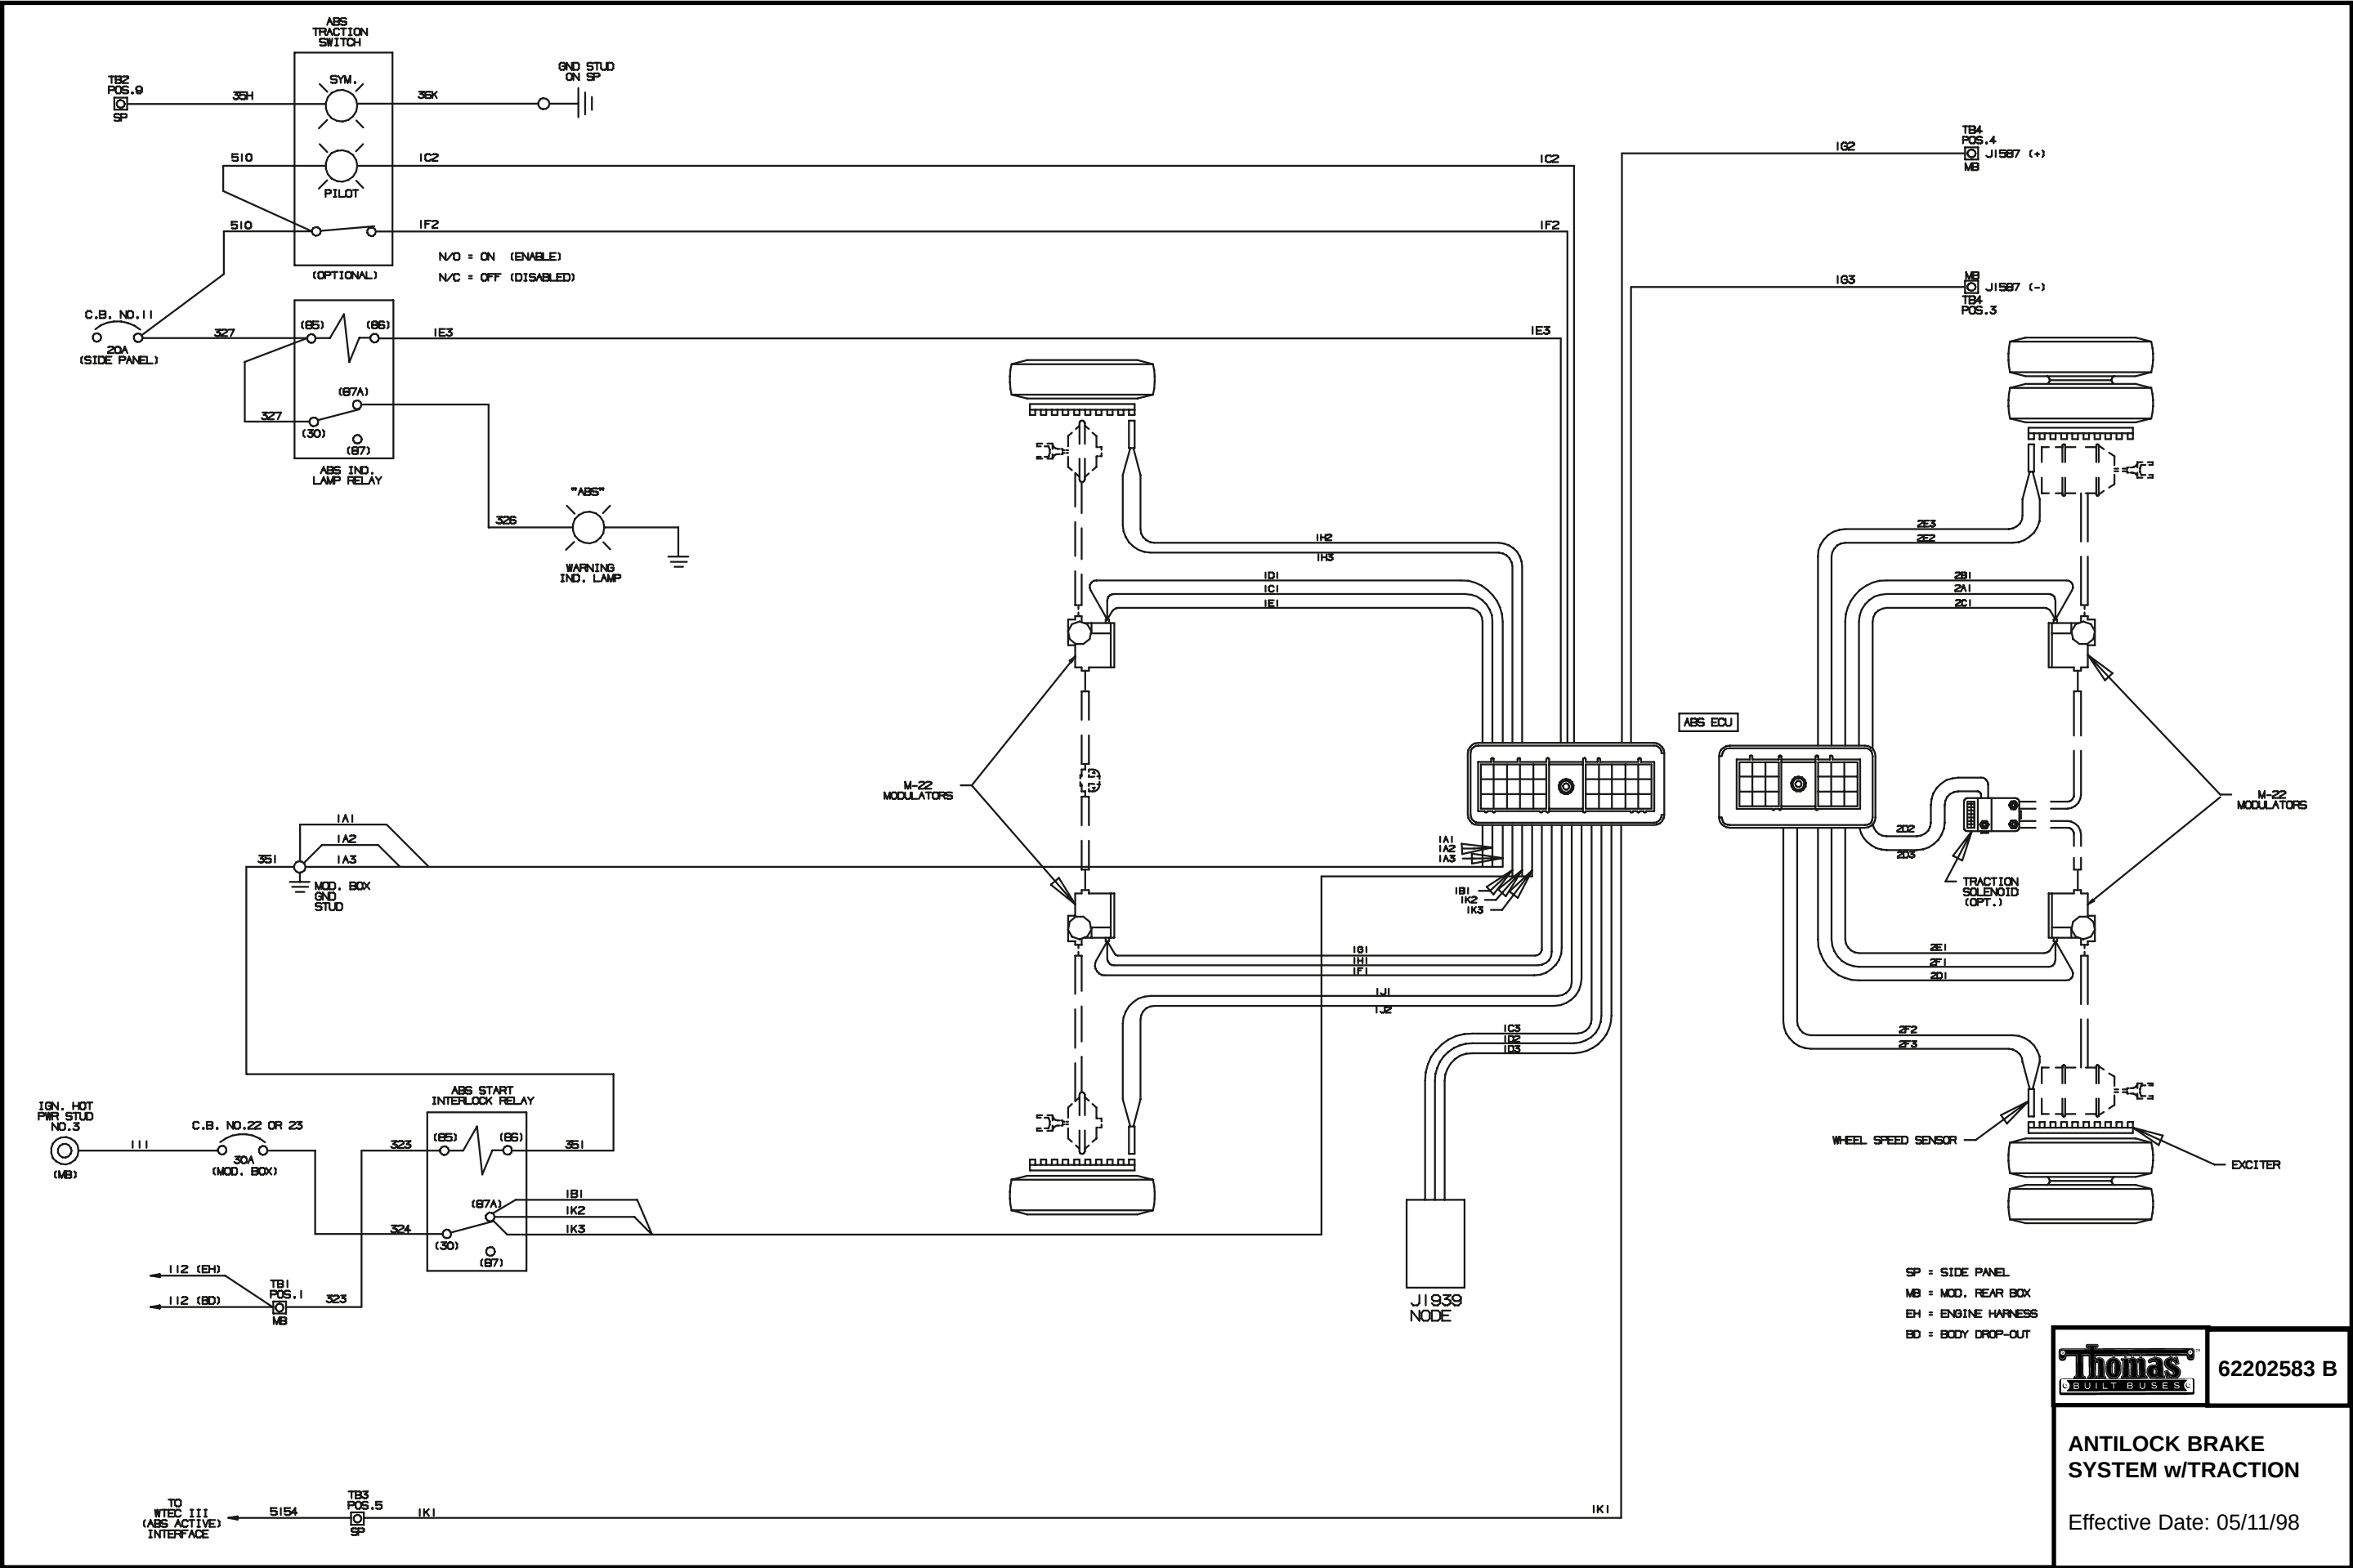

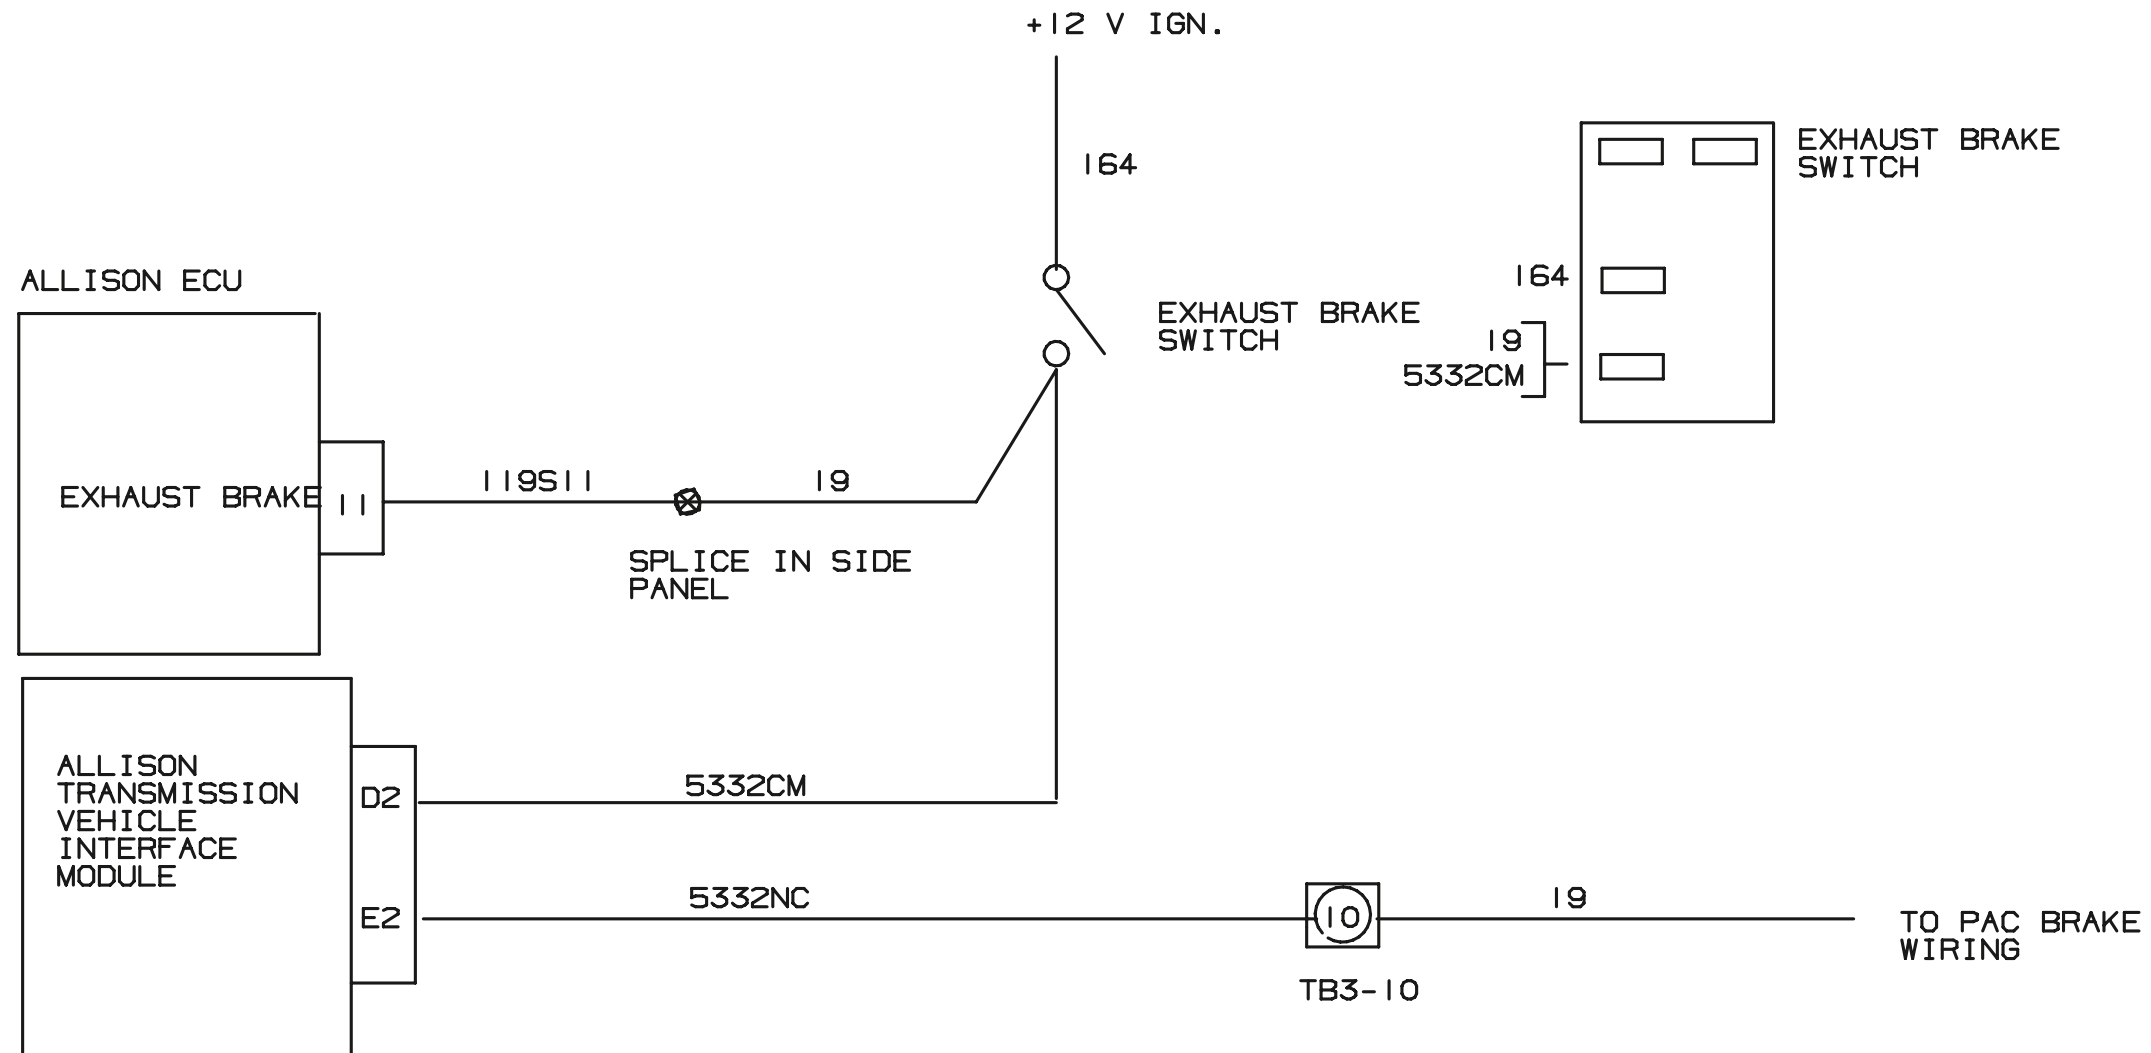


WIRING INSTRUCTIONS:

1. CUT BUTT SPLICE FROM WIRE 5332CM AND FEMALE PUSH-ON FROM WIRE 19 AT EXHAUST BRAKE SWITCH.
2. CONNECT WIRE 5332CM AND WIRE 19 AT DASH USING FEMALE .25" PUSH-ON TERMINAL.
3. REMOVE WIRE 19 GOING TO DASH FROM TERMINAL BOARD AT THE SIDE PANEL
4. SPLICE WIRE 119 AND WIRE 19 TOGETHER AT SIDE PANEL
5. CONNECT WIRE 5332NC TO WIRE 19 IN MAIN HARNESS AT TERMINAL BOARD.

TESTING INSTRUCTIONS:

1. ACCELERATE VEHICLE TO 25 MPH OR ABOVE.
2. TURN EXHAUST BRAKE SWITCH INTO THE ON POSITION.
3. RELEASE THROTTLE AND VERIFY EXHAUST BRAKE COMES ON.
(NOTE: EXHAUST BRAKE WILL ONLY OPERATE IN 2ND GEAR OR ABOVE WITH THROTTLE RELEASED.)

	62202713 A
EXHAUST BRAKE WITH WTEC III TRANSMISSION Effective Date: 07/27/98	

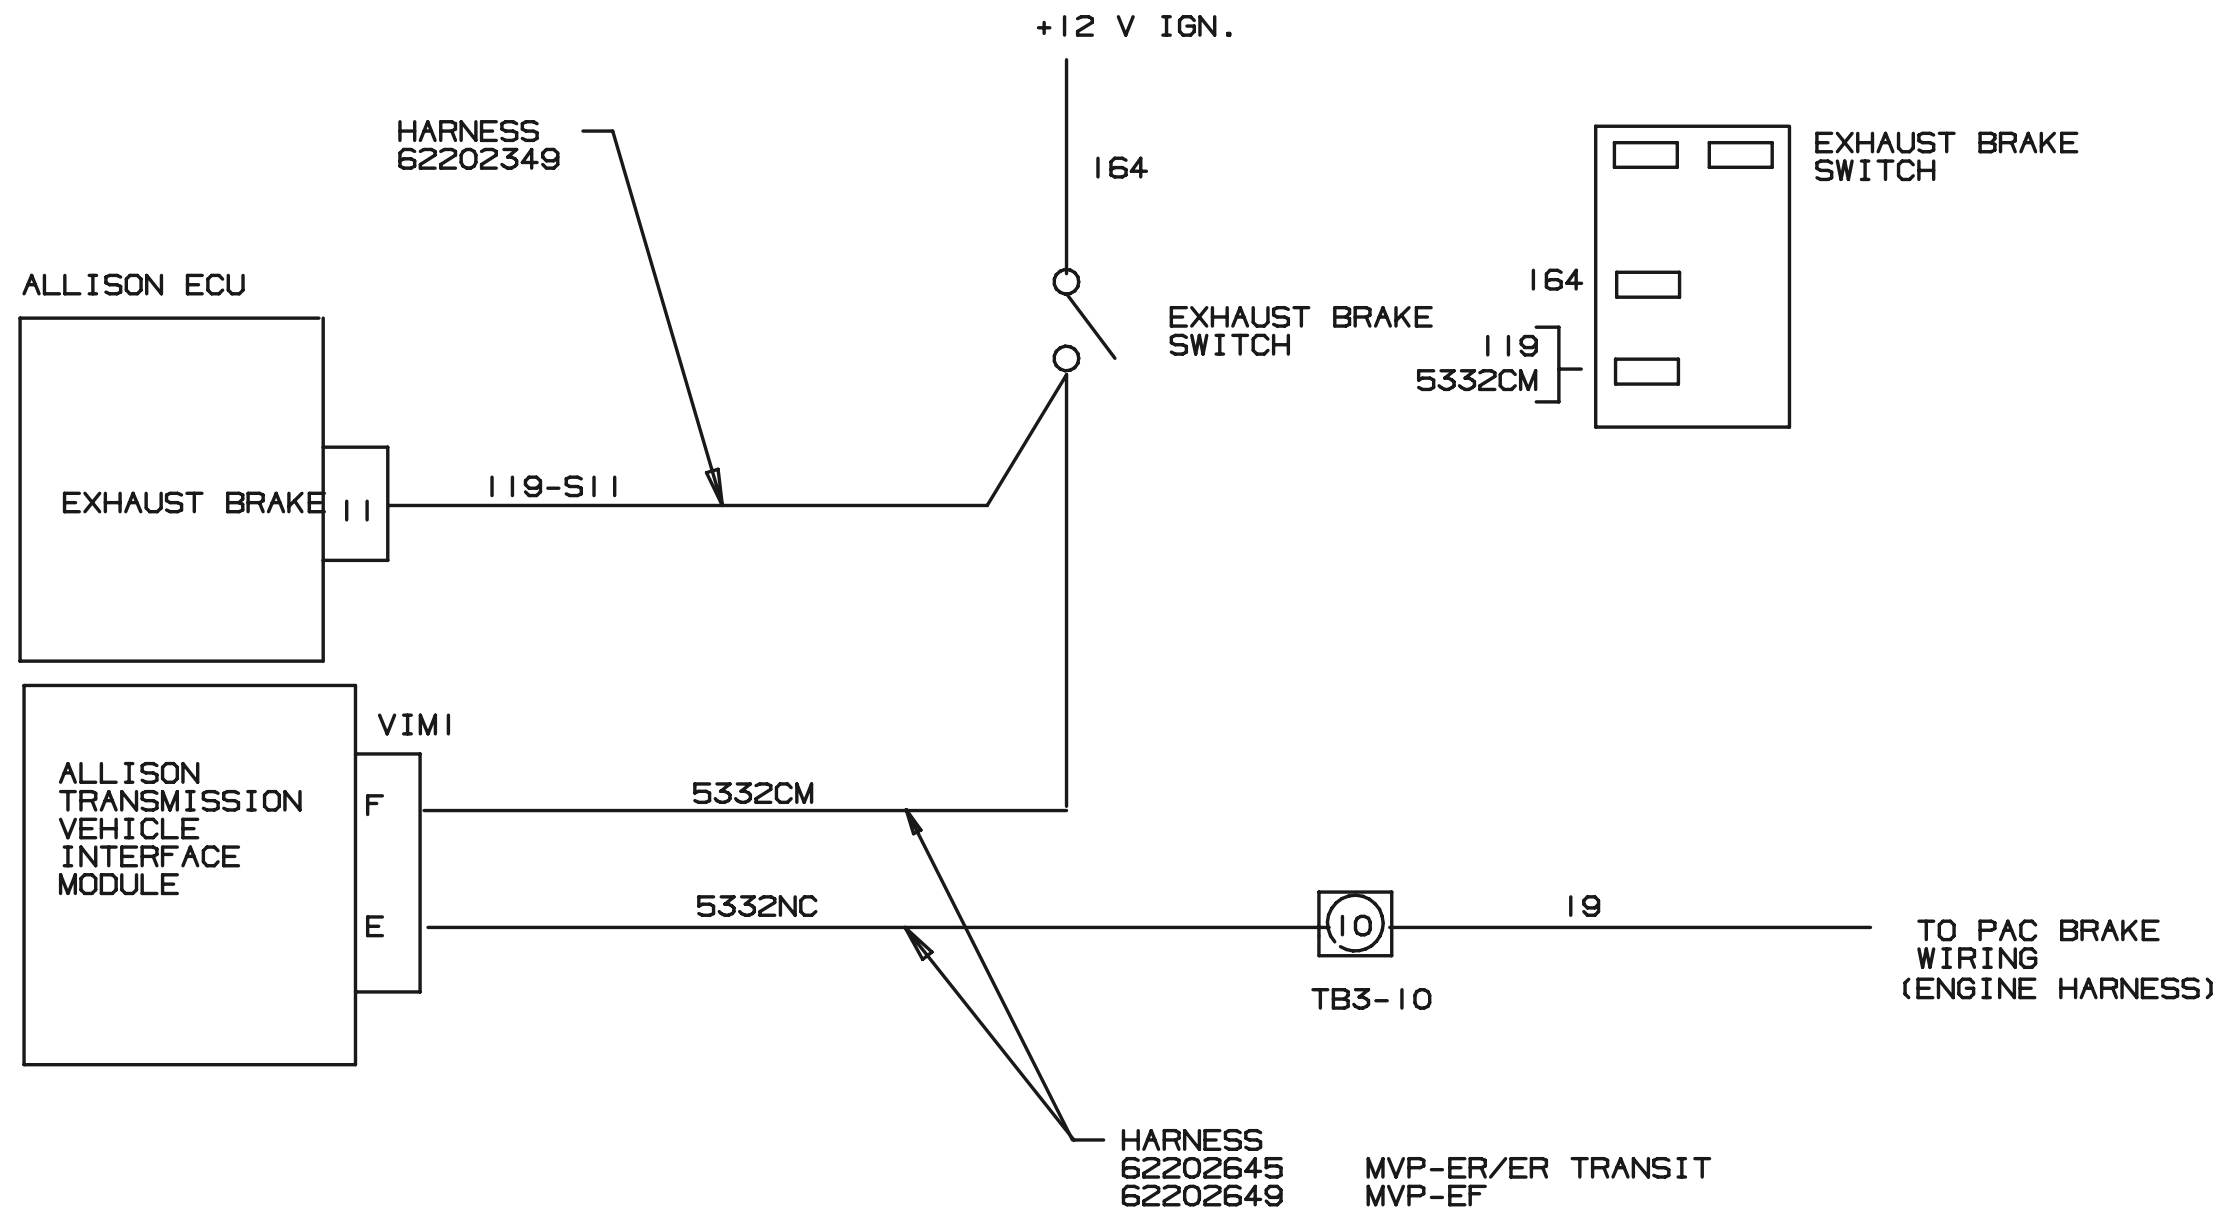

WIRING INSTRUCTIONS:


1. CONNECT 119-S11 AND 5332CM AT EXHAUST BRAKE SWITCH
2. REMOVE WIRE 19 GOING TO DASH FROM TB3 POS.10.
3. CONNECT WIRE 5332NC PER DWG.

TESTING INSTRUCTIONS:

1. ACCELERATE VEHICLE TO 25 MPH OR ABOVE.
2. TURN EXHAUST BRAKE SWITCH INTO THE ON POSITION.
3. RELEASE THROTTLE AND VERIFY EXHAUST BRAKE COMES ON.
(NOTE: EXHAUST BRAKE WILL ONLY OPERATE IN 2ND GEAR OR ABOVE WITH THROTTLE RELEASED.)

Thomas BUILT BUSES	62202734 A
EXHAUST BRAKE w/BUSSMAN REV. WTEC III TRANSMISSION	
Effective Date: 09/04/98	


**MVP-ER
SPEEDOMETER
SCHEMATICS**

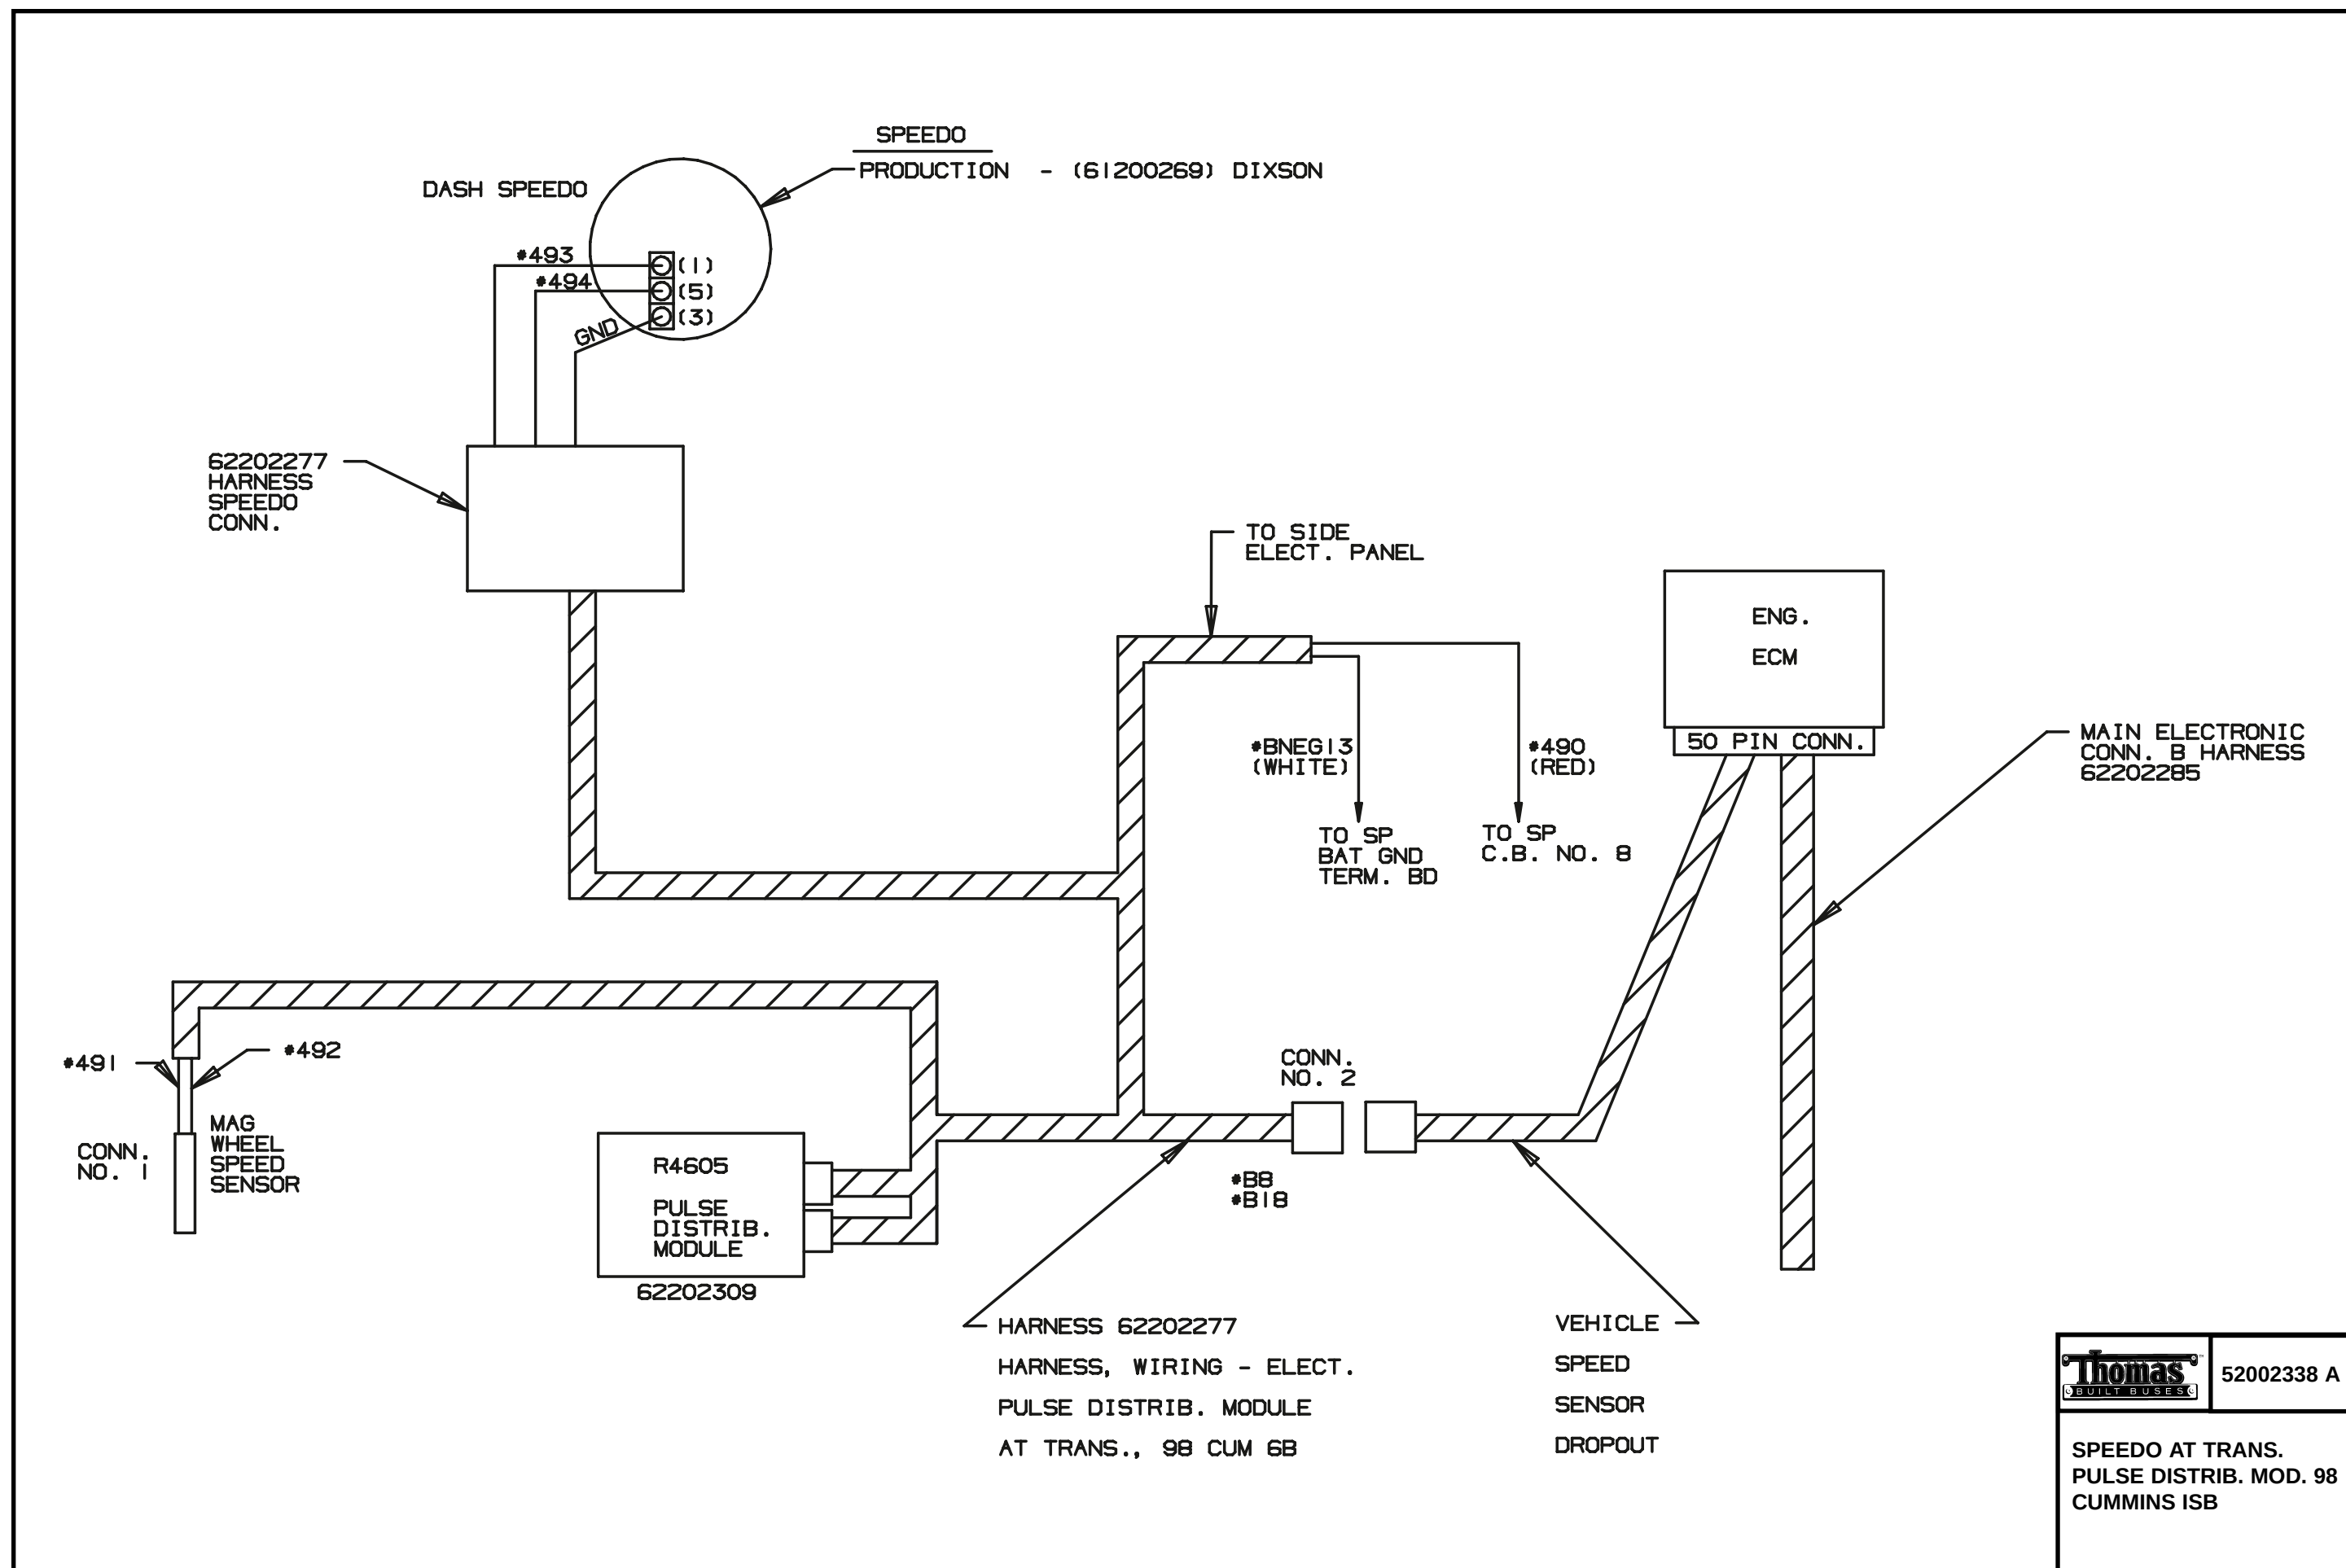

**MVP-ER
LIGHTS
SCHEMATICS**

CANADIAN DRL PARTS LIST			
ITEM	QTY.	PART NO.	DESCRIPTION
1	1	62200780	DIODE ASSEMBLY - ANTI-FEEDBACK
2	3	61200709	RELAY - CONTROL
3	1	61200105	BREAKER - CIRCUIT 35 AMP

CIRCUIT #	AWG	COLOR	DESCRIPTION
258	14	BROWN/WHITE	C.B. #11 (LOAD) TO DRL TAIL LIGHT RELAY CONTACT TERM. 87A
259	14	YELLOW	C.B. #11 (LOAD) TO DRL HEADLIGHT DIODE
260	14	YELLOW/WHITE	DRL HEADLIGHT DIODE TO DRL HEADLIGHT RELAY CONTACT TERM. 87A
262	14	BROWN	DRL TAILLIGHT RELAY CONTACT TERM. 30 TO TAILLIGHT SERVICE TERM.
263	14	BROWN	C.B. #11 (LOAD) TO DRL PARKLIGHT RELAY CONTACT TERM. 87A
264	14	BROWN/WHITE	DRL PARKLIGHT RELAY CONTACT TERM. 30 TO PARKLIGHT SERVICE TERM.
265	14	BROWN	HEADLIGHT SW. (T) TO DRL TAILLIGHT RELAY COIL TERM. 85
266	14	BROWN/WHITE	HEADLIGHT SW. (P) TO DRL PARKLIGHT RELAY COIL TERM. 85
267	14	YELLOW	HEADLIGHT SW. (H) TO DRL HEADLIGHT RELAY COIL TERM. 85
JUMPER	14	BLACK	DRL HEADLIGHT RELAY 87 TO HI-BEAM HEADLIGHT RELAY 87A

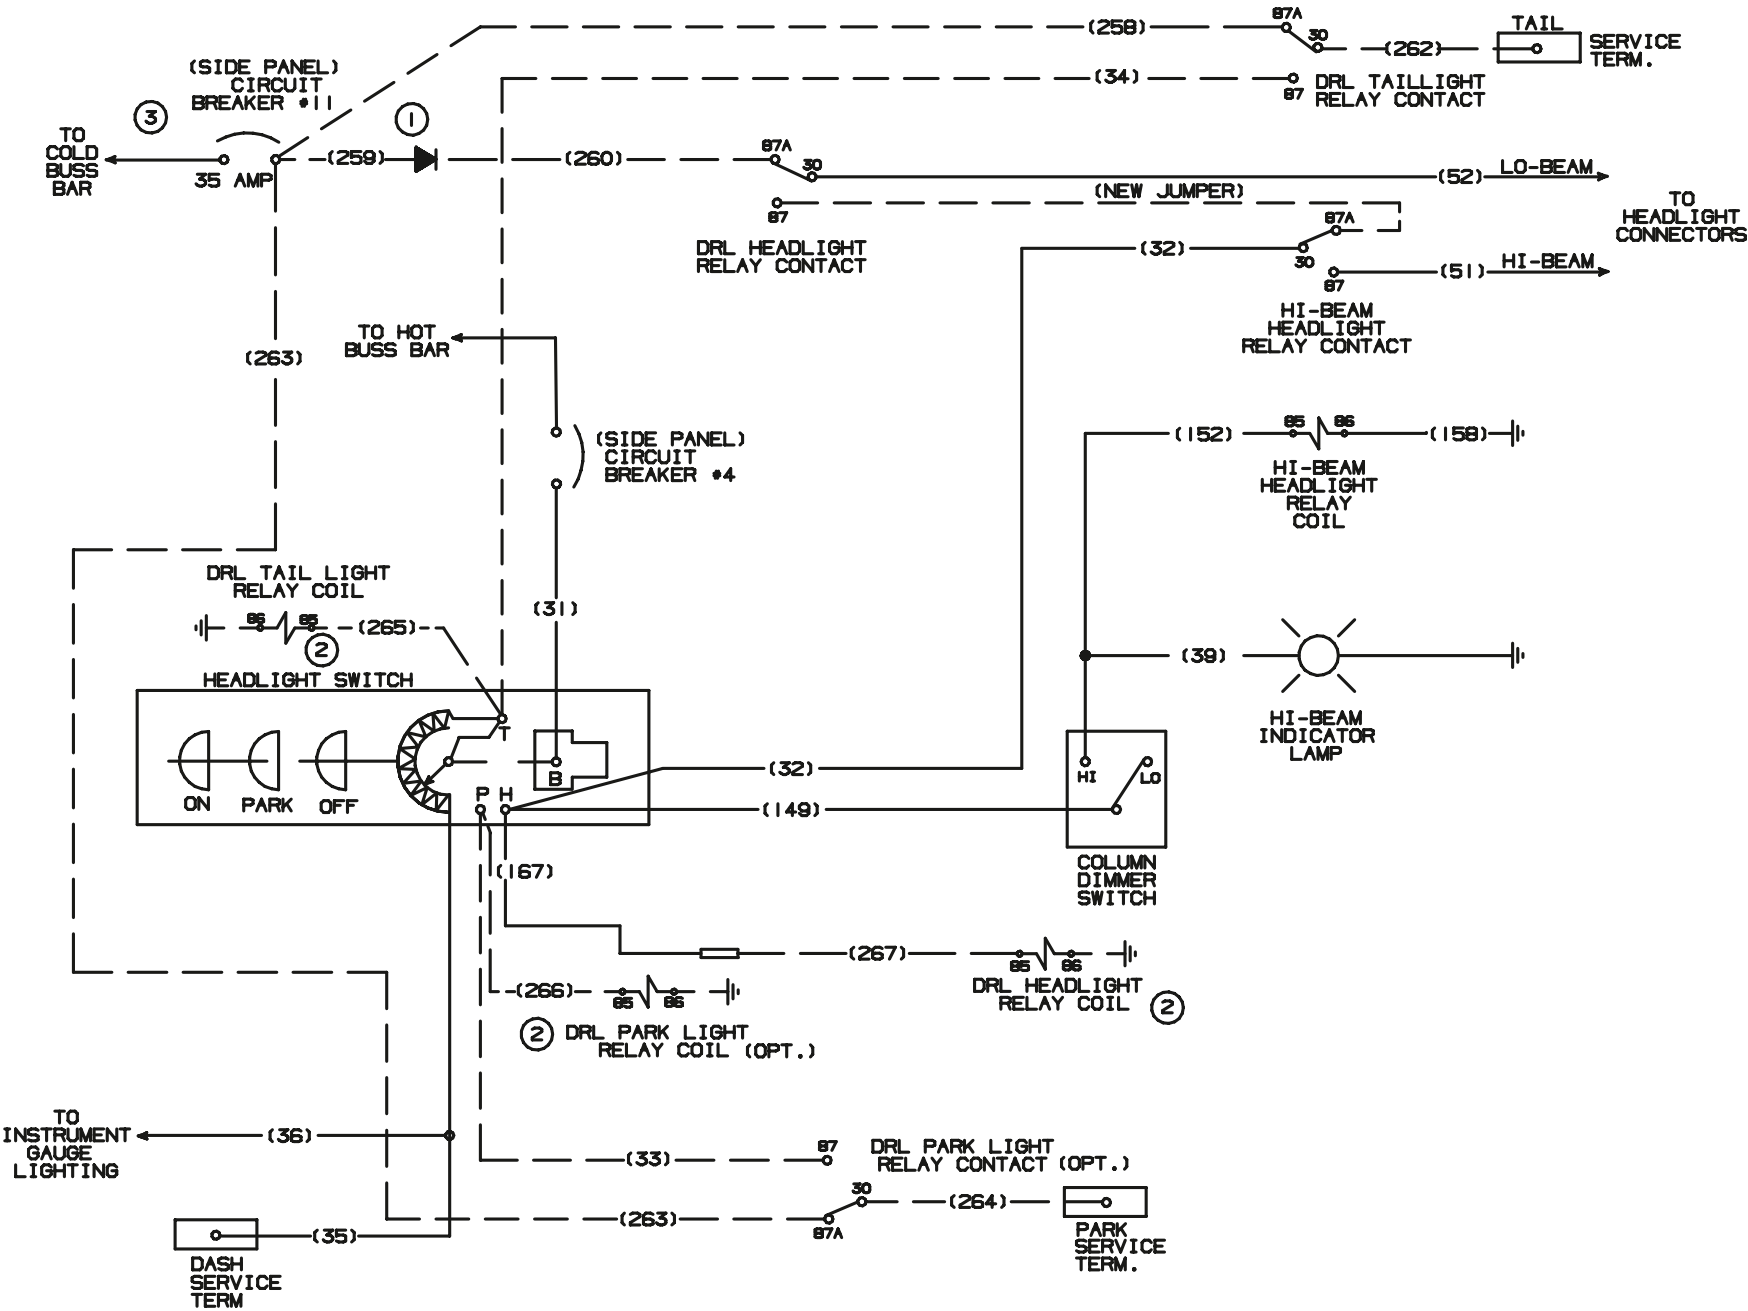

LEGEND

DRL - DAYTIME RUNNING LIGHTS


— EXISTING WIRING

- - - NEW OR REVISED WIRING

62201555 B


HEADLIGHTS DAYTIME
RUNNING LIGHTS STD.
SWITCH HIGH WATTAGE
HEADLIGHTS (LWP)

CANADIAN DRL PARTS LIST		
ITEM	PART NO.	DESCRIPTION
1	62200780	DIODE ASSEMBLY-ANTI-FEEDBACK
2	61200709	RELAY-CONTROL
3	61200105	BREAKER-CIRCUIT, 35 AMP

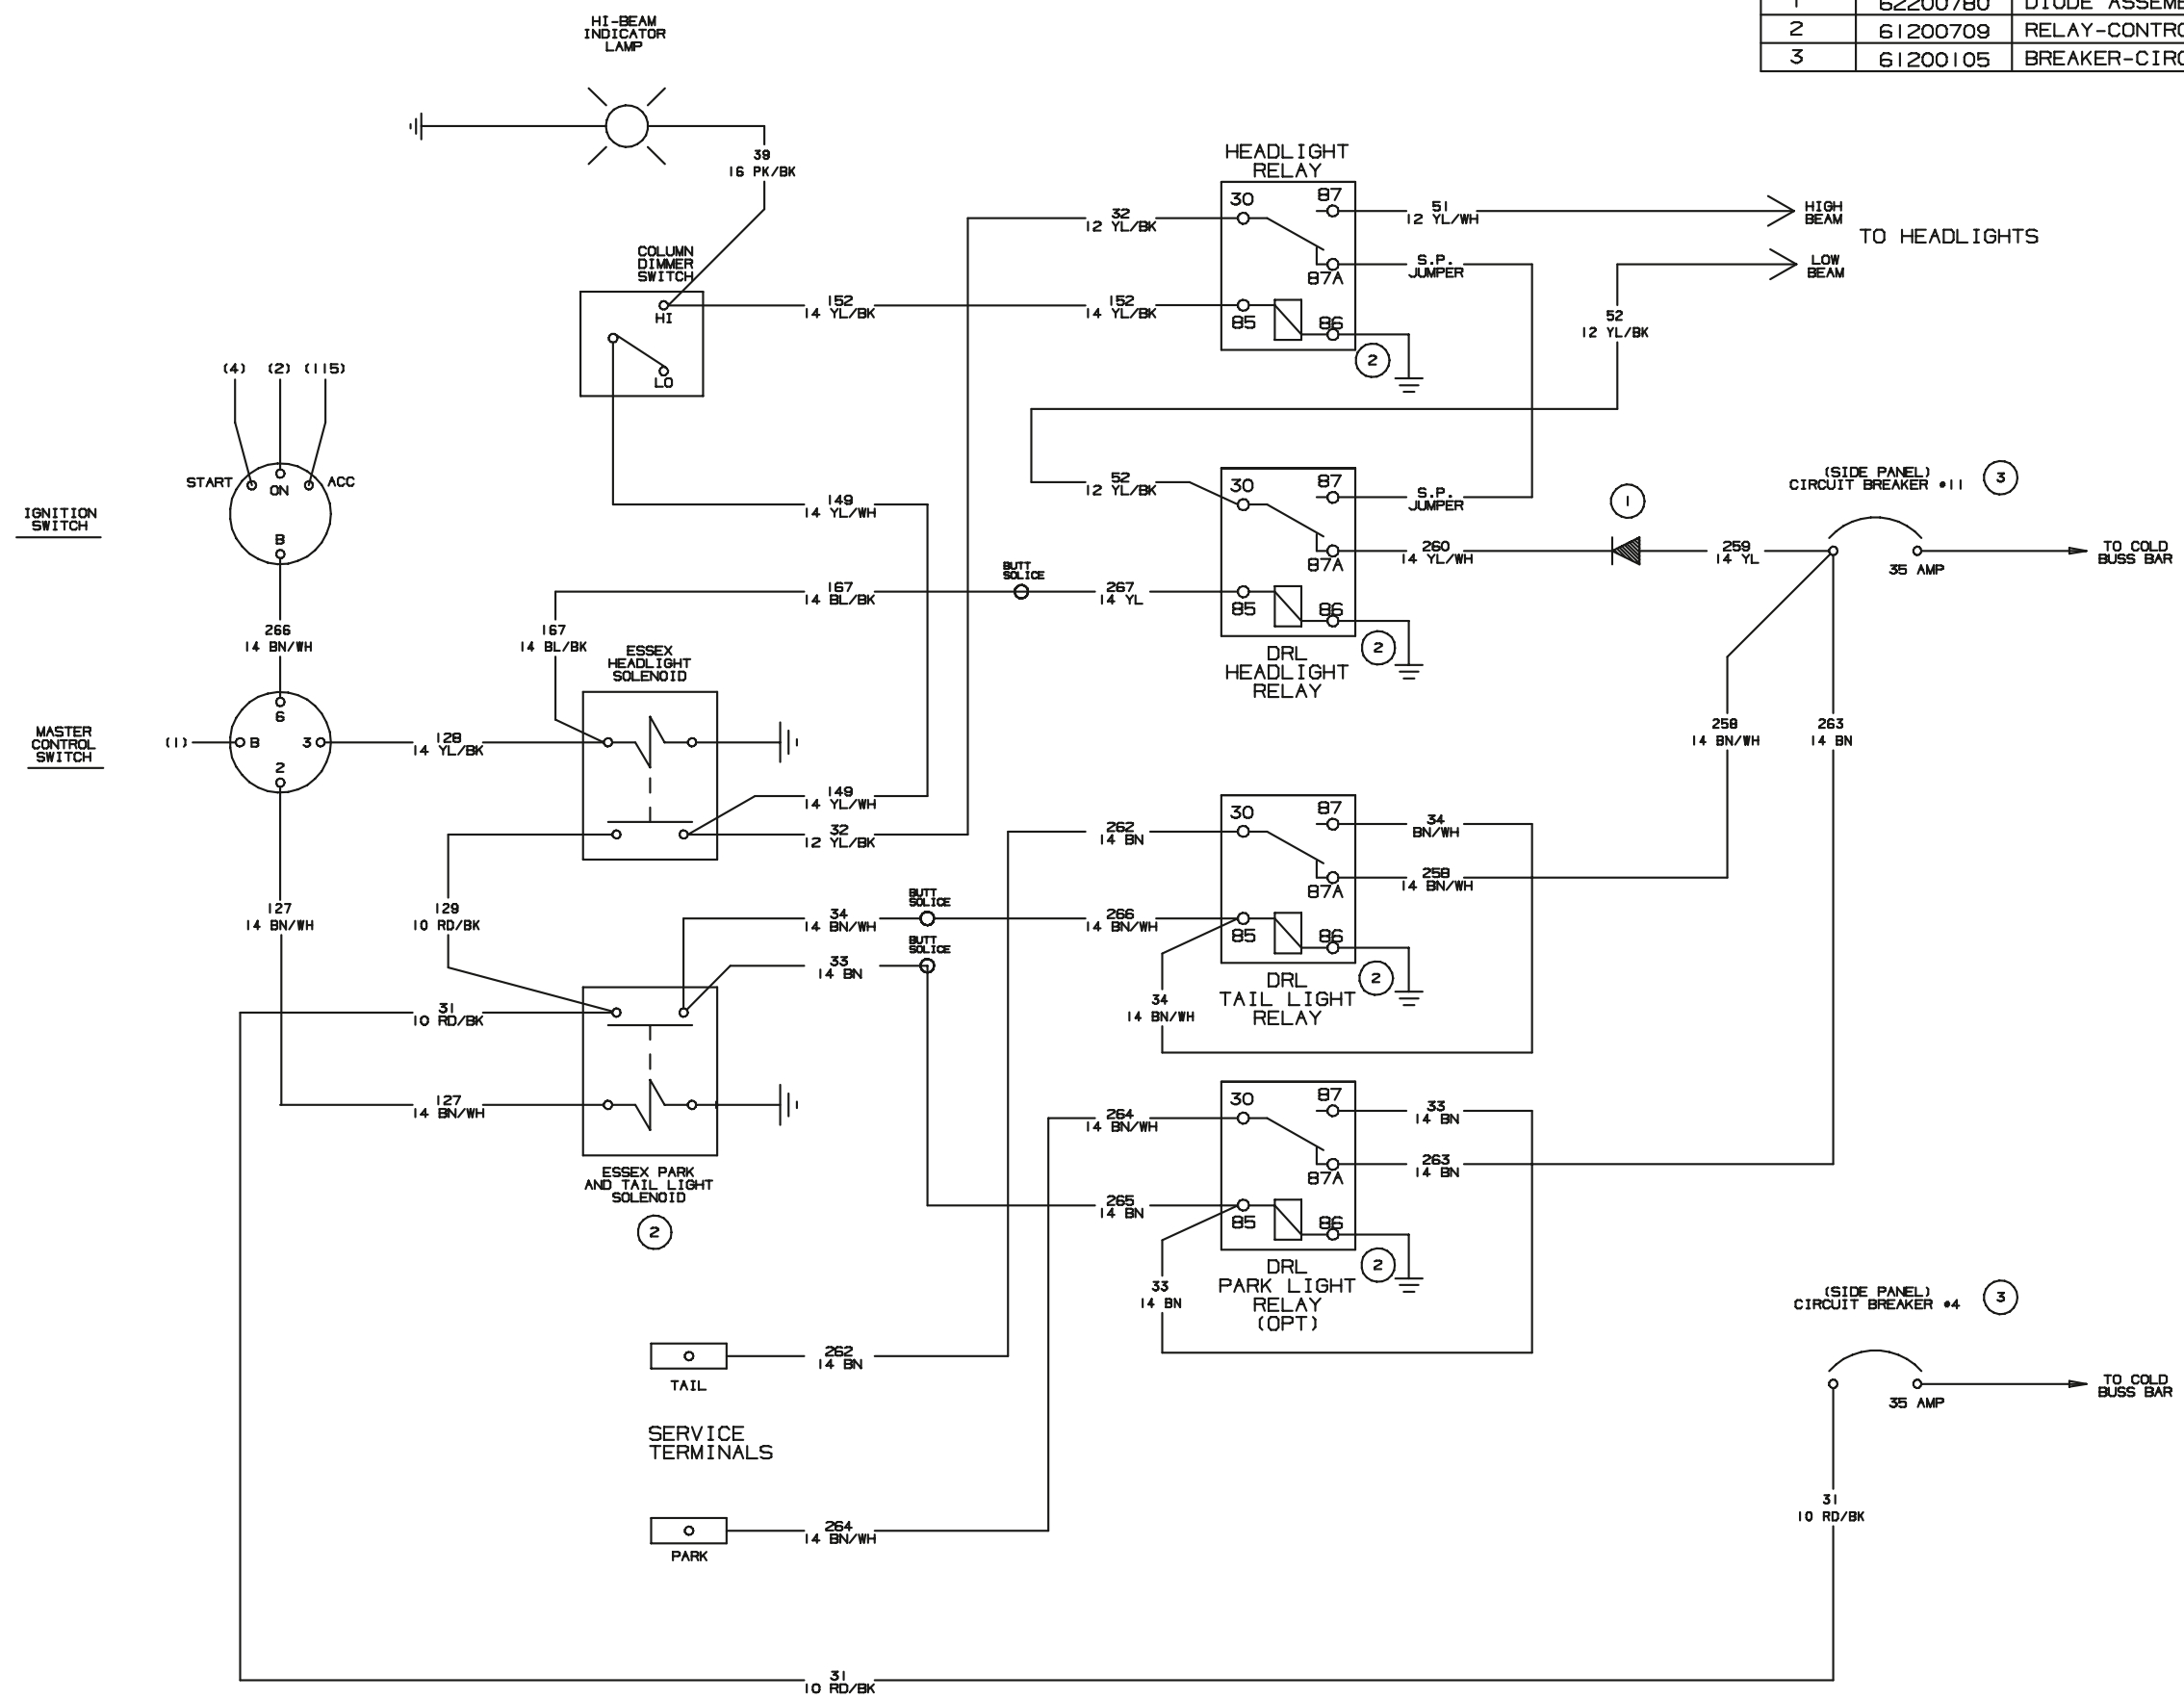

62201896 A

DAYTIME RUNNING LIGHTS w/OPT. C3675 MASTER CONTROL SWITCH

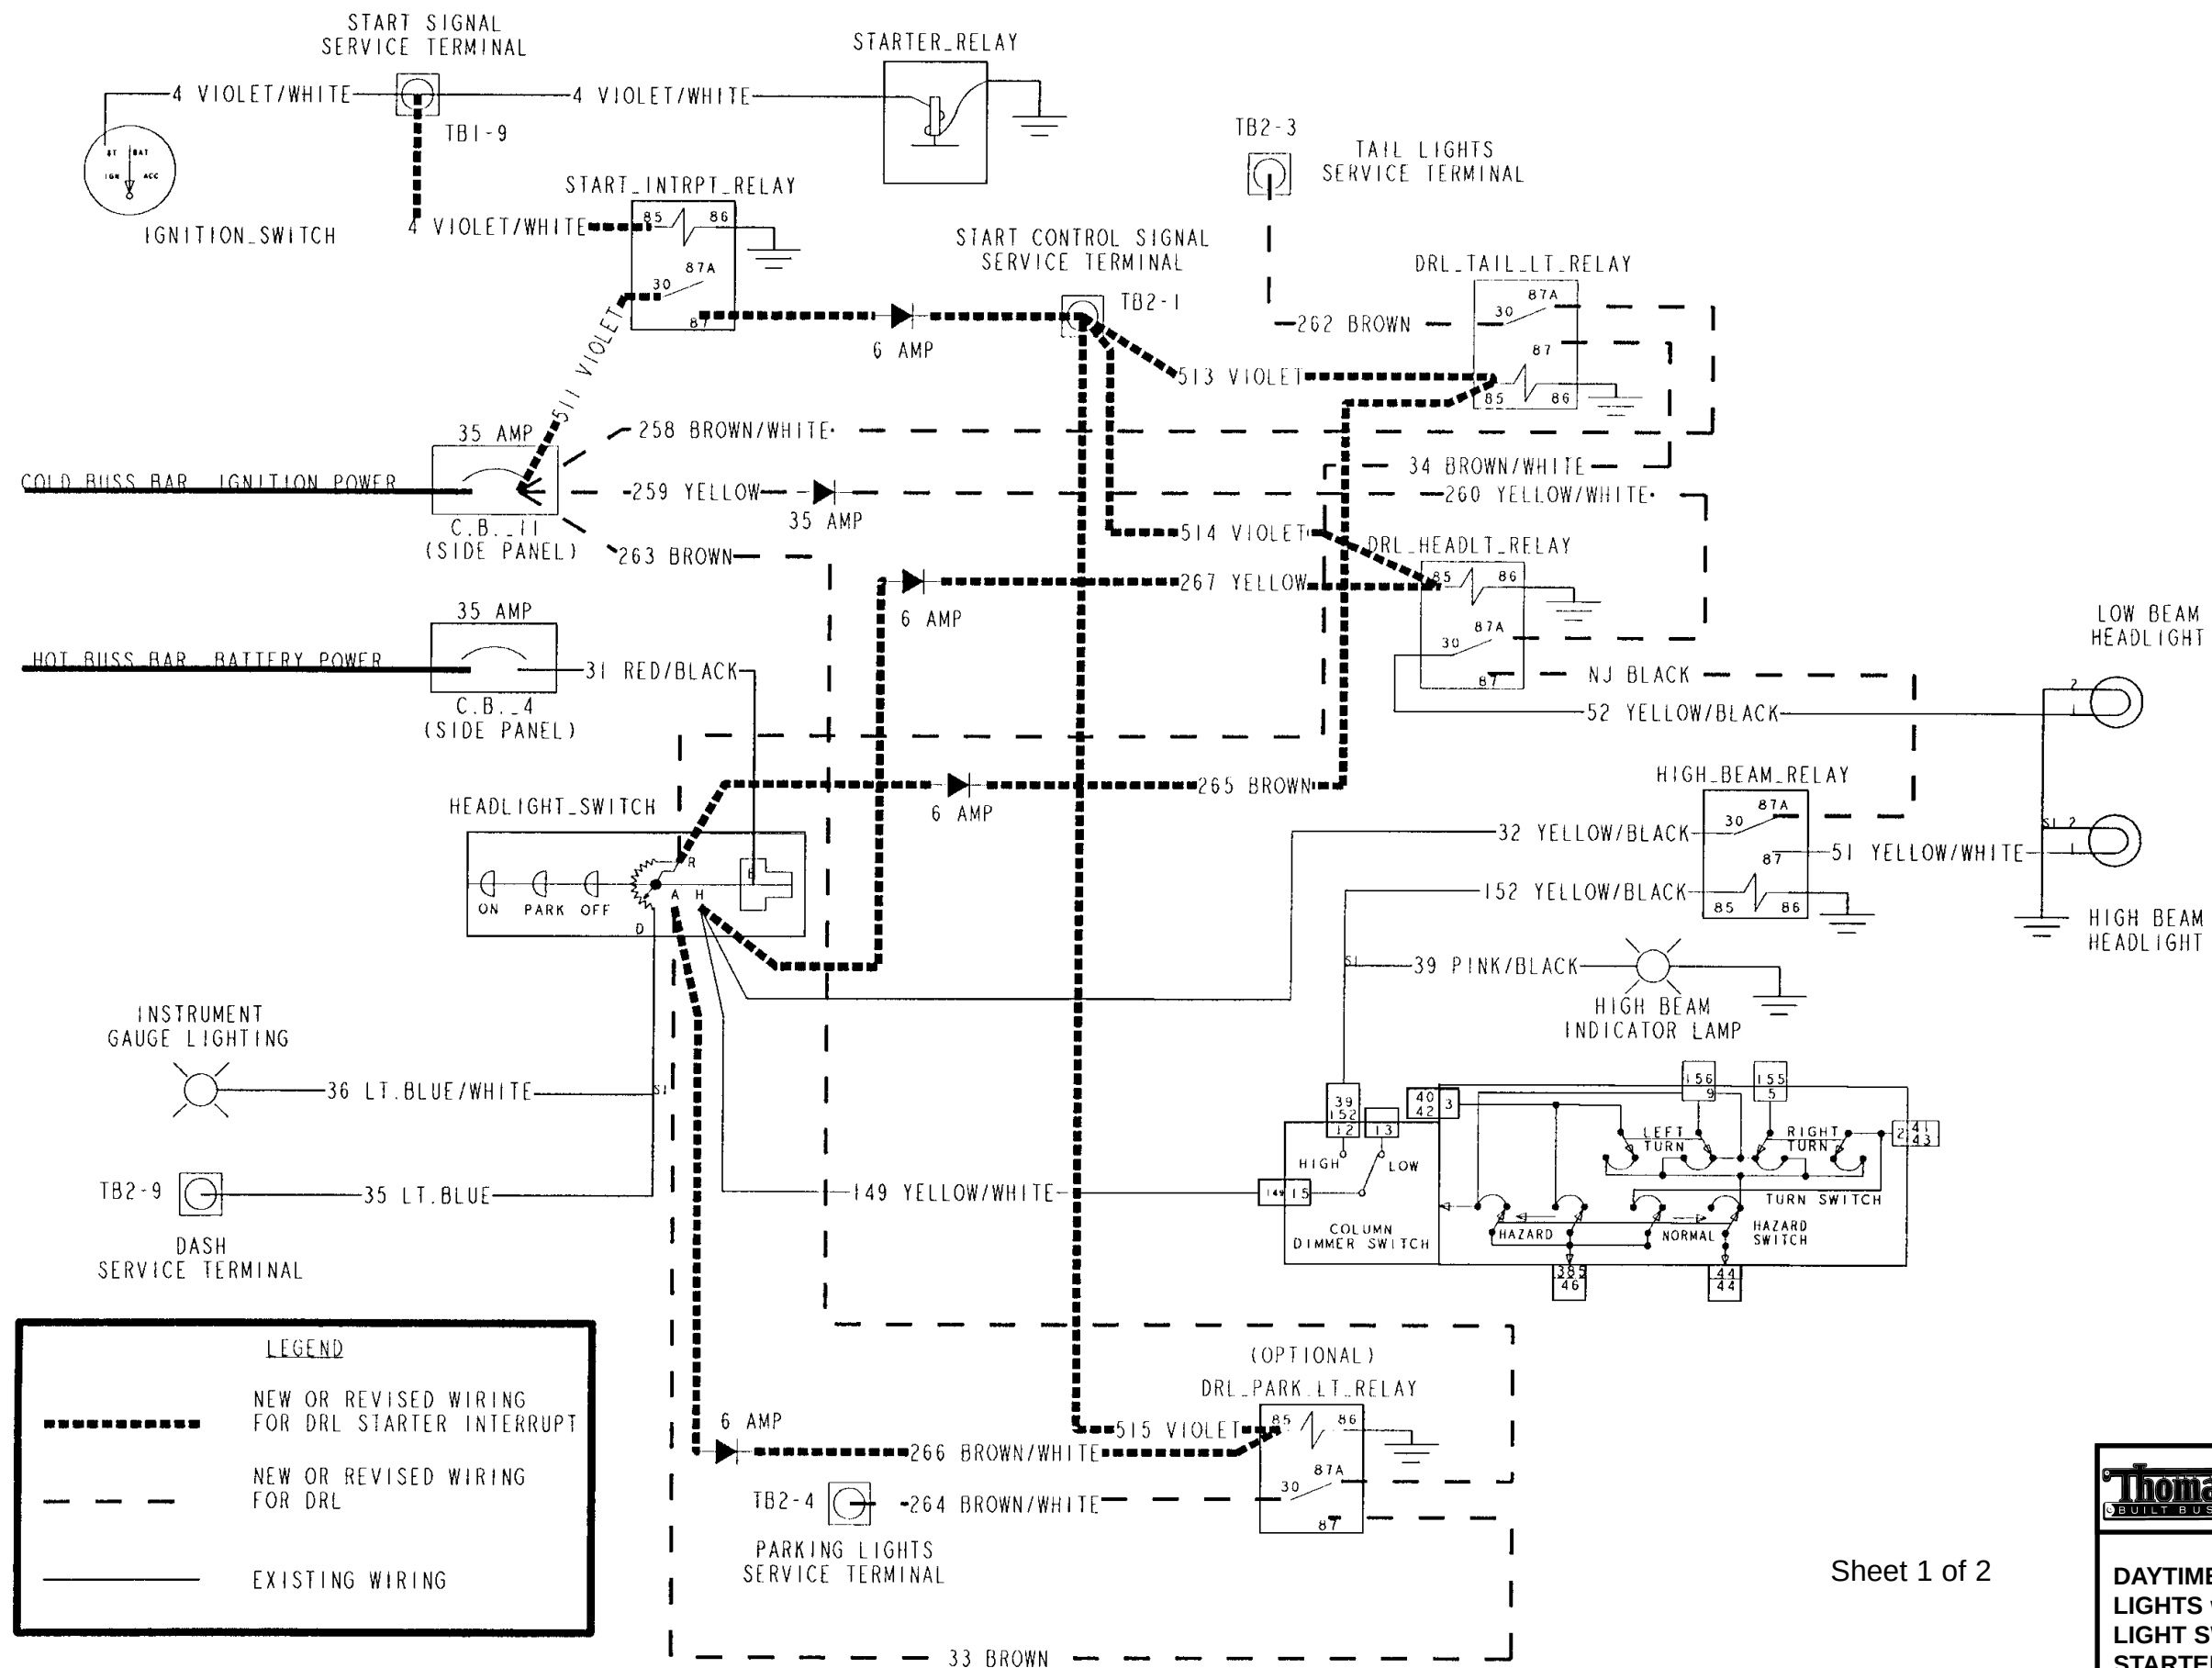

Sheet 1 of 2

Thomas BUILT BUSES	62202511 A
DAYTIME RUNNING LIGHTS w/STD. HEADLIGHT SWITCH & STARTER INTERRUPT Effective Date: 03/06/98	

CIRCUIT NUMBER	FROM		TO		WIRE COLOR
	COMPONENT	PIN	COMPONENT	PIN	
4	IGNITION_SWITCH	CONN3	START_SGNL_TERMINAL	POWER	VIOLET/WHITE
4	START_SGNL_TERMINAL	POWER	STARTER_RELAY	COIL	VIOLET/WHITE
4	START_SGNL_TERMINAL	POWER	START_INTRPT_RELAY	COIL_CONN1	VIOLET/WHITE
31	C.B._4	CONN2	HEADLIGHT_SWITCH	B_CONN1_BAT	RED/BLACK
32	HEADLIGHT_SWITCH	H_CONN3_HDLGT	HIGH_BEAM_RELAY	CONTACT_COM	YELLOW/BLACK
33	HEADLIGHT_SWITCH	A_CONN4_PARK	DRL_PARK_LT_RELAY	CONTACT_NO	BROWN
34	HEADLIGHT_SWITCH	R_CONN2_TAIL	DRL_TAIL_LT_RELAY	CONTACT_NO	BROWN/WHITE
35	HEADLIGHT_SWITCH	D_CONN5_DASH	DASH_TERMINAL	POWER	LT.BLUE
36	INST_GAUGE_LIGHTS	CONN4	SPLICE_1	S1	LT.BLUE/WHITE
39	SPLICE_2	S1	HIGH_BEAM_IND	CONN2	PINK/BLACK
51	HIGH_BEAM_RELAY	CONTACT_NO	LOW_BEAM_HEADLIGHT	I	YELLOW/WHITE
52	DRL_HEADLT_RELAY	CONTACT_COM	HIGH_BEAM_HEADLIGHT	I	YELLOW/BLACK
149	HEADLIGHT_SWITCH	H_CONN3_HDLGT	COLUMN_SWITCH	DIM_IN_149	YELLOW/WHITE
152	COLUMN_SWITCH	DIM_HIGH_152	HIGH_BEAM_RELAY	COIL_CONN1	YELLOW/BLACK
258	C.B._11	CONN2	DRL_TAIL_LT_RELAY	CONTACT_NC	BROWN/WHITE
259	C.B._11	CONN2	DIODE_2	ANODE	YELLOW
260	DIODE_2	CATHODE	DRL_HEADLT_RELAY	CONTACT_NC	YELLOW/WHITE
262	TAIL_LIGHTS_TERMINAL	POWER	DRL_TAIL_LT_RELAY	CONTACT_COM	BROWN
263	C.B._11	CONN2	DRL_PARK_LT_RELAY	CONTACT_NC	BROWN
264	PARK_LIGHTS_TERMINAL	POWER	DRL_PARK_LT_RELAY	CONTACT_COM	BROWN/WHITE
265	DIODE_4	CATHODE	DRL_TAIL_LT_RELAY	COIL_CONN1	BROWN
266	DIODE_3	CATHODE	DRL_PARK_LT_RELAY	COIL_CONN1	BROWN/WHITE
267	DIODE_5	CATHODE	DRL_HEADLT_RELAY	COIL_CONN1	YELLOW
511	C.B._11	CONN2	START_INTRPT_RELAY	CONTACT_COM	VIOLET
513	START_CTL_SGNL_TERMINAL	POWER	DRL_TAIL_LT_RELAY	COIL_CONN1	VIOLET
514	START_CTL_SGNL_TERMINAL	POWER	DRL_HEADLT_RELAY	COIL_CONN1	VIOLET
515	START_CTL_SGNL_TERMINAL	POWER	DRL_PARK_LT_RELAY	COIL_CONN1	VIOLET
NJ	HIGH_BEAM_RELAY	CONTACT_NC	DRL_HEADLT_RELAY	CONTACT_NO	BLACK

NOTES:
OPERATION WITH HEADLIGHT SWITCH OFF:
RELAY SUPPLIES +12V TO EACH DRL RELAY COIL
DURING START. RELAYS DEFAULT TO OFF FOR
DRL OPERATION (FROM IGNITION POWER).
OPERATION WITH HEADLIGHT SWITCH ON:
DRL RELAYS DROP (DRL OFF); HEADLIGHTS, PARKING
LIGHTS AND TAIL LIGHTS ARE CONTROLLED FROM
HEADLIGHT SWITCH.

(ITEM 4) 6 AMP DIODE ASSEMBLIES ON CIRCUITS
265, 266, AND 267 ARE CONNECTED DIRECTLY
TO THE HEADLIGHT SWITCH.


USE (ITEM 5) 6 AMP DIODE ASSEMBLY TO
CONNECT STARTER INTERRUPT RELAY,
TERMINAL 87 TO START CONTROL SIGNAL
SERVICE TERMINAL (TB2-1).

AVOID BUNDLING DIODE ASSEMBLIES TOO
TIGHTLY IN ORDER TO ALLOW FOR ADEQUATE
HEAT DISSIPATION.


DRL PARTS LIST			
ITEM	QTY.	THOMAS PART NUMBER	DESCRIPTION
1	1	62200780	DIODE ASM. - ANTI-FEEDBACK, 35 AMP
2	4	61200709	RELAY - CONTROL
3	1	61200105	BREAKER - CIRCUIT, 35 AMP
4	3	62200633	DIODE ASM. - ANTI-FEEDBACK, 6 AMP
5	1	62202535	DIODE ASM. - ANTI-FEEDBACK, 6 AMP

62202511 A

DAYTIME RUNNING
LIGHTS w/STD. HEAD-
LIGHT SWITCH &
STARTER INTERRUPT
Effective Date: 03/06/98

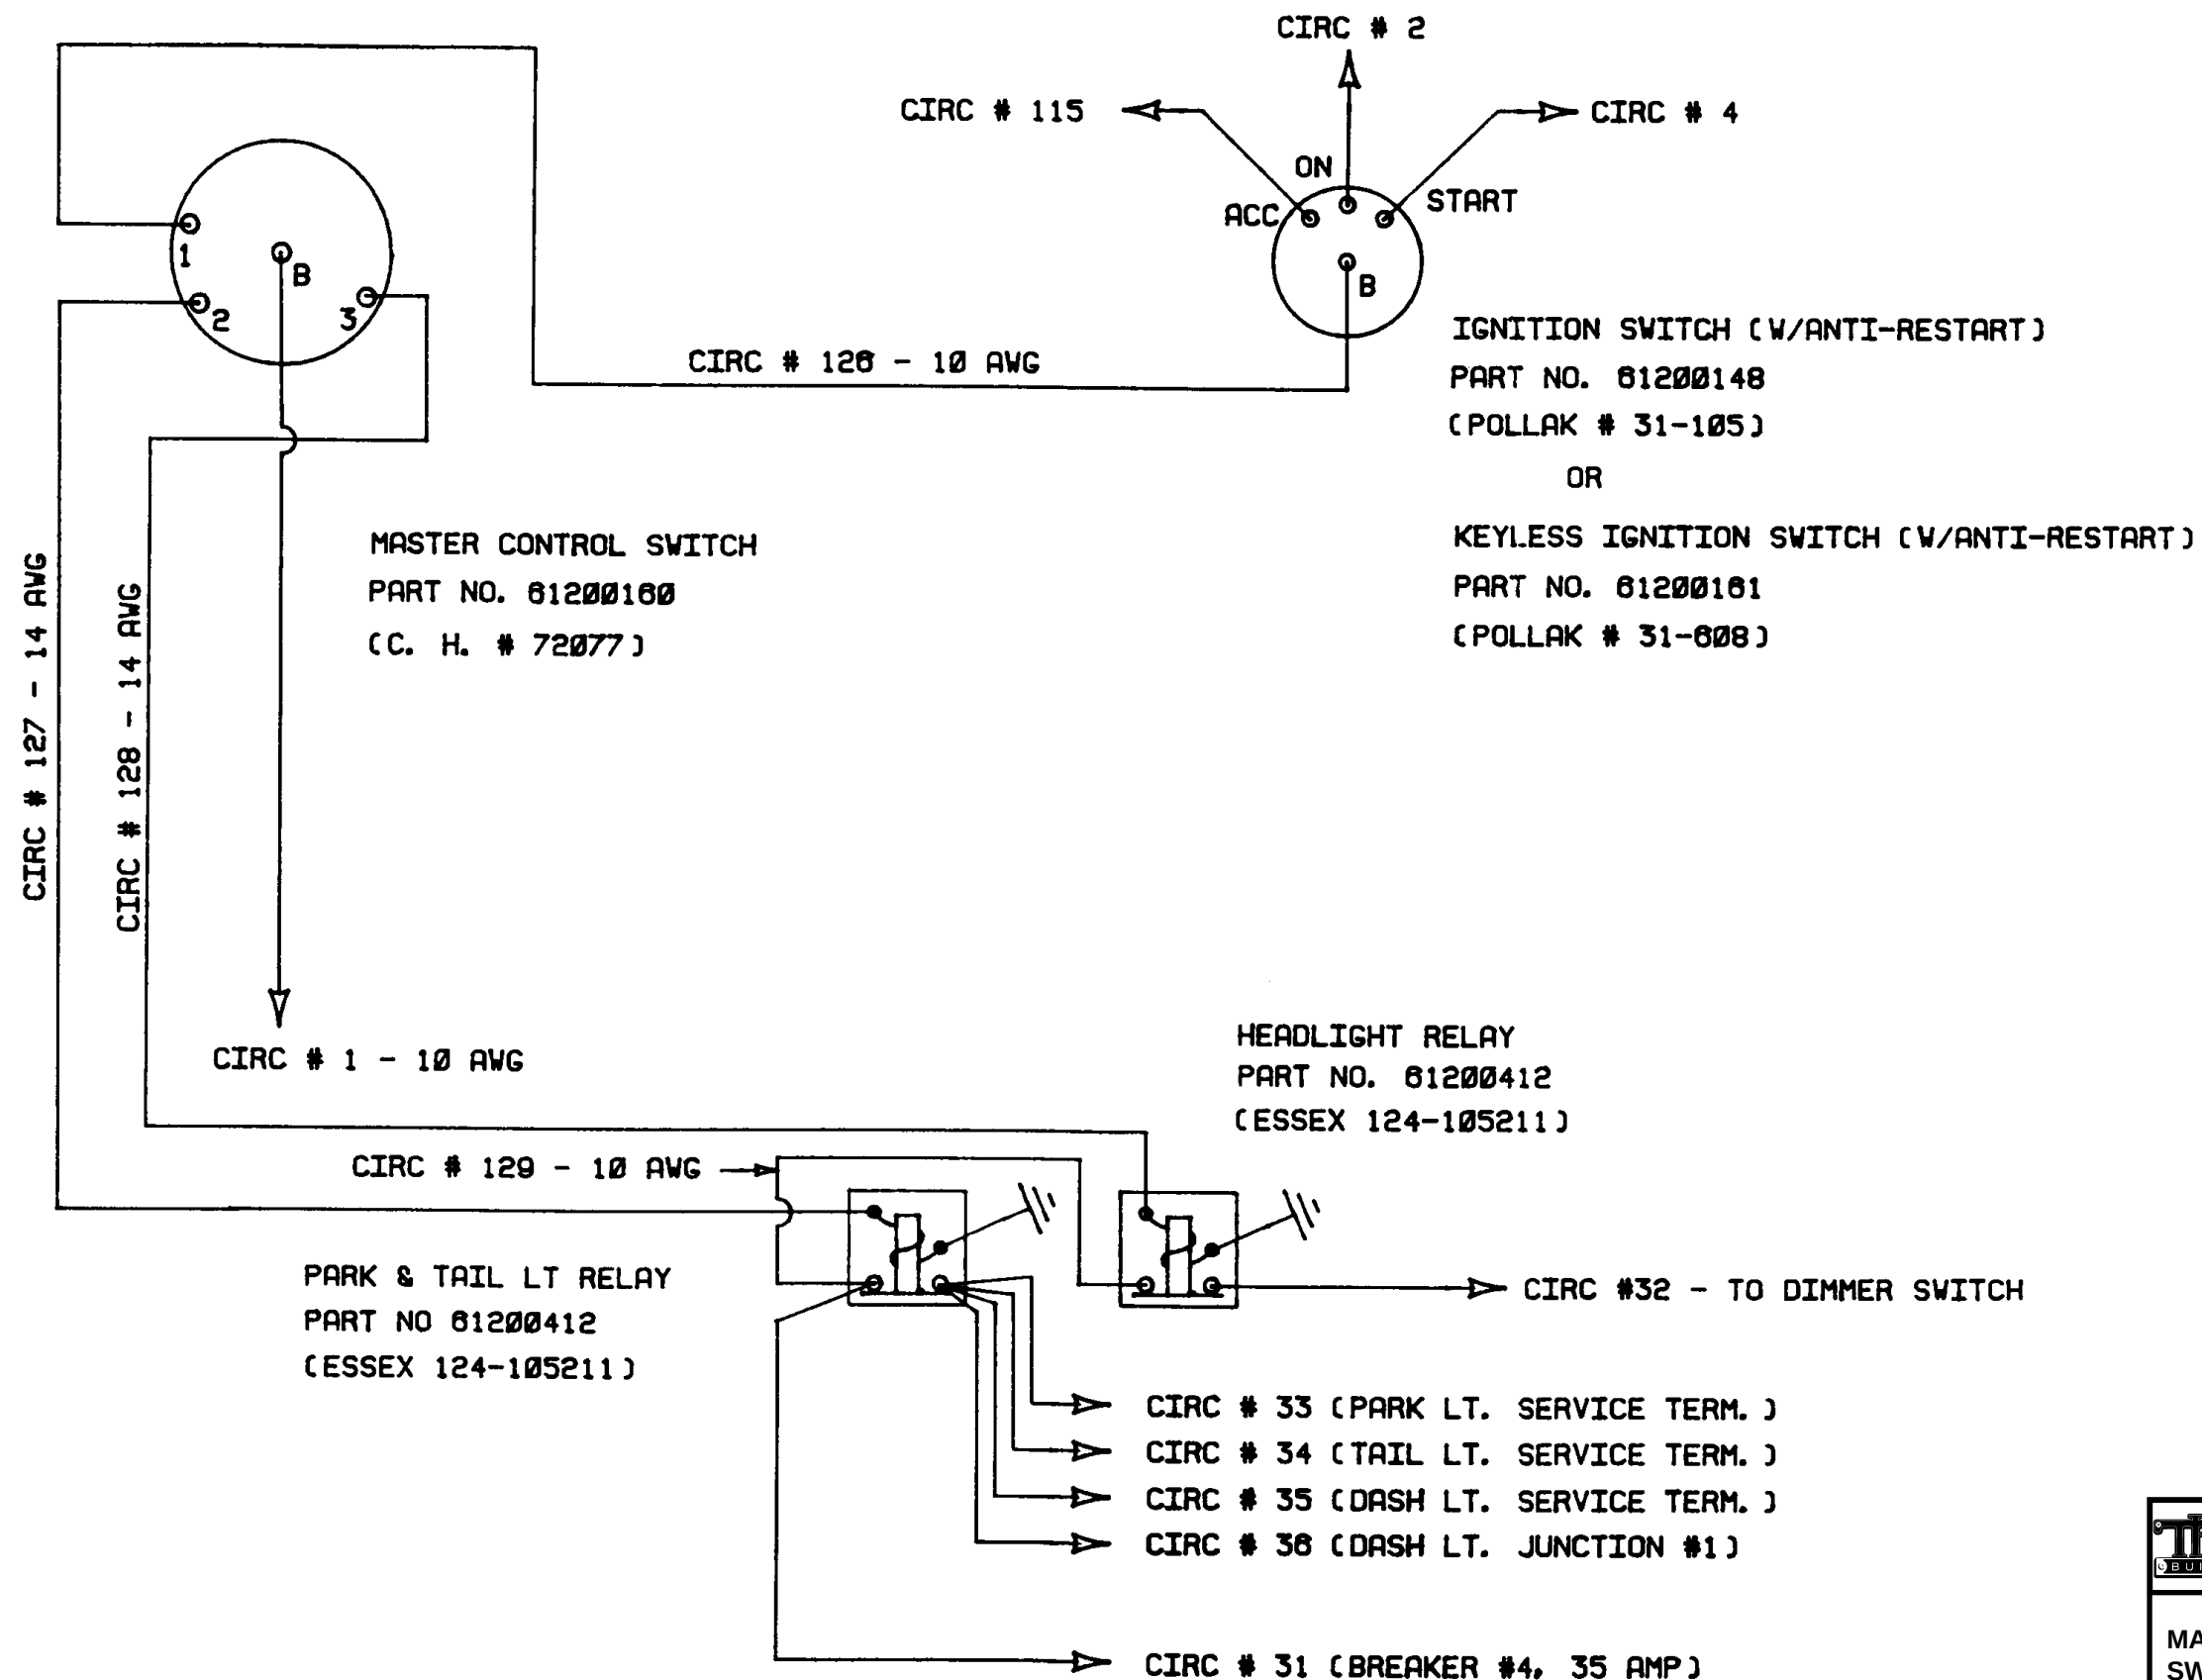

	62200646 B
MASTER CONTROL SWITCH Option C-3675	

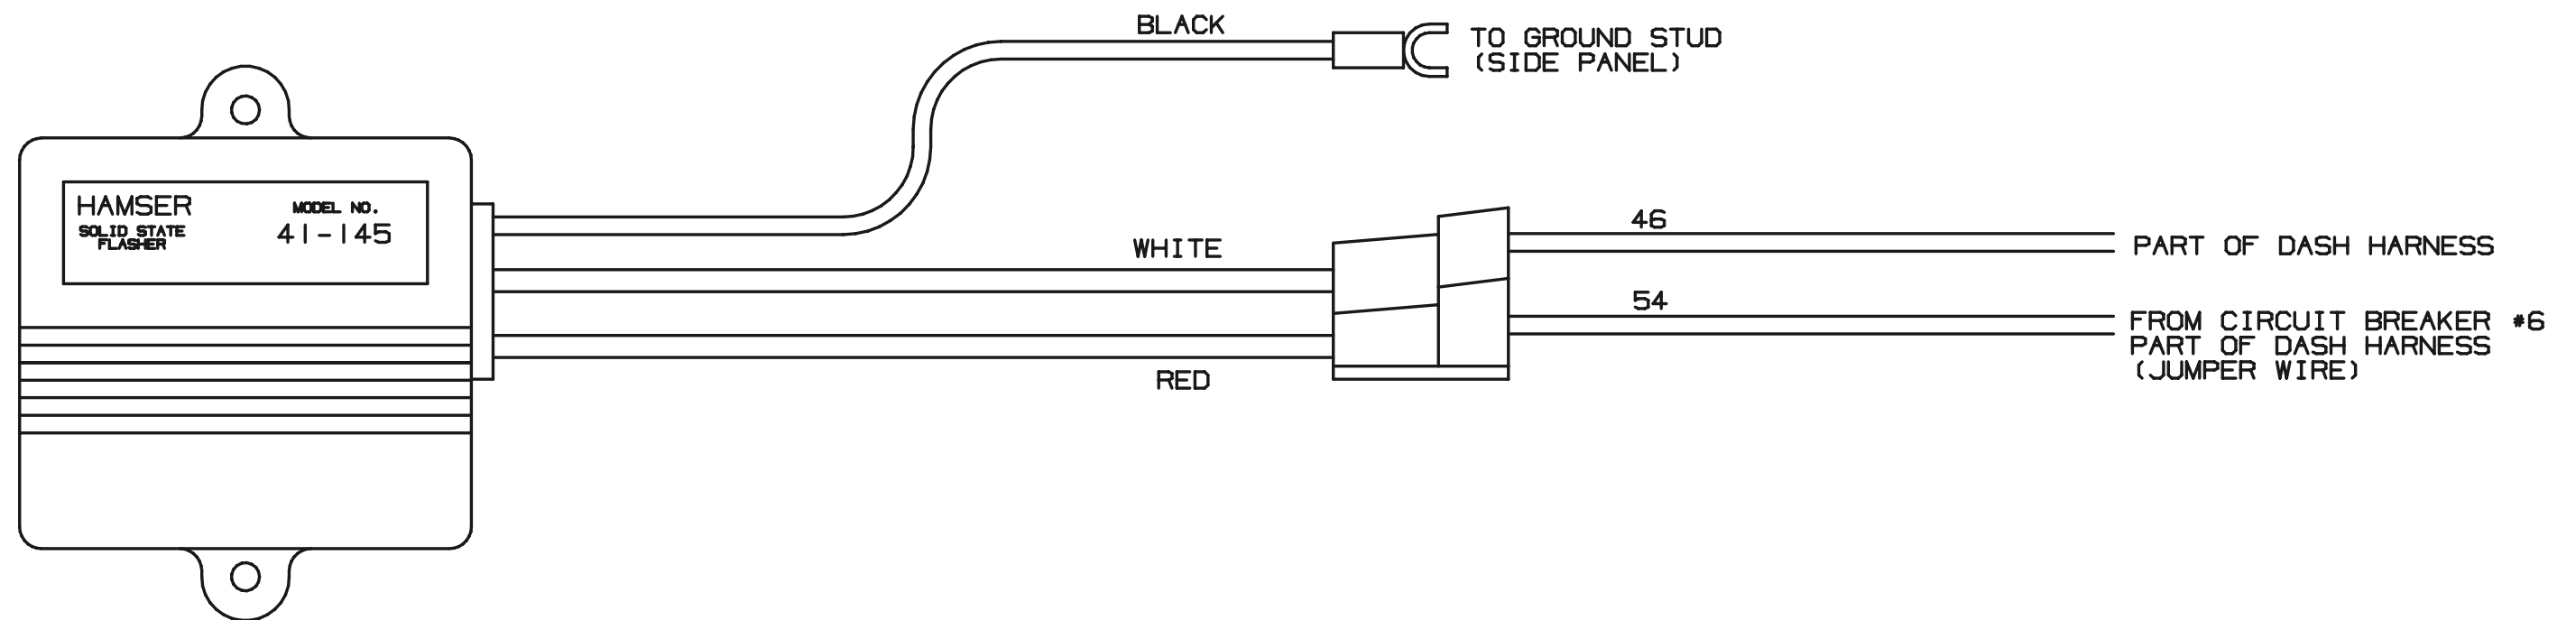


WIRING CONNECTIONS

- 1) CONNECT 46 CIRCUIT TO WHITE CIRCUIT ON SOLID STATE RELAY.
- 2) CONNECT 54 CIRCUIT TO RED CIRCUIT ON SOLID STATE RELAY.
- 3) CONNECT TERMINAL ON BLACK CIRCUIT TO SIDE PANEL GROUND STUD.


	62201873 A
HAZARD LAMPS SOLID STATE FLASHER	

NOTES:

**MVP-ER
ALTERNATOR
SCHEMATICS**

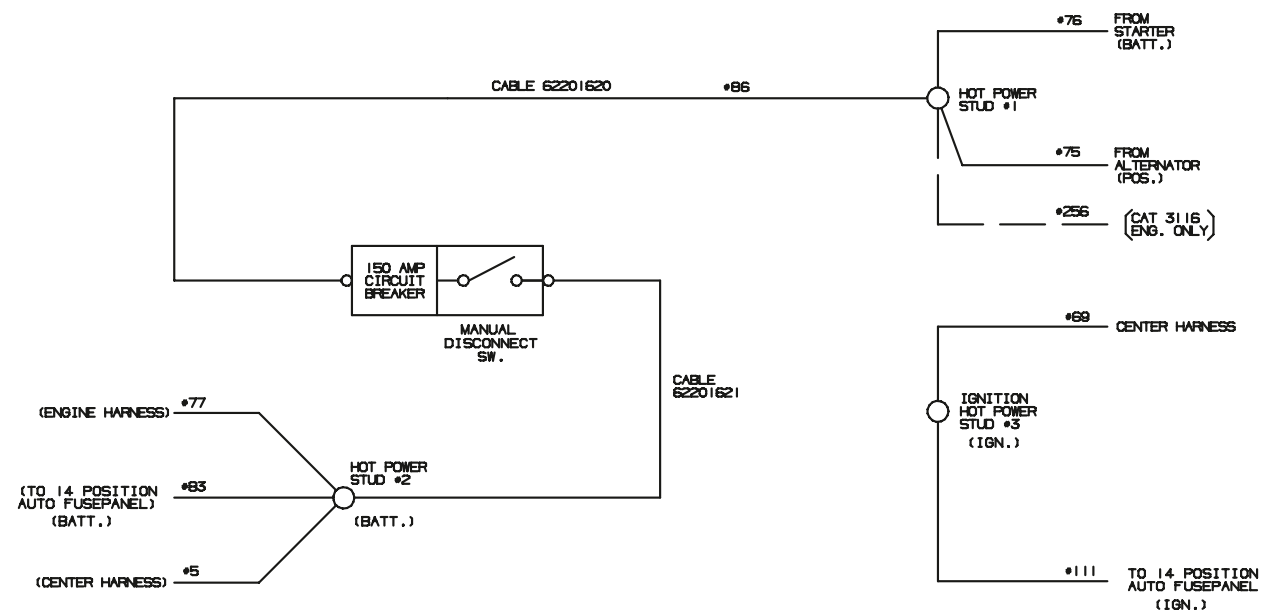

WIRING, SCHEMATIC - MVP-ER MODULAR BOX, STANDARD EQUIP.

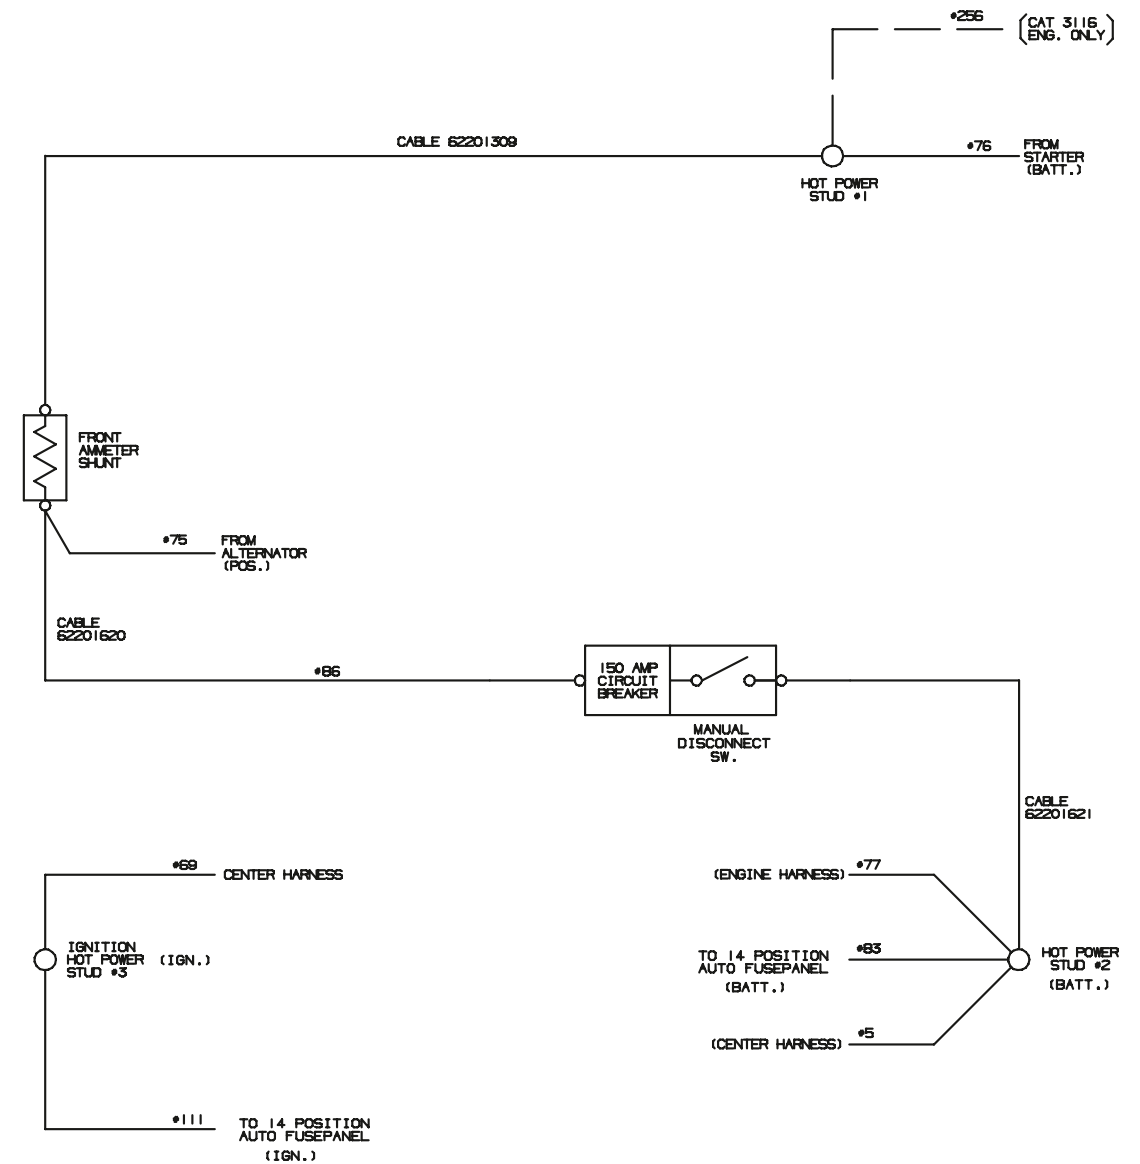

WIRING, SCHEMATIC - FRONT AMMETER (OPTION C3615-00-000)

	62201627 A
POWER CABLE TERM. POINTS, MOD. REAR BOX	

LEGEND


EXISTING WIRING

NEW WIRING

- NOTES:
- 1.ALTERNATOR CHARGE LIGHT INDICATOR RELAY (61200695) IS TO BE MOUNTED ON FRONT CHASSIS SIDE ELECT. PANEL BESIDE EXISTING HEADLIGHT/VISUAL HORN RELAYS.

2.THIS INSTALLATION OPTION IS FOR DELCO ALTERNATOR MODELS 21SI SERIES UNITS ONLY.

3.ADDED NEW WIRE CIRCUITS TO BE 14 AWG.

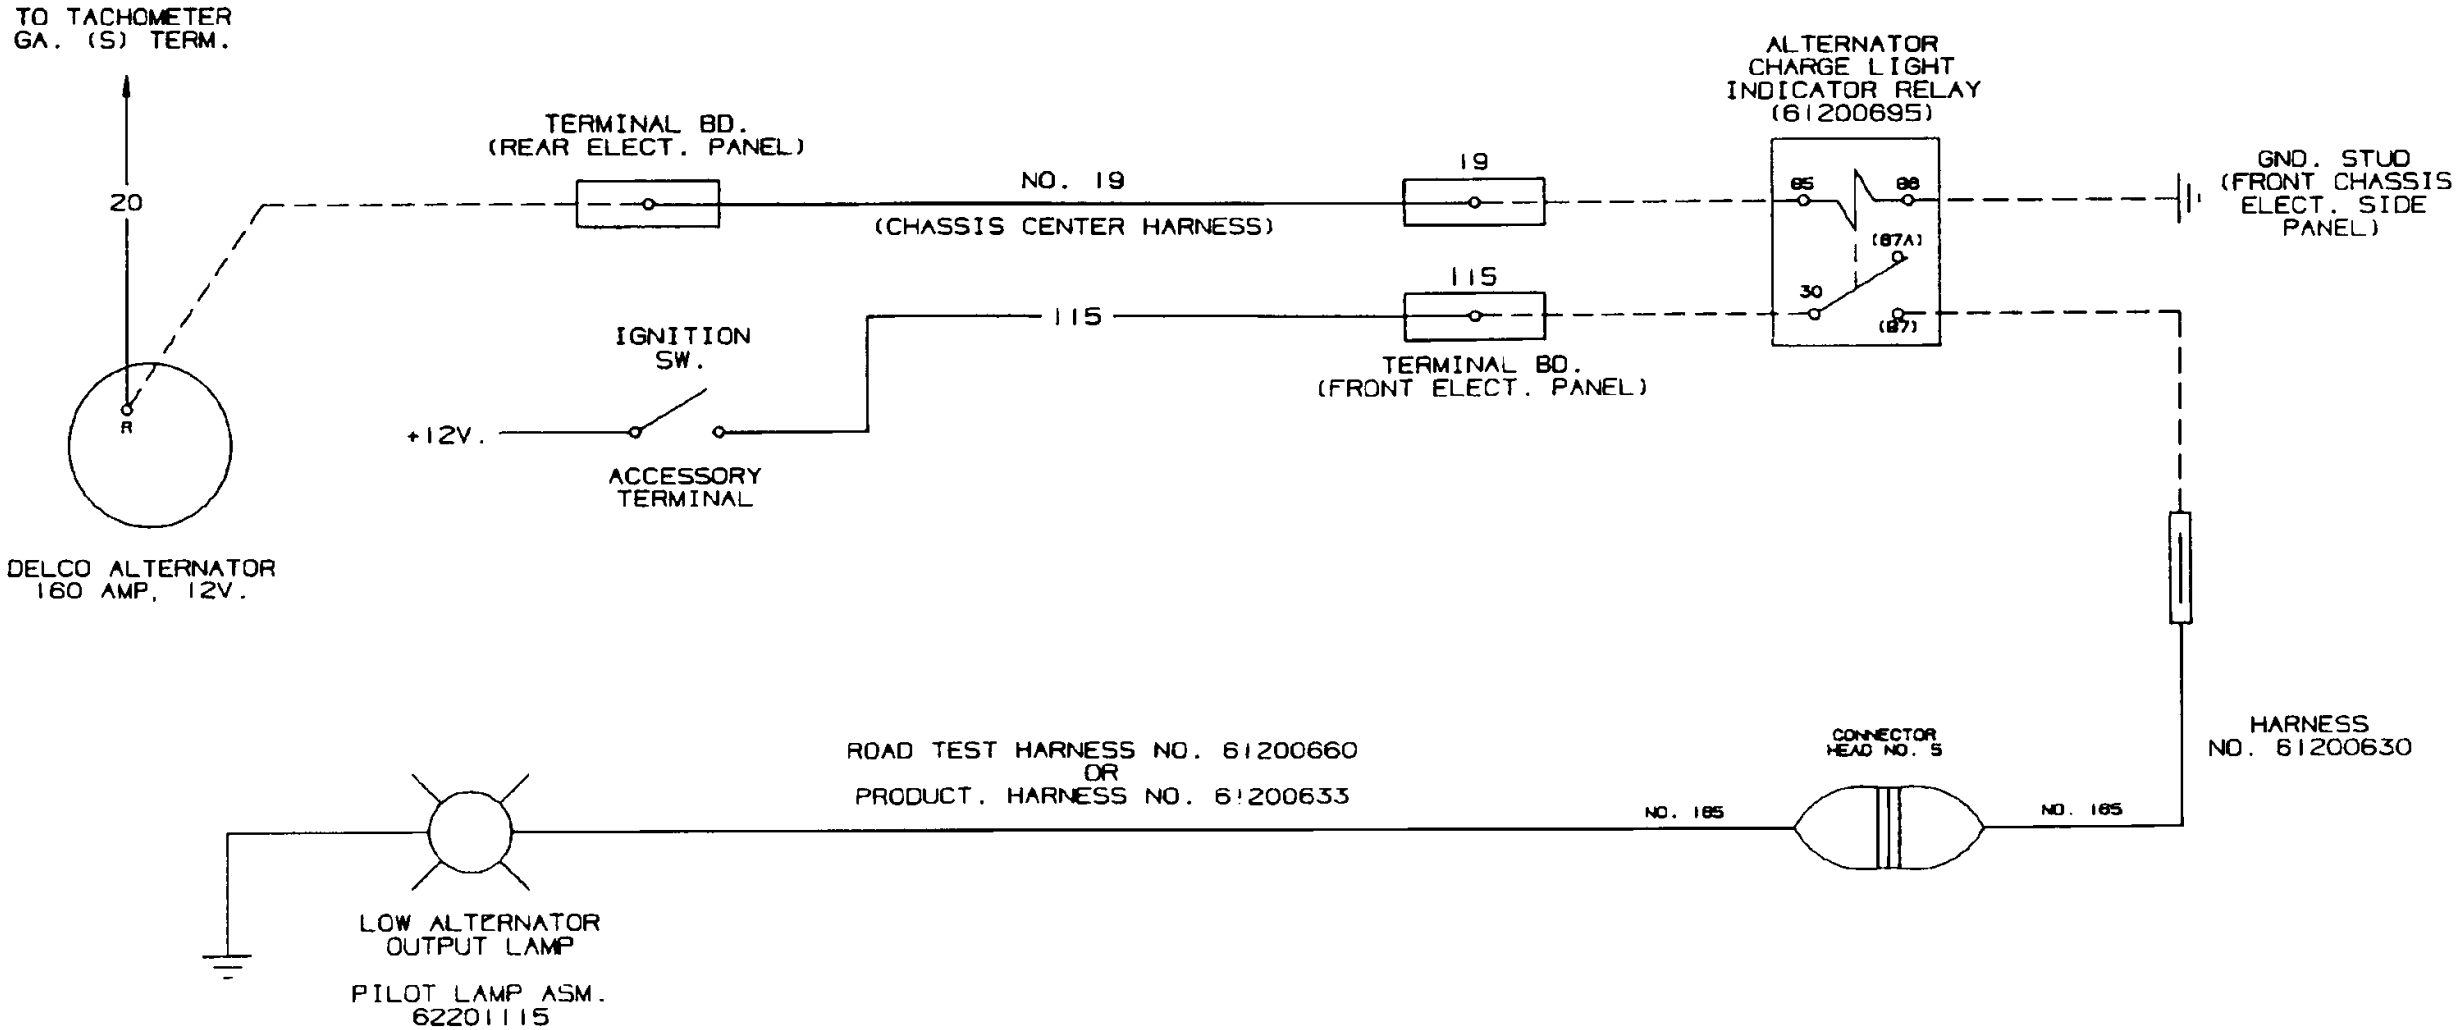


Thomas

BUILT-IN BUSES

62201121 A

ALTERNATOR LOW OUT-PUT CHARGE INDICATOR RELAY/LIGHT (DELCO)

Option C3677-02-000

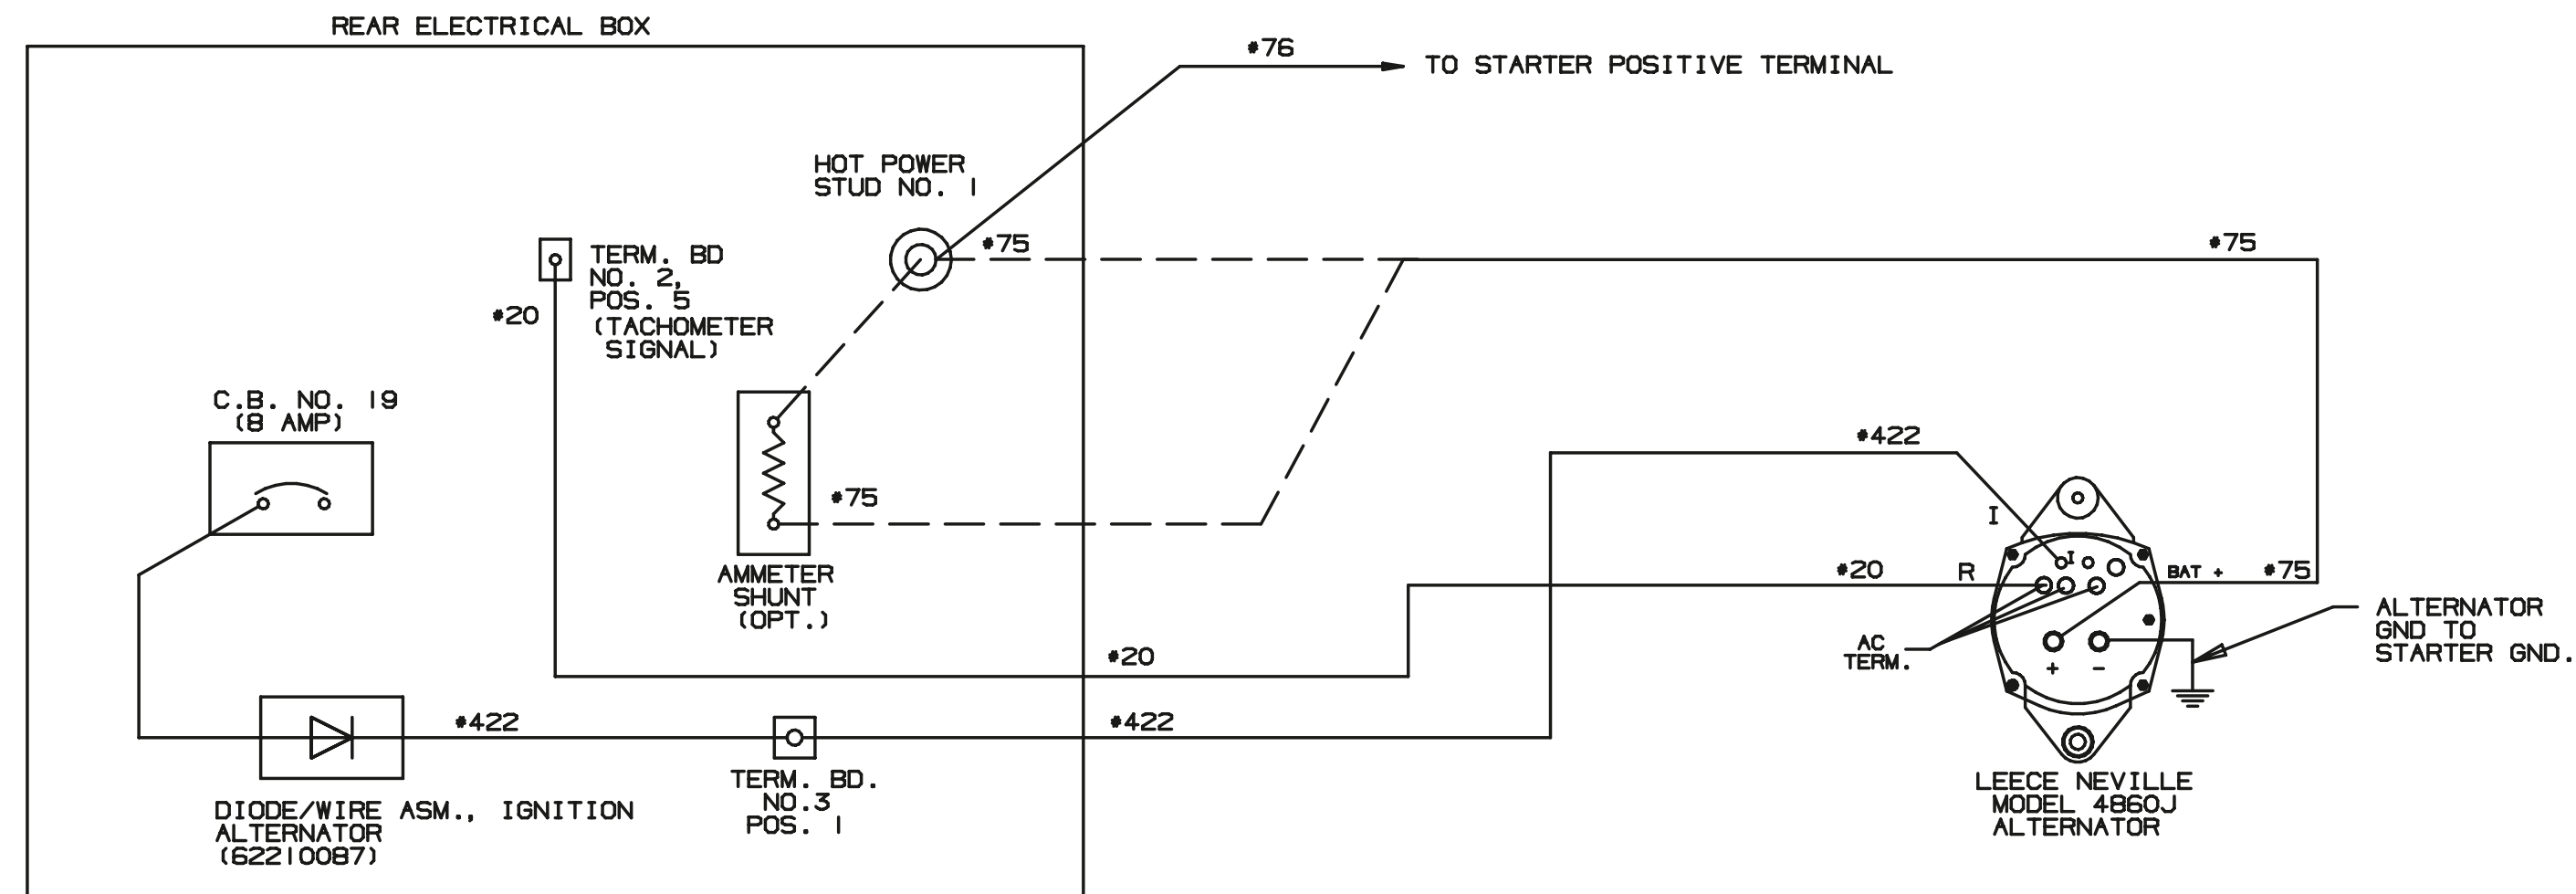

NOTE:

1. ALTERNATOR: A. LEECE NEVILLE MODEL 4860J (200 AMP)
2. CHASSIS: MVP-ER AND ER TRANSIT ONLY


	62202874 A
ALTERNATOR DIODE ASSEMBLY Effective Date; 03/09/99	

**MVP-ER
MISCELLANEOUS
SCHEMATICS**

NOTE: SCHEMATIC REFLECTS WIRING
HARNESS PART NO.62202172


SWITCH PANEL (REF)

CIRCUIT BREAKER NO. 11

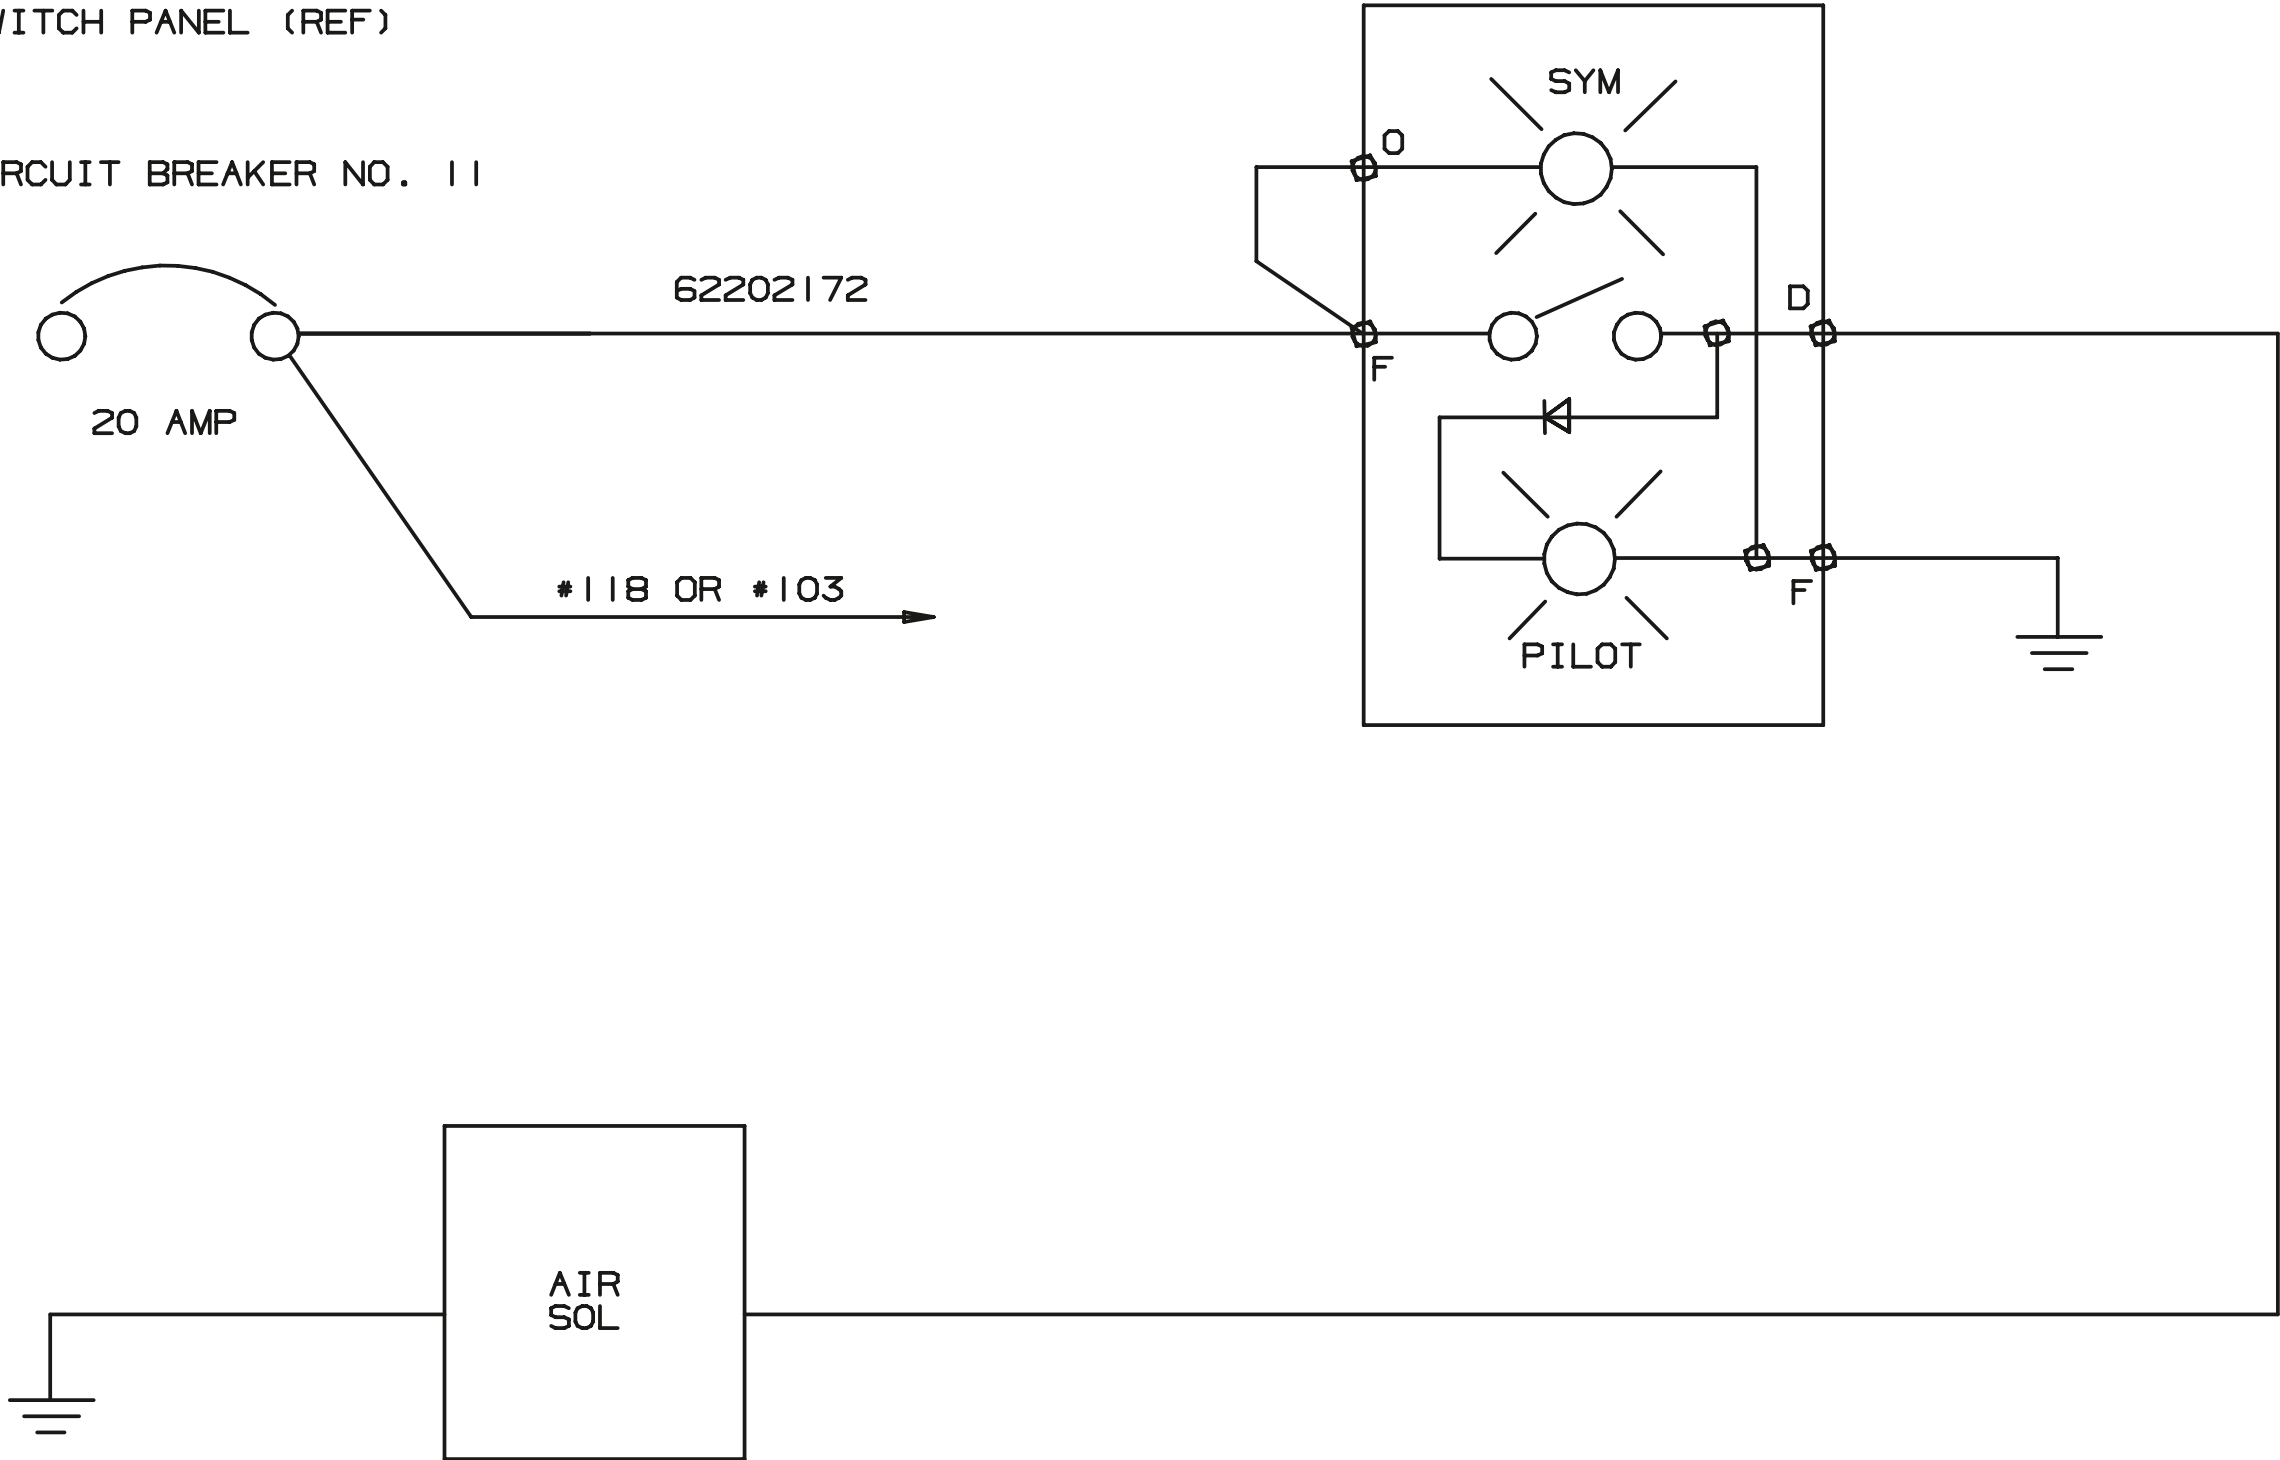

 BUILT BUSES	62202174 B
ELECT. ONSPOT CHAINS	

CHASSIS
ROLL-BACK
HARNESS
(62201868) - MVP ER

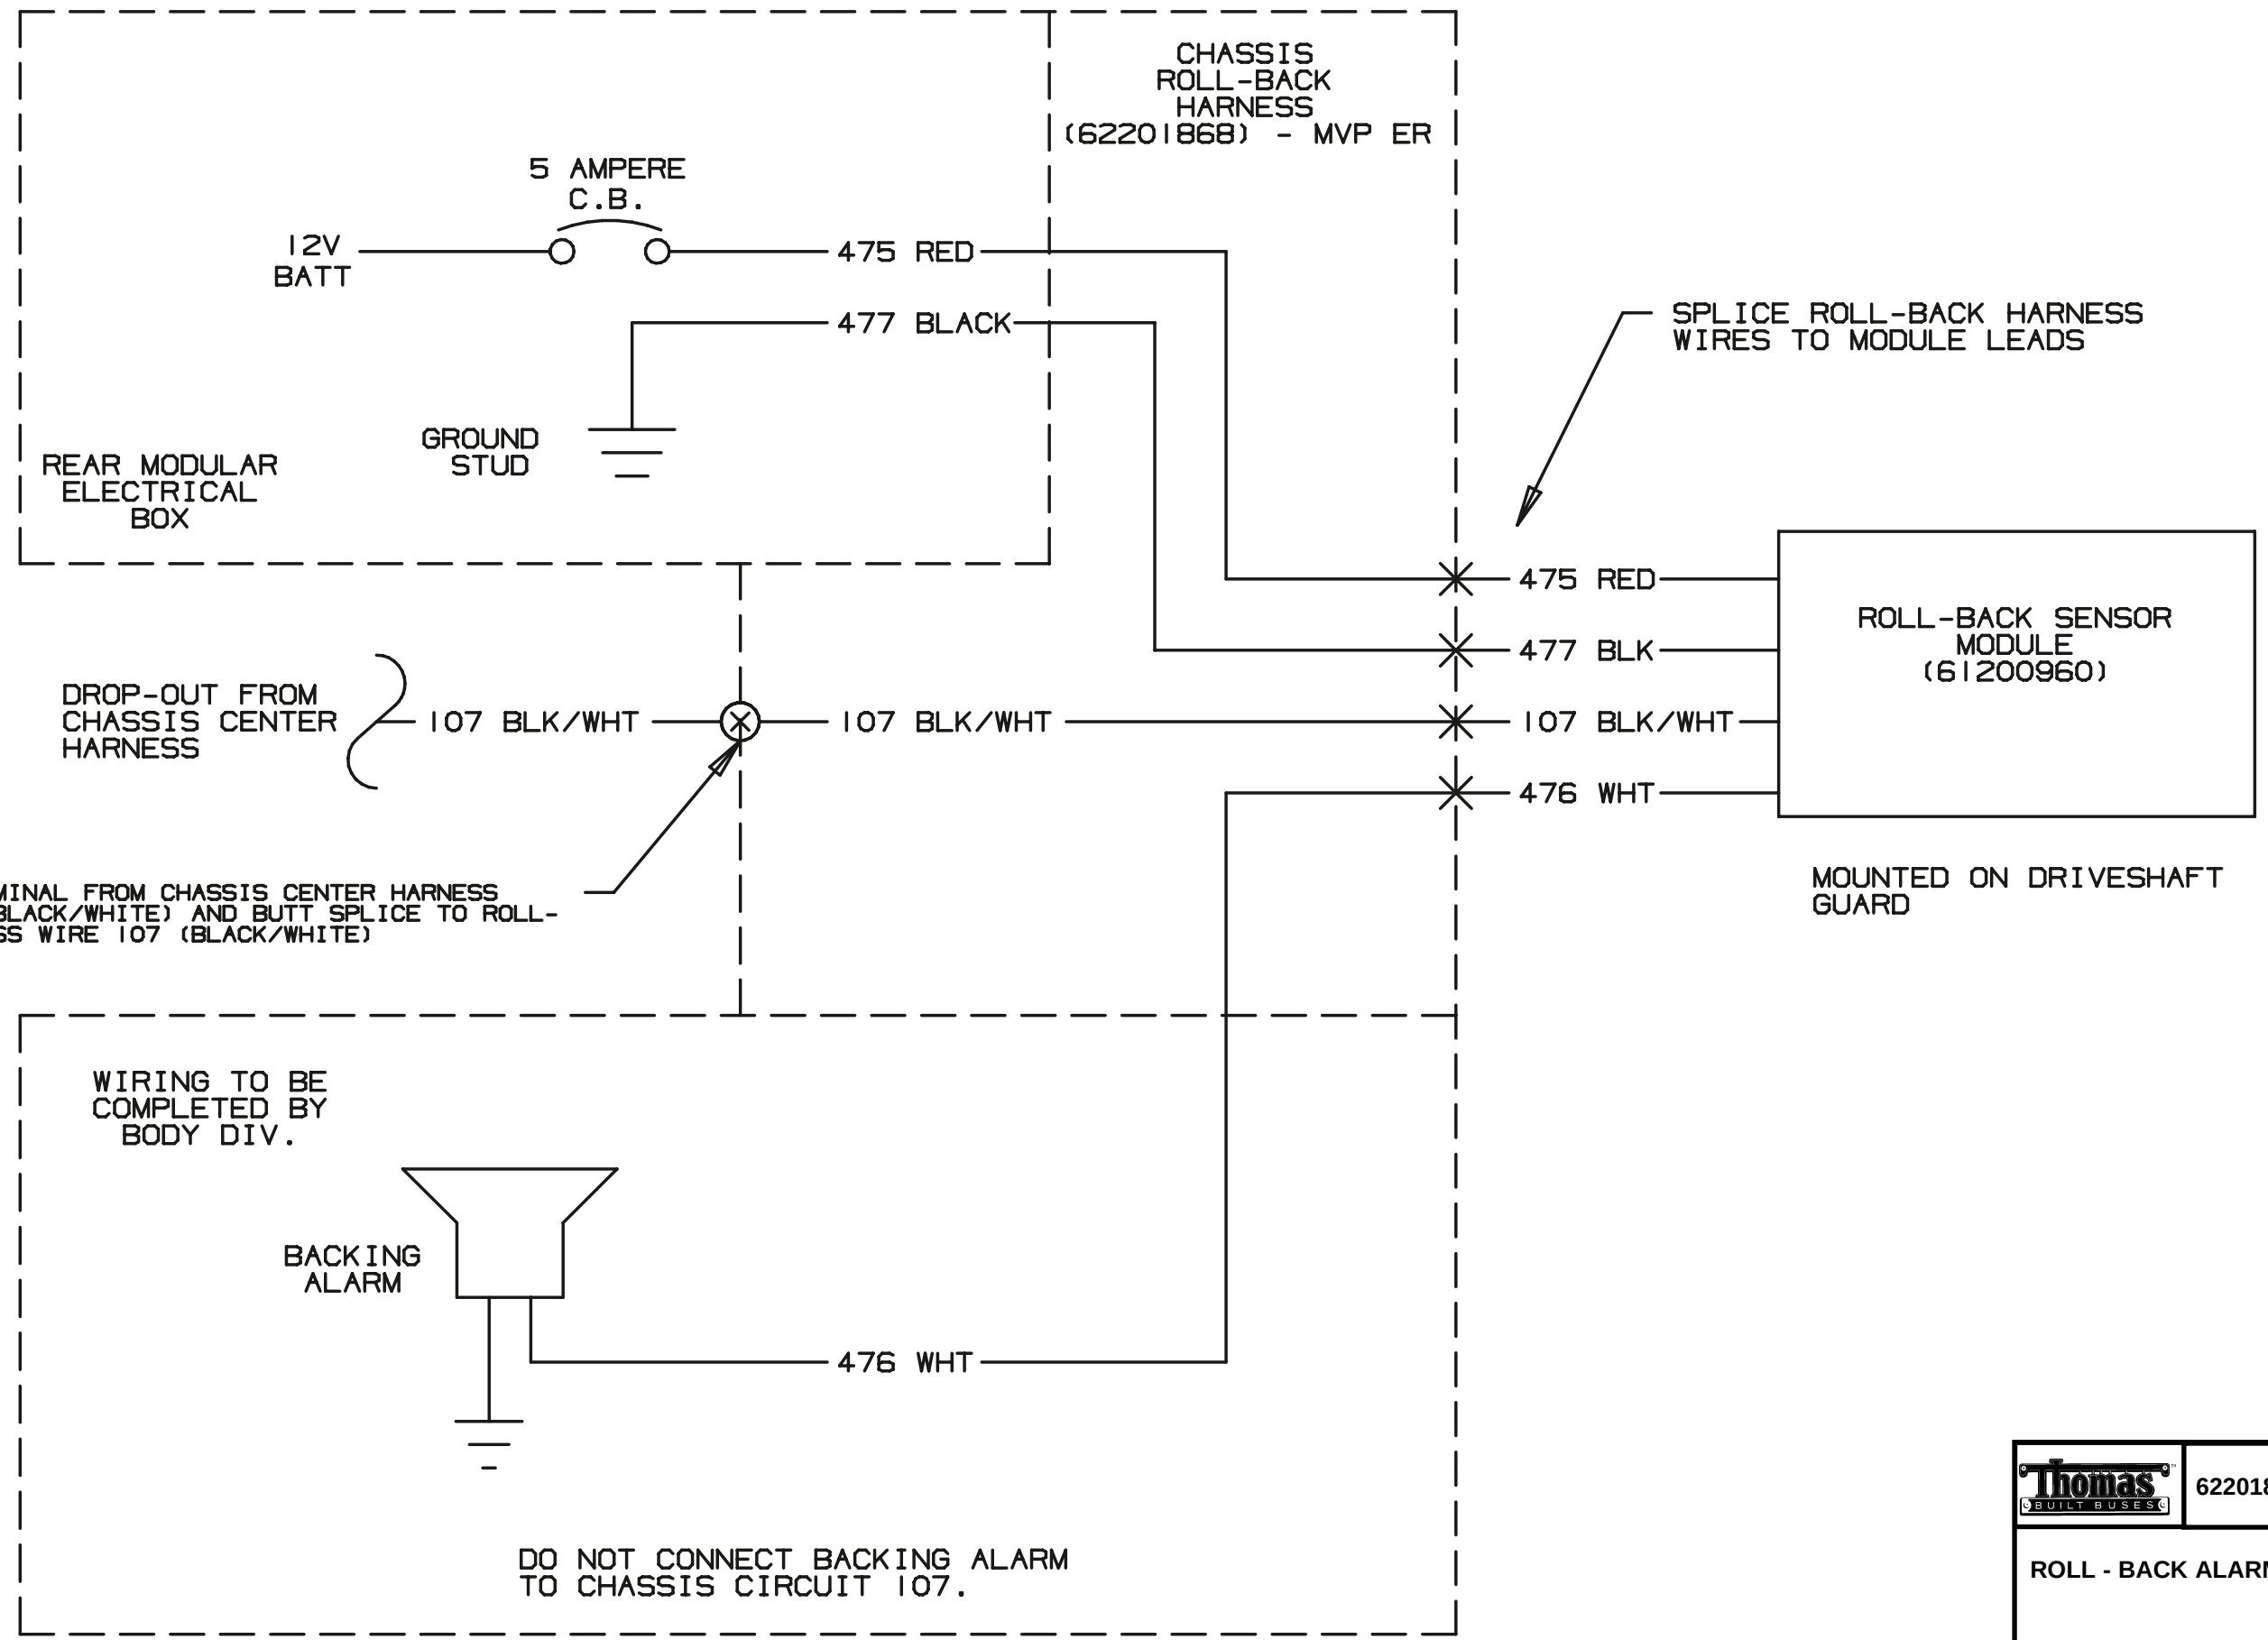

REAR MODULAR
ELECTRICAL
BOX

12V
BATT

5 AMPERE
C.B.

475 RED

GROUND
STUD

477 BLACK

DROP-OUT FROM
CHASSIS CENTER
HARNESS

107 BLK/WHT

107 BLK/WHT

475 RED

477 BLK

107 BLK/WHT

476 WHT

ROLL-BACK SENSOR
MODULE
(61200960)

MOUNTED ON DRIVESHAFT
GUARD

REMOVE TERMINAL FROM CHASSIS CENTER HARNESS
WIRE 107 (BLACK/WHITE) AND BUTT SPLICE TO ROLL-
BACK HARNESS WIRE 107 (BLACK/WHITE)


WIRING TO BE
COMPLETED BY
BODY DIV.


BACKING
ALARM

476 WHT

DO NOT CONNECT BACKING ALARM
TO CHASSIS CIRCUIT 107.


	62201870 A
ROLL - BACK ALARM	

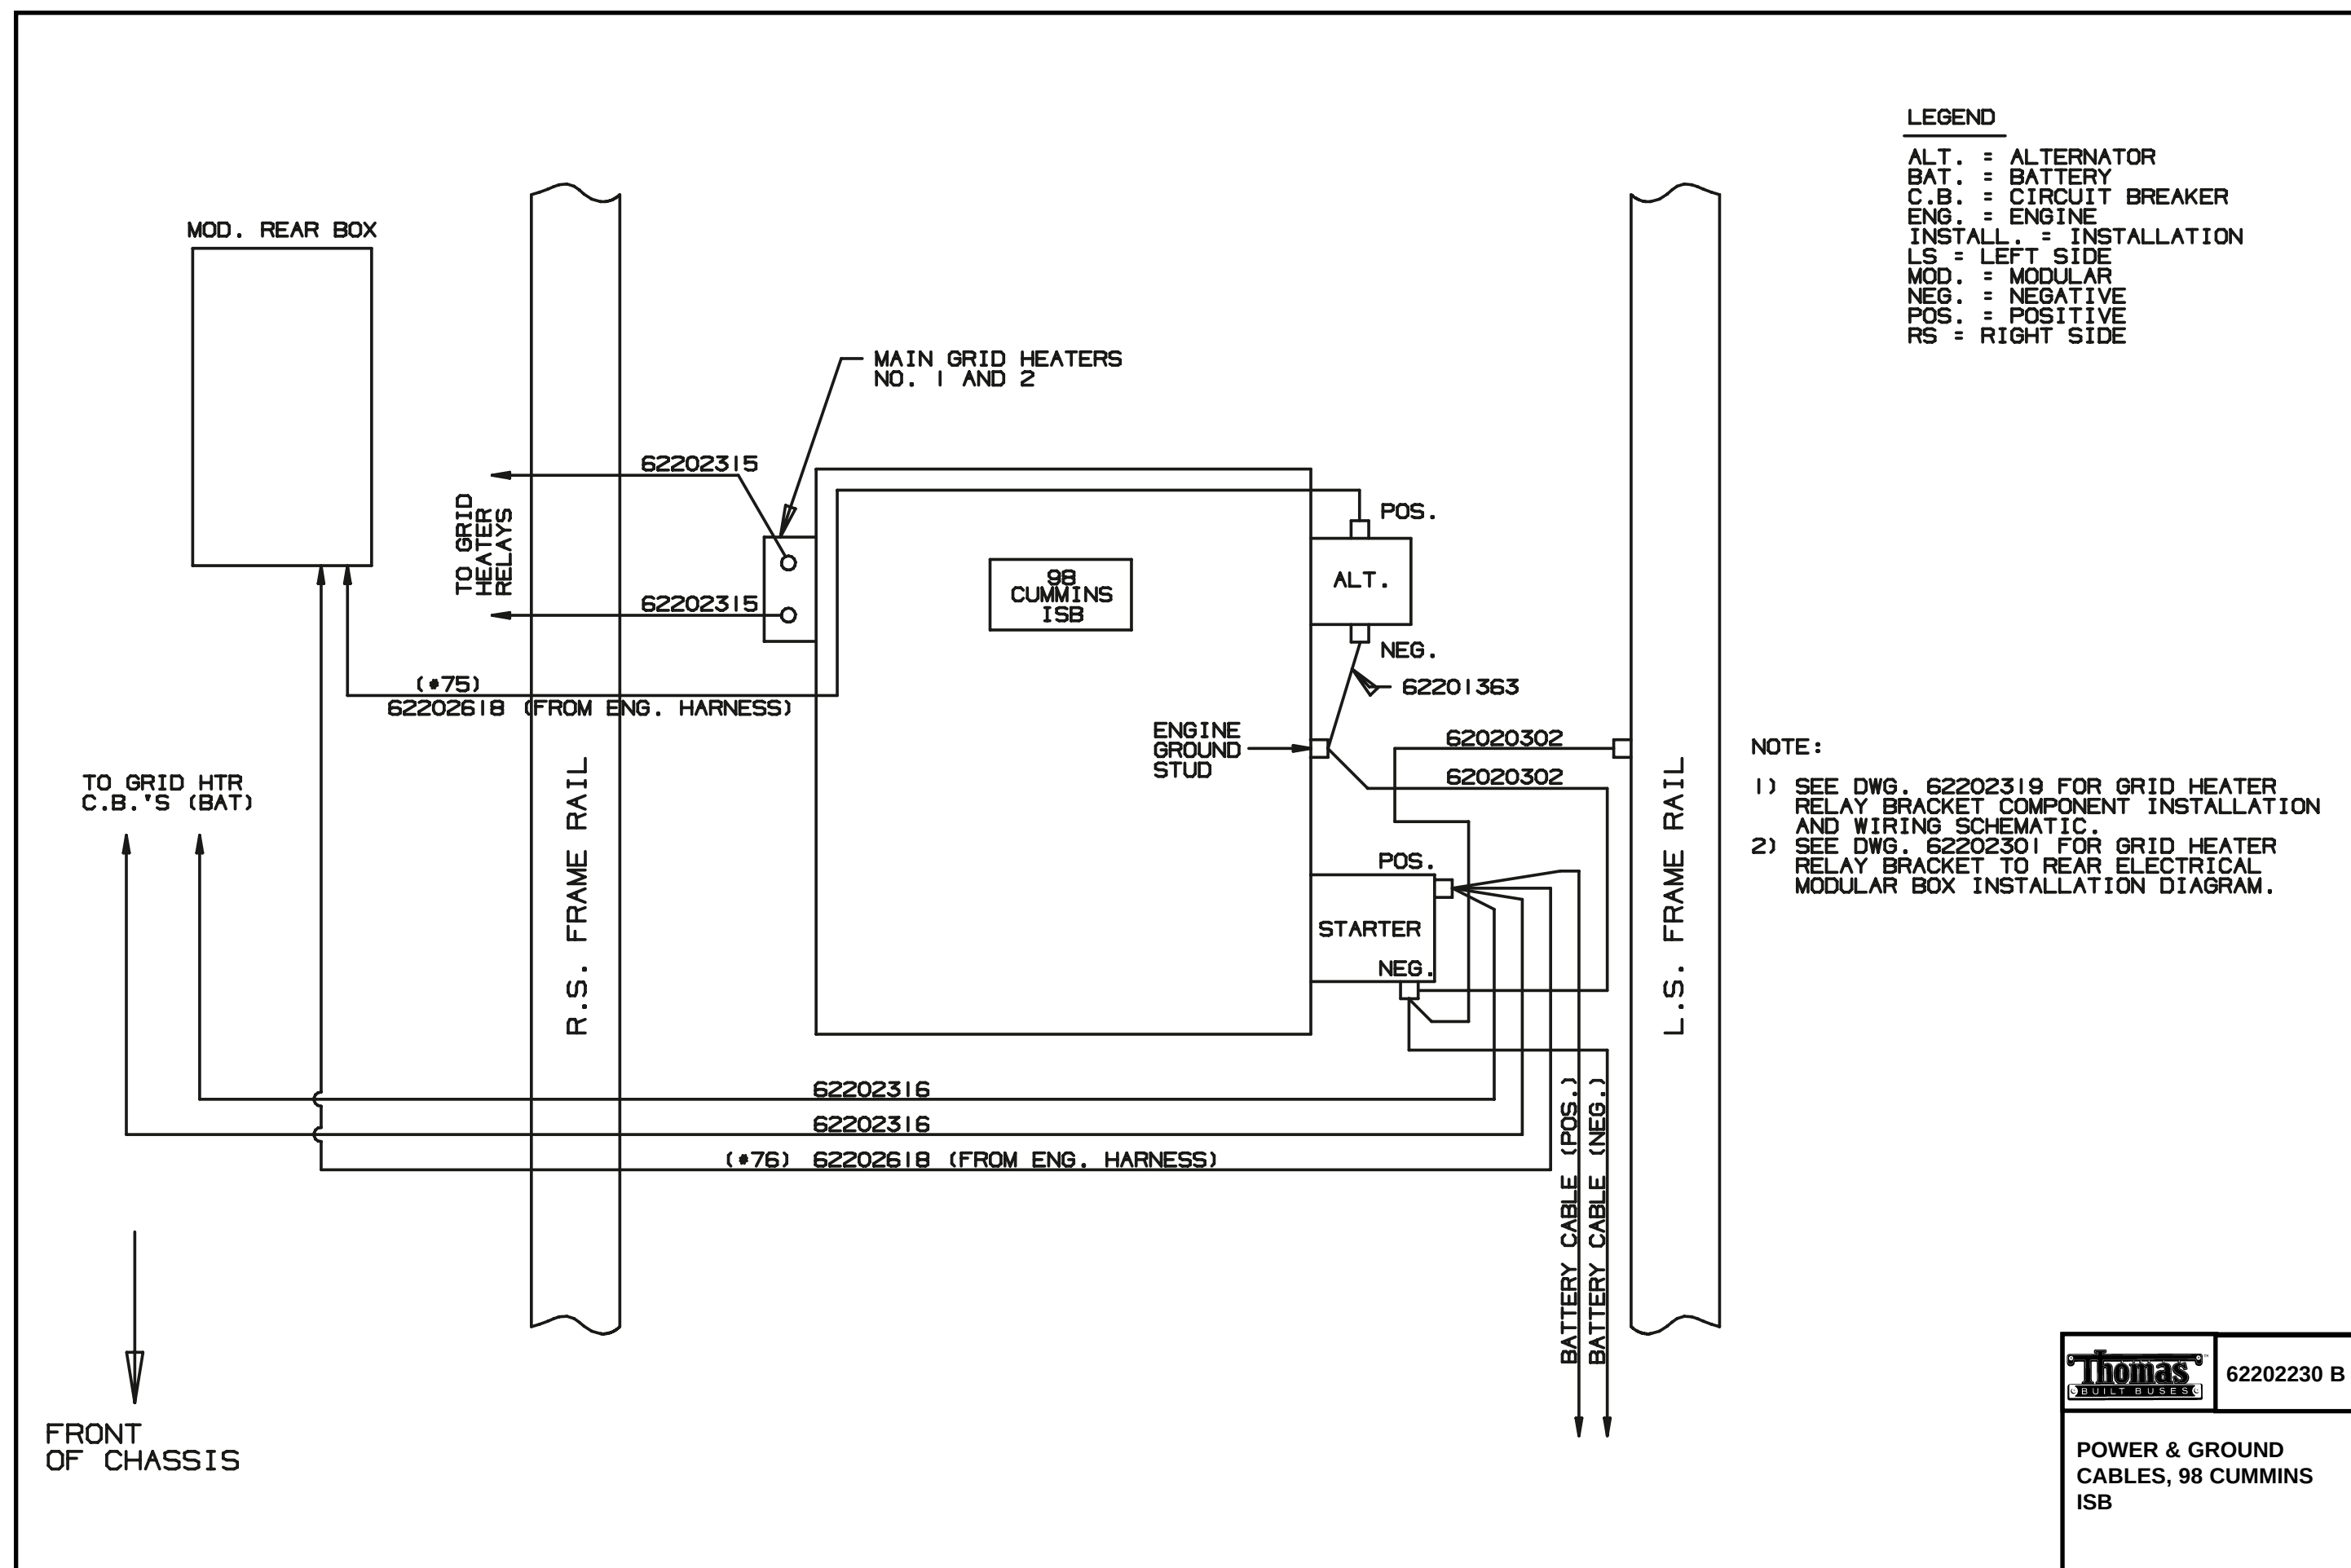

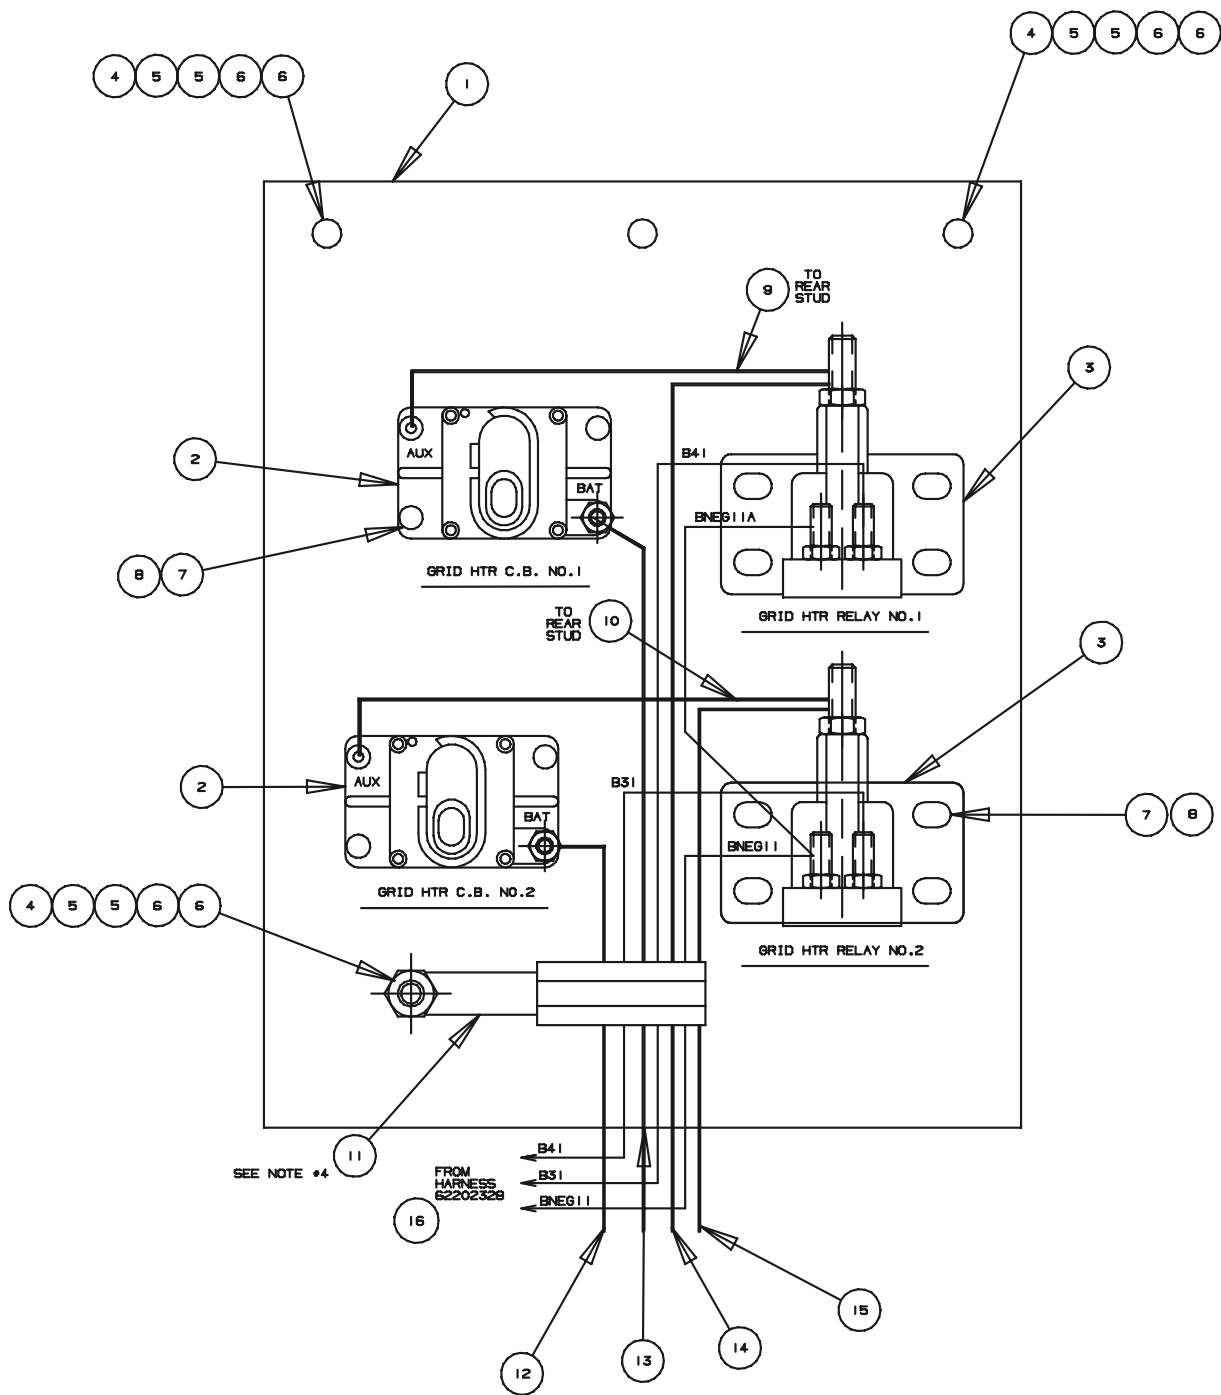

ITEM	PART NO.	DESCRIPTION	QTY
1	62201927	BRACKET, MTG. - GRID HTR., POWER RELAYS/C.B.	1
2	61200957	BREAKER, CIRCUIT - 135 AMP	2
3	61200875	RELAY, POWER	2
4	61370720	ISOLATOR - MOUNTING PAD (NOT SHOWN)	3
5	61370263	LOCKWASHER - 5/16" (NOT SHOWN)	6
6	61370056	NUT - HEX HEAD, 5/16" (NOT SHOWN)	6
7	61370803	BOLT, HEX HEAD - 1/4"-20x1" LONG (NOT SHOWN)	12
8	61370050	NUT, HEX - 1/4"-20 (NOT SHOWN)	12
9	62201959	CABLE, POWER ASM., AIR INLET GRID HTR NO.1 C.B.(AUX) TO PWR SOLENOID NO.1 (INPUT)	1
10	62201958	CABLE, POWER ASM., AIR INLET GRID HTR NO.2 C.B.(AUX) TO PWR SOLENOID NO.2 (INPUT)	1
11	61480473	CLAMP-LOOP, CUSHIONED, TWO TUBE,	1
12	62202316	CABLE, POWER ASM., STARTER POS. TERM. TO AIR INLET GRID HTR NO.2 C.B.(BAT)	1
13	62202316	CABLE, POWER ASM., STARTER POS. TERM. TO AIR INLET GRID HTR NO. 1 C.B. (BAT)	1
14	62202315	CABLE, POWER ASM., POWER SOLENOID NO.1 (OUTPUT) TO ENGINE GRID HTR NO.1 (ON ENG.)	1
15	62202315	CABLE, POWER ASM., POWER SOLENOID NO.2 (OUTPUT) TO ENGINE GRID HTR NO.2 (ON ENG.)	1
16	62202328	HARNESS, WIRING - GRID HEATER RELAYS	1

GRID HTR CONTROL
WIRING SCHEMATIC DETAIL

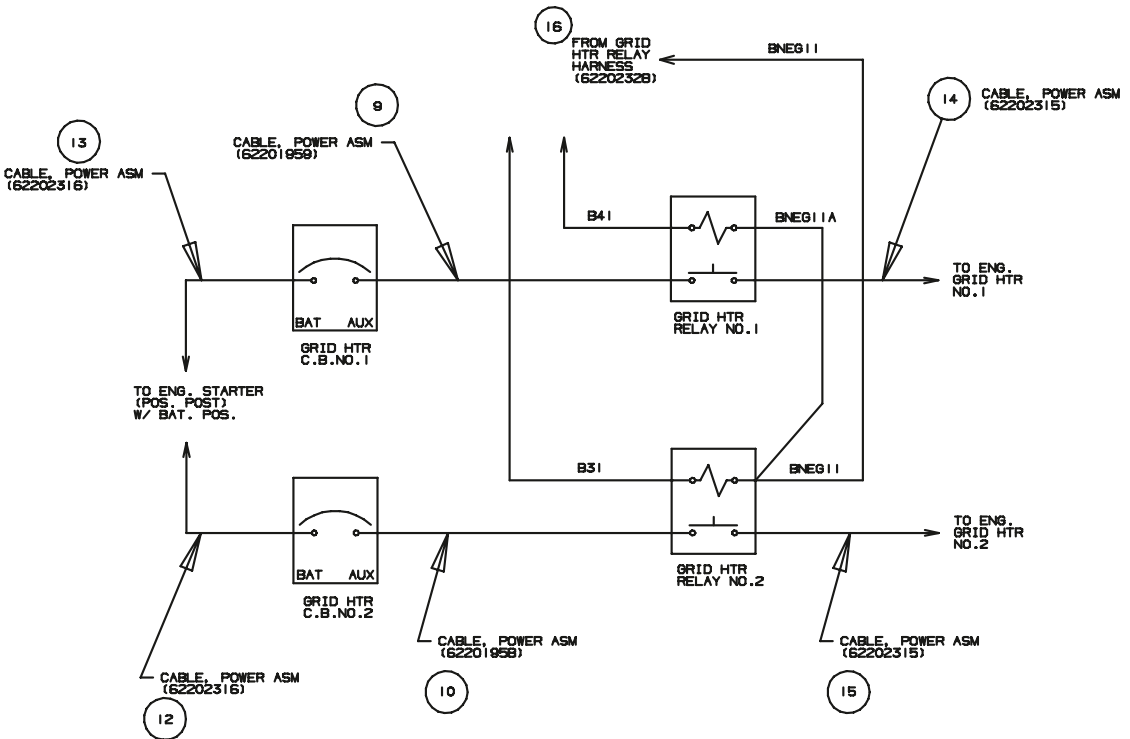

- NOTES:
- 1. CLAMP CABLES ON EXISTING STUD AT ISOLATOR MOUNT.
 - 2. USE 18" OF CONVOLUTED TUBING (61200202) TO BEGIN AT THE HEAT SHRINK ON ITEM 12 AND CONTINUE THROUGH THE CLAMP (ITEM 11)
 - 3. SEE REAR ELECTRICAL BOX INSTALLATION DWG. 62202301 FOR MOUNTING LOCATION.
 - 4. CLAMP MOUNTING LOCATION IS ALONG CENTERLINE OF PLATE. ILLUSTRATION SHOWN FOR CLARITY OF WIRING ONLY.

**62202319 C**

**ELECTRICAL COMPO-
NENT MTG./WIRING GRID
HTRS., 98 CUMMINS ISB**

NOTES:

1998-1999 Electrical Wiring Manual

1408 Courtesy Road
Post Office Box 2450
High Point, NC 27261
(336) 889-4871

Thomas Built Buses of Canada
275 Tecumseh Street
Woodstock, Ontario, Canada N4S-7Z5

Thomas Built Buses de Mexico, S.A. de C.V.
Av. "A" No. 100 Frac. Industrial Almacentro
Apodaca, N.L. C.P. 66600 Mexico



A Subsidiary of **FREIGHTLINER**
CORPORATION

FreightLiner Corporation is a DaimlerChrysler Company